4640 and 4840 Tractors

TECHNICAL MANUAL

4640 and 4840 Tractors

4640 AND 4840 TRACTORS TECHNICAL MANUAL TM-1183 (OCT-85)

CONTENTS—REPAIR SECTIONS

SECTION 10-GENERAL

Group 00—Specifications and Special Tools

Group 05-Predelivery, Delivery, and After-Sale

Services

Group 10-Tune-Up

Group 15—Lubrication

Group 20—Separation

SECTION 20-ENGINE REPAIR

Group 00-Specifications and Special Tools

Group 05-Cylinder Head, Valves, and Camshaft

Group 10-Cylinder Block, Liners, Pistons and Rods

Group 15—Crankshaft, Main Bearings, and Flywheel

Group 20—Lubricating System

Group 25-Cooling System

SECTION 30-FUEL AND AIR REPAIR

Group 00—Specifications and Special Tools

Group 05-Air Intake System

Group 10—Diesel Fuel System

Group 15-Control Linkage

SECTION 40—ELECTRICAL REPAIR

Group 00—Specifications and Special Tools

Group 05-Harness Replacement

Group 10-Charging Circuit

Group 15-Starting Circuit

Group 20-Lighting Circuits

Group 25-Instrument and Accessory Circuits

Group 30-Power Front-Wheel Drive

SECTION 50-POWER TRAIN REPAIR

Group 00-Specifications and Special Tools

Group 05--Perma-Clutch

Group 10-Quad-Range Planetary

Group 15-Quad-Range Transmission

Group 20-Power Shift Transmission

Group 25-Power Take-Off

Group 30—Differential Group 35—Final Drive

Group 40-Power Front-Wheel Drive

SECTION 60-STEERING/BRAKES REPAIR

Group 00-Specifications and Special Tools

Group 05—Power Steering

Group 10-Power Brakes

SECTION 70-HYDRAULIC REPAIR

Group 00-Specifications and Special Tools

Group 05-Miscellaneous Hydraulic Components

Group 10-Hydraulic Pumps

Group 15-Rockshaft and Implement Hitches

Group 20-Selective Control Valve, Breakaway Coupler and Remote Cylinder

SECTION 80-MISCELLANEOUS

Group 00-Specifications and Special Tools

Group 05-Front Axles

Group 10-Wheels

SECTION 90—OPERATOR STATION REPAIR

Group 00-Specifications and Special Tools

Group 05-Air Conditioning System

Group 10-Heating System

Group 15-Seat

Group 20-Miscellaneous Components

CONTENTS—OPERATION AND TEST SECTIONS

SECTION 220-ENGINE OPERATION AND TESTS

Group 00—Specifications and Special Tools

Group 05—System Operation

Group 10-System Tests and Diagnosis

SECTION 230—FUEL/AIR OPERATION AND TESTS

Group 00-Specifications and Special Tools

Group 05—Air Intake System

Group 10-Diesel Fuel System

Group 15-Control Linkage

SECTION 240—ELECTRICAL OPERATION AND TESTS

Group 00-Specifications and Special Tools

Group 05-General Information and Diagrams

Group 06-Electrical System Diagnosis

Group 10-DELCOTRON Charging Circuit

Group 12-JOHN DEERE Charging Circuit

Group 15—Starting Circuit

Group 20-Lighting Circuits

Group 25-Instrument and Accessory Circuits

Group 30-Power Front-Wheel Drive

Group 35—Electrical Remote Control and Outlet Socket

SECTION 250—POWER TRAIN OPERATION AND TESTS

Group 00-Specifications and Special Tools

Group 05—Quad-Range System Operation

Group 10-Quad-Range Test and Diagnosis

Group 15-Power Shift System Operation

Group 20-Power Shift Tests and Diagnosis

Group 25-Differential and Final Drive

Group 30-Power Front-Wheel Drive

SECTION 260—STEERING/BRAKES OPERATION AND TESTS

Group 00—Specifications and Special Tools

Group 05—Power Steering

Group 10—Power Brakes

SECTION 270—HYDRAULIC OPERATION AND TESTS

Group 00-Specifications and Special Tools

Group 05—Hydraulic System Operation

Group 10—Hydraulic System Tests

Group 15-Miscellaneous Hydraulic Components

Group 20-Hydraulic Pumps

Group 25—Rockshaft and Implement Hitches

Group 30—Selective Control Valve, Breakaway Coupler, and Remote Cylinder

SECTION 290—OPERATOR STATION OPERATION AND TESTS

Group 00—Specifications and Special Tools

Group 05—Air Conditioning System

Group 10-Heating System

Thank you so much for reading.

Please click the "Buy Now!"

button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com