

5210, 5310 5410 and 5510 Tractors

For complete service information also see:

Component Technical Manuals

3029 2.9 L Engine CTM125

4045 4.5 L Engine CTM104

Alternators and Starting Motors CTM77

**John Deere Augusta
TM1716 (18JUN99)**

LITHO IN U.S.A.
ENGLISH

Contents

SECTION 10—GENERAL INFORMATION

- Group 05—Safety
- Group 10—General Specifications
- Group 20—Fuel and Lubricants
- Group 25—Serial Number Locations
- Group 30—Features and Accessories

SECTION 20—ENGINE REPAIR

- Group 05—Engine
- Group 10—Cooling System

SECTION 30—FUEL AND AIR REPAIR

- Group 05—Fuel System
- Group 10—Air Intake System
- Group 15—Speed Control Linkage

SECTION 40—ELECTRICAL REPAIR

- Group 05—Battery, Starter and Alternator
- Group 10—Electrical System Components
- Group 15—Wiring Harness

SECTION 50—POWER TRAIN REPAIR

- Group 05—Clutch Housing
- Group 10—Clutch
 - Assembly—CollarShift/SyncShuttle™
Transmissions
- Group 11—Clutch Assembly—PowrReverser™
Transmission
- Group 12—PowrReverser™
- Group 15—CollarShift/SyncShuttle™ Transmission
- Group 16—PowrReverser™ Transmission
- Group 20—Rear PTO Drive Shaft
- Group 25—Differential
- Group 30—Final Drives
- Group 35—Mechanical Front Wheel Drive
- Group 40—Creeper Assembly

SECTION 60—STEERING AND BRAKE REPAIR

- Group 05—Steering Repair
- Group 10—Brake Repair

SECTION 70—HYDRAULIC REPAIR

- Group 05—Hydraulic Pump and Filter
- Group 06—Hydraulic Oil Cooler

- Group 10—Rockshaft
- Group 15—Dual Selective Control Valve
- Group 16—Single (Third) Selective Control Valve
- Group 20—Hydraulic Mid Mount Coupler
- Group 25—Hydraulic Power Beyond

SECTION 80—MISCELLANEOUS REPAIR

- Group 05—Front Axle—2WD
- Group 10—Wheels
- Group 15—3-Point Hitch

SECTION 90—OPERATOR STATION REPAIR

- Group 05—Seat and Support
- Group 06—Control Console and Panel—Tractors
Without Cab
- Group 10—ROLL-GARD®
- Group 15—Cab Components
- Group 20—Air Conditioning System
- Group 25—Heating System

SECTION 210—TEST AND ADJUSTMENT SPECIFICATIONS/OPERATIONAL CHECKOUT PROCEDURES

- Group 05—Test and Adjustment Specifications
- Group 10—Operational Checkout Procedures

SECTION 220—ENGINE OPERATION, TESTS AND ADJUSTMENTS

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests and Adjustments

SECTION 230—FUEL/AIR OPERATION, TESTS AND ADJUSTMENTS

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests and Adjustments

SECTION 240—ELECTRICAL SYSTEM OPERATION, TESTS AND ADJUSTMENTS

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests and Adjustments

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

TM1716-19-18JUN99

COPYRIGHT© 1998
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual

Group 20—Wiring Schematics

**SECTION 250—POWER TRAIN OPERATION,
TESTS AND ADJUSTMENTS**

- Group 05—Component Location—Collar Shift/SyncShuttle™ Transmission
- Group 06—Component Location—PowrReverser™ Transmission
- Group 10—Theory of Operation—Collar Shift/SyncShuttle™ Transmission
- Group 11—Theory of Operation—PowrReverser™ Transmission
- Group 15—Diagnosis, Tests and Adjustments—CS/SS Transmission
- Group 16—Diagnosis, Tests and Adjustments—PowrReverser™

**SECTION 260—STEERING AND BRAKE
OPERATION, TESTS AND
ADJUSTMENTS**

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests and Adjustments

**SECTION 270—HYDRAULIC SYSTEM
OPERATION, TESTS AND
ADJUSTMENTS**

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis
- Group 16—Hydraulic Tests—Without SCV
- Group 17—Hydraulic Tests—With SCV
- Group 18—Hydraulic Tests—All
- Group 19—Adjustments
- Group 20—Hydraulic Schematics

SECTION 290—OPERATOR STATION

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests and Adjustments

SECTION 299—DEALER FABRICATED TOOLS

- Group 00—Dealer Fabricated Tools

Index

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com