

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts at it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new

Remarks → Notes about this particulart part. Sometimes this may say except [FR] or [CA]


Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.

ALL PRODUCT INDEX
BX1500D

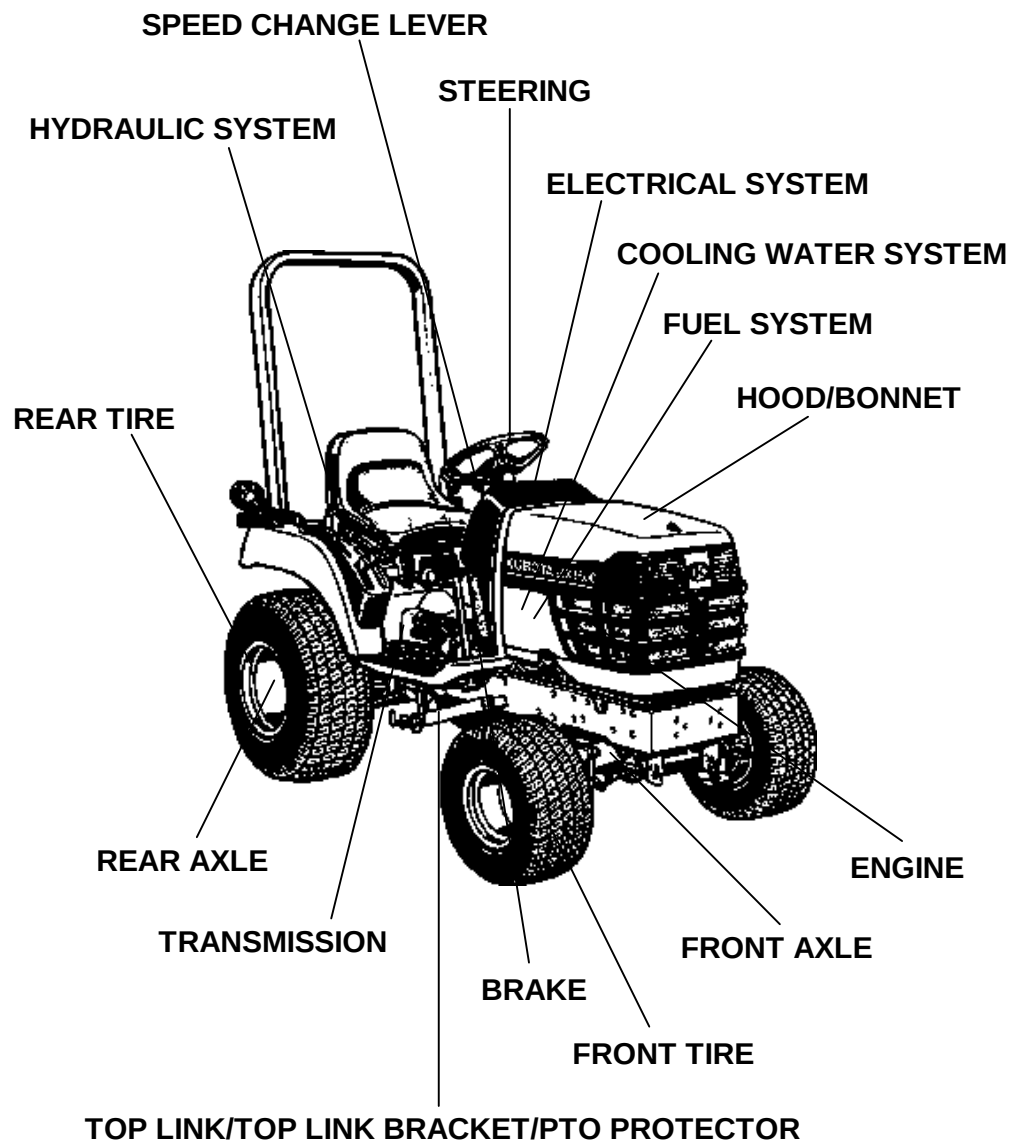

LABELS


ACCESSORIES AND SERVICE PARTS

Item	Part No.	Description	Book
ENGINE	010001	CRANKCASE	100K0727
	010002	OIL PAN	100K0727
	010003	CYLINDER HEAD	100K0727
	010004	GEAR CASE	100K0727
	010005	HEAD COVER	100K0727
	010006	OIL FILTER	100K0727
	010007	DIPSTICK AND GUIDE	100K0727
	010008	OIL PUMP	100K0727
	010100	MAIN BEARING CASE	100K0727
	010101	CAMSHAFT AND IDLE GEAR SHAFT	100K0727
	010102	PISTON AND CRANKSHAFT	100K0727
	010103	FLYWHEEL	100K0727
	010105	FUEL CAMSHAFT AND GOVERNOR SHAFT	100K0727
	010200	IDLE APPARATUS	100K0727
	010202	INJECTION PUMP	100K0727
	010204	GOVERNOR	100K0727
	010205	SPEED CONTROL PLATE	100K0727
	010206	NOZZLE HOLDER AND GLOW PLUG	100K0727
	010305	COVER	100K0727
	010406	OIL SWITCH/THERMOMETER	100K0727
	010500	WATER FLANGE AND THERMOSTAT	100K0727
	010501	WATER PUMP	100K0727
	010600	VALVE AND ROCKER ARM	100K0727
	010601	INLET MANIFOLD	100K0727
	010602	EXHAUST MANIFOLD	100K0727
	010900	UPPER GASKET KIT [OPTION]	100K0727
	010901	LOWER GASKET KIT [OPTION]	100K0727
	010908	PISTON KIT [OPTION]	100K0727
COOLING WATER SYSTEM	01A401	FAN	100K0727
	01A521	DYNAMO	100K0727
ELECTRICAL SYSTEM	01A523	DYNAMO [COMPONENT PARTS]	100K0727
	01A525	STARTER	100K0727
	01A530	STARTER [COMPONENT PARTS]	100K0727
HYDRAULIC SYSTEM	01J120	HYDRAULIC PUMP	100K0727
	01J125	HYDRAULIC PUMP [COMPONENT PARTS]	100K0727
ENGINE	010603	AIR CLEANER	100K0727
	010605	MUFFLER	100K0727
FUEL SYSTEM	01A001	ACCELERATOR LEVER	100K0727
	01A101	FUEL TANK	100K0727
COOLING WATER SYSTEM	01A110	FUEL PIPE	100K0727
	01A410	WATER PIPE	100K0727
ELECTRICAL SYSTEM	01A420	RADIATOR	100K0727
	01A510	STOP SOLENOID	100K0727
	01A535	BATTERY	100K0727
	01B115	PANEL BOARD	100K0727
	01B215	SWITCH/SENSOR	100K0727
	01B301	HEAD RIGHT	100K0727
	01B303	HAZARD LIGHT/TAIL LIGHT	100K0727
	01B310	WINKER LAMP	100K0727

Item	Part No.	Description	Book
ELECTRICAL SYSTEM	01B501	ELECTRICAL WIRING	100K0727
FRONT AXLE	01C413	FRONT FRAME	100K0727
	01C419	ENGINE SUPPORT	100K0727
TRANSMISSION	01C420	TRANSMISSION CASE	100K0727
REAR AXLE	01C427	REAR AXLE CASE	100K0727
TRANSMISSION	01D001	CLUTCH SHAFT/OUTPUT SHAFT	100K0727
	01D005	PROPELLER SHAFT	100K0727
	01D010	HST	100K0727
	01D015	HST [COMPONENT PARTS]	100K0727
	01D107	RANGE GEAR SHAFT	100K0727
	01D135	PTO SHAFT	100K0727
	01D137	MID PTO	100K0727
	01D140	REAR DIFFERENTIAL	100K0727
	01D141	FWD IDLE SHAFT	100K0727
	01D142	GP IDLE SHAFT	100K0727
	01D143	FRONT WHEEL PROPELLER SHAFT	100K0727
SPEED CHANGE LEVER	01D217	RANGE GEAR SHIFT FORK	100K0727
	01D220	PTO GEAR SHIFT FORK	100K0727
	01D222	PTO GEAR SHIFT ARM	100K0727
	01D225	DIFFERENTIAL LOCK SHIFT FORK	100K0727
REAR AXLE	01D301	REAR AXLE	100K0727
BRAKE	01E001	BRAKE	100K0727
SPEED CHANGE LEVER	01F107	NEUTRAL HOLDER LINK	100K0727
	01F108	SPEED CONTROL PEDAL	100K0727
	01F110	RANGE GEAR SHIFT LEVER	100K0727
	01F113	FRONT WHEEL DRIVE LEVER	100K0727
	01F122	PTO SELECT LEVER	100K0727
	01F125	PTO GEAR SHIFT LEVER	100K0727
	01F143	HYDRAULIC CONTROL LEVER	100K0727
BRAKE	01F201	BRAKE PEDAL	100K0727
REAR AXLE	01F205	DIFFERENTIAL LOCK PEDAL	100K0727
FRONT AXLE	01G105	FRONT AXLE CASE	100K0727
	01G115	FRONT DIFFERENTIAL	100K0727
	01G120	DIFFERENTIAL GEAR SHAFT	100K0727
	01G125	FRONT AXLE CASE	100K0727
	01G130	FRONT AXLE	100K0727
STEERING	01H101	STEERING HANDLE	100K0727
	01H110	STEERING CONTROLLER	100K0727
	01H120	STEERING LINKAGE	100K0727
	01H122	STEERING CYLINDER [COMPONENT PARTS]	100K0727
HYDRAULIC SYSTEM	01J201	HYDRAULIC OIL LINE(SUCTION)	100K0727
	01J210	HYDRAULIC OIL LINE(DELIVERY)	100K0727
	01J215	HYDRAULIC OIL LINE(STEERING)	100K0727
	01J301	HYDRAULIC CYLINDER	100K0727
	01J310	HYDRAULIC PISTON/LIFT ARM	100K0727
	01J405	CONTROL VALVE	100K0727
	01J410	CONTROL VALVE [COMPONENT PARTS]	100K0727

Item	Part No.	Description	Book
TOP LINK/TOP LINK BRACKET/PTO PROTECTOR	01K114	TOP LINK	100K0727
	01K115	LOWER LINK	100K0727
	01K116	LIFT ROD	100K0727
	01K123	TOP LINK BRACKET	100K0727
	01K130	MOWER REAR LINK RH	100K0727
	01K131	MOWER REAR LINK LH	100K0727
	01L125	PTO PROTECTOR	100K0727
HOOD/BONNET	01M102	FRONT GLILLE SUPPORT	100K0727
	01M105	BONNET	100K0727
	01M110	BONNET SIDE	100K0727
	01M135	CENTER PILLAR	100K0727
	01M201	PANEL FRAME	100K0727
	01M210	FENDER	100K0727
	01M217	SEAT SUPPORT	100K0727
	01M220	SEAT	100K0727
	01M225	STEP	100K0727
	01M301	ROPS	100K0727
	01M501	SMV EMBLEM	100K0727
FRONT TIRE	01R10101	FRONT WHEEL (16*7.5-8)	100K0727
	01R10102	FRONT WHEEL (16*7.5-8)	100K0727
REAR TIRE	01R11001	REAR WHEEL (24*12-12)	100K0727
	01R11002	REAR WHEEL (24*12-12)	100K0727
LABELS	01S10201	LABEL (FRONT) [ENGLISH]	100K0727
	01S10202	LABEL (FRONT) [FRENCH]	100K0727
	01S10301	LABEL (REAR) [ENGLISH]	100K0727
	01S10302	LABEL (REAR) [FRENCH]	100K0727
ACCESSORIES AND SERVICE PARTS	01T105	ACCESSORIES AND SERVICE PARTS	100K0727

CRANKCASE

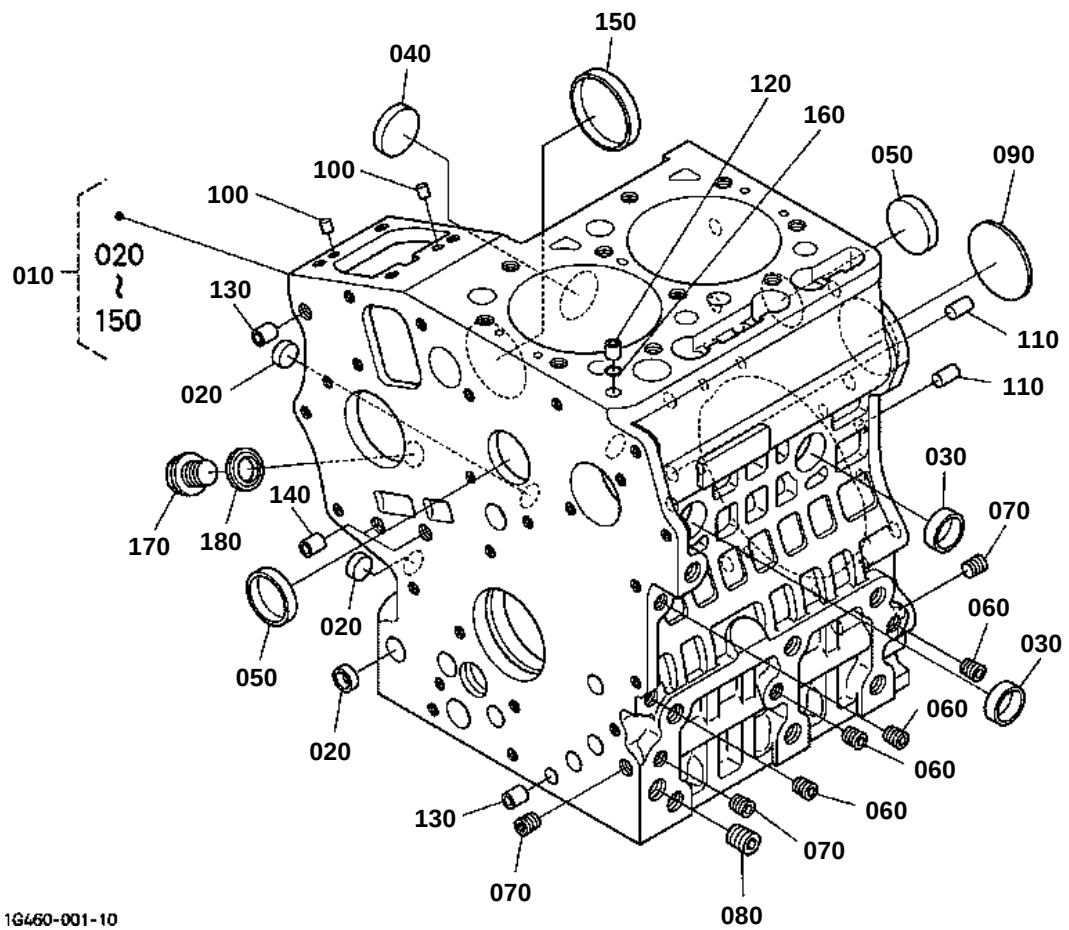

1G460-001-10




CRANKCASE

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new


REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	1G460-01010	COMP.CRANKCASE	1				18	39.6
020	16851-96260	CAP SEALING	3				0.005	0.011
030	16851-96270	CAP SEALING	2				0.005	0.011
040	06311-85025	CAP SEALING	1				0.01	0.022
050	15451-96270	CAP SEALING	2				0.012	0.0264
060	15261-96010	PLUG	4				0.002	0.0044
070	15521-96020	PLUG	3				0.003	0.0066
080	15521-96030	PLUG	1				0.007	0.0154
090	15261-96160	PLUG EXPANSION	1				0.02	0.044
100	05012-00508	PIN STRAIGHT	2				0.001	0.0022
110	05012-00814	PIN STRAIGHT	2				0.006	0.0132
120	15221-33650	PIN PIPE	1				0.004	0.0088
130	15231-33960	PIN PIPE	2				0.001	0.0022
140	17331-59190	PIN PIPE	2				0.02	0.044
150	16851-16212	COVER FUEL CAMSHAFT	1				0.03	0.066
160	15221-33700	O RING	1				0.001	0.0022
170	06311-55020	PLUG	1				0.031	0.0682
180	04714-00200	GASKET	1				0.002	0.0044

OIL PAN

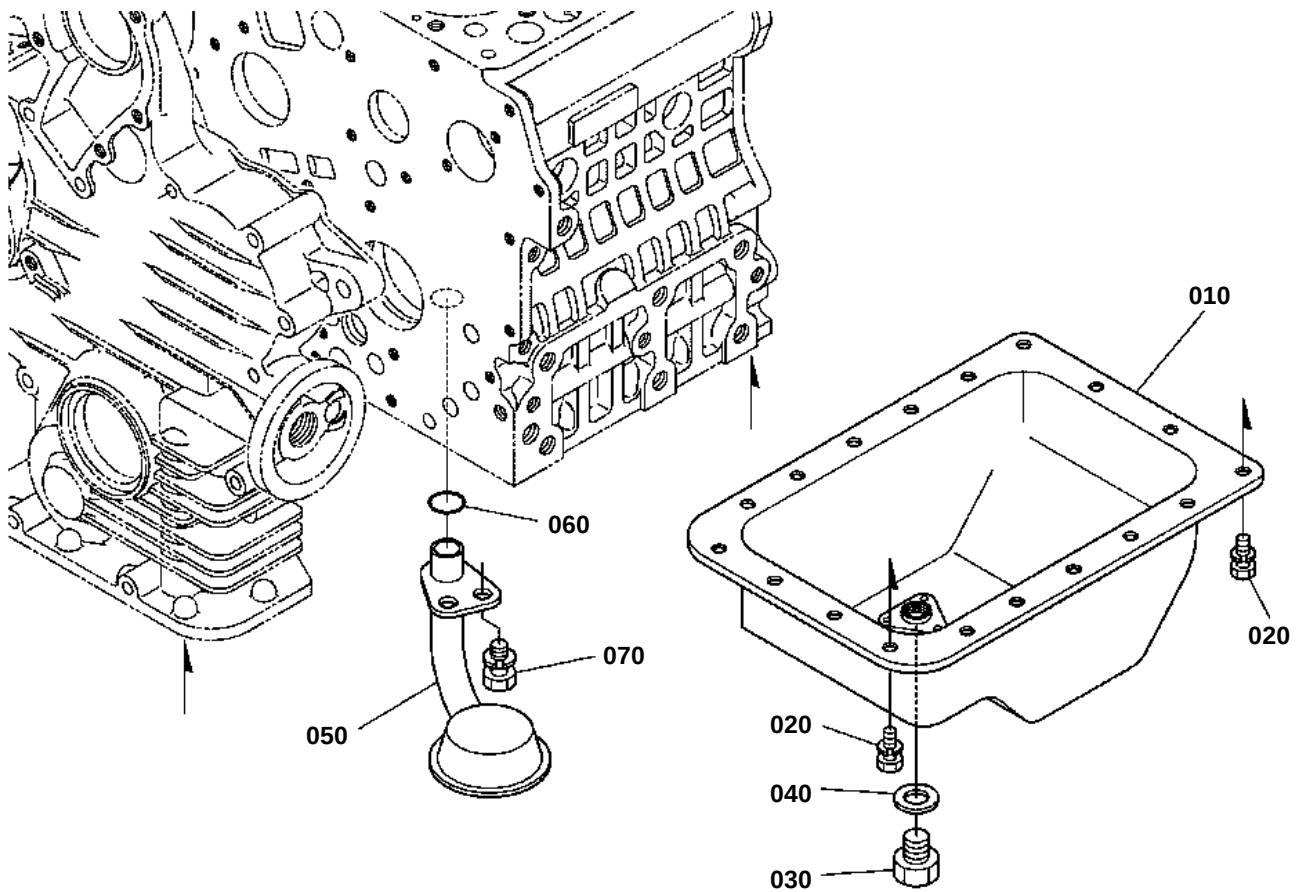

1G460-002-10

CYLINDER HEAD

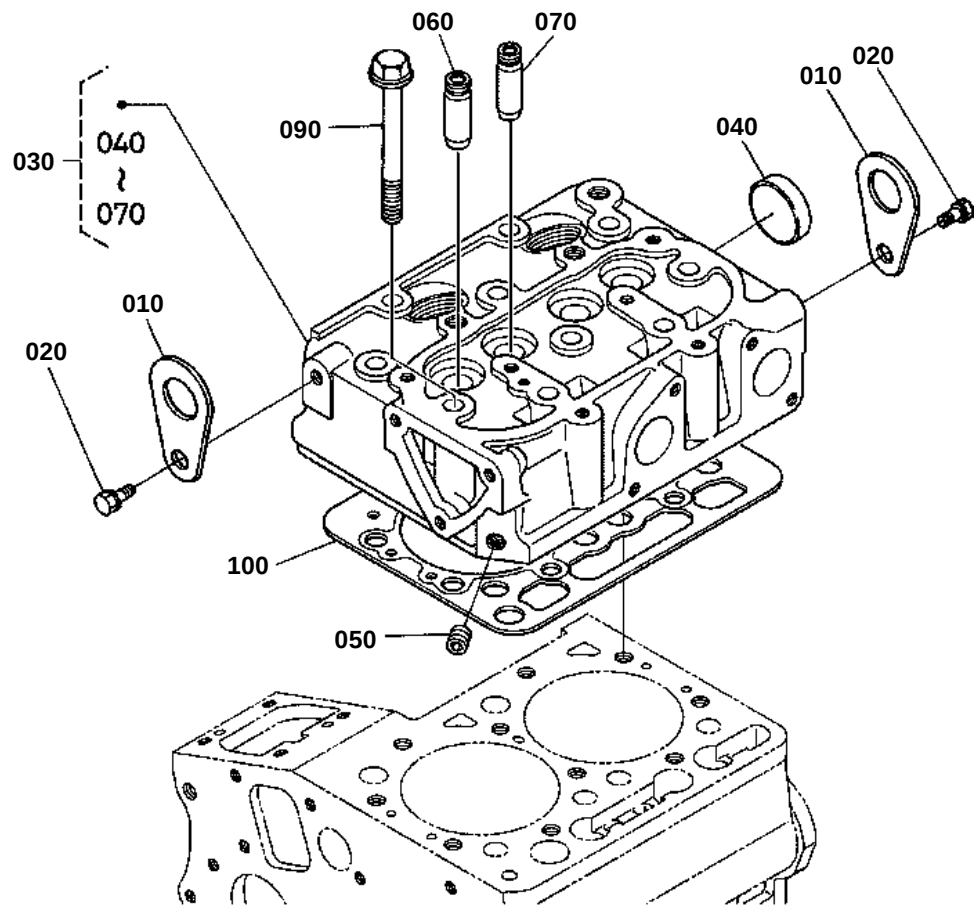

1G460-003-10




CYLINDER HEAD

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	15221-01750	HOOK ENGINE	2				0.04	0.088
020	01123-60816	BOLT	2				0.01	0.022
030	1G460-03040	COMP.CYLINDER HEAD	1				0	0
040	15321-96260	CAP SEALING	1				0.014	0.0308
050	15261-96010	PLUG	1				0.002	0.0044
060	15841-13540	GUIDE INLET VALVE	2				0.014	0.0308
070	15841-13560	GUIDE EXHAUST VALVE	2				0.014	0.0308
080	99999-99999	BLANK	0				0	0
090	14601-03450	BOLT CYLINDER HEAD	10				0.035	0.077
100	1G460-03310	GASKET CYL.HEAD	1				0.041	0.0902

GEAR CASE

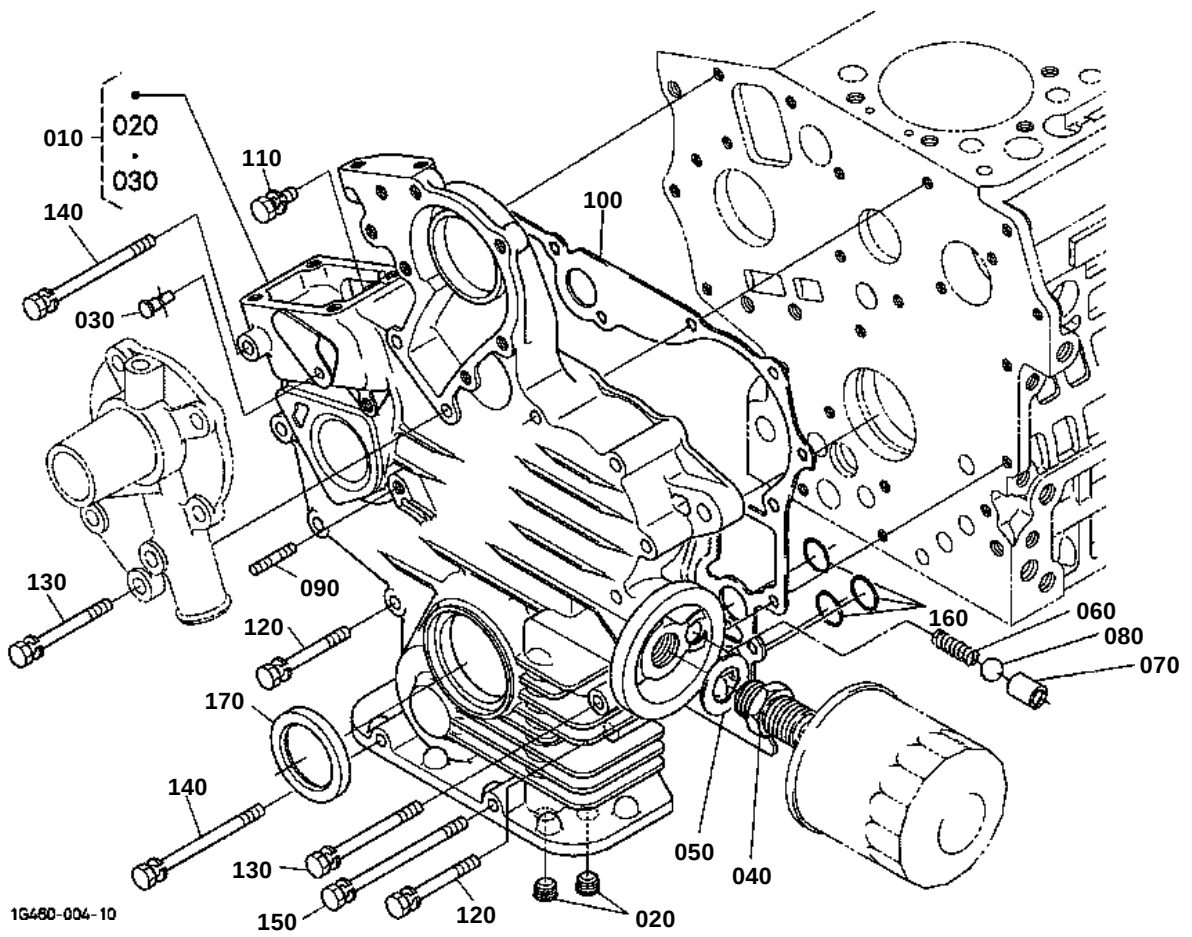




GEAR CASE

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	1G460-04020	COMP.CASE GEAR	1				2.12	4.664
020	15521-96030	PLUG	2				0.007	0.0154
030	15841-56280	PIN START SPRING	1				0.005	0.011
040	15241-32290	JOINT PIPE	1				0.053	0.1166
050	15841-94010	WASHER PLAIN	1				0.003	0.0066
060	16851-36950	SPRING	1				0.02	0.044
070	15841-36930	SEAT VALVE	1				0.01	0.022
080	07715-03211	BALL	1				0.003	0.0066
090	15841-91510	STUD	1				0.007	0.0154
100	1G460-04130	GASKET GEAR CASE	1			OLD PART	0.01	0.022
100	1G460-04132	GASKET GEAR CASE	1		?	NEW PART	0.01	0.022
110	01023-50618	BOLT	1				0.006	0.0132
120	01023-60650	BOLT	8				0.015	0.033
130	15841-91010	BOLT	3				0.014	0.0308
140	01023-50680	BOLT	2				0.017	0.0374
150	01023-50690	BOLT	1				0	0
160	04814-06130	O RING	3				0.01	0.022
170	15877-04140	SEAL OIL	1				0.011	0.0242

HEAD COVER

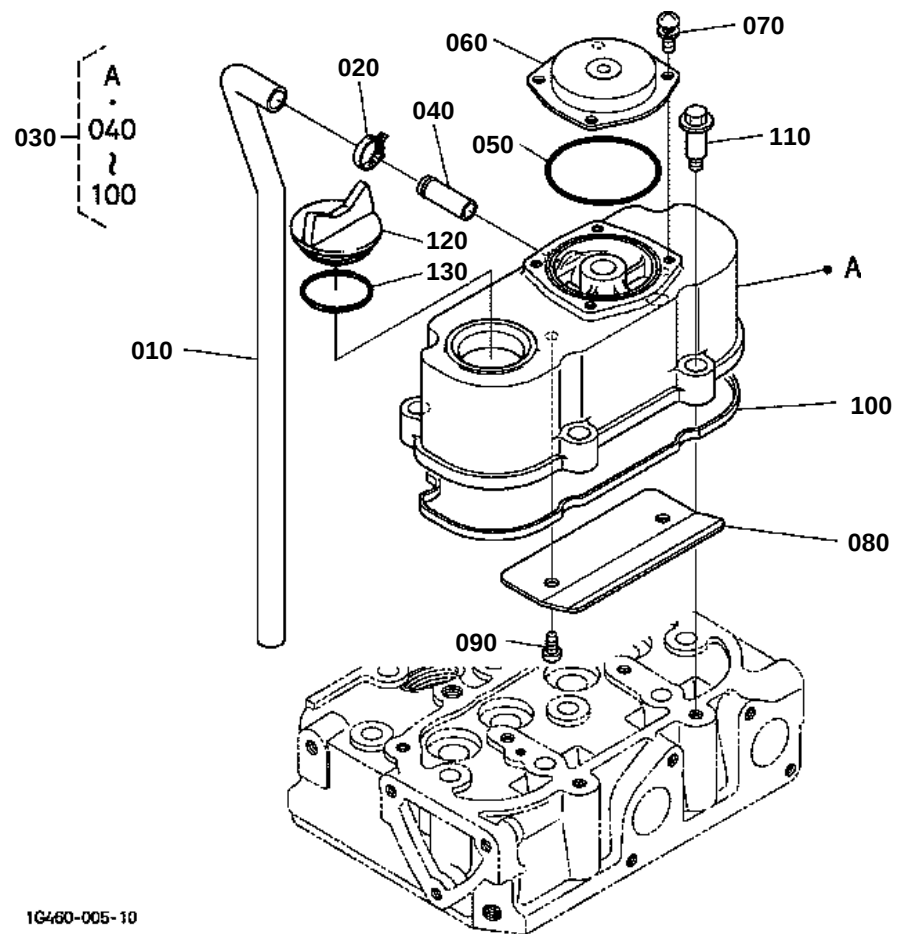


1G460-005-10



HEAD COVER

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	1G460-05510	TUBE BREATHER	1				0.04	0.088
020	09318-88125	CLAMP HOSE	1				0.001	0.0022
030	1G460-14500	ASSY COVER CYL.HEAD	1				0.51	1.122
040	16241-73370	PIPE WATER RETURN	1				0.007	0.0154
050	1A021-05430	O RING BREATHER	1				0.001	0.0022
060	1A021-05120	COVER BREATHER	1				0.039	0.0858
070	03024-50510	SCREW WITH WASHER	4				0.002	0.0044
080	1G460-05370	SHIELD BREATHER	1				0.02	0.044
090	16861-93310	SCREW	2				0.001	0.0022
100	1G460-14520	GASKET HEAD COVER	1				0.008	0.0176
110	1G911-91022	BOLT	4				0.015	0.033
120	E9151-33140	PLUG OIL FILLER	1				0.017	0.0374
130	04814-50300	O RING	1				0.001	0.0022

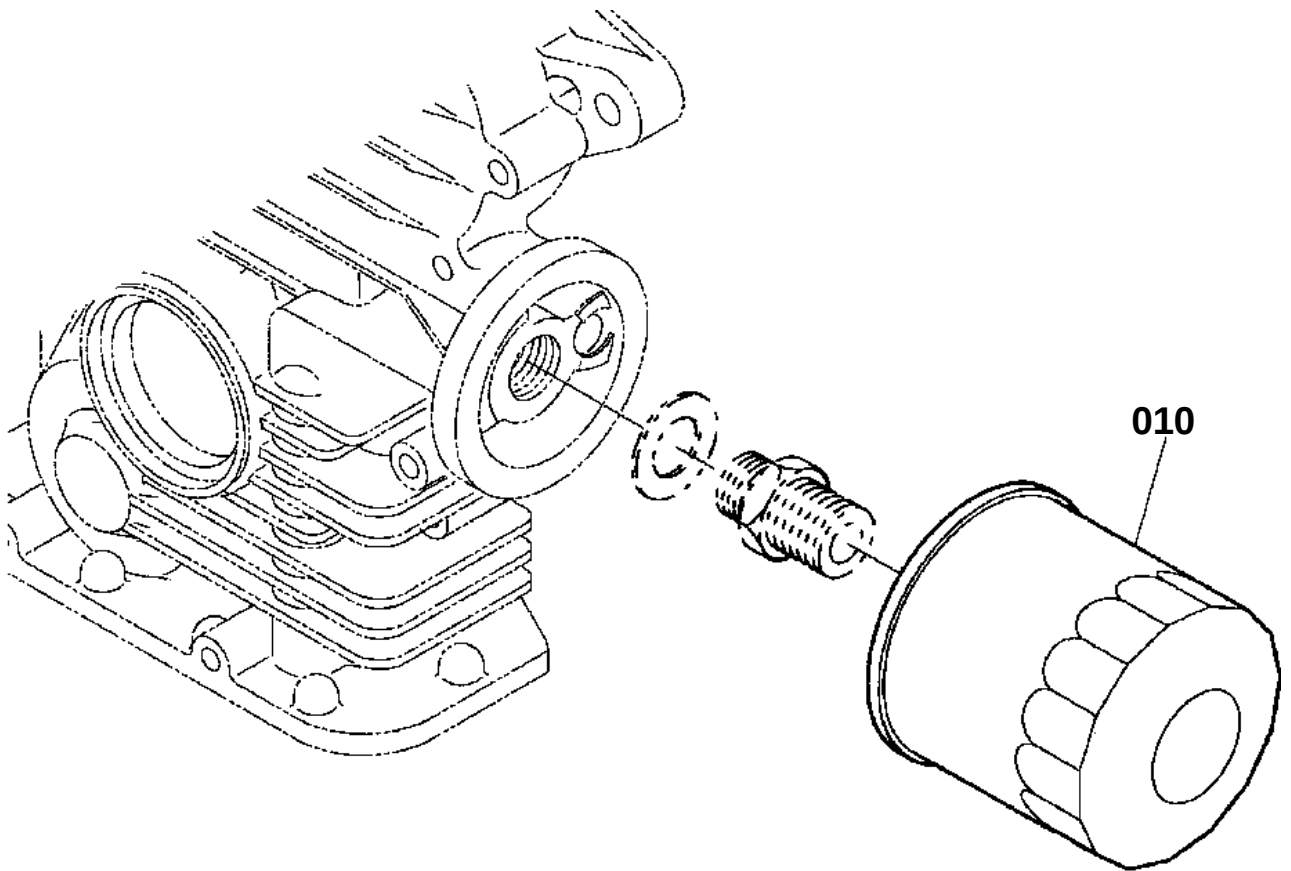

1G460-006-10

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com