

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts at it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new

Remarks → Notes about this particulart part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:

 
The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.

**ALL PRODUCT INDEX
BX24D**

FREQUENTLY USED ITEMS

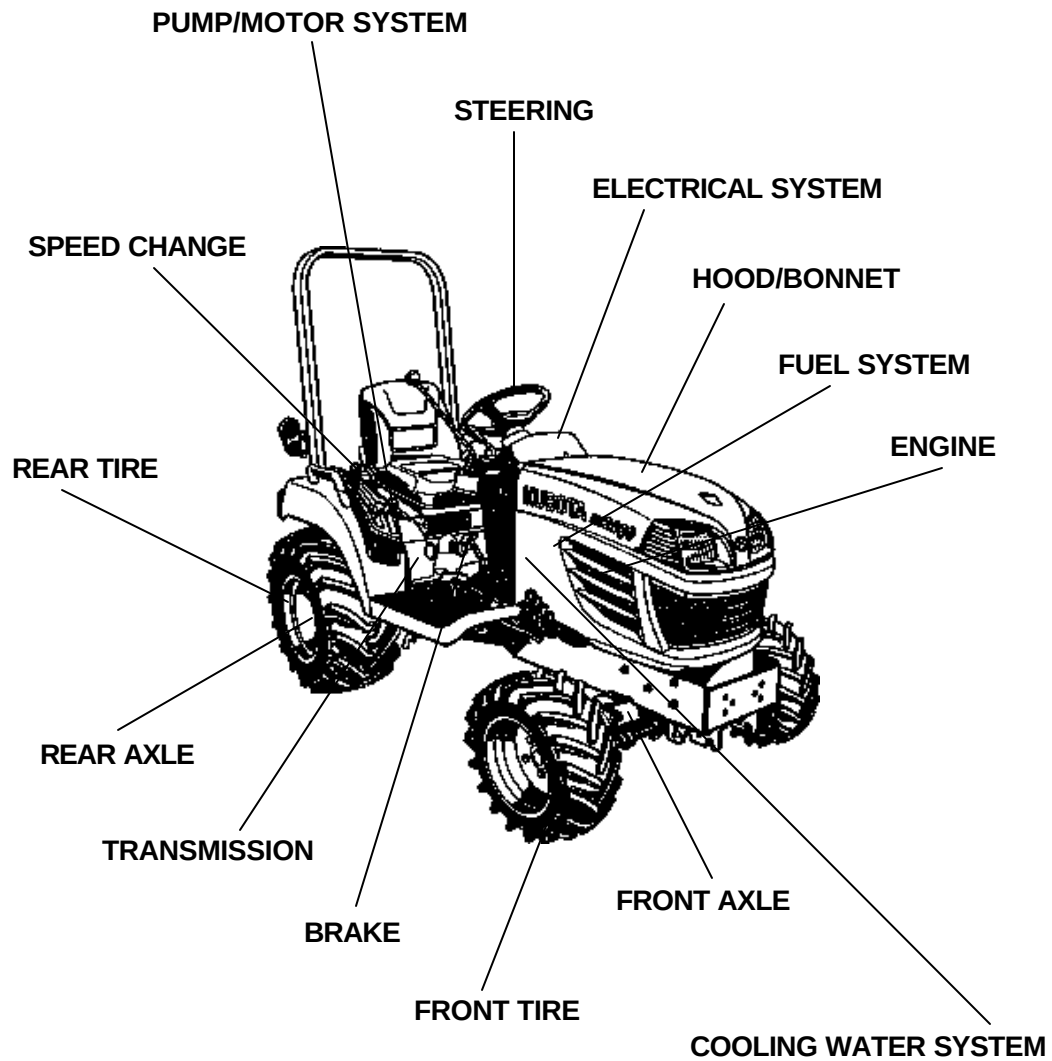

TOP LINK/TOP LINK BRACKET/PTO PROTECTOR

LABELS

ACCESSORIES AND SERVICE PARTS

OPTION


Item	Part No.	Description	Book
FREQUENTLY USED ITEMS ENGINE	00000003	FREQUENTLY USED ITEMS	100K0929
	021001	CRANKCASE	100K0929
	021002	OIL PAN	100K0929
	021003	CYLINDER HEAD	100K0929
	021004	GEAR CASE	100K0929
	021005	HEAD COVER	100K0929
	021006	OIL FILTER	100K0929
	021007	DIPSTICK AND GUIDE	100K0929
	021008	OIL PUMP	100K0929
	021100	MAIN BEARING CASE	100K0929
	021101	CAMSHAFT AND IDLE GEAR SHAFT	100K0929
	021102	PISTON AND CRANKSHAFT	100K0929
	021103	FLYWHEEL	100K0929
	021105	FUEL CAMSHAFT AND GOVERNOR SHAFT	100K0929
	021200	IDLE APPARATUS	100K0929
	021201	STOP SOLENOID	100K0929
	021202	INJECTION PUMP	100K0929
	021204	GOVERNOR	100K0929
	021205	SPEED CONTROL PLATE	100K0929
	021206	NOZZLE HOLDER AND GLOW PLUG	100K0929
	021207	NOZZLE HOLDER [COMPONENT PARTS]	100K0929
	021305	COVER	100K0929
	021402	ALTERNATOR AND PULLEY	100K0929
	021403	ALTERNATOR [COMPONENT PARTS]	100K0929
	021404	STARTER	100K0929
	021405	STARTER [COMPONENT PARTS]	100K0929
	021406	OIL SWITCH/THERMOMETER	100K0929
	021500	WATER FLANGE AND THERMOSTAT	100K0929
	021501	WATER PUMP	100K0929
	021504	FAN	100K0929
	021600	VALVE AND ROCKER ARM	100K0929
	021601	INLET MANIFOLD	100K0929
	021602	EXHAUST MANIFOLD	100K0929
	031603	AIR CLEANER	100K0929
	03160502	MUFFLER	100K0929
	021900	UPPER GASKET KIT	100K0929
	021901	LOWER GASKET KIT	100K0929
	021908	PISTON KIT	100K0929
	03A001	ACCELERATOR LEVER	100K0929
	03A101	FUEL TANK	100K0929
	03A110	FUEL PIPE	100K0929
FUEL SYSTEM	03A410	WATER PIPE	100K0929
COOLING WATER SYSTEM	03A420	RADIATOR	100K0929
ELECTRICAL SYSTEM	03A53502	BATTERY	100K0929
	03B11502	PANEL BOARD	100K0929
	03B21502	SWITCH/SENSOR	100K0929
	03B301	HEAD LIGHT	100K0929

Item	Part No.	Description	Book
ELECTRICAL SYSTEM	03B303	HAZARD LIGHT/TAIL LIGHT	100K0929
	03B50103	ELECTRICAL WIRING	100K0929
FRONT AXLE	03C41302	FRONT FRAME	100K0929
	03C41702	SUB FRAME	100K0929
	03C41902	ENGINE SUPPORT	100K0929
TRANSMISSION	03C420	TRANSMISSION CASE	100K0929
	03C427	REAR AXLE CASE	100K0929
	03D001	CLUTCH SHAFT/OUTPUT SHAFT	100K0929
	03D005	PROPELLER SHAFT	100K0929
	03D011	HST 1	100K0929
	03D012	HST 2	100K0929
	03D013	HST 3	100K0929
	03D014	HST 4	100K0929
	03D108	RANGE GEAR SHAFT	100K0929
	03D135	PTO SHAFT	100K0929
	03D137	MID PTO	100K0929
	03D140	REAR DIFFERENTIAL	100K0929
	03D141	FWD IDLE SHAFT	100K0929
	03D142	GP IDLE SHAFT	100K0929
	03D14302	FRONT WHEEL PROPELLER SHAFT	100K0929
SPEED CHANGE	03D217	RANGE GEAR SHIFT FORK	100K0929
	03D220	PTO GEAR SHIFT FORK	100K0929
	03D222	PTO GEAR SHIFT ARM	100K0929
	03D225	DIFFERENTIAL LOCK SHIFT FORK	100K0929
REAR AXLE	03D301	REAR AXLE	100K0929
BRAKE	03E001	BRAKE	100K0929
SPEED CHANGE	03F104	CRUISE CONTROL LEVER	100K0929
	03F10802	SPEED CONTROL PEDAL	100K0929
	03F110	RANGE GEAR SHIFT LEVER	100K0929
	03F113	FRONT WHEEL DRIVE LEVER	100K0929
	03F122	PTO SELECT LEVER	100K0929
	03F125	PTO GEAR SHIFT LEVER	100K0929
PUMP/MOTOR SYSTEM	03F143	HYDRAULIC CONTROL LEVER	100K0929
BRAKE	03F201	BRAKE PEDAL	100K0929
REAR AXLE	03F205	DIFFERENTIAL LOCK PEDAL	100K0929
FRONT AXLE	03G11002	FRONT DIFFERENTIAL CASE	100K0929
	03G11502	FRONT DIFFERENTIAL	100K0929
	03G12002	DIFFERENTIAL GEAR SHAFT	100K0929
	03G12502	FRONT AXLE CASE	100K0929
	03G13002	FRONT AXLE	100K0929
STEERING	03H101	STEERING HANDLE	100K0929
	03H110	STEERING CONTROLLER	100K0929
	03H12002	STEERING LINKAGE	100K0929
	03H122	STEERING CYLINDER [COMPONENT PARTS]	100K0929
PUMP/MOTOR SYSTEM	03J120	HYDRAULIC PUMP	100K0929
	03J125	HYDRAULIC PUMP [COMPONENT PARTS]	100K0929
	03J21002	HYDRAULIC OIL LINE(DELIVERY)	100K0929

Item	Part No.	Description	Book
PUMP/MOTOR SYSTEM	03J21502	HYDRAULIC OIL LINE(STEERING)	100K0929
	03J301	HYDRAULIC CYLINDER	100K0929
	03J310	HYDRAULIC PISTON/LIFT ARM	100K0929
	03J40502	CONTROL VALVE	100K0929
	03J410	CONTROL VALVE [COMPONENT PARTS]	100K0929
TOP LINK/TOP LINK BRACKET/PTO PROTECTOR	03K114	TOP LINK	100K0929
	03K115	LOWER LINK	100K0929
	03K116	LIFT ROD	100K0929
	03K12302	TOP LINK BRACKET	100K0929
	03K13002	MOWER REAR LINK RH	100K0929
	03K131	MOWER REAR LINK LH	100K0929
	03L125	PTO PROTECTOR	100K0929
HOOD/BONNET	03M100	FRONT GUARD	100K0929
	03M10202	FRONT GLILLE SUPPORT	100K0929
	03M105	BONNET	100K0929
	03M110	BONNET SIDE	100K0929
	03M135	CENTER PILLAR	100K0929
	03M20102	PANEL FRAME	100K0929
	03M21003	FENDER	100K0929
	03M21702	SEAT SUPPORT	100K0929
	03M22002	SEAT	100K0929
	03M22502	STEP	100K0929
	03M25002	MANUAL HOLDER	100K0929
	03M30102	ROPS	100K0929
	03M50102	SMV EMBLEM	100K0929
FRONT TIRE	03R10103	FRONT WHEEL(18*8.5-10)	100K0929
	03R10104	FRONT WHEEL(18*8.5-10)	100K0929
	03R10105	FRONT WHEEL(18*8.5-10)	100K0929
REAR TIRE	03R11003	REAR WHEEL(26*12.00-12)	100K0929
	03R11004	REAR WHEEL(26*12.00-12)	100K0929
	03R11005	REAR WHEEL(26*12-12)	100K0929
LABELS	03S10201	LABEL(FRONT) [ENGLISH]	100K0929
	03S10202	LABEL(FRONT) [FRENCH]	100K0929
	03S10303	LABEL(REAR) [ENGLISH]	100K0929
	03S10304	LABEL(REAR) [FRENCH]	100K0929
ACCESSORIES AND SERVICE PARTS	03T105	ACCESSORIES AND SERVICE PARTS	100K0929
OPTION	03U95001	FRONT CONTROL VALVE KIT(VALVE) [OPTION]	100K0929
	03U95002	FRONT CONTROL VALVE KIT(VALVE) [COMP.PARTS] [OPTION]	100K0929
	03U95003	FRONT CONTROL VALVE KIT(ROD) [OPTION]	100K0929
	03U95004	FRONT CONTROL VALVE KIT(ROD) [OPTION]	100K0929
	03U95005	FRONT CONTROL VALVE KIT(LEVER) [OPTION]	100K0929
	03U95006	FRONT CONTROL VALVE KIT(OIL LINE 1) [OPTION]	100K0929

Item	Part No.	Description	Book
OPTION	03U95008	FRONT CONTROL VALVE KIT(OIL LINE 2) [OPTION]	100K0929

 CRANKCASE

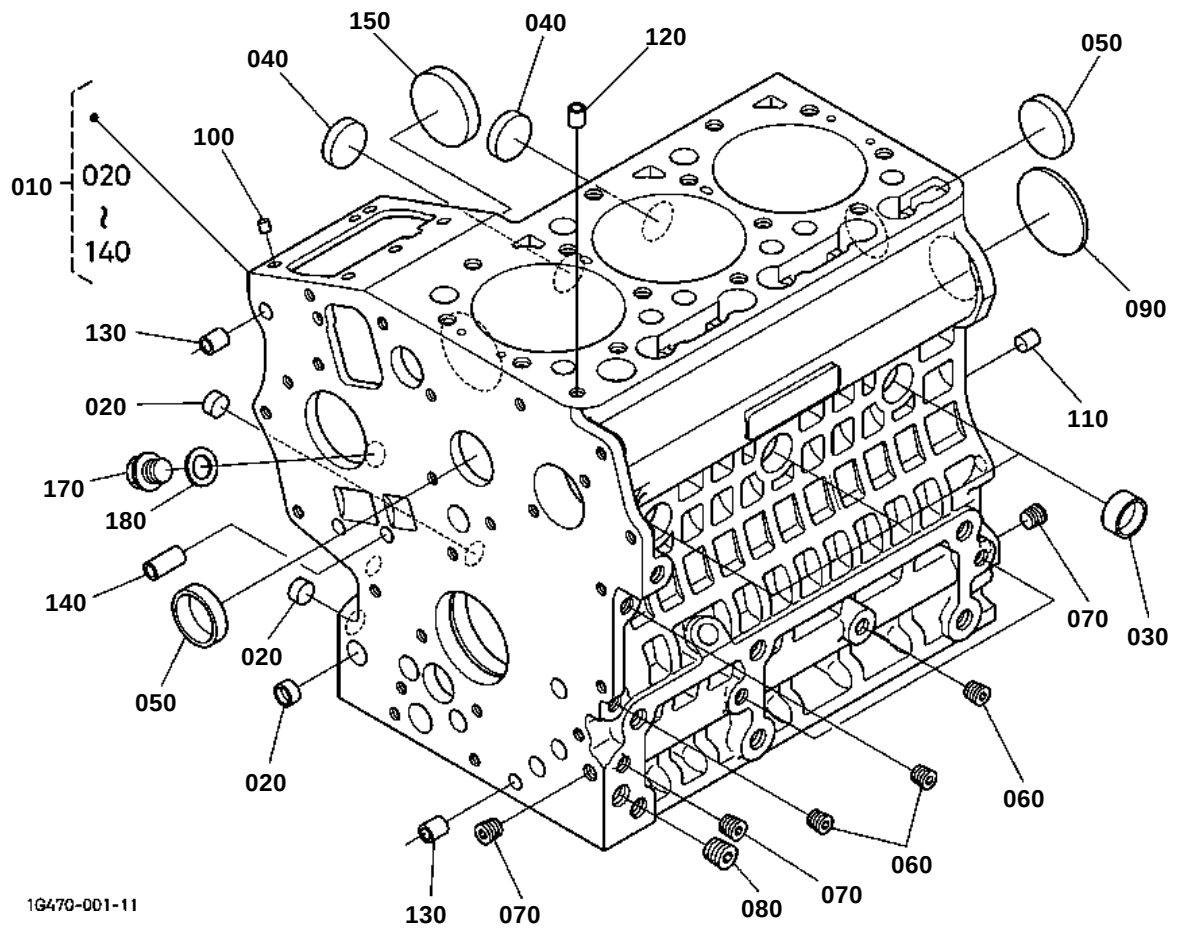

1G470-001-11




CRANKCASE


↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	1G470-01017	COMP.CRANKCASE	1				23	50.6
020	16851-96260	CAP SEALING	3				0.005	0.011
030	16851-96270	CAP SEALING	3				0.005	0.011
040	06311-85025	CAP SEALING	2				0.01	0.022
050	15451-96270	CAP SEALING	2				0.001	0.0022
060	15261-96010	PLUG	5				0.002	0.0044
070	15521-96020	PLUG	3				0.003	0.0066
080	15521-96030	PLUG	1				0.007	0.0154
090	15261-96160	PLUG EXPANSION	1				0.02	0.044
100	05012-00508	PIN STRAIGHT	2				0.001	0.0022
110	05012-00814	PIN STRAIGHT	2				0.006	0.0132
120	15221-33650	PIN PIPE	1				0.004	0.0088
130	15231-33960	PIN PIPE	2				0.001	0.0022
140	17331-59190	PIN PIPE	2				0.02	0.044
150	16851-16212	COVER FUEL CAMSHAFT	1				0.03	0.066
160	99999-99999	BLANK	0				0	0
170	06311-55020	PLUG	1				0.031	0.0682
180	04724-00130	GASKET	1				0.003	0.0066

 
OIL PAN

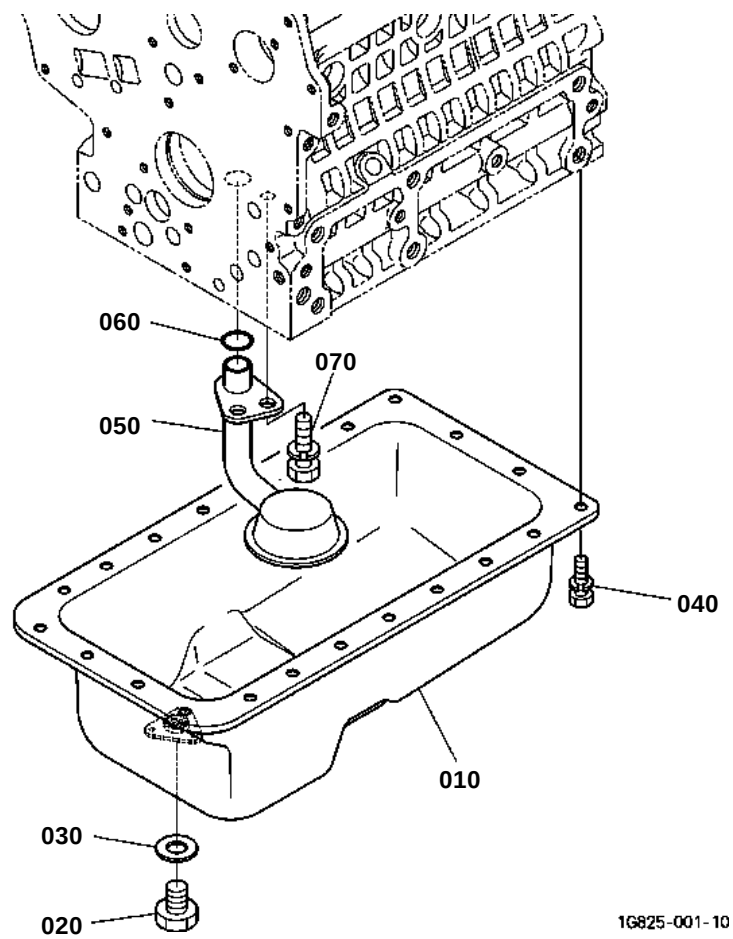

CYLINDER HEAD

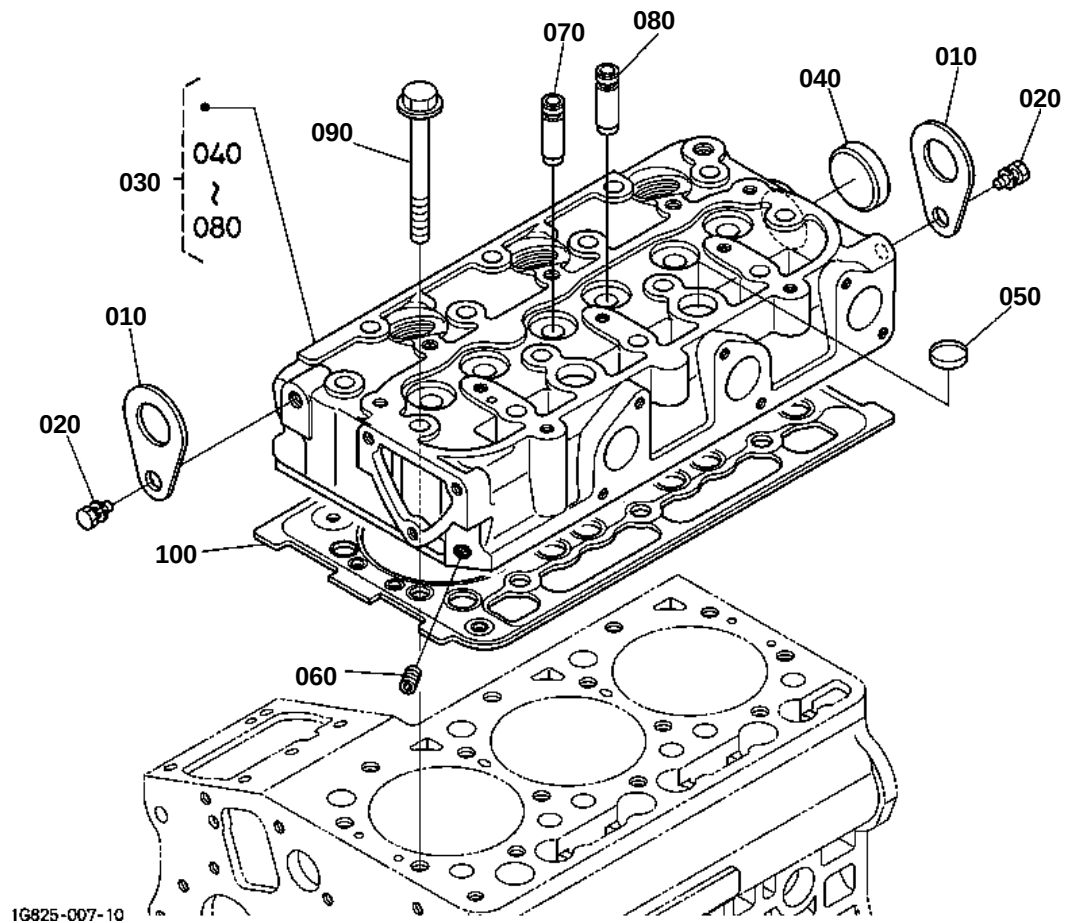 

GEAR CASE

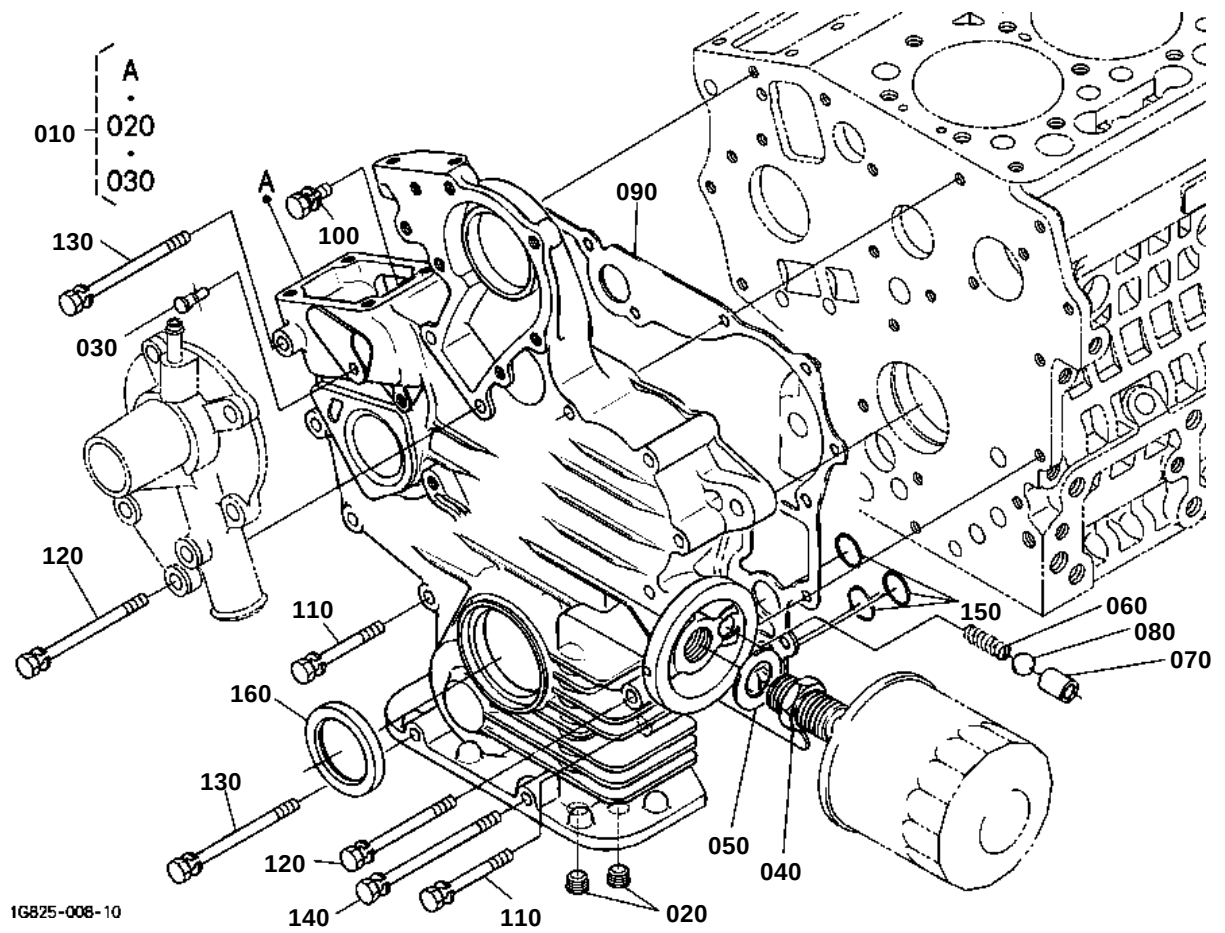 




GEAR CASE

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	1G470-04020	COMP.CASE GEAR	1				2.13	4.686
020	15521-96030	PLUG	2				0.007	0.0154
030	15841-56280	PIN START SPRING	1				0.005	0.011
040	15241-32290	JOINT PIPE	1				0.053	0.1166
050	15841-94010	WASHER PLAIN	1				0.003	0.0066
060	16851-36950	SPRING	1				0.02	0.044
070	15841-36930	SEAT VALVE	1				0.01	0.022
080	07715-03211	BALL	1				0.003	0.0066
090	1E125-04130	GASKET GEAR CASE	1				0.009	0.0198
100	01023-50618	BOLT	1				0.006	0.0132
110	01023-60650	BOLT	8				0.015	0.033
120	15841-91010	BOLT	3				0.014	0.0308
130	01023-50680	BOLT	2				0.017	0.0374
140	01023-50690	BOLT	1				0.019	0.0418
150	04814-06130	O RING	3				0.01	0.022
160	15877-04140	SEAL OIL	1				0.011	0.0242

 HEAD COVER

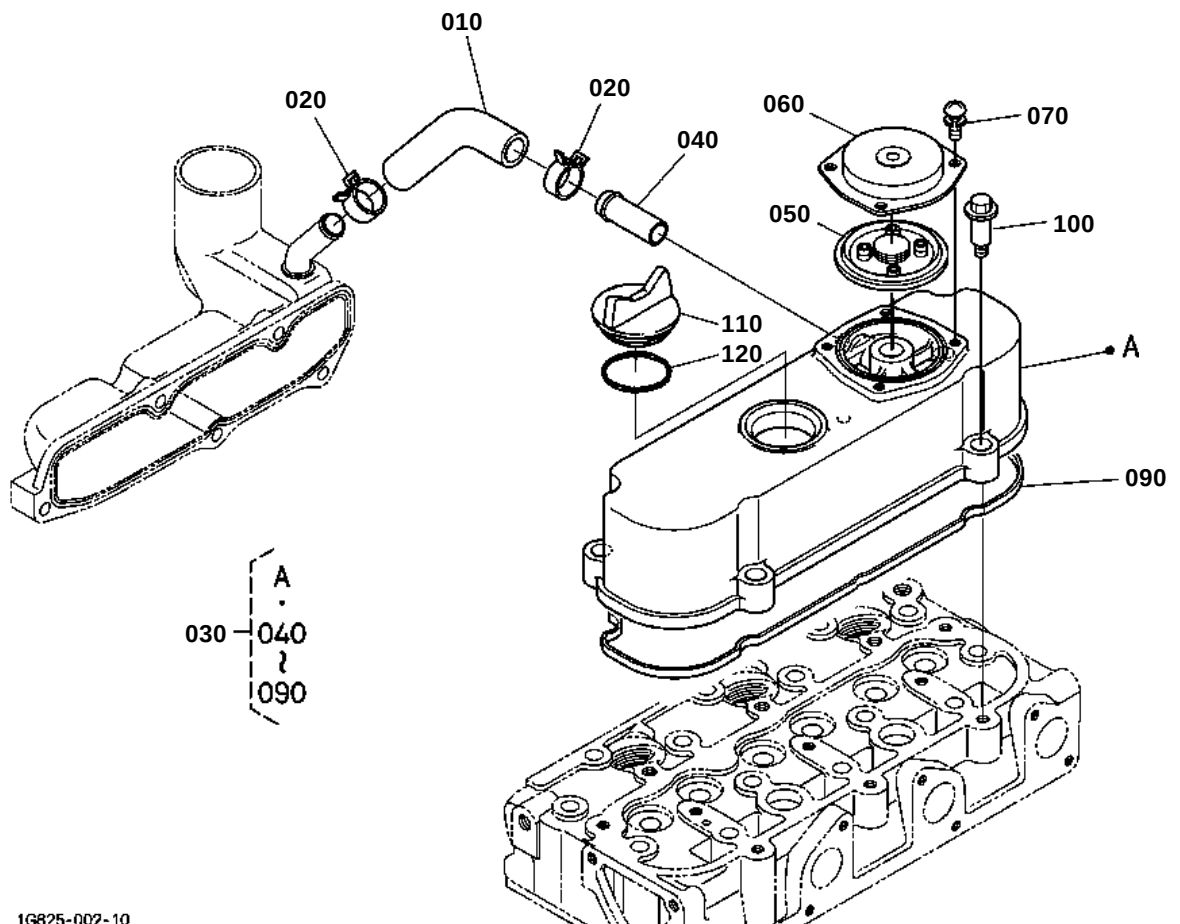


1G825-002-10



HEAD COVER

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	1G960-05512	TUBE BREATHER	1				0.008	0.0176
020	09318-88125	CLAMP HOSE	2				0.001	0.0022
030	1G960-14504	ASSY COVER CYL.HEAD	1				0	0
040	16241-73370	PIPE WATER RETURN	1				0.007	0.0154
050	1G911-05203	COMP.VALVE BREATHER	1				0.01	0.022
060	1G801-05120	COVER BREATHER	1				0.035	0.077
070	03024-50510	SCREW WITH WASHER	4				0.002	0.0044
080	99999-99999	BLANK	0				0	0
090	1G962-14522	GASKET HEAD COVER	1				0.007	0.0154
100	1G911-91022	BOLT	4				0.015	0.033
110	E9151-33140	PLUG OIL FILLER	1				0.017	0.0374
120	04814-50300	O RING	1				0.001	0.0022

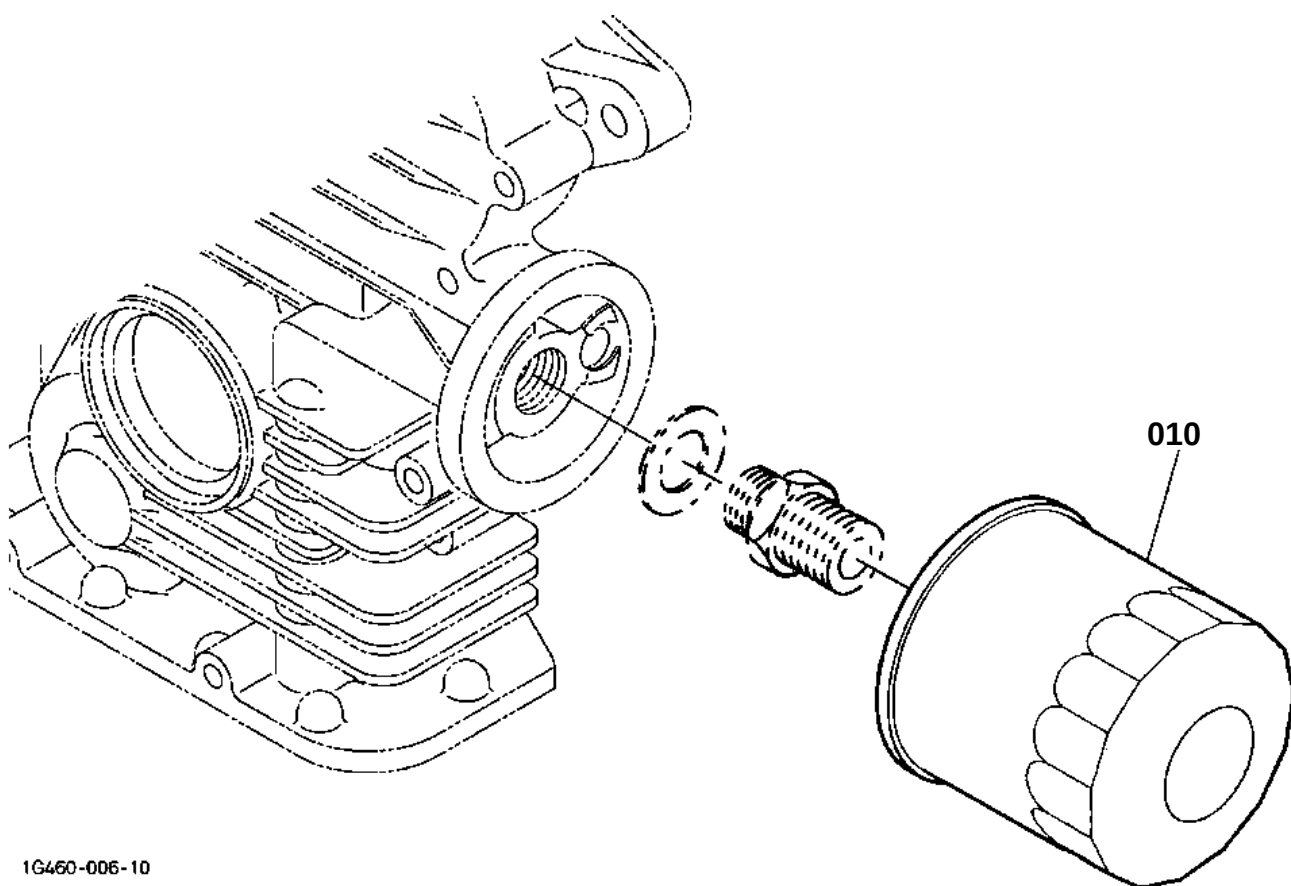 

1G460-006-10

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com