

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts at it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new

Remarks → Notes about this particulart part. Sometimes this may say except [FR] or [CA]


Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.

ALL PRODUCT INDEX
G4200H

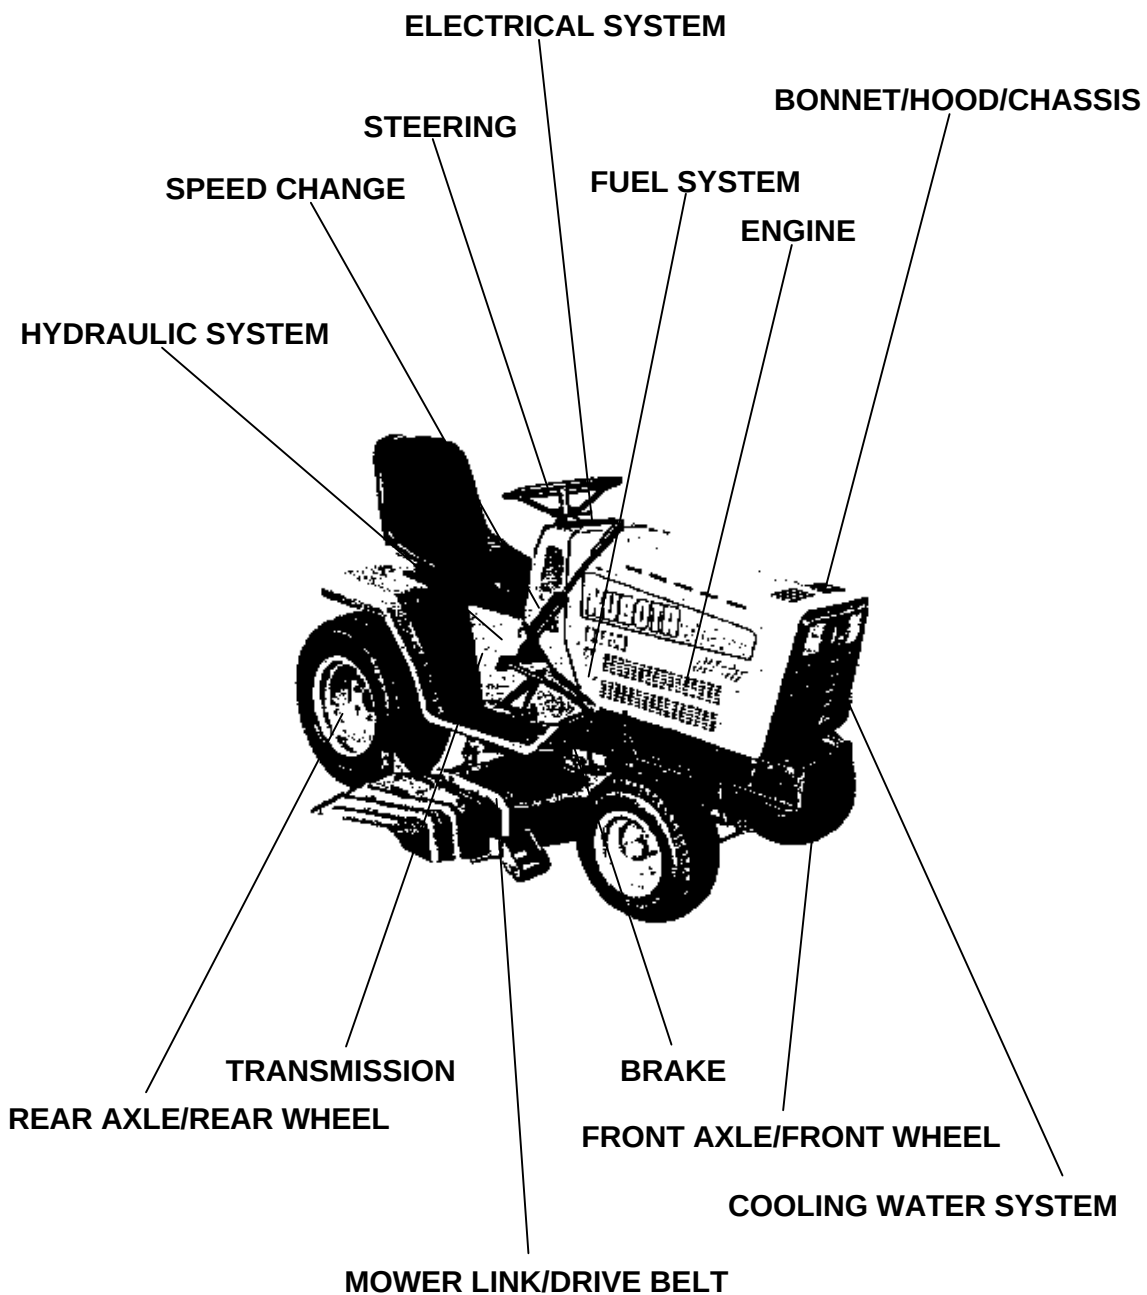


LABELS
ACCESSORIES


Item	Part No.	Description	Book
ENGINE	01E01	CRANKCASE	100K0077
	01E02	OIL PAN	100K0077
	01E03	CYLINDER HEAD	100K0077
	01E04	GEAR CASE	100K0077
	01E05	MAIN BEARING CASE	100K0077
	01E06	CYLINDER HEAD COVER	100K0077
	01E07	MANIFOLD	100K0077
	01E08	VALVE/ROCKER ARM	100K0077
	01E09	CAMSHAFT	100K0077
	01E10	PISTON/CRANKSHAFT	100K0077
	01E11	FLYWHEEL	100K0077
	01E12	NOZZLE HOLDER	100K0077
	01E13	INJECTION PUMP	100K0077
	01E14	IDLING APPARATUS	100K0077
	01E15	GOVERNOR	100K0077
	01E16	SPEED CONTROL PLATE	100K0077
	01E17	DYNAMO	100K0077
	01E18	WATER FLANGE	100K0077
	01E19	WATER PUMP	100K0077
	01E39	NOZZLE HOLDER (SECTION PARTS)	100K0077
	01E40	INJECTION PUMP (SECTION PARTS)	100K0077
	01E41	DYNAMO (SECTION PARTS)	100K0077
HYDRAULIC SYSTEM	01I09	HYDRAULIC OUTLET (OPTION)	100K0077
	01I10	AUX CONTROL VALVE (OPTION)	100K0077
	01I11	3-POINT LINKAGE (OPTION)	100K0077
MOWER LINK/DRIVE BELT	01I12	REAR PTO (OPTION)	100K0077
HYDRAULIC SYSTEM	01I13	HYDRAULIC LIFT (OPTION)	100K0077
TRANSMISSION	01T01	TRANSMISSION CASE	100K0077
	01T02	PROPELLER SHAFT	100K0077
	01T03	4TH SHAFT	100K0077
	01T04	5TH SHAFT	100K0077
	01T05	DIFFERENTIAL	100K0077
REAR AXLE/REAR WHEEL BRAKE	01T06	REAR AXLE	100K0077
	01T0701	BRAKE	100K0077
	01T0702	BRAKE	100K0077
TRANSMISSION	01T08	PTO SHAFT	100K0077
	01T09	TENSION PULLEY	100K0077
	01T10	PTO LEVER	100K0077
	01T11	H.S.T.	100K0077
	01T12	HYDRAULIC PIPE	100K0077
HYDRAULIC SYSTEM	01T15	STEERING	100K0077
BRAKE	01T16	BRAKE PEDAL	100K0077
SPEED CHANGE	01T17	ACCEL.LEVER	100K0077
	01T18	SPEED CHANGE LEVER	100K0077
	01T19	ENGINE STOP WIRE	100K0077
	01T2001	LIFT LEVER	100K0077
MOWER LINK/DRIVE BELT	01T21	LIFT LINK	100K0077
BONNET/HOOD/CHASSIS	01T2201	SEAT	100K0077
	01T2202	SEAT	100K0077
LABELS	01T23	LABEL	100K0077
BONNET/HOOD/CHASSIS	01T24	FRAME	100K0077
	01T25	FENDER	100K0077
	01T26	RADIATOR	100K0077
COOLING WATER SYSTEM	01T27	FUEL TANK	100K0077
FUEL SYSTEM	01T28	PANEL COVER	100K0077
BONNET/HOOD/CHASSIS	01T29	RADIATOR NET	100K0077

Item	Part No.	Description	Book
BONNET/HOOD/CHASSIS	01T30	HOOD	100K0077
ELECTRICAL SYSTEM	01T31	ELECTRICAL SYSTEM	100K0077
	01T32	BATTERY	100K0077
FRONT AXLE/FRONT WHEEL	01T33	FRONT AXLE	100K0077
ENGINE	01T34	MUFFLER	100K0077
	01T35	AIR CLEANER	100K0077
FUEL SYSTEM	01T36	FUEL PUMP	100K0077
	01T37	FUEL FILTER	100K0077
	01T38	FUEL PIPE	100K0077
ELECTRICAL SYSTEM	01T39	STARTER	100K0077
FUEL SYSTEM	01T42	FUEL FILTER (SECTION PARTS)	100K0077
ELECTRICAL SYSTEM	01T43	STARTER (SECTION PARTS)	100K0077
BONNET/HOOD/CHASSIS	01T45	SEAT SUSPENTION KIT (OPTION)	100K0077
ELECTRICAL SYSTEM	01T46	COMBI.METER KIT (OPTION)	100K0077
ENGINE	01T47	EXHUST PIPE KIT (OPTION)	100K0077
ACCESSORIES	01T48	ACCESSORIES AND SERVICE PARTS	100K0077

CRANKCASE

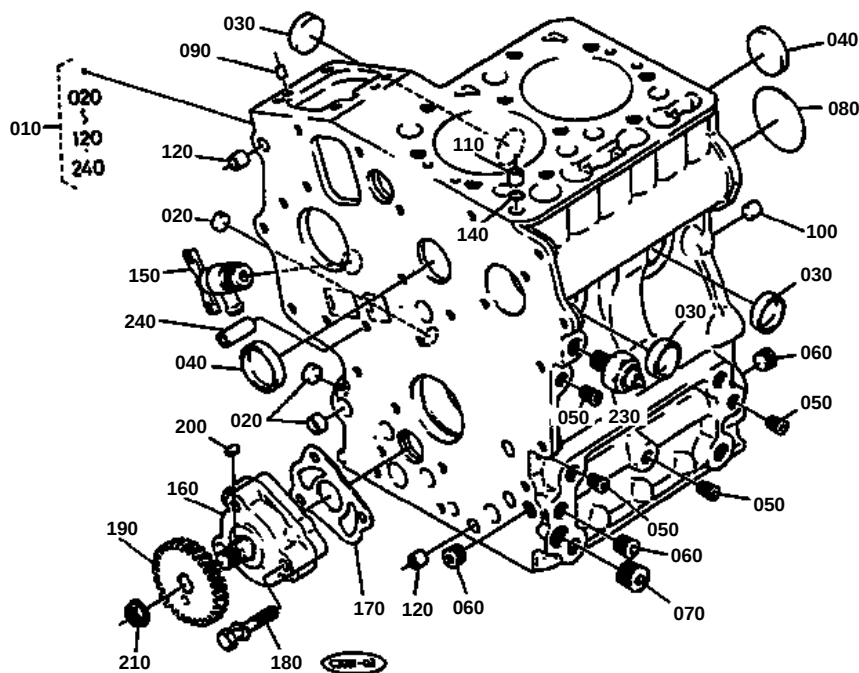

REF.No.130 15841-9501-0

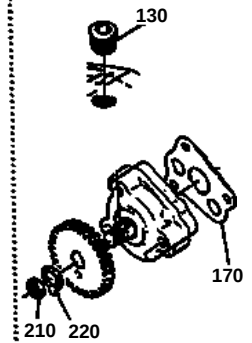

REF.No.170 15841-3515-0

REF.No.210 02016-50100


REF.No.220 04211-50100



CRANKCASE

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	15852-01010	CRANKCASE	1	<=9789			0	0
010	15852-01013	COMP.CRANKCASE	1	>=9790	←		0	0
010	15852-01016	COMP.CRANKCASE	1	>=109828	←		16.3	35.86
020	15451-96300	CAP SEALING	3	<=124705			0.002	0.0044
020	06311-85014	CAP SEALING	3	>=124706	≠		0.003	0.0066
020	16851-96260	CAP SEALING	3	>=132501	↔		0.005	0.011
030	15451-96260	CAP SEALING	3	<=124705			0.007	0.0154
030	06311-85020	CAP SEALING	3	>=124706	≠		0.002	0.0044
030	16851-96270	CAP SEALING	3	>=132501	↔		0.005	0.011
040	15451-96270	CAP SEALING	2				0.012	0.0264
050	15261-96010	PLUG	4				0.002	0.0044
060	15521-96020	PLUG	3				0.003	0.0066
070	15521-96030	PLUG	1				0.007	0.0154
080	06311-75040	PLUG	1	<=70639			0.02	0.044
080	15261-96160	PLUG	1	>=70640	←		0.02	0.044
090	05012-00508	PIN STRAIGHT	2				0.001	0.0022
100	05012-00814	PIN STRAIGHT	2				0.006	0.0132
110	15221-33650	PIN PIPE	1				0.004	0.0088
120	15231-33960	PIN PIPE	2				0.001	0.0022
130	15841-96010	PLUG	1	<=112012			0.015	0.033
140	15221-33700	O RING	1				0.001	0.0022
150	15841-73020	ASSY COCK DRAIN	1				0.03	0.066
160	15841-35010	ASSY PUMP OIL	1	<=121837			0	0
160	16851-35010	ASSY PUMP OIL	1	>=121838	←		0.24	0.528
170	15841-35150	GASKET OIL PUMP	1	<=121837			0	0
170	16851-35150	GASKET OIL PUMP	1	>=121838	≠		0	0
180	15841-91050	BOLT	3				0.01	0.022
190	15841-35660	GEAR OIL PUMP DRIVE	1				0.113	0.2486
200	05712-00408	KEY FEATHER	1				0.001	0.0022
210	02016-50100	NUT	1	<=150379			0.009	0.0198
210	02783-50100	NUT FLANGE	1	>=150380	↔		0.01	0.022
220	04211-50100	WASHER CLAW	1	<=155086			0.002	0.0044
230	15841-39010	SWITCH OIL	1				0.03	0.066
240	17331-59190	PIN PIPE	2				0.02	0.044

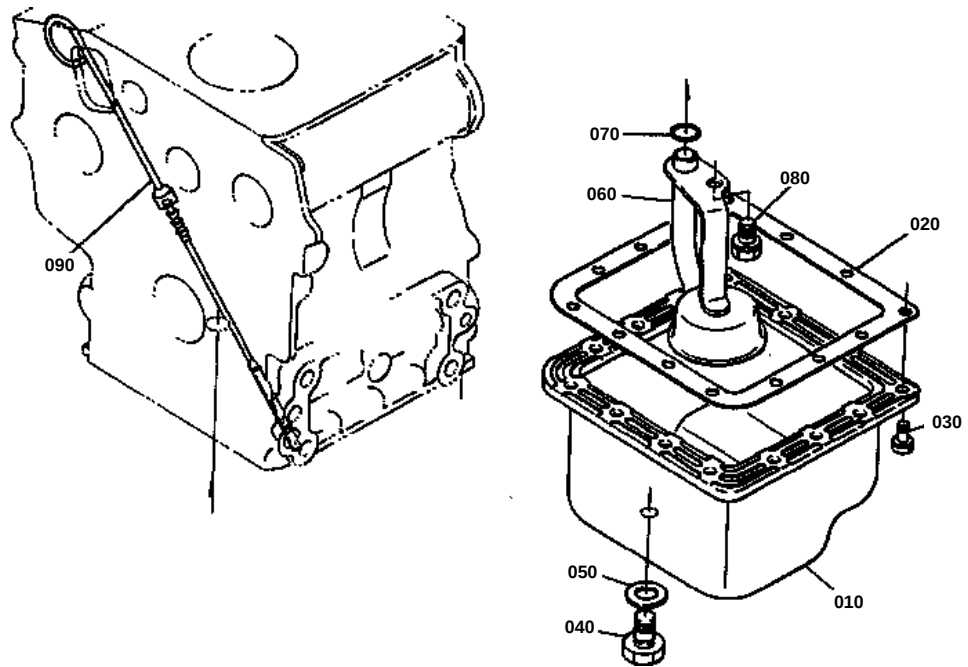




OIL PAN

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	15852-01500	COMP.OIL PAN	1				0.8	1.76
020	15841-01620	GASKET	1				0	0
030	01023-50612	BOLT	14				0.005	0.011
040	15221-33750	PLUG	1				0.032	0.0704
050	15109-33660	GASKET	1				0.001	0.0022
060	15841-32110	FILTER OIL	1	≤121837			0.15	0.33
060	16851-32110	FILTER OIL	1	≥121838	≠		0.11	0.242
070	04811-00140	RING	1	≤121837			0.001	0.0022
070	04811-00160	RING	1	≥121838	≠		0.001	0.0022
080	01123-50814	BOLT	1				0	0
090	15852-36410	GAUGE OIL	1				0.025	0.055

CYLINDER HEAD

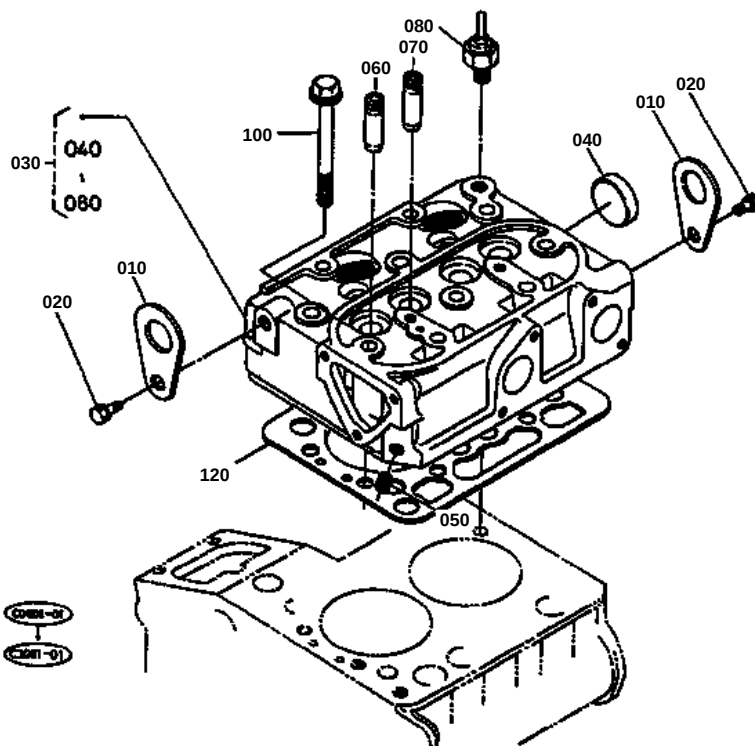

REF.No.080 15841-9502-0
REF.No.110 19231-0351-2



REF.No.090 15841-0341-0






CYLINDER HEAD


↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	15841-01750	HOOK ENGINE	2				0	0
020	01123-50814	BOLT	2				0	0
030	15841-03040	COMP.CYLINDER HEAD	1	≤12877			5	11
030	15842-03040	COMP.CYLINDER HEAD	1	≥12878	≠		0	0
030	15852-03040	COMP.CYLINDER HEAD	1	≥104220	≠		5.2	11.44
030	15852-03042	COMP.CYLINDER HEAD	1	≥121838	≠		0	0
040	15321-96260	CAP SEALING	1				0.014	0.0308
050	15261-96010	PLUG	1				0.002	0.0044
060	15841-13540	GUIDE INLET VALVE	2				0.014	0.0308
070	15841-13560	GUIDE EXHAUST VALVE	2				0.014	0.0308
080	15841-96020	PLUG	1	≤12877			0.003	0.0066
080	66021-55330	INDICATOR HEAT	1	≥12878	≠		0.01	0.022
090	15841-03410	STUD HEAD	2	≤84632			0.03	0.066
100	14601-03450	BOLT CYLINDER HEAD	8	≤84632			0.035	0.077
100	14601-03450	BOLT CYLINDER HEAD	10	≥84633			0.035	0.077
110	19231-03512	NUT HEAD	2	≤84632			0.01	0.022
120	15852-03310	GASKET CYLINDER HEAD	1				0	0

GEAR CASE

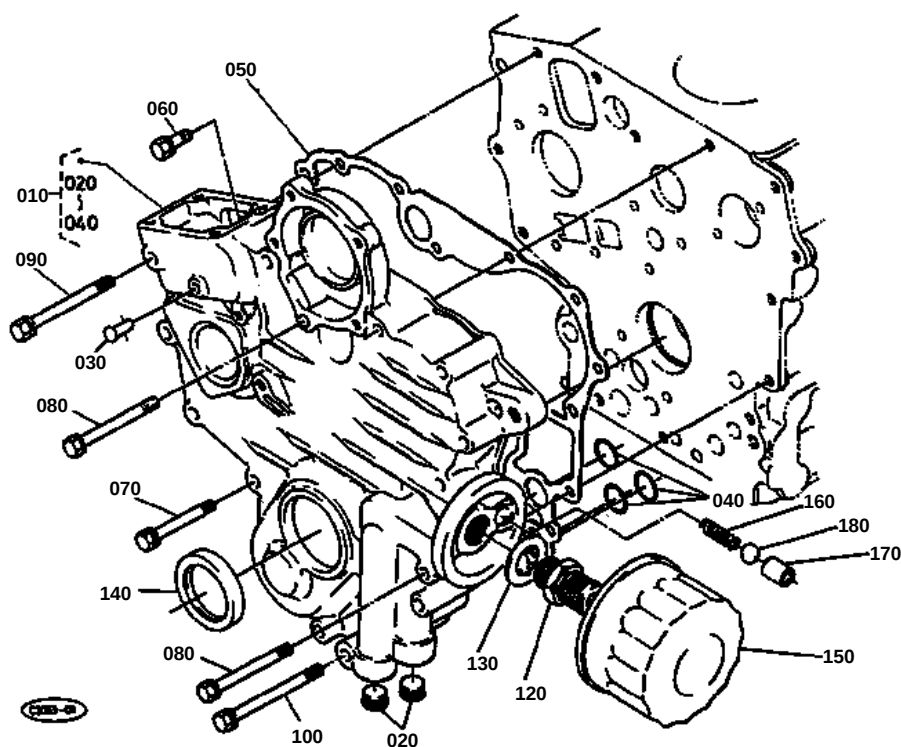

REF.No.050 15241-0413-0
 REF.No.100 15241-9102-0
 REF.No.110 04512-30080

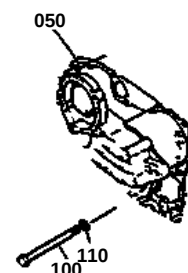




GEAR CASE


↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	15841-04020	COMP.CASE GEAR	1				0	0
020	15261-96020	PLUG	2				0	0
030	15841-56280	PIN START SPRING	1				0.005	0.011
040	04811-06130	RING	3				0.001	0.0022
050	15841-04130	GASKET GEAR CASE	1	≤84632			0	0
050	15862-04130	GASKET GEAR CASE	1	≥84633	↔		0	0
060	01023-50618	BOLT	1				0.006	0.0132
070	01023-50650	BOLT	10				0	0
080	15841-91010	BOLT	3				0.014	0.0308
090	01023-50670	BOLT	1				0	0
100	15241-91020	BOLT	1	≤63295			0.016	0.0352
100	01023-50675	BOLT	1	≥63296	≠		0.01	0.022
110	04512-50060	WASHER SPRING	1	≤63295			0	0
120	15841-32290	JOINT PIPE	1	≤104219			0	0
120	15241-32290	JOINT PIPE	1	≥104220	↔		0.053	0.1166
130	15841-94010	WASHER PLAIN	1				0.003	0.0066
140	15841-04140	SEAL OIL	1				0.012	0.0264
150	15841-32430	CARTRIDGE OIL FILTER	1	≤109827			0.31	0.682
150	15852-32430	CARTRIDGE OIL FILTER	1	≥109828	≠		0.45	0.99
160	15841-36950	SPRING	1				0	0
170	15841-36930	SEAT VALVE	1				0.01	0.022
180	07715-03211	BALL	1				0.003	0.0066

MAIN BEARING CASE

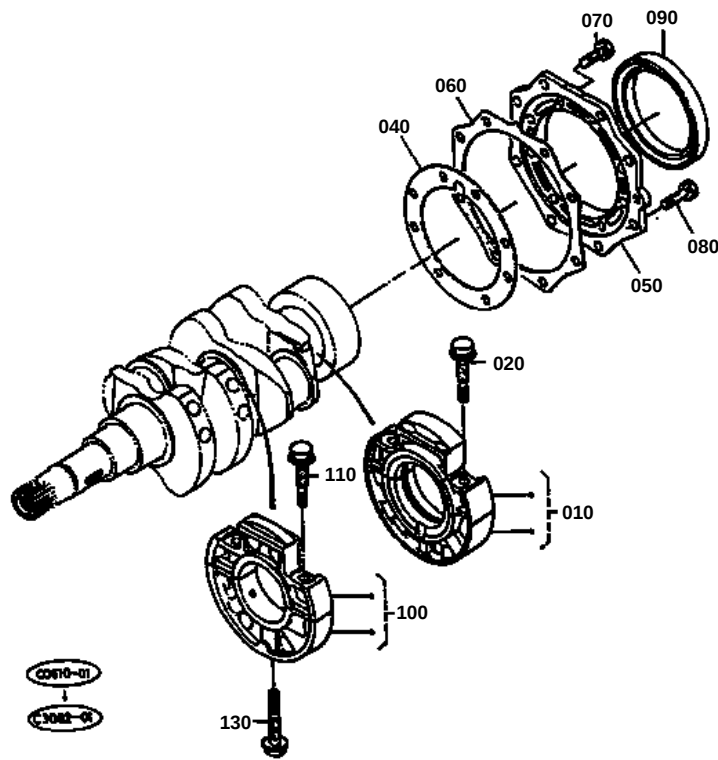

REF.No.020 14601-0454-0
REF.No.030 14601-0457-0
REF.No.110 14601-0454-0
REF.No.120 14601-0457-0
REF.No.130 15841-0456-0
REF.No.140 15841-0458-0

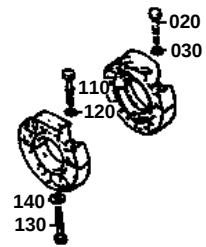




MAIN BEARING CASE

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	15841-04090	ASSY CASE MAIN BRG.	1				0.71	1.562
020	14601-04540	BOLT BEARING CASE	2	<=61080			0	0
020	15841-04540	BOLT BEARING CASE	2	>=61081	≠		0.012	0.0264
030	14601-04570	WASHER BEARING CASE	2	<=61080			0.003	0.0066
040	15841-04360	GASKET BEARING CASE	1				0	0
050	15841-04810	COVER BEARING CASE	1				0.16	0.352
060	15841-04820	GASKET	1				0	0
070	01023-50620	BOLT	8				0.006	0.0132
080	01023-50622	BOLT	8				0.005	0.011
090	19215-99160	SEAL OIL	1				0.025	0.055
100	15841-04040	ASSY CASE MAIN BRG.	1				0.054	0.1188
110	14601-04540	BOLT BEARING CASE	2	<=61080			0	0
110	15841-04540	BOLT BEARING CASE	2	>=61081	≠		0.012	0.0264
120	14601-04570	WASHER BEARING CASE	2	<=61080			0.003	0.0066
130	15841-04560	BOLT BEARING CASE	1	<=73784			0	0
130	15841-04562	BOLT BEARING CASE	1	>=73785	≠		0.02	0.044
140	15841-04580	WASHER BEARING CASE	1	<=73784			0.001	0.0022

CYLINDER HEAD COVER

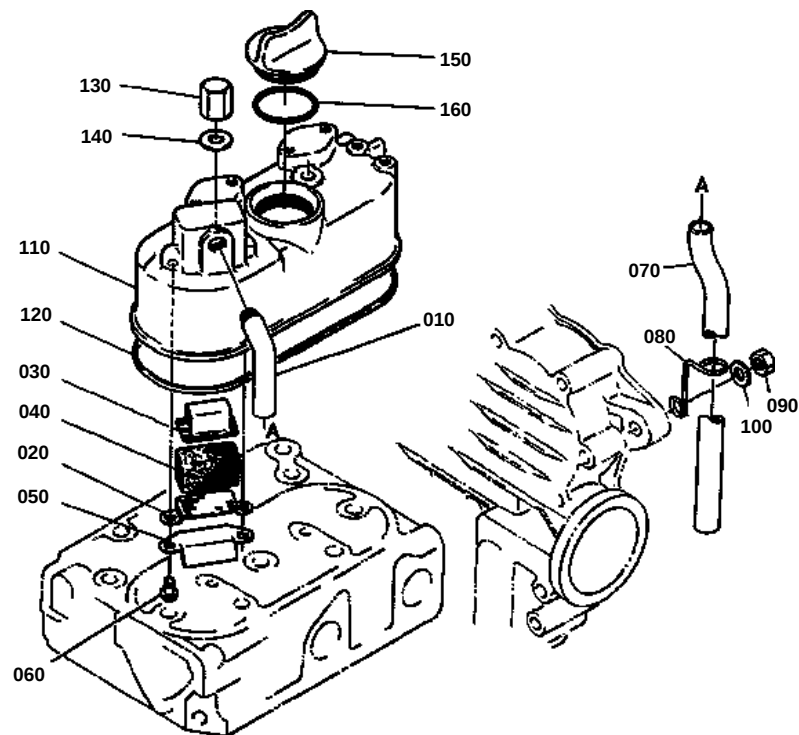




CYLINDER HEAD COVER


↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	15841-05550	JOINT BREATHER PIPE	1				0.025	0.055
020	15841-05140	PLATE ELEMENT	1				0.005	0.011
030	15841-05150	PLATE ELEMENT	1				0.005	0.011
040	15841-05670	ELEMENT BREATHER	1				0.01	0.022
050	15841-05370	OIL SHIELD BREATHER	1				0.003	0.0066
060	03024-50510	SCREW	2				0.002	0.0044
070	15841-05510	PIPE BREATHER	1				0.04	0.088
080	15841-05590	CLAMP PIPE	1				0.005	0.011
090	02114-50080	NUT	1				0.005	0.011
100	04013-50080	WASHER PLAIN	1				0	0
110	15841-14510	COVER CYL.HEAD	1	≤121837			0.033	0.0726
110	16851-14510	COVER CYL.HEAD	1	≥121838	≠		0.44	0.968
120	15841-14520	GASKET HEAD COVER	1	≤121837			0.003	0.0066
120	16851-14520	GASKET HEAD COVER	1	≥121838	≠		0	0
130	14601-14620	NUT CAP	2				0	0
130	15841-14620	NUT CAP	2		↔		0.01	0.022
140	15601-96650	GASKET	2				0.001	0.0022
150	15221-33140	PLUG OIL FILLER	1				0.038	0.0836
160	04811-50300	RING	1				0.001	0.0022

MANIFOLD

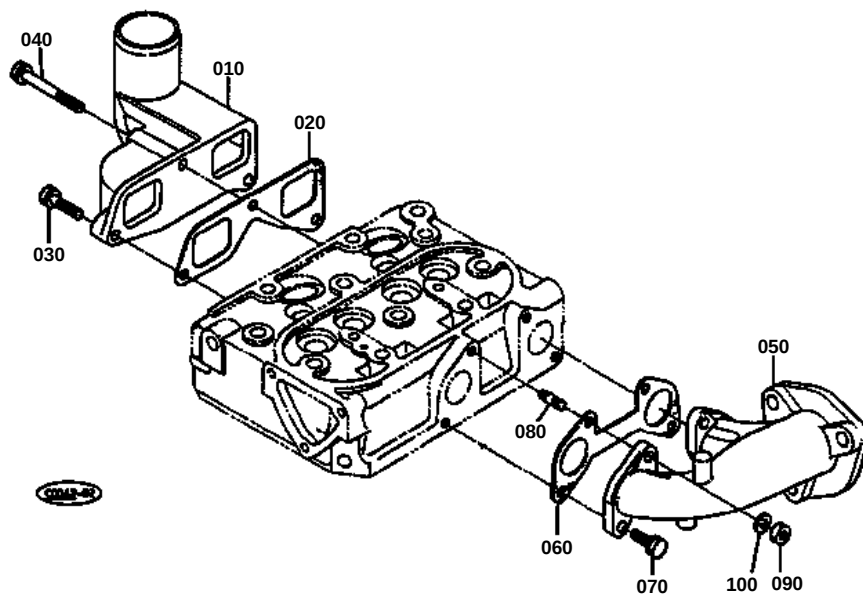

REF.No.000 15041-1235-0

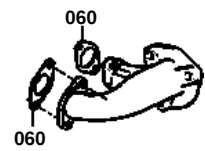



MANIFOLD

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	15852-11760	MANIFOLD INLET	1				0.225	0.495
020	15852-11820	GASKET IN-MANIFOLD	1				0	0
030	01023-50625	BOLT	2				0.007	0.0154
040	01023-50650	BOLT	1				0	0
050	15852-12310	MANIFOLD EXHAUST	1				1.06	2.332
060	15841-12350	GASKET	2	<=82839			0	0
060	15852-12350	GASKET	1	>=82840	≠		0	0
070	01023-50618	BOLT	2				0.006	0.0132
080	01513-50618	STUD	2				0.005	0.011
090	02056-50060	NUT	2				0.002	0.0044
100	04512-50060	WASHER SPRING	2				0	0

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com