 


ALL PRODUCT INDEX
L2900F

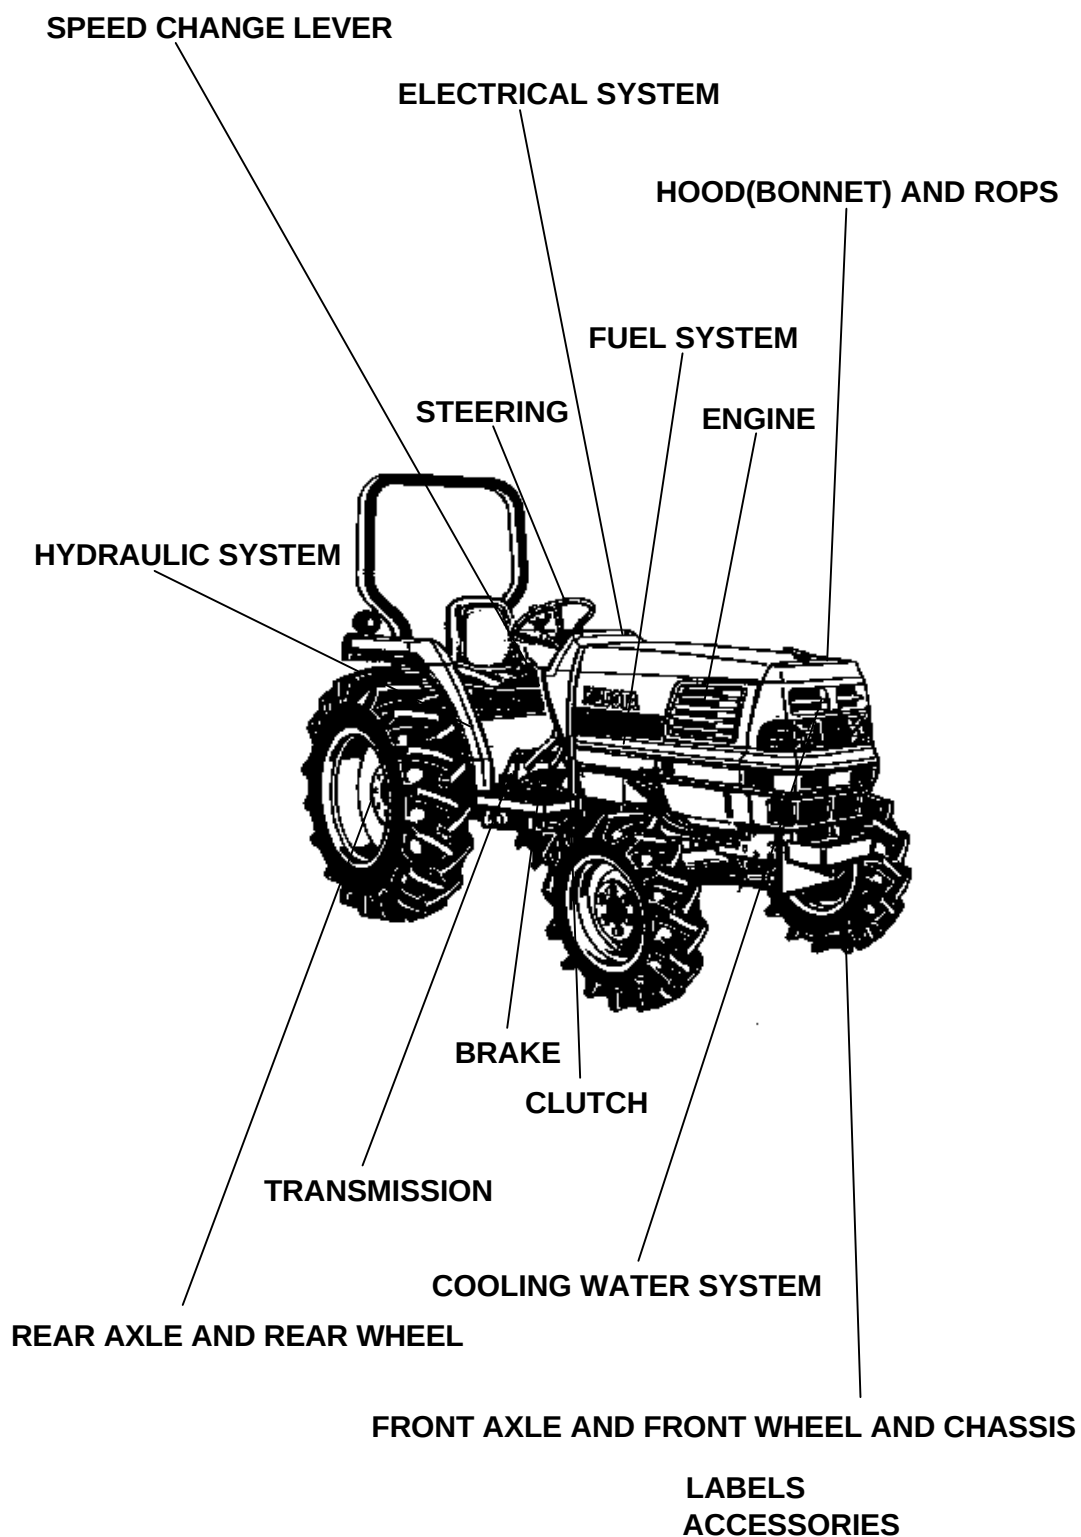


Item	Page No.	Description	Book
ENGINE	01T001	CRANKCASE	100K0394
	01T002	OIL PAN	100K0394
	01T003	PISTON AND CRANKSHAFT	100K0394
	01T004	MAIN BEARING CASE	100K0394
	01T00501	FLYWHEEL [W/O IND-PTO]	100K0394
	01T00502	FLYWHEEL [WITH IND-PTO]	100K0394
	01T006	CYLINDER HEAD	100K0394
	01T007	VALVE AND ROCKER ARM	100K0394
	01T008	NOZZLE HOLDER/GLOW PLUG	100K0394
	01T009	NOZZLE HOLDER [COMPONENT PARTS]	100K0394
	01T010	CYLINDER HEAD COVER	100K0394
	01T011	INLET MANIFOLD	100K0394
	01T014	CAMSHAFT	100K0394
	01T015	GEAR CASE	100K0394
	01T016	WATER PUMP	100K0394
	01T017	WATER FLANGE AND THERMOSTAT	100K0394
	01T018	FUEL CAMSHAFT	100K0394
	01T019	INJECTION PUMP	100K0394
	01T020	INJECTION PUMP [COMPONENT PARTS]	100K0394
	01T021	ENGINE STOP LEVER	100K0394
	01T022	SPEED CONTROL PLATE	100K0394
	01T023	GOVERNOR	100K0394
	01T02401	UPPER GASKET KIT	100K0394
	01T025	LOWER GASKET KIT	100K0394
	02T01201	AIR CLEANER	100K0394
	02T01202	DOUBLE AIR CLEANER [OPTION]	100K0394
	02T013	EXHAUST MANIFOLD AND MUFFLER	100K0394
	02T026	STOP SOLENOID AND ENGINE STOP WIRE	100K0394
	02T027	ACCELERATOR LEVER	100K0394
	02T028	ACCELERATOR LINKAGE	100K0394
	02T029	ACCELERATOR ROD	100K0394
FUEL SYSTEM	02T030	FUEL TANK	100K0394
	02T031	FUEL PIPE AND FUEL FILTER	100K0394
	02T032	FUEL FILTER [COMPONENT PARTS]	100K0394
	02T033	FAN	100K0394
COOLING WATER SYSTEM	02T034	WATER PIPE	100K0394
	02T035	RADIATOR	100K0394
	02T036	RESERVE TANK	100K0394
	02T037	ALTERNATOR	100K0394
ELECTRICAL SYSTEM	02T038	ALTERNATOR [COMPONENT PARTS]	100K0394
	02T039	STARTER	100K0394
	02T040	STARTER [COMPONENT PARTS]	100K0394
	02T041	BATTERY	100K0394
	02T042	SWITCH	100K0394
	02T043	PANEL BOARD	100K0394
	02T044	PANEL BOARD [COMPONENT PARTS]	100K0394

Item	Page No.	Description	Book
ELECTRICAL SYSTEM	02T045	LIGHT	100K0394
	02T046	ELECTRICAL WIRING	100K0394
CLUTCH	02T047	CLUTCH	100K0394
	02T048	CLUTCH LEVER	100K0394
	02T049	CLUTCH PEDAL	100K0394
	02T05001	CLUTCH HOUSING [MANUAL T/M TYPE]	100K0394
	02T05101	MID CASE [MANUAL T/M TYPE] [WITH IND-PTO]	100K0394
TRANSMISSION	02T052	TRANSMISSION CASE	100K0394
	02T05302	MAIN SHAFT [WITH IND-PTO]	100K0394
	02T054	COUNTERSHAFT	100K0394
	02T05601	SHUTTLE SHAFT [MANUAL T/M TYPE]	100K0394
	02T05701	RANGE GEAR SHAFT [MANUAL T/M TYPE]	100K0394
	02T05801	PTO COUNTERSHAFT [WITH IND-PTO]	100K0394
	02T05901	PTO CLUTCH [WITH IND-PTO]	100K0394
	02T06001	PTO SHAFT [W/O MID-PTO]	100K0394
	02T06002	PTO SHAFT [WITH MID-PTO]	100K0394
	02T061	MID PTO [WITH MID-PTO]	100K0394
SPEED CHANGE LEVER	02T06201	MAIN GEAR SHIFT LEVER [MANUAL T/M TYPE]	100K0394
	02T06301	MAIN GEAR SHIFT FORK [MANUAL T/M TYPE]	100K0394
	02T064	SHUTTLE SHIFT LEVER	100K0394
	02T06501	SHUTTLE SHIFT FORK [MANUAL T/M TYPE]	100K0394
	02T06601	RANGE GEAR SHIFT LEVER [MANUAL T/M TYPE] [W/O CREEP]	100K0394
	02T06602	RANGE GEAR SHIFT LEVER/CREEP GEAR SHIFT LEVER [MANUAL T/M TYPE] [WITH CREEP]	100K0394
	02T06701	RANGE GEAR SHIFT FORK AND CREEP GEAR SHIFT FORK [MANUAL T/M TYPE]	100K0394
	02T068	MID PTO SHIFT LEVER [WITH MID-PTO]	100K0394
	02T06901	PTO CLUTCH CONTROL LEVER [WITH IND-PTO]	100K0394
	02T07001	SPIRAL BEVEL PINION [W/O CREEP]	100K0394
	02T07002	SPIRAL BEVEL PINION AND CREEP [WITH CREEP]	100K0394
	02T071	REAR DIFFERENTIAL	100K0394
	02T072	DEFFERENTIAL LOCK SHIFT FORK	100K0394
REAR AXLE AND REAR WHEEL	02T073	REAR AXLE	100K0394
	02T07401	REAR WHEEL (11.2-24)	100K0394
	02T07402	REAR WHEEL (12.4-24)	100K0394
	02T07404	REAR WHEEL (13.6-16)	100K0394
	02T07405	REAR WHEEL (41X14.00-20)	100K0394
	02T07407	REAR WHEEL (355/80-D20)	100K0394

Item	Page No.	Description	Book
BRAKE	02T075	BRAKE	100K0394
	02T076	BRAKE PEDAL	100K0394
	02T077	BRAKE ROD 1	100K0394
	02T078	BRAKE ROD 2	100K0394
FRONT AXLE AND FRONT WHEEL AND CHASSIS	02T079	FRONT AXLE	100K0394
	02T080	KNUCKLE SHAFT	100K0394
	02T08101	FRONT WHEEL (5.00-15)	100K0394
	02T08102	FRONT WHEEL (23*8.50-12)	100K0394
	02T08103	FRONT WHEEL (25*8.50-14)	100K0394
	02T082	FRONT AXLE FRAME [2WD]	100K0394
	02T089	FRONT WHEEL DRIVE SHAFT	100K0394
STEERING	02T09301	STEERING LINKAGE [2WD]	100K0394
	02T094	STEERING CYLINDER	100K0394
	02T095	STEERING CYLINDER [COMPONENT PARTS]	100K0394
	02T096	STEERING CONTROLLER	100K0394
HYDRAULIC SYSTEM	02T097	STEERING HANDLE	100K0394
	02T098	HYDRAULIC OIL LINE (PS)	100K0394
	02T100	REGULATOR VALVE	100K0394
	02T10101	PTO HYDRAULIC OIL LINE [WITH IND-PTO] [MANUAL T/M TYPE]	100K0394
	02T102	HYDRAULIC PUMP	100K0394
	02T103	HYDRAULIC PUMP [COMPONENT PARTS]	100K0394
	02T104	HYDRAULIC OIL LINE (INLET)	100K0394
	02T105	HYDRAULIC OIL LINE (DELIVERY)	100K0394
	02T106	HYDRAULIC OUTLET BLOCK	100K0394
	02T107	HYDRAULIC CYLINDER	100K0394
	02T108	LIFT ARM	100K0394
	02T109	CONTROL VALVE	100K0394
	02T110	CONTROL VALVE [COMPONENT PARTS]	100K0394
	02T111	FEED BACK LEVER	100K0394
	02T112	POSITION CONTROL LEVER	100K0394
	02T113	DRAFT AND POSITION CONTROL LEVER 1 [OPTION]	100K0394
	02T114	DRAFT AND POSITION CONTROL LEVER 2 [OPTION]	100K0394
	02T115	TOP LINK HOLDER [OPTION]	100K0394
	02T11601	DRAWBAR AND PTO PROTECTOR	100K0394
	02T11602	SWINGING DRAWBAR AND CLEVIS DRAWBAR [OPTION]	100K0394
	02T11701	REMOTE CONTROL VALVE LEVER 1 [OPTION]	100K0394
	02T11702	REMOTE CONTROL VALVE LEVER 2 [OPTION]	100K0394
	02T11703	REMOTE CONTROL VALVE LEVER 3 [OPTION]	100K0394
	02T11801	REMOTE CONTROL VALVE COUPLER 1 [OPTION]	100K0394
	02T11802	REMOTE CONTROL VALVE COUPLER 2 [OPTION]	100K0394
	02T11803	REMOTE CONTROL VALVE COUPLER 3 [OPTION]	100K0394

Item	Page No.	Description	Book
HYDRAULIC SYSTEM	02T119	3-POINT LINKAGE 1 (LOWER LINK)	100K0394
	02T120	3-POINT LINKAGE 2 (LIFT ROD)	100K0394
HOOD(BONNET) AND ROPS	02T121	FRONT GRILLE	100K0394
	02T122	FRONT GRILLE SUPPORT	100K0394
	02T123	HOOD (BONNET)	100K0394
	02T124	SIDE COVER	100K0394
	02T125	SIDE COVER LOWER	100K0394
	02T126	SHUTTER PLATE	100K0394
	02T127	PANEL FRAME	100K0394
	02T128	FENDER	100K0394
	02T129	FLOOR SEAT	100K0394
	02T130	SEAT	100K0394
	02T131	STEP	100K0394
	02T132	ROPS	100K0394
LABELS	02T133	LABEL 1	100K0394
	02T134	LABEL 2	100K0394
ACCESSORIES	02T135	ACCESSORIES AND SERVICE PARTS	100K0394

 CRANKCASE

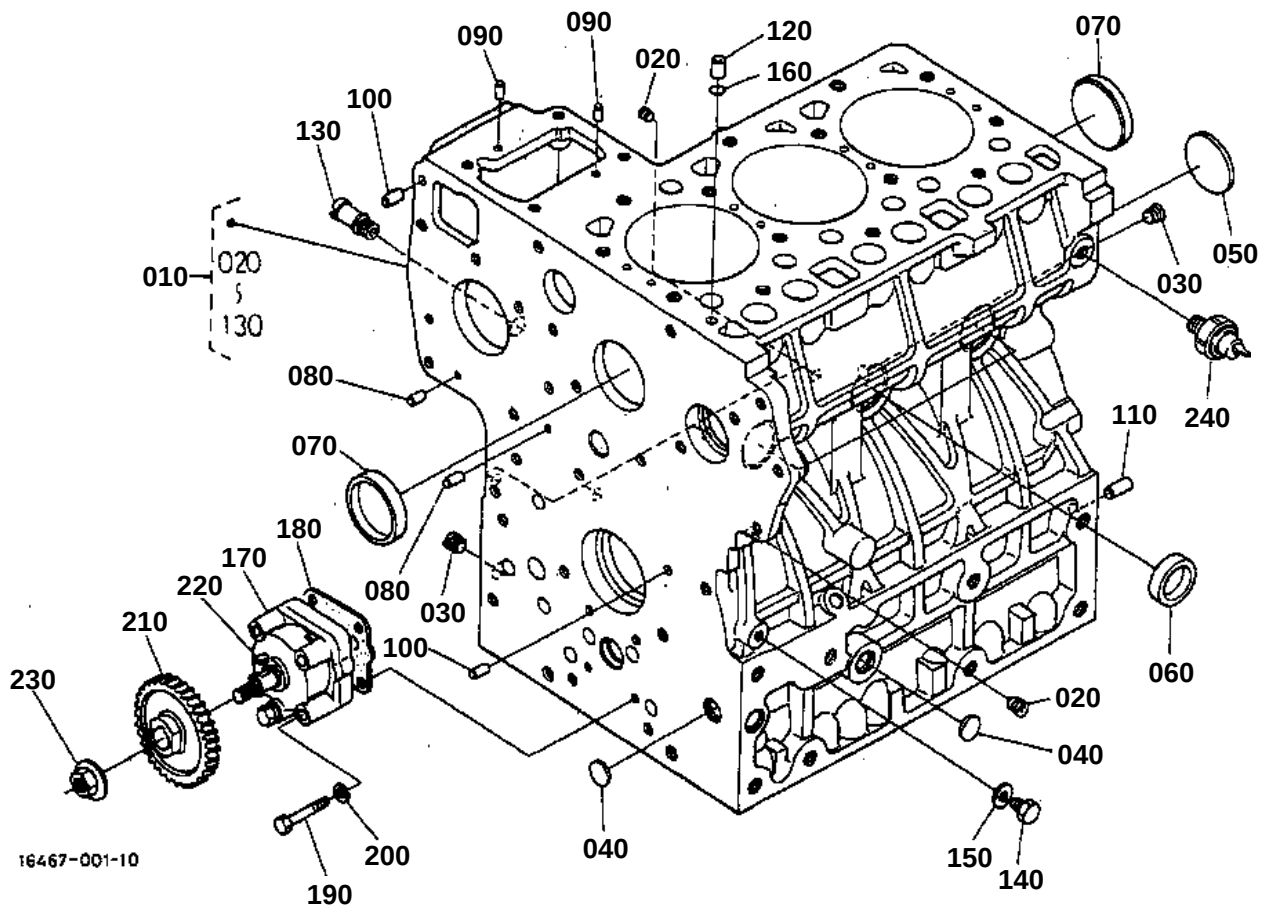




CRANKCASE

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	16477-01010	COMP.CRANKCASE	1				48.5	106.7
020	15521-96020	PLUG	5				0.003	0.0066
030	15521-96030	PLUG	2				0.007	0.0154
040	17391-96160	PLUG	3				0.003	0.0066
050	06311-75045	PLUG	1				0.026	0.0572
060	15221-03380	CAP SEALING	5				0.017	0.0374
070	15221-03390	CAP SEALING	2				0.03	0.066
080	05012-00408	PIN STRAIGHT	2				0.001	0.0022
090	05012-00609	PIN STRAIGHT	2				0.003	0.0066
100	05012-00612	PIN STRAIGHT	2				0.003	0.0066
110	05012-01018	PIN STRAIGHT	1				0.012	0.0264
120	15221-33650	PIN PIPE	1				0.004	0.0088
130	15321-73340	PIPE WATER RETURN	1				0.016	0.0352
140	15221-33610	PLUG	1				0.009	0.0198
150	15021-33660	GASKET	1				0.001	0.0022
160	15221-33700	O RING	1				0.001	0.0022
170	15471-35010	ASSY PUMP OIL	1				0	0
180	15296-35150	GASKET OIL PUMP	1				0.001	0.0022
190	01053-50650	BOLT	4				0.011	0.0242
200	04512-60060	WASHER SPRING	4				0.001	0.0022
210	19202-35660	GEAR OIL PUMP DRIVE	1				0.23	0.506
220	05712-00410	KEY FEATHER	1				0.001	0.0022
230	15221-35682	NUT FLANGE	1				0.014	0.0308
240	15531-39010	SWITCH OIL	1				0.032	0.0704

 OIL PAN

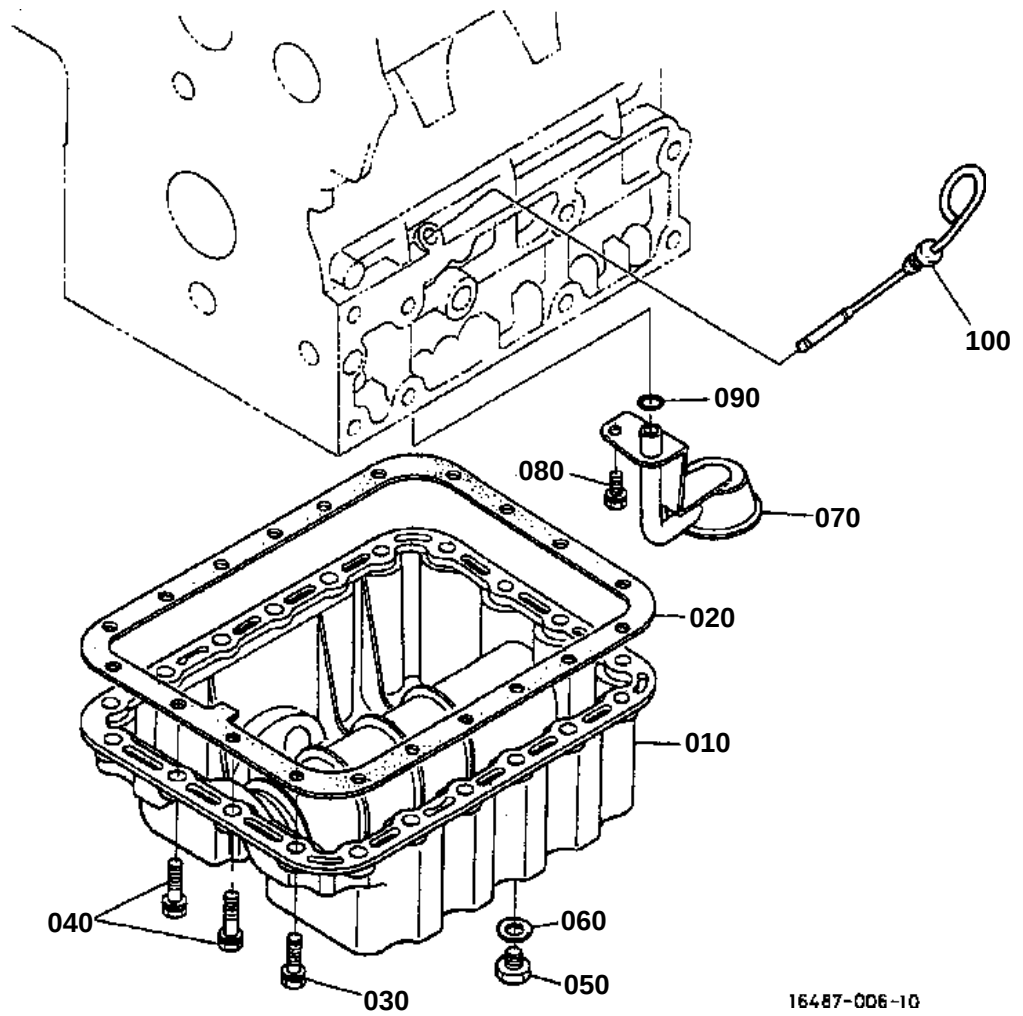




OIL PAN

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	15521-01610	OIL PAN	1				2.8	6.16
020	17326-01620	GASKET OIL PAN	1				0.02	0.044
030	01133-51028	BOLT	18				0.027	0.0594
040	01133-51025	BOLT	2				0.023	0.0506
050	15261-33750	PLUG	2				0.034	0.0748
060	15109-33660	GASKET	2	<=17842			0.001	0.0022
060	6C090-58960	GASKET	2	>=17843	←		0.002	0.0044
070	16427-32110	FILTER OIL	1				0.2	0.44
080	01123-50814	BOLT	1				0.01	0.022
090	04811-00160	O RING	1				0.001	0.0022
100	16457-36410	GAUGE OIL	1				0.035	0.077

 PISTON AND CRANKSHAFT

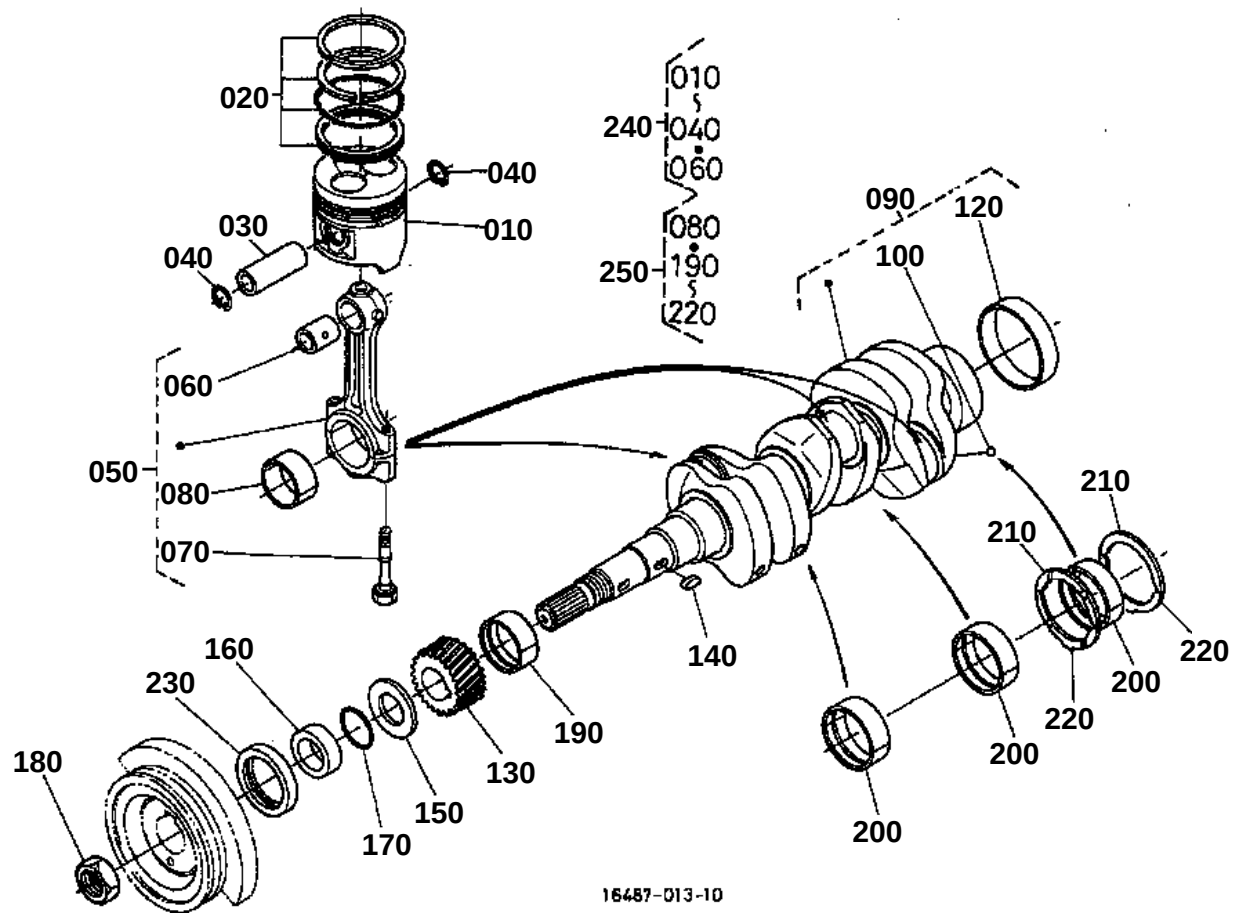




PISTON AND CRANKSHAFT

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	16467-21110	PISTON	3			STD	0.525	1.155
010	16467-21910	PISTON	3			+0.50MM	0	0
020	16467-21050	ASSY PISTON RING	3			STD	0.055	0.121
020	16467-21090	ASSY PISTON RING	3			+0.50MM	0.06	0.132
030	14901-21310	PIN PISTON	3				0.17	0.374
040	14109-21330	CLIP PISTON PIN	6				0.015	0.033
050	17311-22010	ASSY CONNECTING ROD	3				0.885	1.947
060	17331-21980	BUSH PISTON PIN	3				0.025	0.055
070	15521-22142	BOLT CONNECTING ROD	6				0.026	0.0572
080	17311-22310	METAL CRANKPIN	3			STD	0.045	0.099
080	17331-22970	METAL CRANKPIN	3			-0.20MM	0.05	0.11
080	17331-22980	METAL CRANKPIN	3			-0.40MM	0.045	0.099
090	16414-23010	COMP.CRANKSHAFT	1				12.9	28.38
100	07715-00401	BALL	3				0.001	0.0022
120	19202-23280	SLEEVE CRANKSHAFT	1				0.09	0.198
130	15471-24110	GEAR CRANK	1				0.375	0.825
140	05712-00720	KEY FEATHER	1				0.008	0.0176
150	15471-23312	SLINGER OIL	1				0.008	0.0176
160	19202-23250	COLLAR CRANKSHAFT	1				0.065	0.143
170	04811-10300	O RING	1				0.001	0.0022
180	15221-23360	NUT CRANKSHAFT	1				0.11	0.242
190	17311-23470	METAL CRANKSHAFT	1			STD	0.06	0.132
190	17311-23910	METAL CRANKSHAFT	1			-0.20MM	0.05	0.11
190	17311-23920	METAL CRANKSHAFT	1			-0.40MM	0.06	0.132
200	17311-23480	METAL CRANKSHAFT	3			STD	0.045	0.099
200	17311-23930	METAL CRANKSHAFT	1			-0.20MM	0.05	0.11
200	17311-23940	METAL CRANKSHAFT	1			-0.40MM	0.06	0.132
210	15521-23530	METAL SIDE	2			STD	0.01	0.022
210	15221-23950	METAL SIDE	2			+0.20MM	0.009	0.0198
210	15221-23960	METAL SIDE	2			+0.40MM	0.009	0.0198
220	19202-23540	METAL SIDE	2			STD	0.01	0.022
220	19202-23970	METAL SIDE	2			+0.20MM	0.01	0.022
220	19202-23980	METAL SIDE	2			+0.40MM	0.01	0.022
230	19202-04140	SEAL OIL	1				0.015	0.033
240	07916-27640	KIT PISTON-RING	3			STD	0.8	1.76
240	07916-27650	KIT PISTON-RING	3			+0.50MM	0.8	1.76
250	07916-28070	KIT METAL ENGINE	1			STD	0.35	0.77
250	07916-28720	KIT METAL ENGINE	1			-0.20MM	0.44	0.968
250	07916-28730	KIT METAL ENGINE	1			-0.40MM	0.44	0.968

 MAIN BEARING CASE

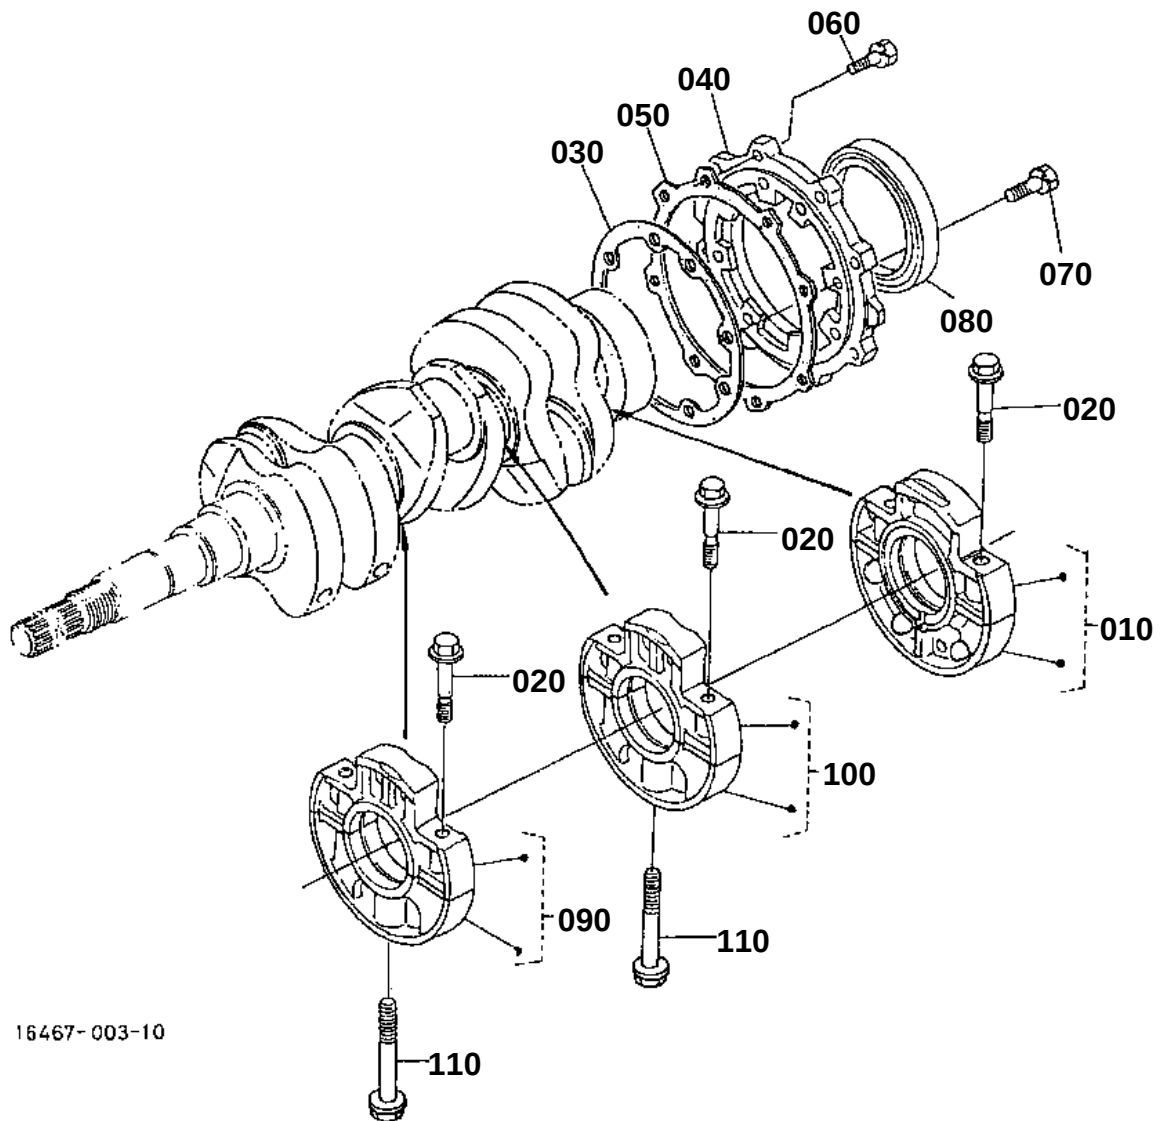


16467-003-10



MAIN BEARING CASE


↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	19013-04090	ASSY CASE MAIN BRG.	1				0	0
020	19013-04540	BOLT BEARING CASE	6				0.038	0.0836
030	17118-04360	GASKET BRG.CASE	1				0	0
040	19013-04813	COVER BEARING CASE	1				0.41	0.902
050	17118-04830	GASKET BRG.CASE COV.	1				0.01	0.022
060	01123-50825	BOLT	8				0.013	0.0286
070	01123-50828	BOLT	8				0.014	0.0308
080	19202-04460	SEAL OIL	1				0.055	0.121
090	19013-04040	ASSY CASE MAIN BRG.	1				0	0
100	19013-04050	ASSY CASE MAIN BRG.	1				0	0
110	15601-04560	BOLT BEARING CASE	2				0.06	0.132

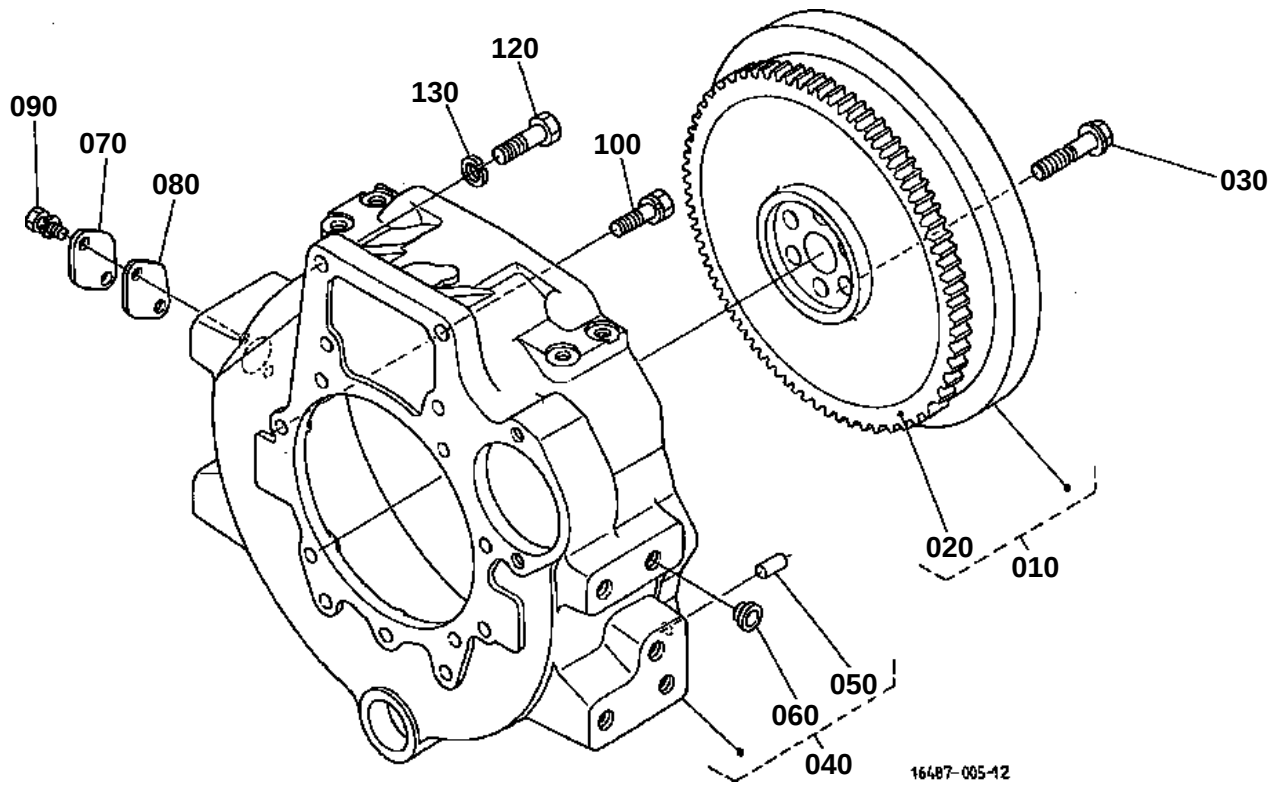 

100 01073-51030

 110 04512-50100

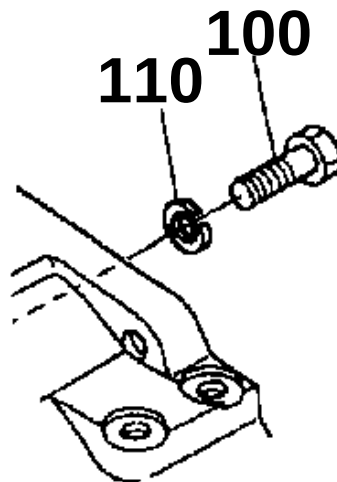

16487-820-10




FLYWHEEL [W/O IND-PTO]

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	16457-25010	COMP.FLYWHEEL	1				25.7	56.54
020	15221-63820	GEAR RING	1				1.2	2.64
030	16457-25160	BOLT FLYWHEEL	6				0.063	0.1386
040	TA040-20100	COMP.HOUSING F-W	1	<=1002			0	0
040	TA040-20102	COMP.HOUSING F-W	1	>=1003	↔		18.2	40.04
050	05012-01018	PIN STRAIGHT	2				0.012	0.0264
060	31220-14290	PLUG	9				0.002	0.0044
070	15521-04680	COVER	1				0.035	0.077
080	15521-04790	PACKING COVER	1				0.005	0.011
090	01123-60816	BOLT	2				0.01	0.022
100	01073-51030	BOLT	11	<=5388			0.028	0.0616
100	16427-91010	BOLT	11	>=5389	←		0.004	0.0088
110	04512-50100	WASHER SPRING	11	<=5388			0.003	0.0066
120	01073-51240	BOLT	2				0.049	0.1078
130	04512-50120	WASHER SPRING	2				0.003	0.0066

 FLYWHEEL [WITH IND-PTO]

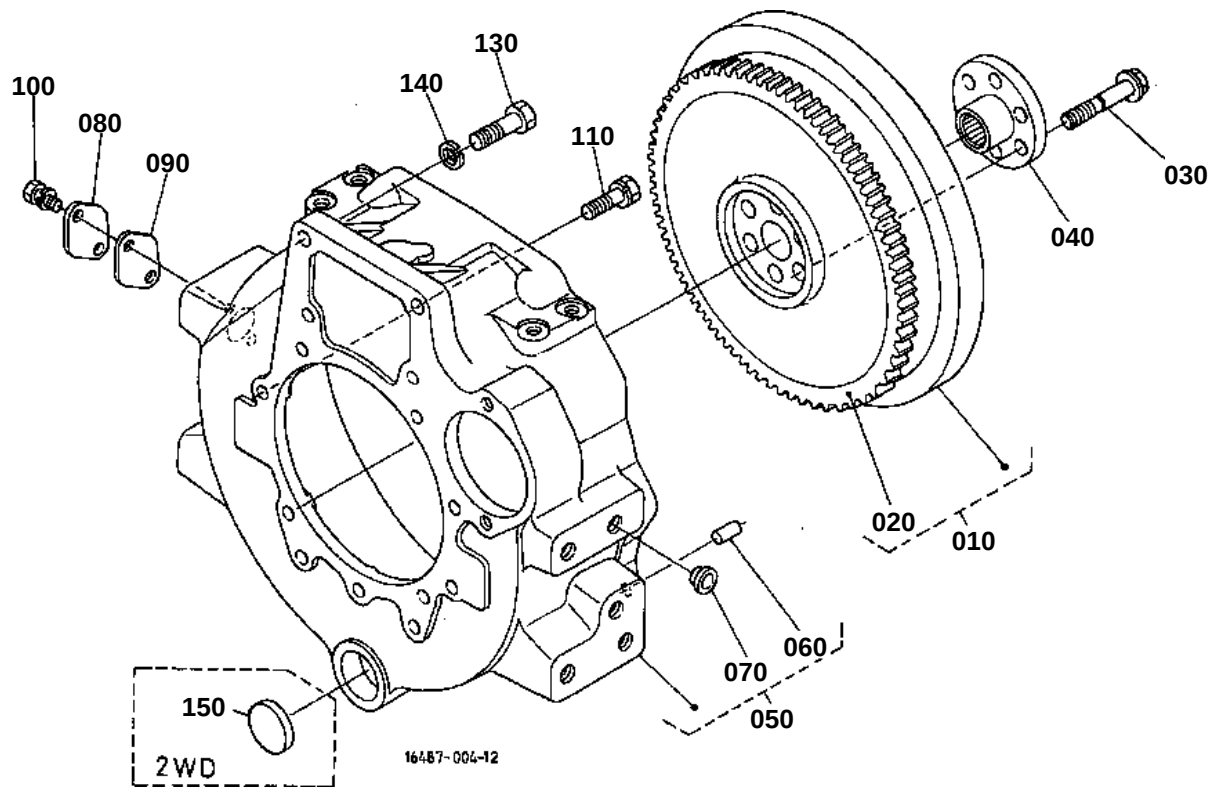

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.
You can download the most
perfect and complete manual in
the world immediately.

Our support email:
ebooklibonline@outlook.com