

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts at it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new

Remarks → Notes about this particulart part. Sometimes this may say except [FR] or [CA]


Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.


ALL PRODUCT INDEX
L4610DT-HST

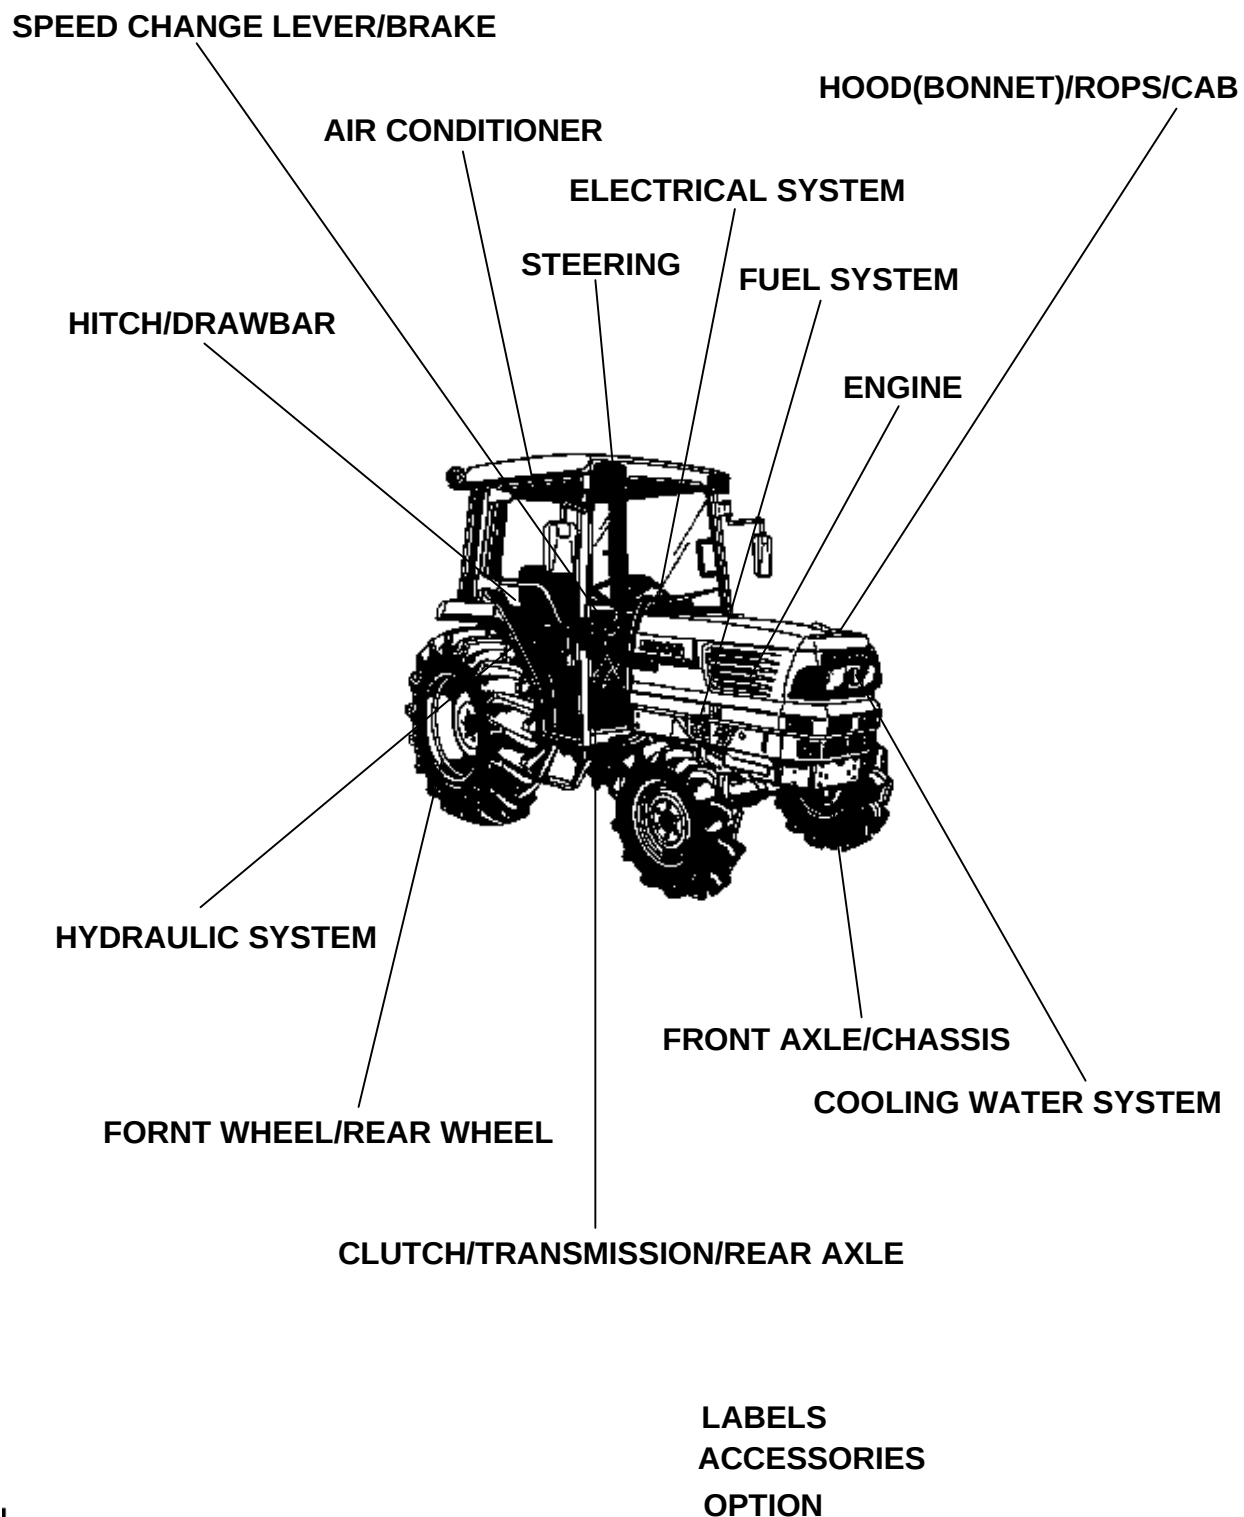

Item	Part No.	Description	Book
ENGINE	010001	CRANKCASE	100K0559
	010002	OIL PAN	100K0559
	010003	CYLINDER HEAD	100K0559
	010004	GEAR CASE	100K0559
	010005	HEAD COVER	100K0559
	010100	MAIN BEARING CASE	100K0559
	010101	CAMSHAFT AND IDLE GEAR SHAFT	100K0559
	010102	PISTON AND CRANKSHAFT	100K0559
	01010302	FLYWHEEL [HST TYPE]	100K0559
	010105	FUEL CAMSHAFT	100K0559
	010200	ENGINE STOP LEVER	100K0559
	010202	INJECTION PUMP	100K0559
	010203	INJECTION PUMP [COMPONENT PARTS]	100K0559
	010204	GOVERNOR	100K0559
	010205	SPEED CONTROL PLATE	100K0559
	010206	NOZZLE HOLDER AND GLOW PLUG	100K0559
	010207	NOZZLE HOLDER [COMPONENT PARTS]	100K0559
	01050001	WATER FLANGE AND THERMOSTAT [ROPS TYPE]	100K0559
	010501	WATER PUMP	100K0559
	010600	VALVE AND ROCKER ARM	100K0559
	01060101	INLET MANIFOLD [ROPS TYPE]	100K0559
	010901	UPPER GASKET KIT	100K0559
	010902	LOWER GASKET KIT	100K0559
	010603	EXHAUST MANIFOLD/MUFFLER	100K0559
	01060401	AIR CLEANER [ROPS TYPE]	100K0559
	01A002	STOP SOLENOID/ENGINE STOP WIRE	100K0559
	01A01002	ACCELERATOR LEVER [HST TYPE] [ROPS TYPE]	100K0559
	01A03002	ACCELERATOR ROD [HST TYPE]	100K0559
FUEL SYSTEM	01A10101	FUEL TANK [ROPS TYPE]	100K0559
	01A110	FUEL PIPE AND FUEL FILTER	100K0559
	01A130	FUEL FILTER [COMPONENT PARTS]	100K0559
COOLING WATER SYSTEM	01A401	FAN	100K0559
	01A41001	WATER PIPE [ROPS TYPE]	100K0559
	01A420	RADIATOR	100K0559
	01A43001	RESERVE TANK [ROPS TYPE]	100K0559
ELECTRICAL SYSTEM	01A51501	ALTERNATOR [ROPS TYPE]	100K0559
	01A52001	ALTERNATOR [COMPONENT PARTS] [ROPS TYPE]	100K0559
	01A525	STARTER	100K0559
	01A530	STARTER [COMPONENT PARTS]	100K0559
	01A53501	BATTERY [ROPS TYPE]	100K0559
	01B10202	SWITCH 1 [HST TYPE] [ROPS TYPE]	100K0559
	01B10302	SWITCH 2 [HST TYPE] [ROPS TYPE]	100K0559
	01B115	PANEL BOARD	100K0559
	01B120	PANEL BOARD [COMPONENT PARTS]	100K0559
	01B30401	LIGHT 1 [ROPS TYPE] [OLD TYPE]	100K0559
CLUTCH/TRANSMISSION/REAR AXLE	01B30402	LIGHT 1 [ROPS TYPE] [NEW TYPE]	100K0559
	01B50102	ELECTRICAL WIRING [HST TYPE] [ROPS TYPE]	100K0559
	01C101	CLUTCH	100K0559
	01C201	CLUTCH LEVER	100K0559
	01C30102	CLUTCH PEDAL [HST TYPE] [ROPS TYPE]	100K0559
	01C40102	CLUTCH HOUSING [HST TYPE]	100K0559
	01C41002	MID CASE [HST TYPE]	100K0559
	01C415	HST [COMPONENT PARTS] [HST TYPE]	100K0559
	01C42002	TRANSMISSION CASE [HST TYPE]	100K0559
	01D10102	MAIN SHAFT [HST TYPE]	100K0559
	01D103	INPUT SHAFT [HST TYPE]	100K0559
	01D107	OUTPUT SHAFT [HST TYPE]	100K0559
	01D12503	SPIRAL BEVEL PINION [HST TYPE]	100K0559

Item	Part No.	Description	Book
CLUTCH/TRANSMISSION/REAR AXLE	01D127	REAR DIFFERENTIAL	100K0559
	01D13202	PTO CLUTCH [HST TYPE]	100K0559
	01D13502	PTO SHAFT [HST TYPE]	100K0559
	01D217	RANGE GEAR SHIFT FORK [HST TYPE]	100K0559
	01D22502	DIFFERENTIAL LOCK SHIFT FORK [HST TYPE][ROPS TYPE]	100K0559
SPEED CHANGE LEVER/BRAKE	01D30101	REAR AXLE [ROPS TYPE]	100K0559
	01D401	BRAKE	100K0559
	01D40502	BRAKE ROD 1 [HST TYPE] [ROPS TYPE]	100K0559
	01D41002	BRAKE ROD 2 [HST TYPE]	100K0559
	01E106	CRUISE CONTROL LEVER [HST TYPE]	100K0559
	01E107	CRUISE CONTROL CABLE [HST TYPE]	100K0559
	01E108	NEUTRAL HOLDER LINK [HST TYPE]	100K0559
	01E10901	SPEED CONTROL PEDAL [HST TYPE] [ROPS TYPE]	100K0559
	01E11001	RANGE GEAR SHIFT LEVER [HST TYPE] [ROPS TYPE]	100K0559
	01E112	RANGE GEAR SHIFT ROD [HST TYPE]	100K0559
FRONT AXLE/CHASSIS	01E125	PTO GEAR SHIFT LEVER [HST TYPE]	100K0559
	01E140	FRONT WHEEL DRIVE LEVER	100K0559
	01E20102	BRAKE PEDAL [HST TYPE] [ROPS TYPE]	100K0559
	01F105	FRONT AXLE FRAME	100K0559
	01F120	PROPELLER SHAFT	100K0559
	01F122	FRONT WHEEL DRIVE SHAFT	100K0559
	01F125	FRONT DIFFERENTIAL CASE	100K0559
	01F127	BEVEL GEAR (FRONT)	100K0559
	01F130	DIFFERENTIAL(FRONT)	100K0559
	01F140	FRONT AXLE CASE	100K0559
	01F145	DIFFERENTIAL GEAR SHAFT	100K0559
	01F150	FRONT AXLE	100K0559
	01G10102	STEERING HANDLE [HST TYPE] [ROPS TYPE]	100K0559
	01G110	STEERING CONTROLLER	100K0559
	01H110	STEERING CYLINDER	100K0559
STEERING	01H115	STEERING CYLINDER [COMPONENT PARTS]	100K0559
	01H12002	HYDRAULIC PUMP [HST TYPE]	100K0559
HYDRAULIC SYSTEM	01H12502	HYDRAULIC PUMP [COMPONENT PARTS] [HST TYPE]	100K0559
	01H20502	HYDRAULIC OIL LINE(INLET) [HST TYPE]	100K0559
	01H21002	HYDRAULIC OIL LINE(DELIVERY) [HST TYPE]	100K0559
	01H21502	HYDRAULIC OIL LINE(PS) [HST TYPE]	100K0559
	01H23502	HYDRAULIC OUTLET BLOCK [HST TYPE]	100K0559
	01H240	HYDRAULIC PIPE [HST TYPE]	100K0559
	01H245	OIL COOLER [HST TYPE]	100K0559
	01H301	HYDRAULIC CYLINDER	100K0559
	01H320	LIFT ARM	100K0559
	01H330	FEED BACK LEVER	100K0559
	01H405	CONTROL VALVE	100K0559
	01H410	CONTROL VALVE [COMPONENT PARTS] [OLD TYPE]	100K0559
	01H41001	CONTROL VALVE [COMPONENT PARTS] [NEW TYPE]	100K0559
	01H44001	POSITION CONTROL LEVER [ROPS TYPE]	100K0559
HITCH/DRAWBAR	01J105	TOP LINK	100K0559
	01J110	3-POINT LINKAGE 1(LOWER LINK) [OLD TYPE]	100K0559
	01J11001	3-POINT LINKAGE 1 (LOWER LINK) [NEW TYPE]	100K0559
	01J115	3-POINT LINKAGE 2(LIFT ROD)	100K0559
	01K105	DRAWBAR	100K0559
HOOD(BONNET)/ROPS/CAB	01K12501	PTO PROTECTOR [ROPS TYPE]	100K0559
	01L101	FRONT GRILLE	100K0559

Item	Part No.	Description	Book
HOOD(BONNET)/ROPS/CAB	01L10302	FRONT GRILLE SUPPORT [HST TYPE] [ROPS TYPE]	100K0559
	01L10501	HOOD(BONNET) [ROPS TYPE]	100K0559
	01L111	HOOD(BONNET) SIDE RH	100K0559
	01L113	HOOD(BONNET) SIDE LH	100K0559
	01L11501	SIDE COVER LOWER [ROPS TYPE]	100K0559
	01L13001	SHUTTER PLATE [ROPS TYPE]	100K0559
	01L20102	PANEL FRAME [HST TYPE] [ROPS TYPE]	100K0559
	01L21002	FENDER [HST TYPE] [ROPS TYPE]	100K0559
	01L21502	FLOOR SEAT [HST TYPE] [ROPS TYPE]	100K0559
	01L22001	SEAT [ROPS TYPE]	100K0559
	01L221	SEAT SUSPENSION [COMPONENT PARTS]	100K0559
	01L22502	STEP [HST TYPE] [ROPS TYPE]	100K0559
	01L301	ROPS [ROPS TYPE] [OLD TYPE]	100K0559
	01L30101	ROPS [ROPS TYPE] [NEW TYPE]	100K0559
	01L501	SMV EMBLEM	100K0559
FORNT WHEEL/REAR WHEEL	01P10101	FRONT WHEEL (8.3-16)	100K0559
	01P10102	FRONT WHEEL (10-16.5)	100K0559
	01P10103	FRONT WHEEL (27*8.5-15)	100K0559
	01P10104	FRONT WHEEL (29*12.50-15)	100K0559
	01P11001	REAR WHEEL (13.6-24)	100K0559
	01P11002	REAR WHEEL (14.9-24)	100K0559
	01P11003	REAR WHEEL (17.5-24)	100K0559
	01P11004	REAR WHEEL (41*14.00-20)	100K0559
	01P11005	REAR WHEEL (21.5L-16.1)	100K0559
	01R10502	LABEL 1 [HST TYPE] [ROPS TYPE]	100K0559
LABELS	01R11002	LABEL 2 [HST TYPE] [ROPS TYPE]	100K0559
ACCESSORIES OPTION	01S105	ACCESSORIES AND SERVICE PARTS	100K0559
	01T103	AIR CLEANER COVER KIT [OPTION]	100K0559
	01T130	POSITION CONTROL LEVER (WITH DRAFT) [OPTION]	100K0559
	01T135	DRAFT CONTROL LEVER (WITH DRAFT) [OPTION]	100K0559
	01T140	TOP LINK HOLDER (WITH DRAFT) [OPTION]	100K0559
	01T145	SWINGING DRAWBAR/CLEVIS DRAWBAR [OPTION]	100K0559
	01T15001	REMOTE CONTROL VALVE LEVER 1 [ROPS TYPE] [OPTION]	100K0559
	01T15003	REMOTE CONTROL VALVE LEVER 2 [ROPS TYPE] [OPTION]	100K0559
	01T15005	REMOTE CONTROL VALVE LEVER 3 [ROPS TYPE] [OPTION]	100K0559
	01T15501	REMOTE CONTROL VALVE COUPLER 1 [OPTION]	100K0559
	01T15502	REMOTE CONTROL VALVE COUPLER 2 [OPTION]	100K0559
	01T15503	REMOTE CONTROL VALVE COUPLER 3 [OPTION]	100K0559
	01T160	ROPS [ROPS TYPE] [OPTION] [OLD TYPE]	100K0559
	01T16001	ROPS [ROPS TYPE] [OPTION] [NEW TYPE]	100K0559

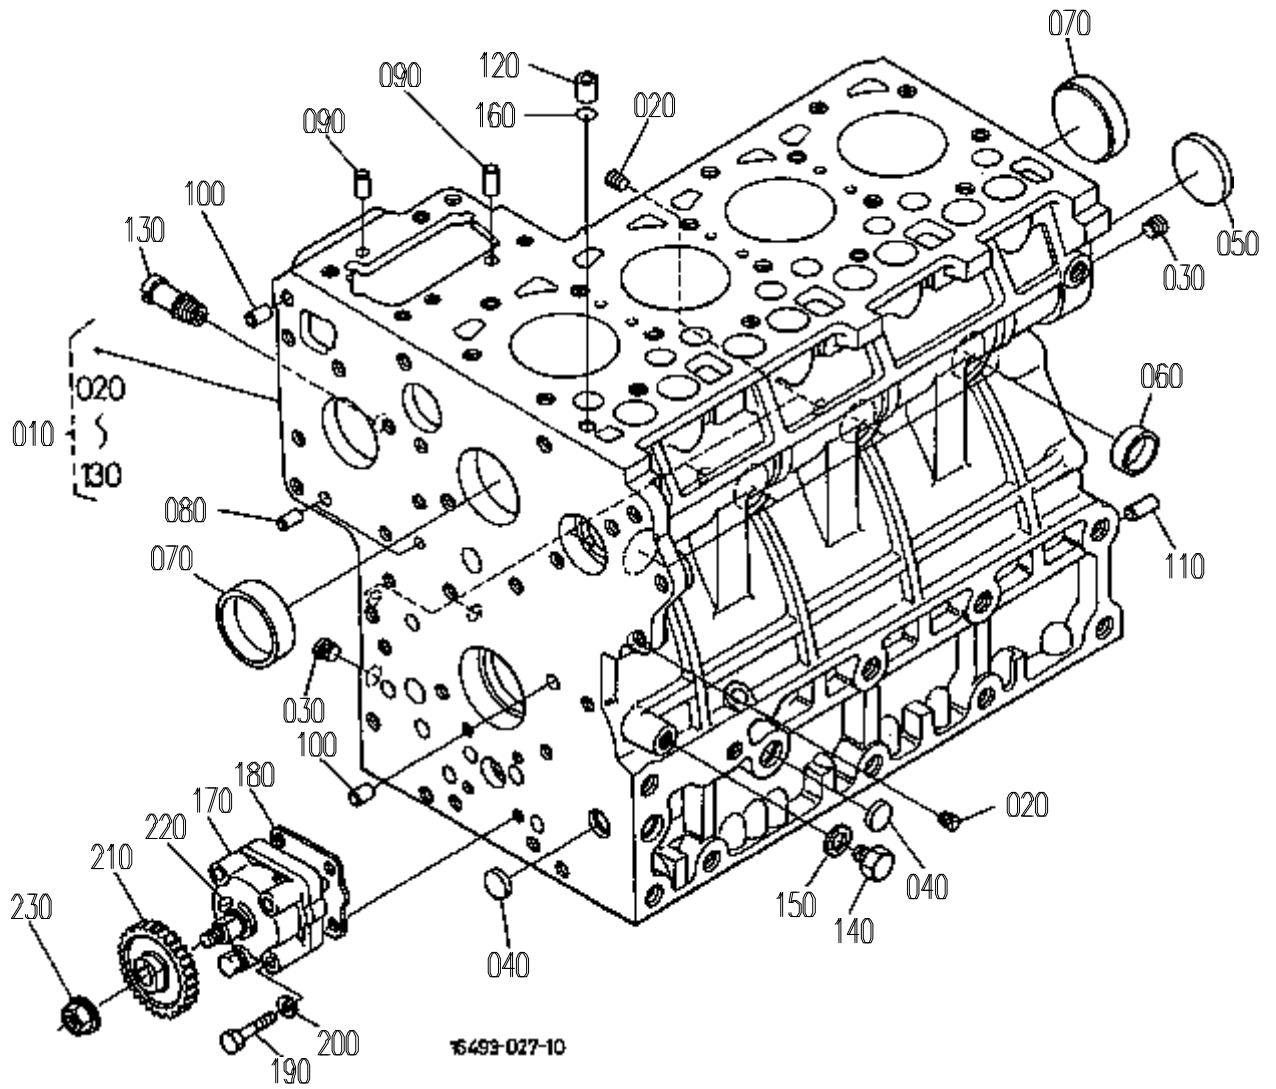




CRANKCASE

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	16423-01010	COMP.CRANKCASE	1	<=XS4888			0	0
010	16423-01012	COMP.CRANKCASE	1	>=XS4889	←		49	107.8
010	16423-01014	COMP.CRANKCASE	1	>=2A0001	←		49	107.8
020	15521-96020	PLUG	6				0.003	0.0066
030	15521-96030	PLUG	2				0.007	0.0154
040	17391-96160	PLUG EXPANSION	3				0.003	0.0066
050	06311-75045	PLUG EXPANSION	1				0.026	0.0572
060	15221-03380	CAP SEALING	6				0.017	0.0374
070	15221-03390	CAP SEALING	2				0.03	0.066
080	05012-00408	PIN STRAIGHT	2				0.001	0.0022
090	05012-00609	PIN STRAIGHT	2				0.003	0.0066
100	05012-00612	PIN STRAIGHT	2				0.003	0.0066
110	05012-01018	PIN STRAIGHT	1				0.012	0.0264
120	15221-33650	PIN PIPE	1				0.004	0.0088
130	15321-73340	PIPE WATER RETURN	1				0.016	0.0352
140	15221-33610	PLUG	1				0.009	0.0198
150	15021-33660	GASKET	1				0.001	0.0022
160	15221-33700	O RING	1				0.001	0.0022
170	15471-35012	ASSY PUMP OIL	1				0.55	1.21
180	15296-35150	GASKET OIL PUMP	1				0	0
180	1A021-35150	GASKET OIL PUMP	1		↔		0.001	0.0022
190	01053-50650	BOLT	4				0.011	0.0242
200	04512-60060	WASHER SPRING	4				0.001	0.0022
210	19202-35660	GEAR OIL PUMP DRIVE	1				0.23	0.506
220	05712-00410	KEY FEATHER	1				0.001	0.0022
230	15221-35682	NUT FLANGE	1				0.014	0.0308

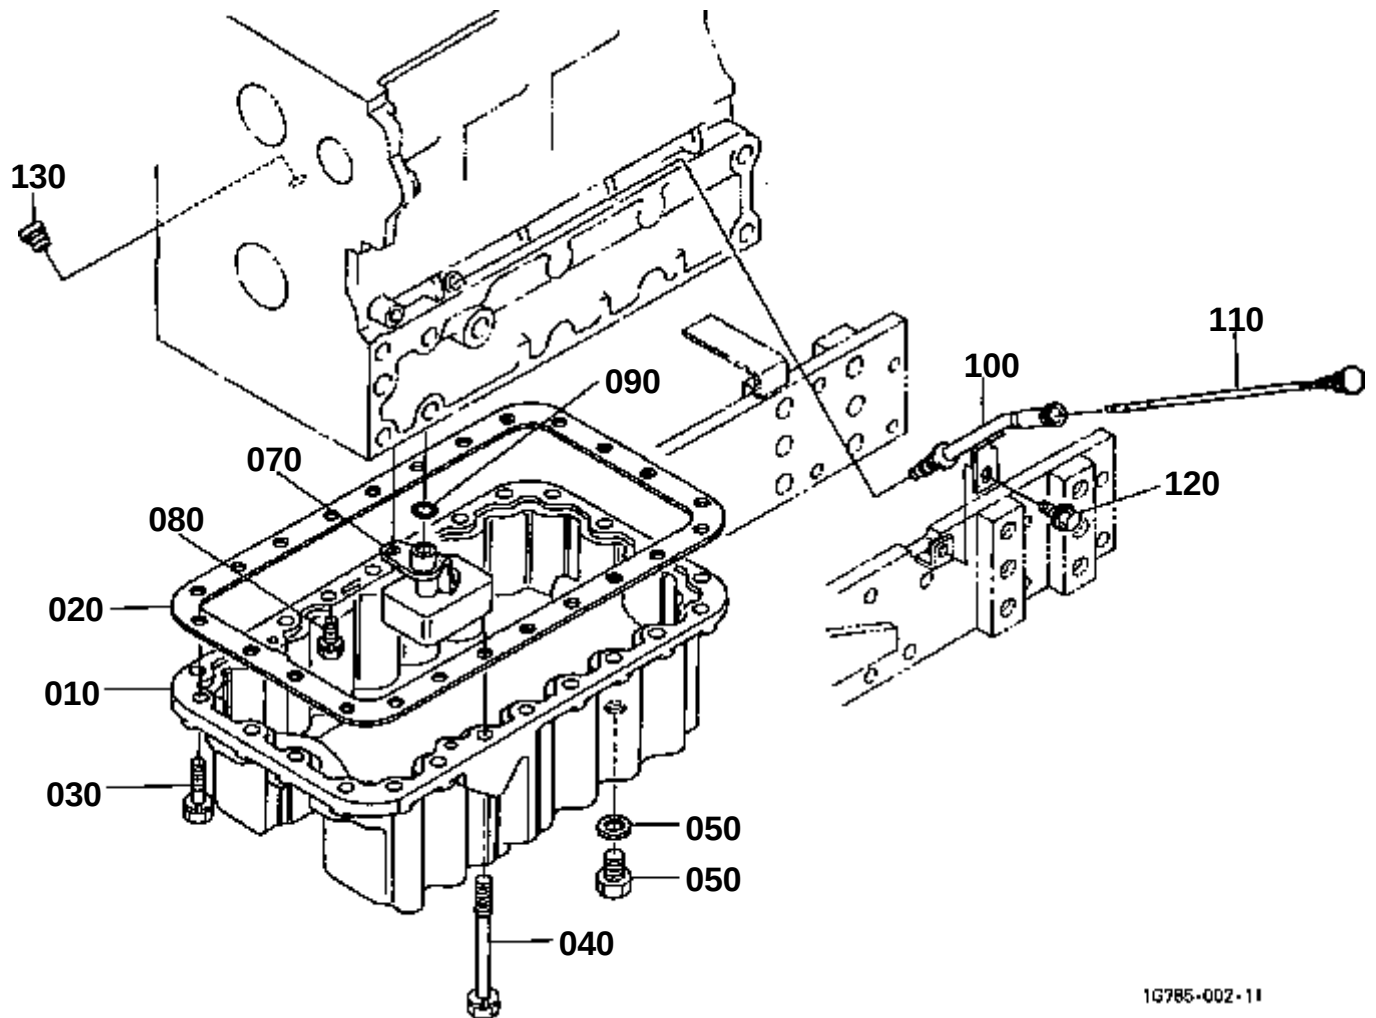


1G785-002-11



OIL PAN

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	17341-01610	OIL PAN	1				4.1	9.02
020	15815-01620	GASKET OIL PAN	1				0.03	0.066
030	01133-51028	BOLT	22				0.027	0.0594
040	17377-91010	BOLT	2				0.08	0.176
050	15261-33750	PLUG	2	≤YJ3494			0.034	0.0748
050	16427-33750	PLUG DRAIN	2	≥YL0001	←		0	0
060	6C090-58960	GASKET	2				0.002	0.0044
070	15411-32110	FILTER OIL	1				0.24	0.528
080	01123-60814	BOLT	1				0.008	0.0176
090	04811-00160	O RING	1				0.001	0.0022
090	04817-00160	O RING	1		←		0	0
100	TA140-36420	GUIDE OIL GAUGE	1				0.067	0.1474
110	TA140-36413	GAUGE OIL	1				0.025	0.055
120	01754-50816	BOLT FLANGE	1				0.011	0.0242
130	16414-33640	PLUG OIL GAUGE	1	≥2A0001			0.003	0.0066

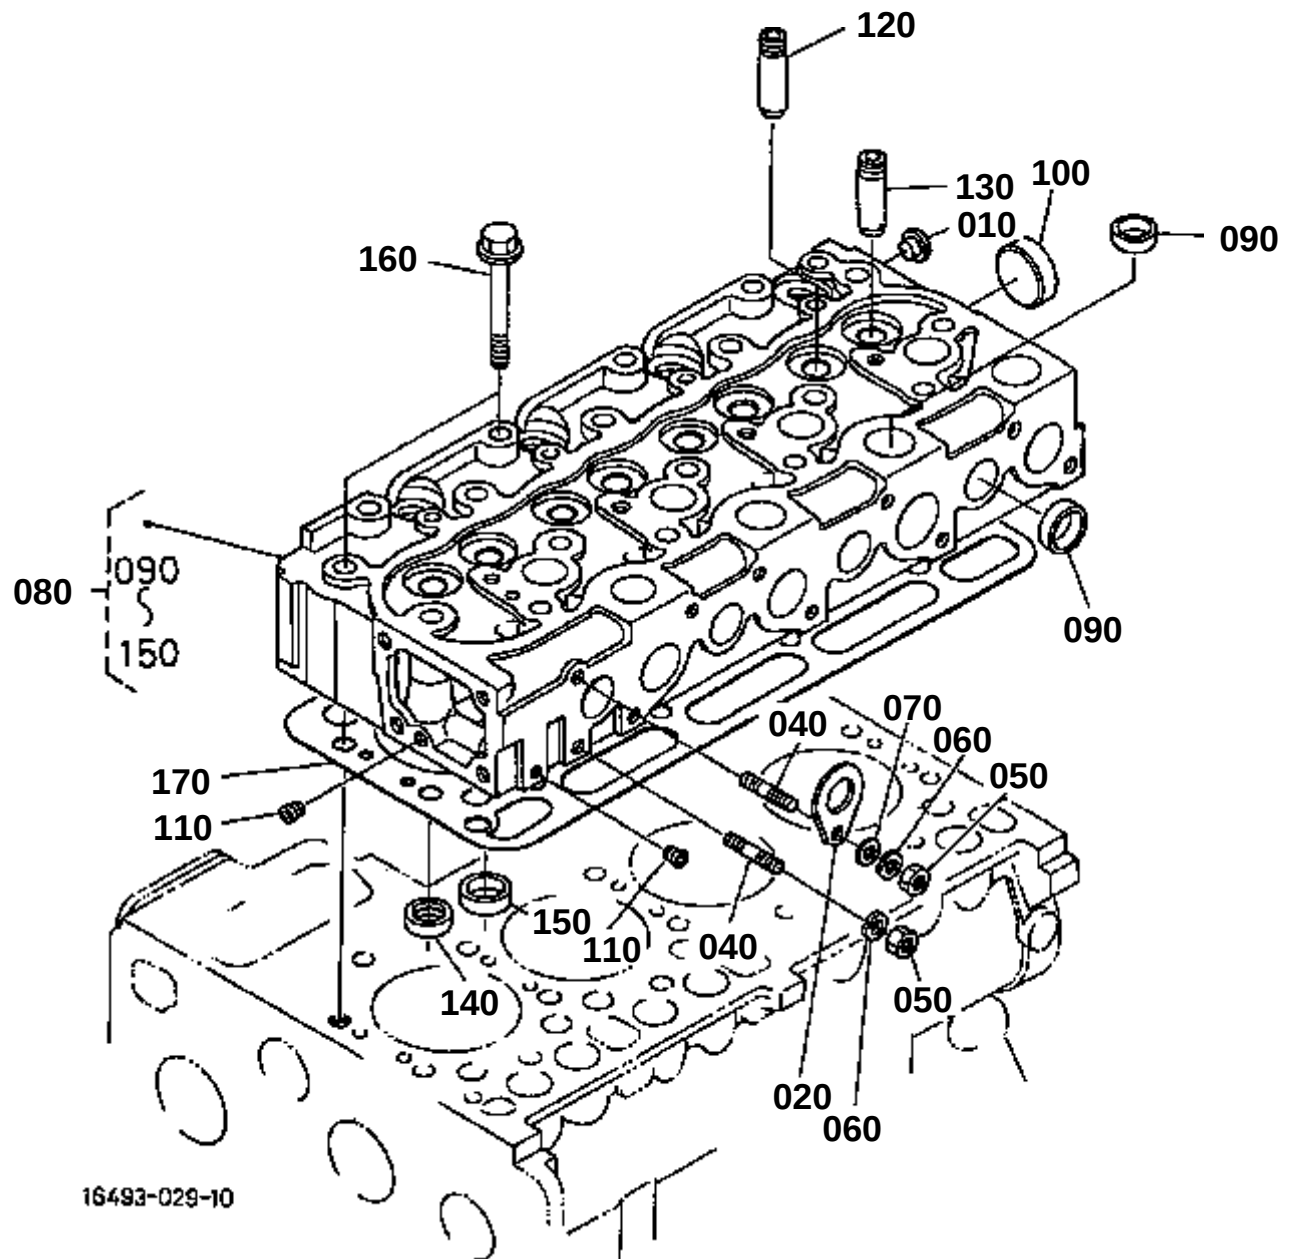




CYLINDER HEAD

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	09980-10075	CAP PROTECTOR	1				0.001	0.0022
020	15221-01750	HOOK ENGINE	1				0.04	0.088
030	99999-99999	BLANK	0				0	0
040	15471-91530	STUD	2				0.01	0.022
050	02156-50080	NUT	2				0.004	0.0088
060	04512-60080	WASHER SPRING	2				0.002	0.0044
070	04012-50080	WASHER PLAIN	1				0.001	0.0022
080	16429-03040	COMP.CYLINDER HEAD	1				19.1	42.02
090	15221-03370	CAP SEALING	12				0.01	0.022
100	15221-03490	CAP SEALING	1				0.02	0.044
110	15261-96010	PLUG	2				0.002	0.0044
120	17321-13580	GUIDE INLET VALVE	4				0.015	0.033
130	17321-13560	GUIDE EXHAUST VALVE	4				0.02	0.044
140	16415-13620	SEAT INLET VALVE	4				0.01	0.022
150	16415-13612	SEAT EXHAUST VALVE	4				0.01	0.022
160	19013-03450	BOLT CYLINDER HEAD	18				0.077	0.1694
170	19077-03310	GASKET CYLINDER HEAD	1				0.13	0.286

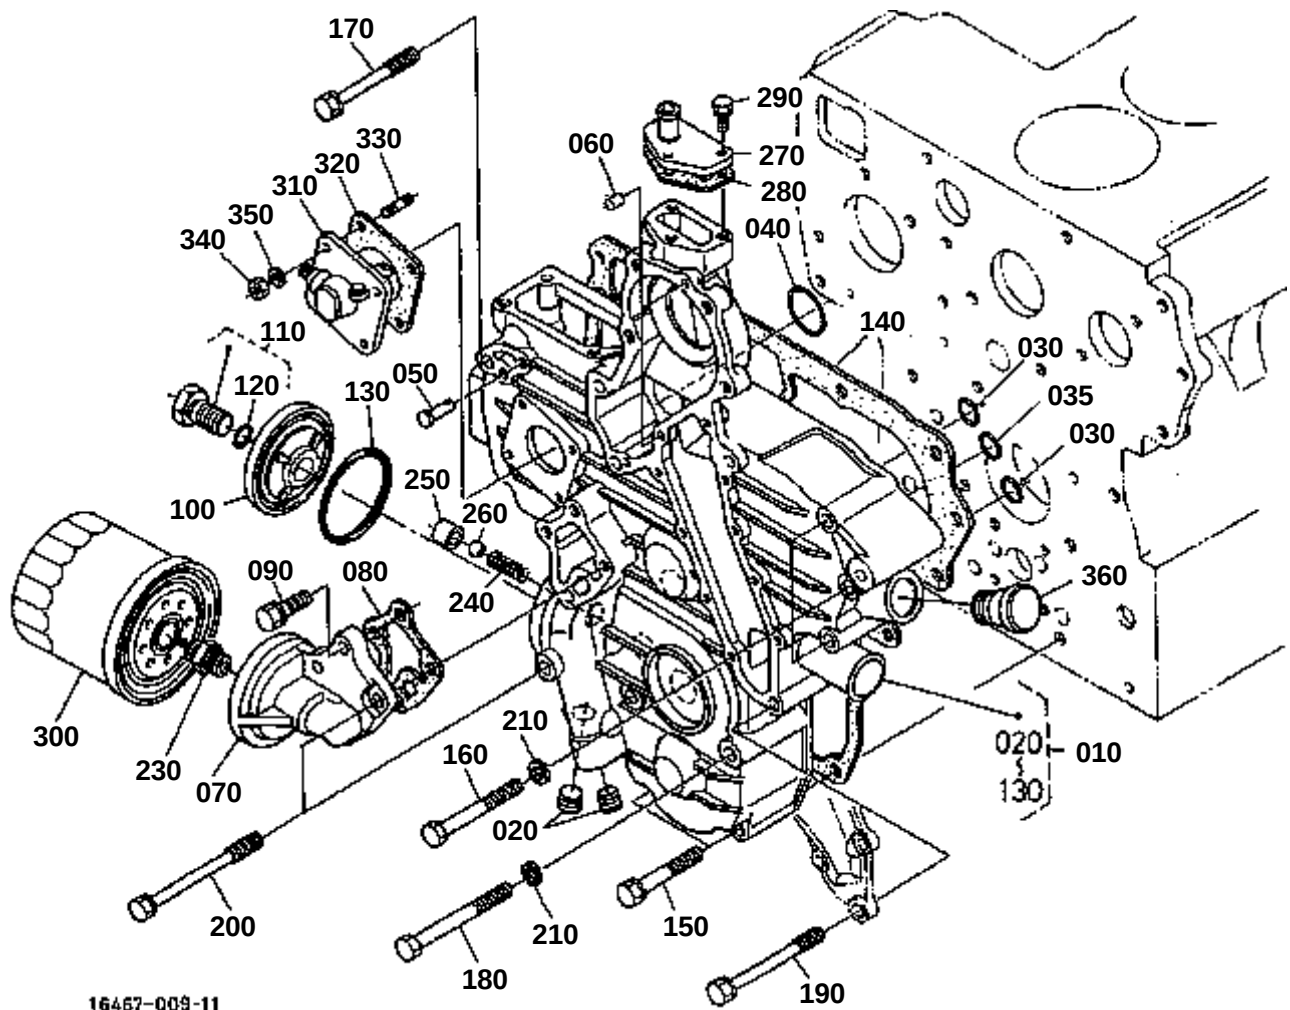


16467-009-11




GEAR CASE

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	16705-04032	ASSY CASE GEAR	1				4.2	9.24
020	16241-96020	PLUG	2				0.015	0.033
030	04811-00150	O RING	2				0.001	0.0022
030	04817-00150	O RING	2		←		0	0
035	04811-00200	O RING	1				0.001	0.0022
035	04817-00200	O RING	1		←		0	0
040	04811-00360	O RING	1				0.002	0.0044
040	04817-00360	O RING	1		←		0	0
050	15221-56280	PIN START SPRING	1				0.006	0.0132
060	05012-00612	PIN STRAIGHT	2				0.003	0.0066
070	17331-32610	SUPPORT OIL FILTER	1				0.275	0.605
080	17326-32620	GASKET	1				0.005	0.011
090	01123-50825	BOLT	3				0.013	0.0286
100	17331-32880	COVER	1				0.075	0.165
110	17331-32910	COMP BOLT	1				0.07	0.154
120	04811-00150	O RING	1				0.001	0.0022
120	04817-00150	O RING	1		←		0	0
130	19202-96830	O RING	1				0.01	0.022
140	17326-04132	GASKET GEAR CASE	1				0.03	0.066
150	01123-50860	BOLT	3				0.026	0.0572
160	01153-50870	BOLT	3				0.026	0.0572
170	17367-91010	BOLT	2				0.005	0.011
180	01153-50880	BOLT	2				0.03	0.066
190	17367-91020	BOLT	3				0.035	0.077
200	17367-91030	BOLT	2				0.02	0.044
210	04512-60080	WASHER SPRING	5				0.002	0.0044
220	99999-99999	BLANK	0				0	0
230	15521-32290	JOINT PIPE	1	<=YW4276			0	0
230	15521-32293	JOINT PIPE	1	>=YY0001	←		0	0
240	15241-36950	SPRING	1				0.004	0.0088
250	15521-36930	SEAT VALVE	1				0.015	0.033
260	07715-03213	BALL	1				0.004	0.0088
270	15521-73320	FLANGE WATER RETURN	1				0.04	0.088
280	1A021-73330	GASKET WATER FLANGE	1				0.001	0.0022
280	1A021-73330	GASKET RETURN FLANGE	1		↔		0.001	0.0022
290	01023-50620	BOLT	3				0.006	0.0132
300	17321-32430	CARTRIDGE OIL FILTER	1				0	0
300	16414-32430	CARTRIDGE OIL FILTER	1		↔		0	0
310	38240-34660	ASSY GEAR CASE H/M	1				0.335	0.737
320	15296-88130	GASKET H/METER UNIT	1				0.002	0.0044
330	15221-88210	STUD	4				0.005	0.011
340	02056-50060	NUT	4				0.002	0.0044
350	04512-60060	WASHER SPRING	4				0.001	0.0022
360	15571-33140	PLUG OIL FILLER	1	<=1L4203		NOT SALE	0.03	0.066
360	16427-33140	PLUG OIL FILLER	1	>=1N0001	←		0.025	0.055

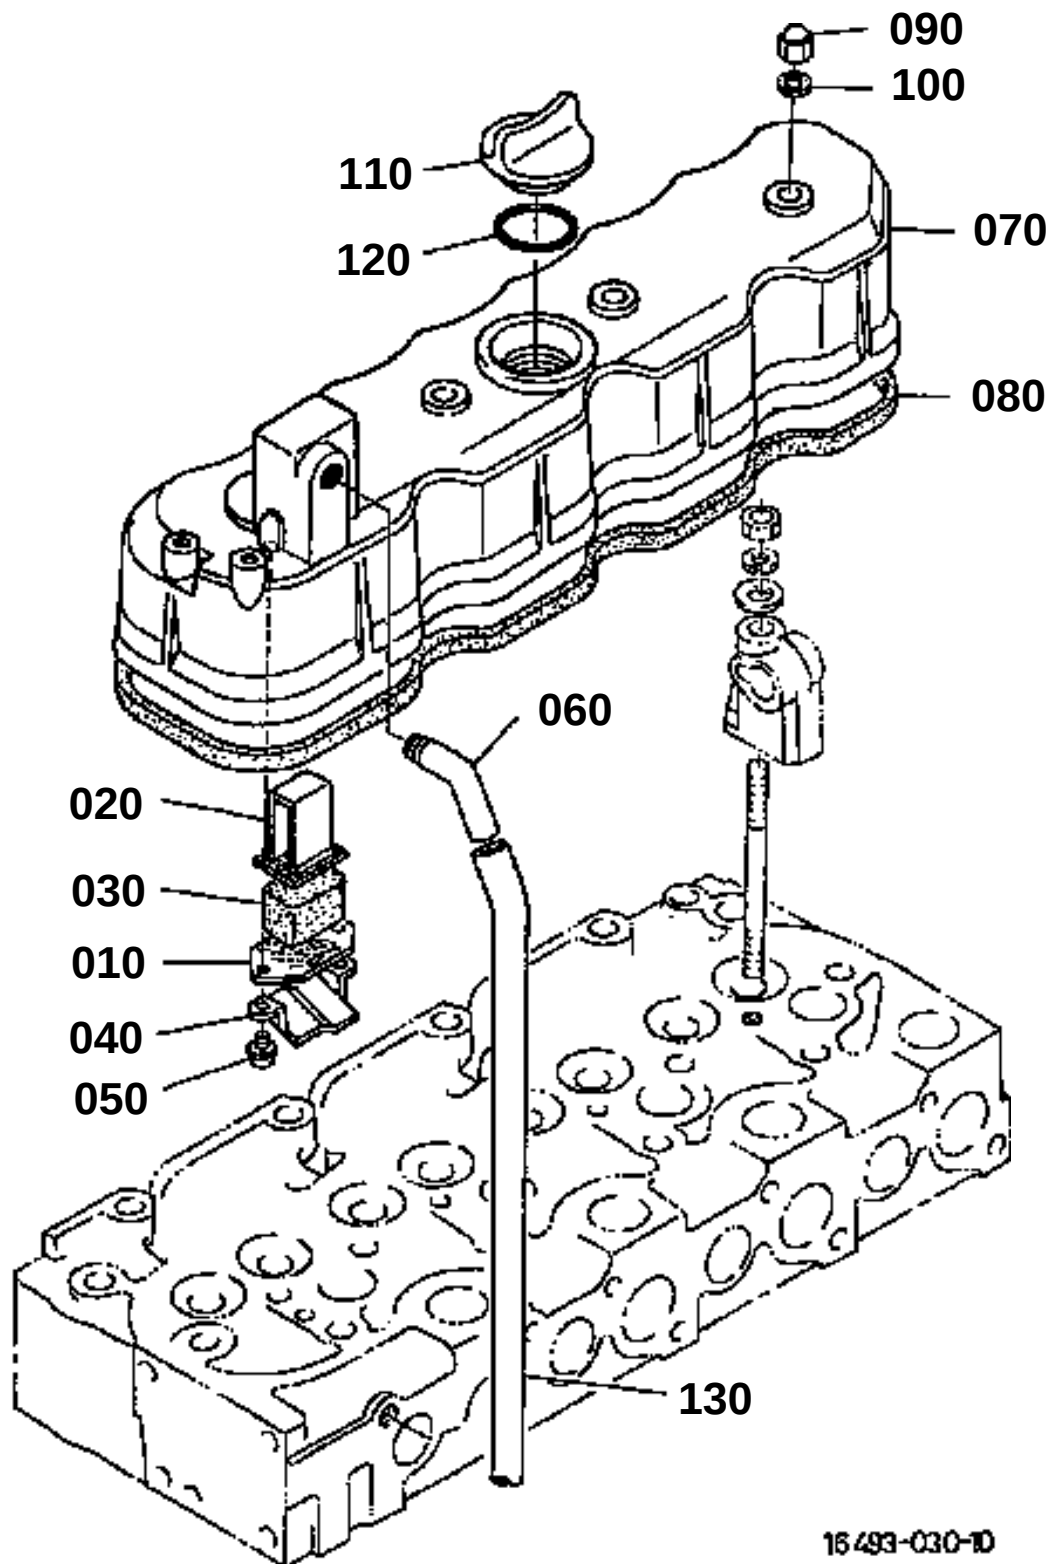


16493-030-10

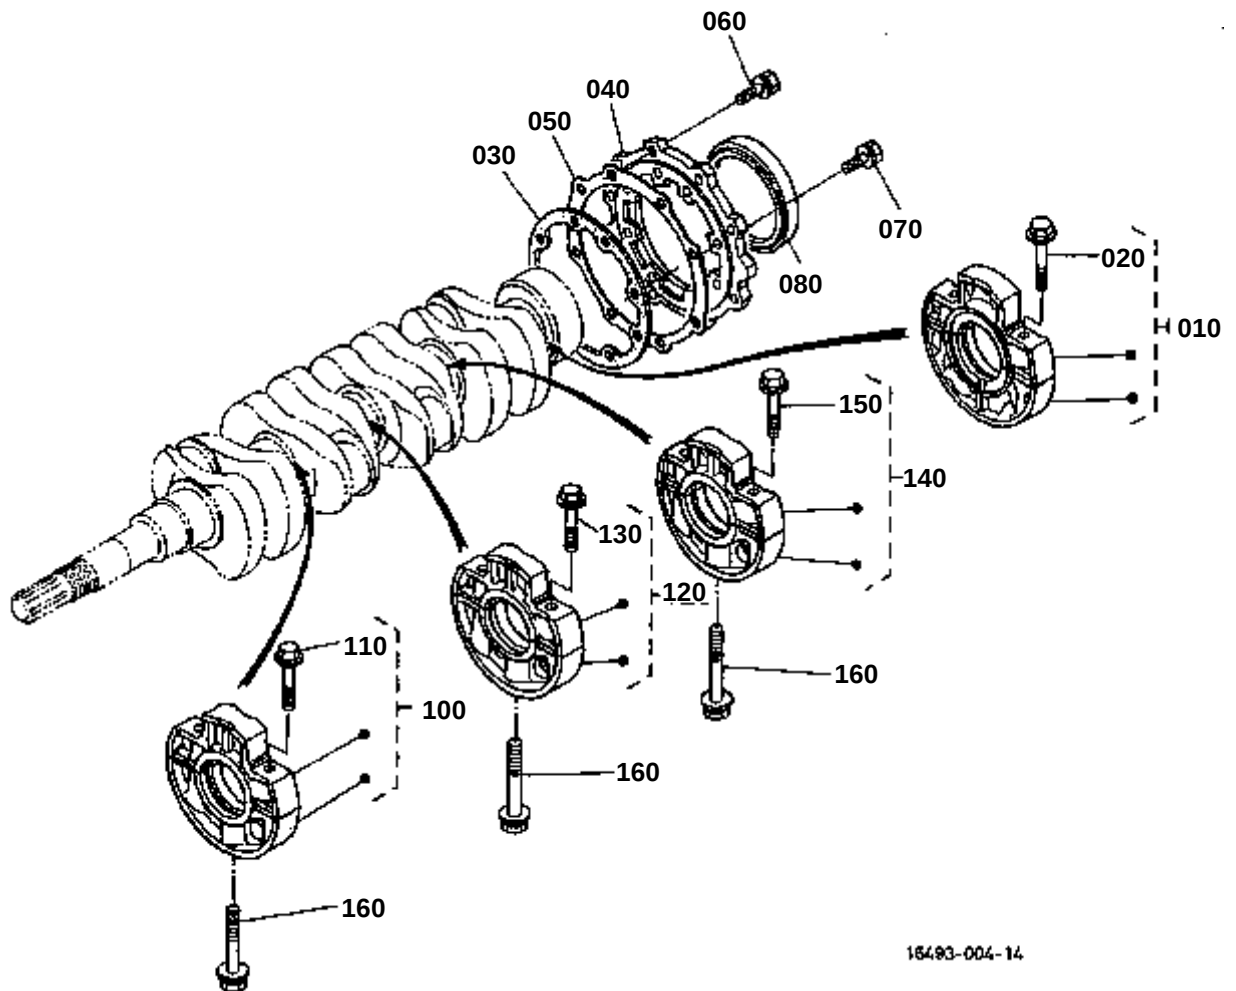

050 17118-0483-0

050

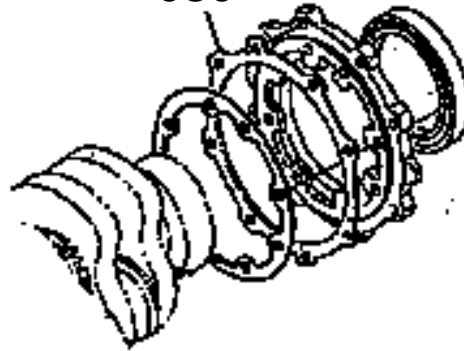


1A021-804-11



MAIN BEARING CASE

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	19013-07090	ASSY BRG.CASE WHEEL	1				1.55	3.41
020	19013-04540	BOLT BEARING CASE	2				0.038	0.0836
030	19077-04360	GASKET BEARING CASE	1				0.004	0.0088
040	19013-04813	COVER BEARING CASE	1				0.41	0.902
050	17118-04830	GASKET BRG.CASE COV.	1				0	0
050	1A091-04820	GASKET CASE COVER	1		↔		0.006	0.0132
060	01123-50825	BOLT	8				0.013	0.0286
070	01123-50828	BOLT	8				0.014	0.0308
080	19202-04460	SEAL OIL	1				0.055	0.121
090	99999-99999	BLANK	0				0	0
100	19013-07040	ASSY BRG.CASE MAIN	1				1.5	3.3
110	19013-04540	BOLT BEARING CASE	2				0.038	0.0836
120	19013-07050	ASSY BRG.CASE MAIN	1				1.495	3.289
130	19013-04540	BOLT BEARING CASE	2				0.038	0.0836
140	19013-07060	ASSY BRG.CASE MAIN	1				1.52	3.344
150	19013-04540	BOLT BEARING CASE	2				0.038	0.0836
160	15601-04560	BOLT BEARING CASE	3				0.06	0.132

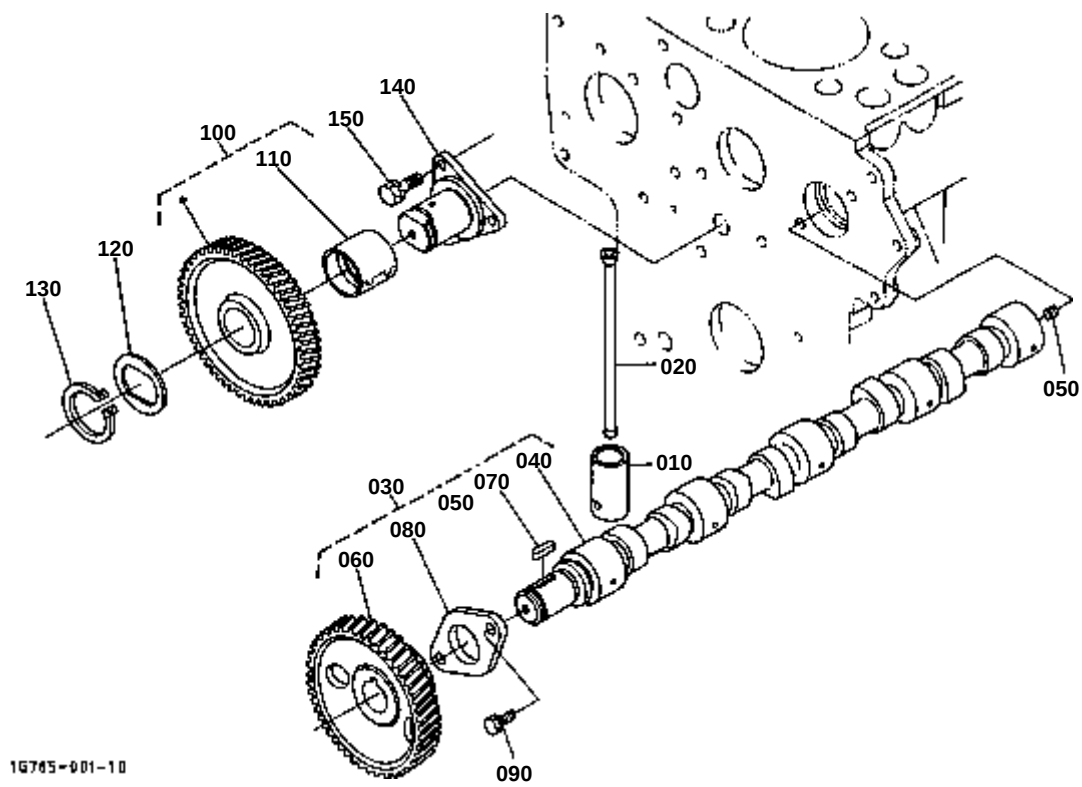

16785-001-10

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com