

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts at it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new


Remarks → Notes about this particulart part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.


Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.

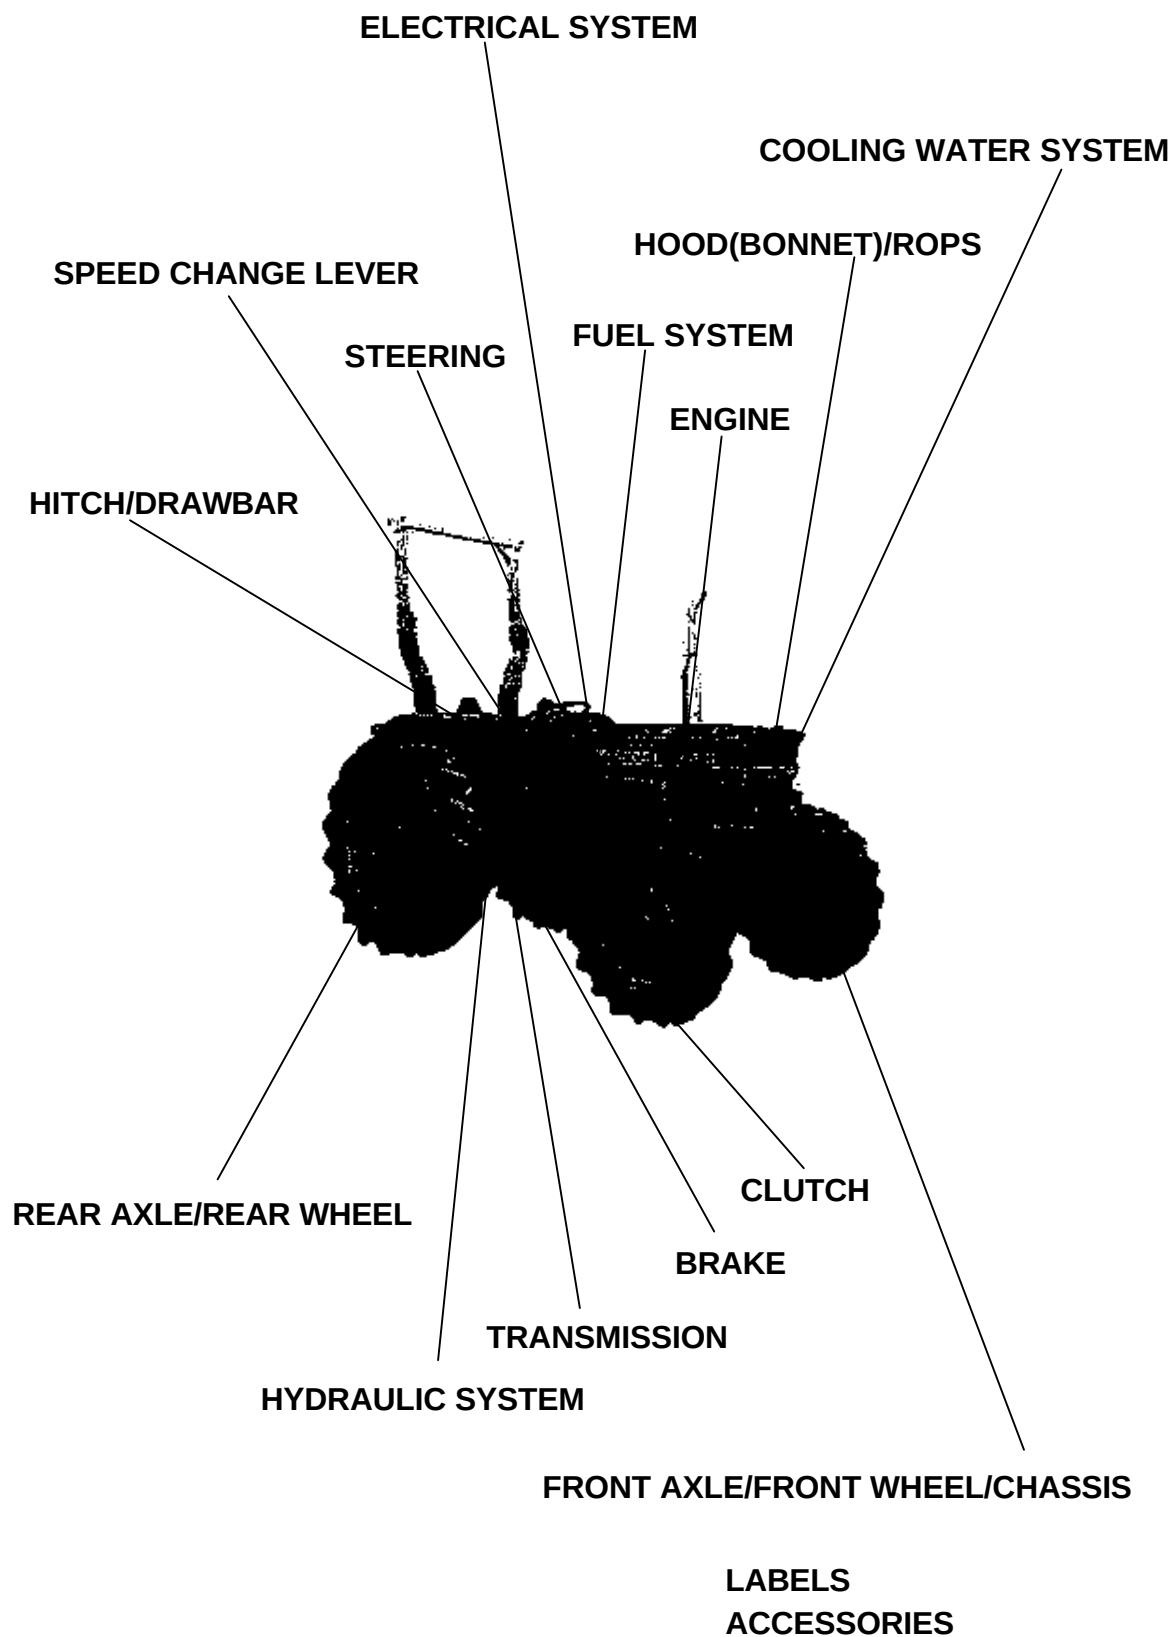

Item	Part No.	Description	Book
ENGINE	01001	CRANKCASE 1	100K0403
	01002	CRANKCASE 2	100K0403
	01003	CYLINDER HEAD	100K0403
	01004	GEAR CASE	100K0403
	01005	BREATHER	100K0403
	01006	AIR CLEANER	100K0403
	01007	MUFFLER	100K0403
	01008	VALVE AND ROCKER ARM	100K0403
	01009	HEAD COVER	100K0403
	01010	CAMSHAFT	100K0403
	01011	PISTON AND CRANKSHAFT	100K0403
	01012	FLYWHEEL	100K0403
	01013	OIL PUMP	100K0403
	01014	PIPE	100K0403
	01015	INJECTION PUMP	100K0403
	01016	STARTER DYNAMO	100K0403
	01017	RADIATOR	100K0403
	01018	WATER PUMP	100K0403
	01019	OIL PUMP BASE	100K0403
	01084	STARTER [SECTION PARTS]	100K0403
	01085	DYNAMO [SECTION PARTS]	100K0403
	01086	FUEL PUMP [SECTION PARTS]	100K0403
	01087	INJECTION PUMP [SECTION PARTS]	100K0403
	01088	FUEL FILTER [SECTION PARTS]	100K0403
	01089	SEDIMENTER [SECTION PARTS]	100K0403
	01090	NOZZLE HOLDER [SECTION PARTS]	100K0403
FUEL SYSTEM	01020	FUEL TANK	100K0403
SPEED CHANGE LEVER	01021	ACCEL ROD	100K0403
	01022	HAND ACCEL	100K0403
COOLING WATER SYSTEM	01023	BATTERY SUPPORT	100K0403
CLUTCH	01024	CLUTCH HOUSING	100K0403
	01025	CHANGE COVER	100K0403
TRANSMISSION	01026	TRANSMISSION	100K0403
FRONT AXLE/FRONT WHEEL/CHASSIS	01027	FRONT AXLE	100K0403
CLUTCH	01028	CLUTCH	100K0403
TRANSMISSION	01029	MISSION GEAR	100K0403
CLUTCH	01030	CLUTCH PEDAL	100K0403
SPEED CHANGE LEVER	01031	LEVER	100K0403
	01032	1 2 SHIFT LEVER	100K0403
REAR AXLE/REAR WHEEL	01033	MAIN CHANGE LEVER	100K0403
	01034	DIFF SUPPORT	100K0403
	01035	REDUCTION SHAFT	100K0403
	01036	BEVEL PINION	100K0403
STEERING	01037	AXLE CASE	100K0403
	01038	REAR WHEEL [A][NZ][AU]	100K0403
	01040	STEERING	100K0403
	01041	POWER STEERING	100K0403
BRAKE	01042	BRAKE	100K0403
	01043	BRAKE PEDAL	100K0403
	01044	HAND BRAKE	100K0403
ELECTRICAL SYSTEM	01045	ELECTRICAL	100K0403
	01046	BATTERY	100K0403
	01047	MAIN SWITCH	100K0403
	01048	PANEL BOARD	100K0403
	01049	LAMP	100K0403
	01050	WIRE HARNESS	100K0403
TRANSMISSION	01051	PTO SHAFT	100K0403
SPEED CHANGE LEVER	01052	SHIFT FORK	100K0403
	01053	POSITION OPERATE	100K0403

Item	Part No.	Description	Book
HYDRAULIC SYSTEM	01054	TOP LINK	100K0403
	01055	CYLINDER	100K0403
	01056	OIL PUMP	100K0403
	01057	CONTROL VALVE [A][NZ]	100K0403
	01060	OIL PUMP CYLINDER LINER	100K0403
	01061	FILTER CASE	100K0403
	01062	OIL PUMP ARM SHAFT	100K0403
HOOD(BONNET)/ROPS	01063	BONNET 1	100K0403
	01064	BONNET 2	100K0403
	01065	BELT COVER	100K0403
	01066	SEAT	100K0403
	01067	FENDER	100K0403
HITCH/DRAWBAR	01068	TOWING DRAWBAR	100K0403
LABELS	01069	NAME PLATE	100K0403
SPEED CHANGE LEVER	01074	CREEP SHAFT	100K0403
CLUTCH	01075	DRIVE CASE	100K0403
	01076	PROPELLER SHAFT	100K0403
FRONT AXLE/FRONT WHEEL/CHASSIS	01077	DIFF CASE 1	100K0403
	01078	DIFF CASE 2	100K0403
	01079	FRONT AXLE SUPPORT	100K0403
	01080	FRONT WHEEL CASE	100K0403
	01081	FRONT WHEEL CASE	100K0403
STEERING	01082	KNUCKLE ARM	100K0403
FRONT AXLE/FRONT WHEEL/CHASSIS	01083	DIFF LOCK PEDAL	100K0403
STEERING	01091	BOOSTER [SECTION PARTS]	100K0403
HYDRAULIC SYSTEM	01092	3-POINT LINK	100K0403
ELECTRICAL SYSTEM	01093	WORK LAMP [A][NZ]	100K0403
ACCESSORIES	01096	ACCESSORY AND SERVICE PARTS	100K0403

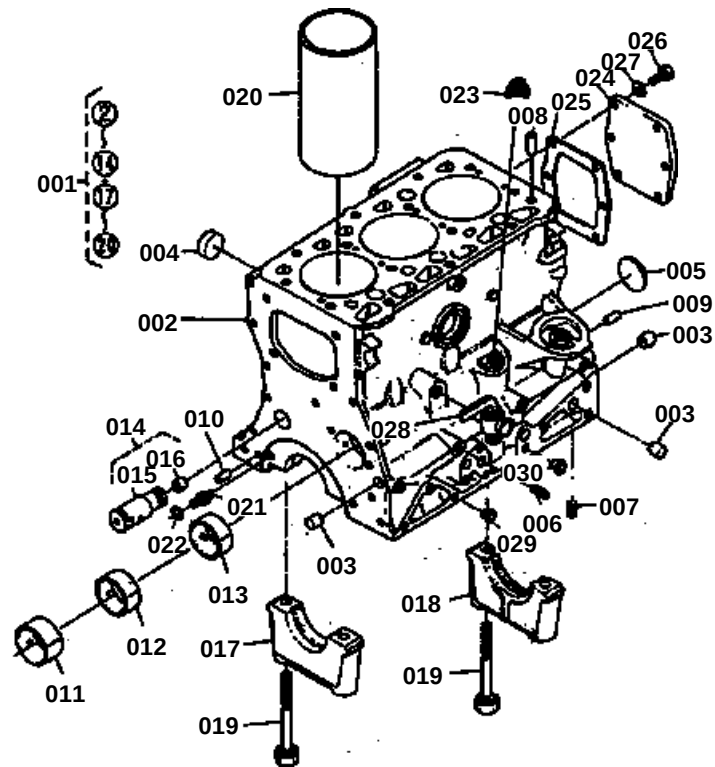




CRANKCASE 1

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
001	15351-01010	ASSY CRANKCASE	1				80	176
002	99999-99999	BLANK	0			ORDER BY REF.No.001	0	0
003	15451-96860	PLUG BLIND	5				0.005	0.011
004	15221-03490	CAP SEALING	3				0.02	0.044
005	06311-75060	PLUG EXPANSION	1				0.046	0.1012
006	15451-96020	PLUG	4				0.006	0.0132
007	15451-96030	PLUG	1				0.015	0.033
008	15451-94930	PIN PIPE	1				0.005	0.011
009	05012-00812	PIN STRAIGHT	2				0.006	0.0132
010	05012-01016	PIN STRAIGHT	2				0.01	0.022
011	15451-16410	METAL CAMSHAFT	1				0	0
012	15451-16420	METAL CAMSHAFT	1				0	0
013	15451-16430	METAL CAMSHAFT	1				0	0
014	15451-24050	ASSY SHAFT IDLE GEAR	1				0.42	0.924
015	99999-99999	SHAFT IDLE GEAR	1			ORDER BY REF.No.014	0	0
016	15451-96850	PLUG BLIND	1				0.002	0.0044
017	99999-99999	BLANK	0			ORDER BY REF.No.001	0	0
018	99999-99999	BLANK	0			ORDER BY REF.No.001	0	0
019	15451-04560	BOLT BEARING CASE	8				0.185	0.407
020	15451-02310	LINER CYLINDER	3				1.2	2.64
021	15451-04250	PIPE JOINT	1				0.01	0.022
022	15451-96760	O RING 2	1				0.001	0.0022
023	15451-32290	PIPE JOINT	1				0.061	0.1342
024	15451-73910	COVER WATER	1				0.6	1.32
025	15451-73920	GASKET WATER COVER	1				0	0
026	01053-50818	BOLT	6				0.011	0.0242
027	04512-50080	WASHER SPRING	6				0	0
028	14412-73110	COCK DRAIN	1				0.09	0.198
029	34150-27580	PLUG	6				0.001	0.0022
030	32210-27580	PLUG BLIND	6				0.001	0.0022

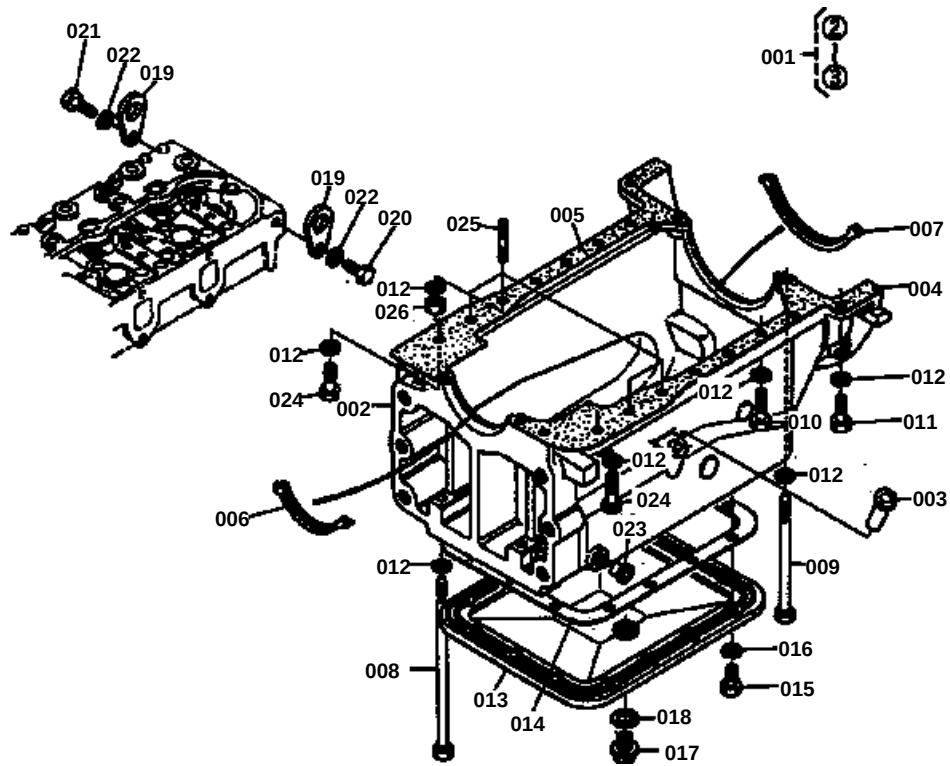




CRANKCASE 2

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
001	15351-01500	ASSY OIL PAN	1			ORDER BY REF.No.001	48	105.6
002	99999-99999	BLANK	0				0	0
003	15451-36420	GUIDE OIL GAUGE	1				0.03	0.066
004	15351-01620	GASKET OIL PAN	1				0.01	0.022
005	15351-01630	GASKET OIL PAN	1				0.01	0.022
006	15451-01640	GASKET OIL PAN	1				0.01	0.022
007	15451-01650	GASKET OIL PAN	1				0.015	0.033
008	15451-91010	BOLT	3				0.173	0.3806
009	15451-91020	BOLT	2				0.116	0.2552
010	01076-51048	BOLT	8				0.037	0.0814
011	01076-51038	BOLT	2				0.035	0.077
012	04512-50100	WASHER SPRING	21				0	0
013	15351-01670	COVER OIL PAN	1				2.3	5.06
014	15351-01680	GASKET	1				0.06	0.132
015	01053-50818	BOLT	14				0.011	0.0242
016	04512-50080	WASHER SPRING	14				0	0
017	15451-33750	PLUG DRAIN	1				0	0
018	15451-96670	GASKET	1				0.003	0.0066
019	15451-01750	HOOK ENGINE	2				0.085	0.187
020	01073-51022	BOLT	1				0.024	0.0528
021	01073-51030	BOLT	1				0.028	0.0616
022	04512-50100	WASHER SPRING	2				0	0
023	33300-90910	PLUG BLIND	2				0.002	0.0044
024	01076-51042	BOLT	2				0.035	0.077
025	15454-91510	STUD 3	4				0.037	0.0814
026	02076-50100	NUT	4				0.006	0.0132

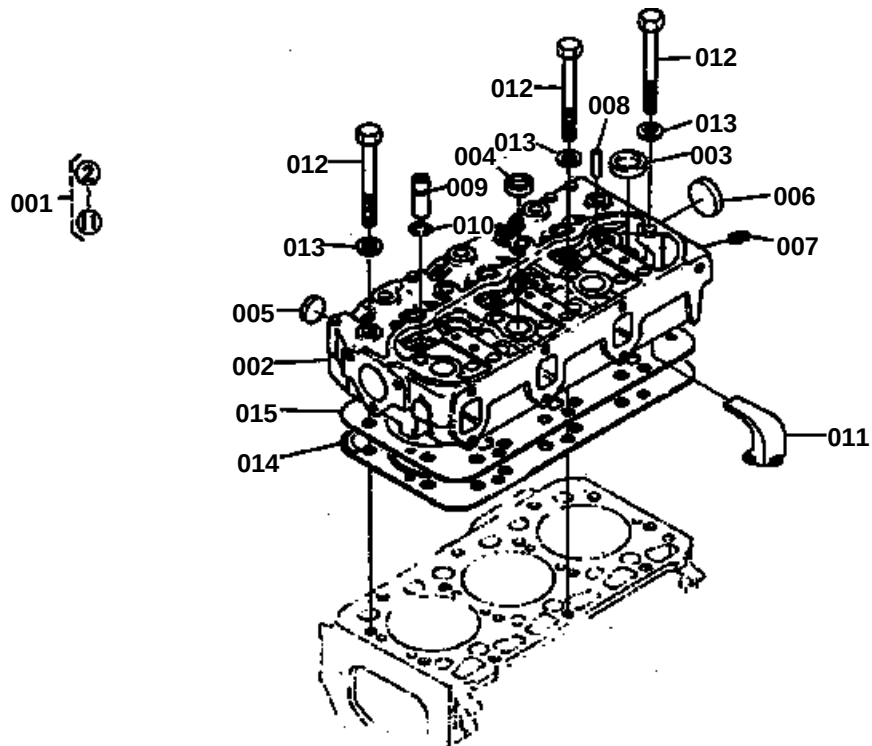




CYLINDER HEAD

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
001	15351-03040	ASSY CYLINDER HEAD	1				28	61.6
002	99999-99999	BLANK	0			ORDER BY REF.No.001	0	0
003	15241-96260	CAP SEALING	1				0.01	0.022
004	15451-96270	CAP SEALING	3				0.012	0.0264
005	15221-03380	CAP SEALING	3				0.017	0.0374
006	15221-03390	CAP SEALING	1				0.03	0.066
007	15451-96020	PLUG	1				0.006	0.0132
008	15451-94520	PIN STRAIGHT	3				0.001	0.0022
009	15451-13580	GUIDE VALVE	6				0	0
010	15451-96910	CIR-CLIP	6				0.002	0.0044
011	15451-73940	GUIDE WATER	3				0.032	0.0704
012	15451-03450	BOLT CYLINDER HEAD	14				0.119	0.2618
013	15451-03540	WASHER CYL.HEAD	14				0.003	0.0066
014	15351-03310	GASKET CYLINDER HEAD	1				0	0
015	15351-03322	SHIM CYL.HEAD GASKET	1				0	0

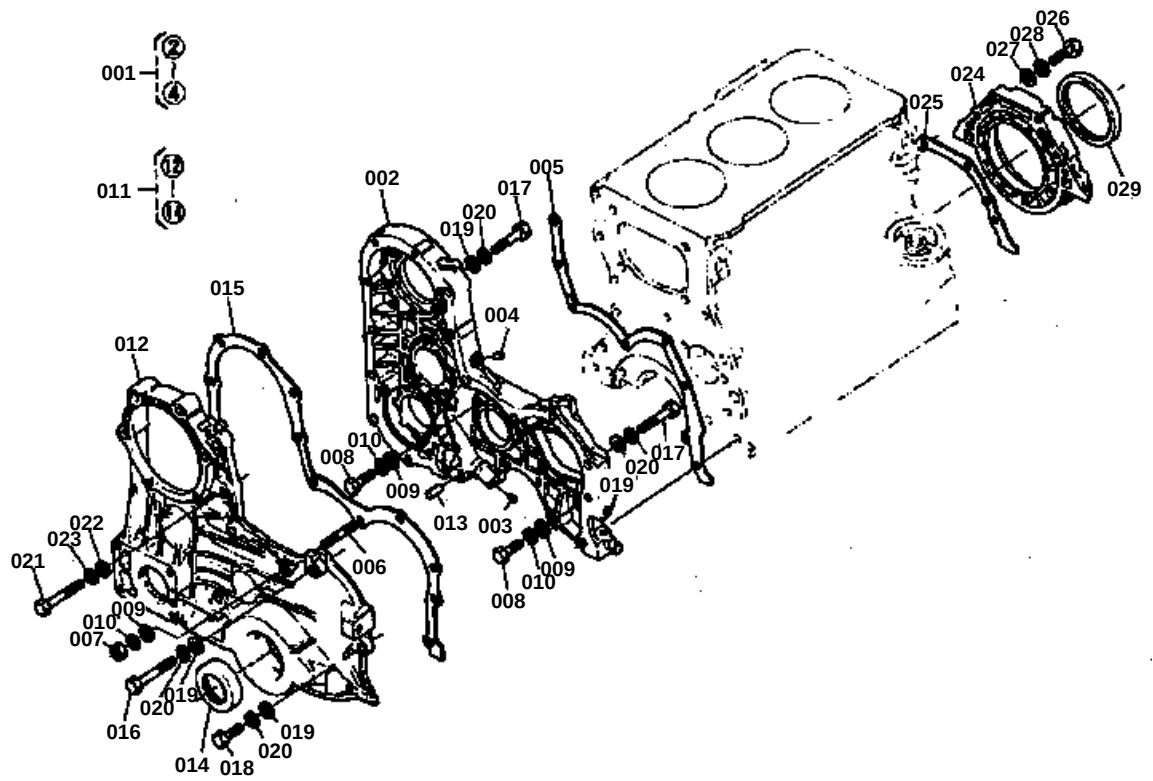





GEAR CASE

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
001	15451-04020	CASE GEAR	1				2.78	6.116
002	99999-99999	BLANK	0			ORDER BY REF.No.001	0	0
003	15451-04190	NOZZLE	1				0.002	0.0044
004	15451-96870	PLUG BLIND	1				0.001	0.0022
005	15451-04130	GASKET GEAR CASE	1				0	0
006	01513-50855	STUD	1				0.022	0.0484
007	02056-50080	NUT	1				0.005	0.011
008	01053-50825	BOLT	3				0.014	0.0308
009	04012-50080	WASHER PLAIN	4				0.001	0.0022
010	04512-50080	WASHER SPRING	4				0	0
011	15451-04030	COVER GEAR CASE	1				0	0
012	99999-99999	BLANK	0			ORDER BY REF.No.011	0	0
013	05012-01016	PIN STRAIGHT	2				0.01	0.022
014	15451-04460	SEAL OIL	1				0.033	0.0726
015	15451-04170	GASKET G/C COVER	1				0	0
016	01053-50870	BOLT	6				0.027	0.0594
017	01053-50850	BOLT	4				0.021	0.0462
018	01053-50830	BOLT	1				0.015	0.033
019	04012-50080	WASHER PLAIN	11				0.001	0.0022
020	04512-50080	WASHER SPRING	11				0	0
021	01073-51070	BOLT	1				0.05	0.11
022	04013-50100	WASHER PLAIN	1				0	0
023	04512-50100	WASHER SPRING	1				0	0
024	15351-04810	COVER BEARING CASE	1				0	0
025	15451-04820	GASKET BRG.CASE C.	1				0	0
026	01053-50832	BOLT	4				0.015	0.033
027	04012-50080	WASHER PLAIN	4				0.001	0.0022
028	04012-50080	WASHER SPRING	4				0.001	0.0022
029	15351-04460	SEAL OIL	1				0.112	0.2464

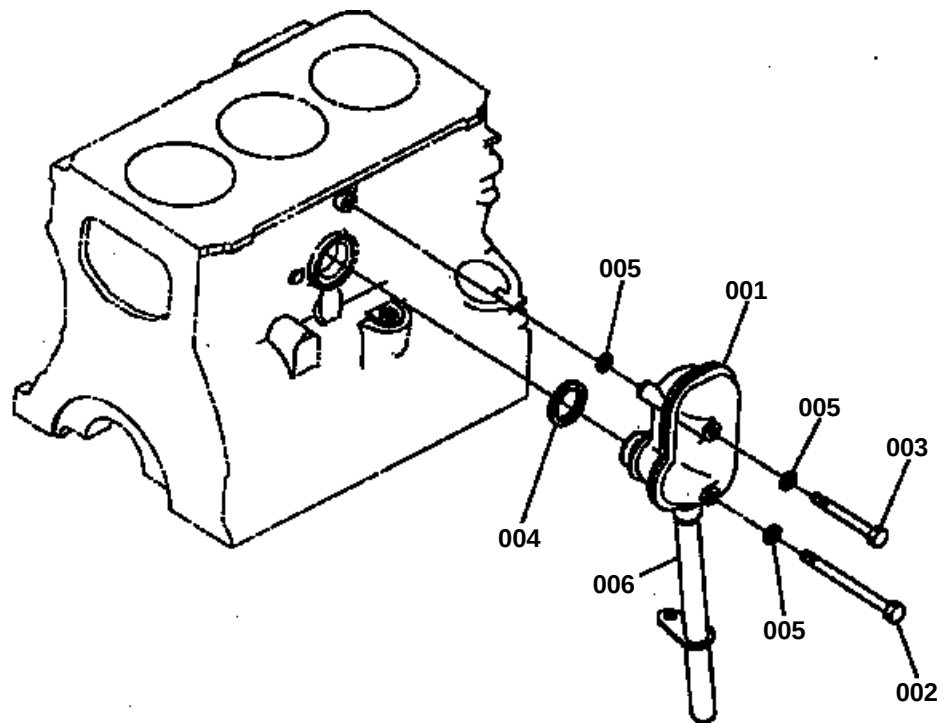

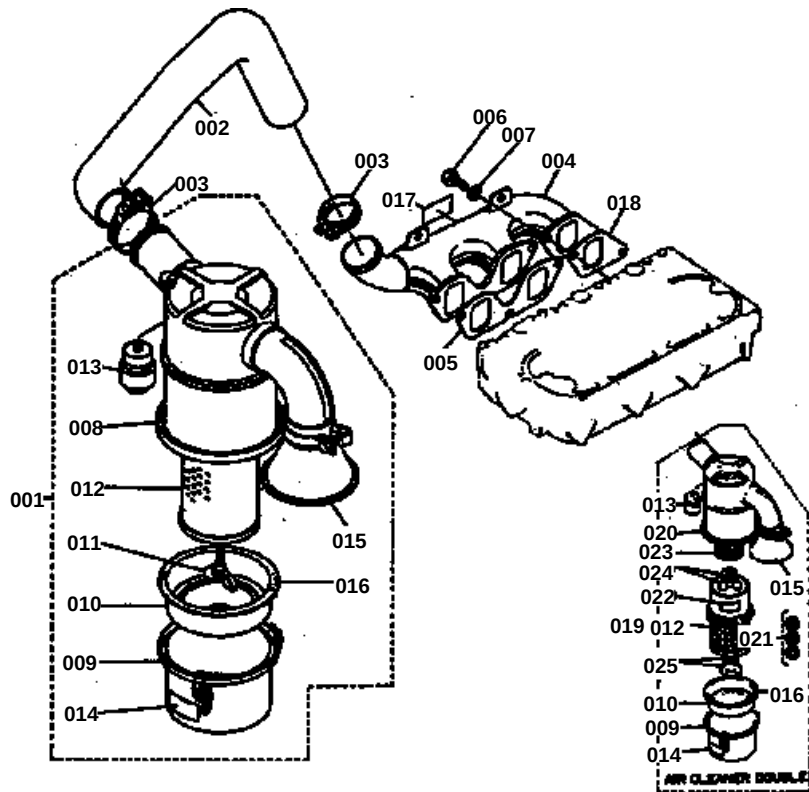


**AIR CLEANER**

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
001	15451-11013	ASSY CLEANER AIR	1				4.6	10.12
002	15351-11620	PIPE INLET	1				0.82	1.804
003	15701-11722	BAND PIPE	2				0.04	0.088
004	15351-11760	MANIFOLD INLET	1				1.96	4.312
005	15451-11820	GASKET IN-MANIFOLD	1				0.006	0.0132
006	01053-50822	BOLT	4				0.013	0.0286
007	04512-50080	WASHER SPRING	4				0	0
008	15451-11150	BODY AIR CLEANER	1				2.35	5.17
009	15451-11160	COVER AIR CLEANER	1				0.78	1.716
010	15451-11410	COVER BAFFLE	1				0.34	0.748
011	15451-91810	BOLT WING	1				0.06	0.132
012	15451-11080	ASSY ELEMENT AIR CLE	1				1	2.2
013	15451-11090	ASSY INDICATER	1				0.04	0.088
014	15221-87450	LABEL AIR CLEANER	1				0.001	0.0022
015	15451-11120	PIPE INLET	1				0.27	0.594
016	15451-11170	GASKET	1				0.05	0.11
017	15701-93470	LABEL	1				0.002	0.0044
018	15351-11820	GASKET IN-MANIFOLD	1				0.001	0.0022
019	15000-36990	AIR CLEANER DOUBLE	1				5.6	12.32
020	15000-37270	BODY AIR CLEANER	1				0	0
021	15000-37070	ASSY ELEMENT AIR CLE	1				0.98	2.156
022	15227-87480	LABEL	1				0.004	0.0088
023	15000-37080	ELEMENT AIR CLEANER	1				0.18	0.396
024	15000-37290	NUT WING 1	1				0	0
025	15000-37310	NUT WING 2	1				0	0

MUFFLER

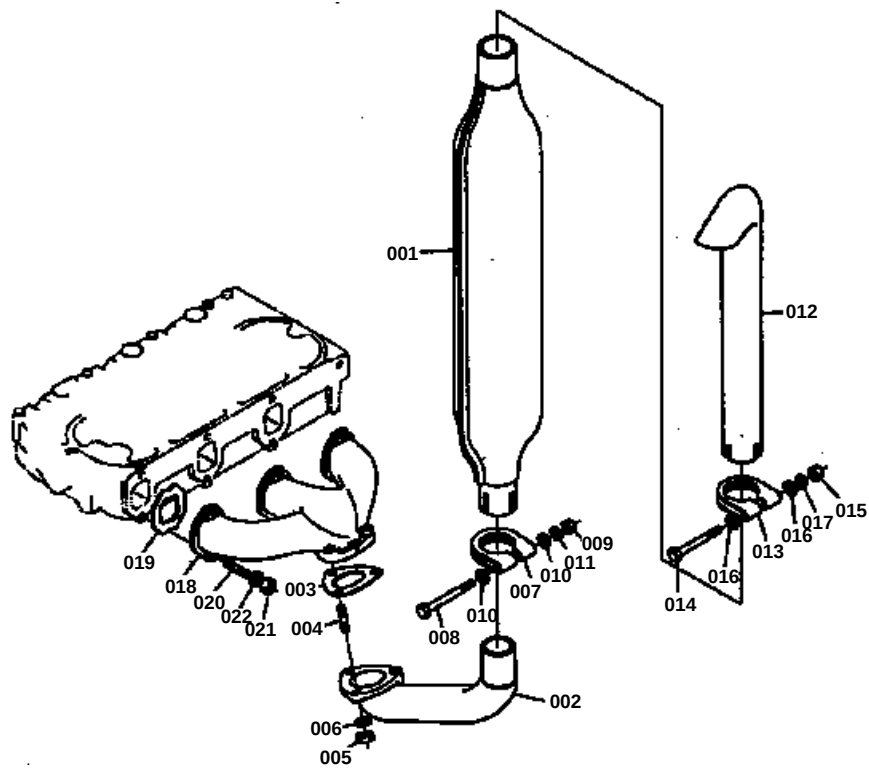

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.
You can download the most
perfect and complete manual in
the world immediately.

Our support email:
ebooklibonline@outlook.com