

# SERVICE MANUAL

**StackCruiser® 102**

**StackCruiser® 103**

**StackCruiser® 105**

**Tier 4B (final)**

**Bale Wagon**

**Part number 48190534**

1<sup>st</sup> edition English  
September 2017





## **SERVICE MANUAL**

**StackCruiser® 102**

**StackCruiser® 103**

**StackCruiser® 105**

## Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
StackCruiser® 102 Self-Propelled Bale Wagon, TIER 4B (FINAL), two-tie, three-wide [YHG651501 - ]	North America	F4HFE6138*B004
StackCruiser® 103 Self-Propelled Bale Wagon, TIER 4B (FINAL), three-tie, two-wide [YHG651501 - ]	North America	F4HFE6138*B004
StackCruiser® 105 Self-propelled Balewagon, TIER 4B (FINAL). Handles large, rectangular bales only. [YHG651501 - ]	North America	F4HFE6138*B004

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.103] Crankshaft and flywheel.....	10.2
[10.202] Air cleaners and lines .....	10.3
[10.206] Fuel filters .....	10.4
[10.216] Fuel tanks .....	10.5
[10.304] Engine lubrication system.....	10.6
[10.310] Aftercooler.....	10.7
[10.400] Engine cooling system .....	10.8
[10.414] Fan and drive .....	10.9
[10.419] Stationary air screen .....	10.10
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.11
<b>Power coupling</b> .....	<b>19</b>
[19.100] Drive shaft.....	19.1
<b>Transmission</b> .....	<b>21</b>
[21.109] Transmission cooler and lines.....	21.1
[21.114] Mechanical transmission .....	21.2
[21.130] Mechanical transmission external controls.....	21.3
<b>Front axle system</b> .....	<b>25</b>
[25.400] Non-powered front axle .....	25.1
<b>Rear axle system</b> .....	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
<b>Brakes and controls</b> .....	<b>33</b>
[33.110] Parking brake or parking lock .....	33.1

[33.120] Mechanical service brakes .....	33.2
[33.202] Hydraulic service brakes .....	33.3
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.106] Variable displacement pump .....	35.4
[35.300] Reservoir, cooler, and filters.....	35.5
[35.359] Main control valve.....	35.6
[35.820] Hydraulic driven cooling fans .....	35.7
[35.913] Bale loading hydraulic system .....	35.8
[35.914] Bale storing and handling hydraulic system.....	35.9
[35.915] Bale unloading hydraulic system.....	35.10
<b>Frames and ballasting .....</b>	<b>39</b>
[39.100] Frame .....	39.1
[39.140] Ballasts and supports .....	39.2
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
<b>Wheels .....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating.....	50.1
[50.104] Ventilation .....	50.2
[50.200] Air conditioning .....	50.3
<b>Electrical systems.....</b>	<b>55</b>

[55.000] Electrical system .....	55.1
[55.010] Fuel injection system.....	55.2
[55.012] Engine cooling system .....	55.3
[55.014] Engine intake and exhaust system.....	55.4
[55.015] Engine control system.....	55.5
[55.020] Transmission speed sensors.....	55.6
[55.024] Transmission control system.....	55.7
[55.030] Service brake electrical system .....	55.8
[55.031] Parking brake electrical system.....	55.9
[55.036] Hydraulic system control .....	55.10
[55.046] Rear axle control system.....	55.11
[55.047] Steering control system .....	55.12
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.13
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.14
[55.069] Bale loading electrical system.....	55.15
[55.070] Bale storing and handling electrical system.....	55.16
[55.071] Bale unloading electrical system.....	55.17
[55.100] Harnesses and connectors.....	55.18
[55.201] Engine starting system .....	55.19
[55.301] Alternator.....	55.20
[55.302] Battery.....	55.21
[55.404] External lighting .....	55.22
[55.405] External lighting switches and relays .....	55.23
[55.408] Warning indicators, alarms, and instruments .....	55.24
[55.512] Cab controls.....	55.25
[55.514] Cab lighting .....	55.26
[55.518] Wiper and washer system.....	55.27
[55.519] Cab brake controls .....	55.28

[55.525] Cab engine controls .....	55.29
[55.640] Electronic modules .....	55.30
[55.785] Precision farming system .....	55.31
[55.988] Selective Catalytic Reduction (SCR) electrical system .....	55.32
[55.DTC] FAULT CODES .....	55.33
<b>Bale wagons .....</b>	<b>69</b>
[69.100] Bale loading .....	69.1
[69.200] Bale storing and handling .....	69.2
[69.300] Bale unloading .....	69.3
[69.400] Bale trip assembly .....	69.4
[69.500] Bale stabilizer and tine arch .....	69.5
[69.600] Bale return shaft assembly .....	69.6
<b>Lubrication system .....</b>	<b>71</b>
[71.460] Grease lubrication system .....	71.1
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.105] Machine shields and guards .....	90.1
[90.116] Fenders and guards .....	90.2
[90.118] Protections and footboards .....	90.3
[90.124] Pneumatically-adjusted operator seat .....	90.4
[90.150] Cab .....	90.5
[90.151] Cab interior .....	90.6
[90.154] Cab doors and hatches .....	90.7
[90.160] Cab interior trim and panels .....	90.8

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)