

SERVICE MANUAL

T5.90 / T5.100 / T5.110 / T5.120

Tier 4B (final)

Tractor

PIN HLRT5120AJLE00620 and above

Part number 51543579

1st edition English
November 2018



Link Product / Engine

Product	Market Product	Engine
T5.100 Without cab, with Dual Command™ transmission [HLRT5100JJLE03967 -]	North America	F5GFL413H*C005
T5.100 With cab, with Dual Command™ transmission [HLRT5100CJLE03039 -]	North America	F5GFL413H*C005
T5.110 Without cab, with Dual Command™ transmission [HLRT5110CJLE04139 -]	North America	F5GFL413G*C005
T5.110 With cab, with Dual Command™ transmission [HLRT5110CJLE04173 -]	North America	F5GFL413G*C005
T5.120 Without cab, with Dual Command™ transmission [HLRT5120EJLE00119 -]	North America	F5GFL413F*C010
T5.120 With cab, with Dual Command™ transmission [HLRT5120AJLE00620 -]	North America	F5GFL413F*C010
T5.90 Without cab, with Dual Command™ transmission [HLRT5090PJLE03963 -]	North America	F5GFL413J*C005
T5.90 With cab, with Dual Command™ transmission [HLRT5090AJLE03730 -]	North America	F5GFL413J*C005

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.206] Fuel filters	10.3
[10.202] Air cleaners and lines	10.4
[10.254] Intake and exhaust manifolds and muffler	10.5
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.6
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.7
[10.400] Engine cooling system	10.8
[10.414] Fan and drive	10.9
[10.310] Aftercooler.....	10.10
[10.304] Engine lubrication system.....	10.11
Clutch	18
[18.100] Clutch mechanical release control	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components	18.3
[18.112] Slip clutch or flywheel damper	18.4
Transmission	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.100] Mechanical transmission hydraulic components	21.3
[21.110] Master clutch housing	21.4
[21.134] Power shuttle transmission external controls	21.5
[21.104] Power shuttle transmission hydraulic components	21.6
[21.154] Power shuttle transmission internal components	21.7
[21.160] Creeper	21.8

[21.162] Reverser	21.9
[21.168] Hi-Lo unit	21.10
[21.109] Transmission cooler and lines.....	21.11
[21.118] Transmission/Rear drive	21.12
[21.148] Transmission/Rear drive internal components	21.13
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.400] Non-powered front axle	25.4
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control	31.1
[31.104] Rear electro-hydraulic control.....	31.2
[31.110] One-speed rear Power Take-Off (PTO)	31.3
[31.114] Two-speed rear Power Take-Off (PTO)	31.4
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
[33.224] Trailer brake pneumatic control	33.3
Hydraulic systems.....	35

[35.304] Combination pump units	35.1
[35.204] Remote control valves	35.2
[35.100] Main lift system.....	35.3
[35.114] Three-point hitch control valve	35.4
[35.116] Three-point hitch cylinder	35.5
Hitches, drawbars, and implement couplings.....	37
[37.100] Drawbars and towing hitches	37.1
[37.108] Rear three-point hitch external controls.....	37.2
[37.110] Rear three-point hitch	37.3
[37.120] Rear three-point hitch linkage.....	37.4
Steering.....	41
[41.101] Steering control	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.216] Cylinders	41.4
Wheels.....	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels	44.2
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning.....	50.3
Electrical systems	55
[55.100] Harnesses and connectors.....	55.1
[55.525] Cab engine controls.....	55.2
[55.015] Engine control system.....	55.3
[55.201] Engine starting system	55.4
[55.301] Alternator	55.5

[55.302] Battery.....	55.6
[55.202] Cold start aid	55.7
[55.011] Fuel tank system	55.8
[55.010] Fuel injection system.....	55.9
[55.014] Engine intake and exhaust system.....	55.10
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.11
[55.640] Electronic modules.....	55.12
[55.513] Cab transmission controls.....	55.13
[55.024] Transmission control system.....	55.14
[55.020] Transmission speed sensors.....	55.15
[55.022] Transmission temperature sensors	55.16
[55.048] Rear Power Take-Off (PTO) control system	55.17
[55.031] Parking brake electrical system	55.18
[55.512] Cab controls.....	55.19
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.20
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.21
[55.523] Cab hitch controls	55.22
[55.130] Rear three-point hitch electronic control system	55.23
[55.518] Wiper and washer system.....	55.24
[55.404] External lighting	55.25
[55.405] External lighting switches and relays	55.26
[55.408] Warning indicators, alarms, and instruments	55.27
[55.035] Remote control valve electric control	55.28
[55.DTC] FAULT CODES.....	55.29
Front loader and bucket.....	82
[82.100] Arm.....	82.1
Accessories	88
[88.100] Accessories	88.1
Platform, cab, bodywork, and decals	90

[90.150] Cab.....	90.1
[90.151] Cab interior.....	90.2
[90.160] Cab interior trim and panels.....	90.3
[90.154] Cab doors and hatches	90.4
[90.156] Cab windshield and windows	90.5
[90.110] Operator platform less cab	90.6
[90.118] Protections and footboards.....	90.7
[90.120] Mechanically-adjusted operator seat.....	90.8
[90.124] Pneumatically-adjusted operator seat.....	90.9
[90.100] Engine hood and panels	90.10
[90.102] Engine shields, hood latches, and trims	90.11
[90.116] Fenders and guards.....	90.12

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com