

# SERVICE MANUAL

**T8.270 / T8.295 / T8.325**

**T8.355 / T8.385**

Tractor

Part number 84417609

English

March 2014



## Link Product / Engine

Product	Market Product	Engine
null 18x6, with cabin [HCCZ8270JDCN13409 - ]	Latin America	F2CFA613P*A010
null 18x6, with cabin [ZBCN40989 - ]	Latin America	F2CFA613P*A010
null 18x6, with cabin [HCCZ8295JDCN13409 - ]	Latin America	F2CFA613N*A010
null 18x6, with cabin [ZBCN40989 - ]	Latin America	F2CFA613N*A010
null 18x6, with cabin [HCCZ8325JDCN13409 - ]	Latin America	F2CFA613J*A010
null 18x6, with cabin [ZBCN40989 - ]	Latin America	F2CFA613J*A010
null 18x6, with cabin [HCCZ8355JDCN13409 - ]	Latin America	F2CFA613F*A010
null 18x6, with cabin [ZBCN40989 - ]	Latin America	F2CFA613F*A010
null 18x6, with cabin [HCCZ8385JDCN13409 - ]	Latin America	F2CFA613C*A010
null 18x6, with cabin [ZBCN40989 - ]	Latin America	F2CFA613C*A010

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.101] Cylinder heads .....	10.2
[10.114] Pump drives .....	10.3
[10.202] Air cleaners and lines .....	10.4
[10.216] Fuel tanks .....	10.5
[10.254] Intake and exhaust manifolds and muffler .....	10.6
[10.310] Aftercooler.....	10.7
[10.400] Engine cooling system .....	10.8
[10.414] Fan and drive .....	10.9
<b>Power coupling</b> .....	<b>19</b>
[19.100] Drive shaft.....	19.1
<b>Transmission</b> .....	<b>21</b>
[21.105] Powershift transmission lubrication system .....	21.1
[21.113] Powershift transmission .....	21.2
[21.135] Powershift transmission external controls.....	21.3
[21.155] Powershift transmission internal components.....	21.4
[21.200] Dropbox .....	21.5
<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.202] Electro-hydraulic control .....	23.1
[23.314] Drive shaft.....	23.2
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3

<b>Rear axle system</b> .....	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives .....	27.3
<b>Power Take-Off (PTO)</b> .....	<b>31</b>
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO) .....	31.2
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.3
[31.146] Front Power Take-Off (PTO) .....	31.4
<b>Brakes and controls</b> .....	<b>33</b>
[33.110] Parking brake or parking lock .....	33.1
[33.202] Hydraulic service brakes .....	33.2
<b>Hydraulic systems</b> .....	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.106] Variable displacement pump .....	35.3
[35.114] Three-point hitch control valve .....	35.4
[35.204] Remote control valves .....	35.5
[35.300] Reservoir, cooler, and filters.....	35.6
[35.304] Combination pump units .....	35.7
<b>Pneumatic system</b> .....	<b>36</b>
[36.100] Pneumatic system.....	36.1
<b>Hitches, drawbars, and implement couplings</b> .....	<b>37</b>
[37.110] Rear three-point hitch .....	37.1
<b>Steering</b> .....	<b>41</b>
[41.101] Steering control .....	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump .....	41.3

<b>Cab climate control</b> .....	<b>50</b>
[50.100] Heating .....	50.1
[50.200] Air conditioning .....	50.2
[50.300] Cab pressurizing system .....	50.3
<b>Electrical systems</b> .....	<b>55</b>
[55.012] Engine cooling system .....	55.1
[55.015] Engine control system .....	55.2
[55.024] Transmission control system .....	55.3
[55.045] Front axle control system .....	55.4
[55.046] Rear axle control system .....	55.5
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system .....	55.6
[55.100] Harnesses and connectors .....	55.7
[55.130] Rear three-point hitch electronic control system .....	55.8
[55.201] Engine starting system .....	55.9
[55.302] Battery .....	55.10
[55.640] Electronic modules .....	55.11
[55.DTC] FAULT CODES .....	55.12
<b>Platform, cab, bodywork, and decals</b> .....	<b>90</b>
[90.100] Engine hood and panels .....	90.1
[90.102] Engine shields, hood latches, and trims .....	90.2
[90.124] Pneumatically-adjusted operator seat .....	90.3
[90.150] Cab .....	90.4
[90.151] Cab interior .....	90.5
[90.160] Cab interior trim and panels .....	90.6

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)