

# **570LXT Loader/ Loader Landscaper**

## **Operators Manual**

Bur 9-25895

Reprinted



## TABLE OF CONTENTS

TO THE OWNER .....	1
AFTER DELIVERY CHECK .....	2
RIGHT, LEFT, FRONT AND REAR OF MACHINE .....	2
IDENTIFICATION NUMBERS .....	3
MACHINE COMPONENTS .....	6 through 9
SAFETY / DECALS / HAND SIGNALS .....	11
SAFETY RULES .....	11
BEFORE OPERATION .....	12
MACHINE OPERATION .....	14
PARKING THE MACHINE .....	16
BURN PREVENTION .....	16
FIRE OR EXPLOSION PREVENTION .....	17
MAINTENANCE .....	18
WHEEL AND TIRE MAINTENANCE .....	20
ROLL-OVER PROTECTION STRUCTURE .....	20
CAST DUCTILE IRON .....	21
SAFETY DECALS .....	22
HAND SIGNALS .....	29
INSTRUMENTS AND CONTROLS .....	33
MACHINE CONTROLS .....	35
LOADER CONTROLS .....	46
THREE-POINT HITCH CONTROLS .....	48
STANDARD SEAT .....	50
SUSPENSION SEAT .....	51
SEAT BELTS .....	53
CAB CONTROLS (If Equipped) .....	54
OPERATING INSTRUCTIONS .....	59
RUN-IN PERIOD OF A NEW MACHINE .....	59
ENGINE OPERATION .....	60
ENGINE STARTING AIDS .....	63
MACHINE OPERATION .....	67
TOWING A DISABLED MACHINE .....	72
OPERATING IN COLD WEATHER .....	75
OPERATING IN HOT WEATHER .....	76
LOADER OPERATION .....	77
THREE POINT HITCH OPERATION .....	83
WHEELS/TIRES .....	85

TRIM THIS EDGE

LUBRICATION / MAINTENANCE CHARTS .....	89
GENERAL SAFETY BEFORE YOU SERVICE .....	89
ENGINE HOURMETER .....	89
SUPPORT STRUT FOR LOADER LIFT ARMS .....	90
FLUIDS AND LUBRICANTS .....	91
LUBRICATION/MAINTENANCE CHART .....	92, 93
SYSTEMGARD LUBRICATION ANALYSIS PROGRAM .....	94
ENVIRONMENT .....	94
LUBRICATION/FILTERS/FLUIDS .....	95
OPENING THE ENGINE HOOD .....	95
LOADER GREASE FITTINGS .....	96
THREE POINT HITCH GREASE FITTINGS .....	98
MACHINE GREASE FITTINGS .....	99
FLUID LEVELS .....	104
ENGINE OIL RECOMMENDATIONS .....	106
ENGINE SERVICE SPECIFICATIONS .....	107
AIR FILTER SYSTEM .....	110
ENGINE COOLING SYSTEM .....	114
DIESEL FUEL SYSTEM .....	117
HYDRAULIC SYSTEM .....	121
TRANSMISSION .....	124
REAR AXLE .....	126
FRONT FOUR WHEEL DRIVE AXLE .....	129
CAB AIR FILTER .....	131
MAINTENANCE AND ADJUSTMENTS .....	133
LOADER RETURN-TO-DIG ADJUSTMENT .....	133
ETHER STARTING AID .....	134
FAN DRIVE BELT REPLACEMENT .....	135
PLASTIC AND RESIN PARTS .....	135
SPARK ARRESTER MUFFLER (IF EQUIPPED) .....	136
RIDE CONTROL ACCUMULATOR .....	137
CAB AIR CONDITIONING .....	138
ROLL-OVER PROTECTIVE STRUCTURE .....	139
FIRE EXTINGUISHER .....	144
ELECTRICAL SYSTEM .....	145
BATTERIES .....	145
LAMP REPLACEMENT .....	147
INSTRUMENT CLUSTER .....	149
FUSES .....	150

MACHINE STORAGE .....	151
REMOVAL FROM STORAGE .....	152
SPECIFICATIONS .....	153
ENGINE DATA .....	153
BOLT TORQUES .....	153
MAIN RELIEF VALVE PRESSURES .....	154
TRAVEL SPEEDS .....	154
OPERATING WEIGHTS .....	155
LOADER BUCKETS .....	155
BASIC MACHINE DIMENSIONS .....	156
LOADER OPERATING DATA AND DIMENSIONS .....	157, 158
THREE- POINT HITCH LIFT CAPACITIES .....	160
AFTER DELIVERY CHECK .....	161, 163
ALPHABETICAL INDEX .....	165

TRIM THIS EDGE

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)