

L Series Loader Backhoe

Operators Manual

9-25886

Reprinted

The CASE logo is located in the bottom right corner of the page. It features the word "CASE" in a bold, italicized, sans-serif font. A horizontal line is positioned below the letters "A" and "S".

TABLE OF CONTENTS

TO THE OWNER	1
RIGHT, LEFT, FRONT AND REAR OF MACHINE	2
IDENTIFICATION NUMBERS	3
MACHINE COMPONENTS	6 through 9
SAFETY / DECALS / HAND SIGNALS	11
SAFETY RULES	11
BEFORE OPERATION	12
MACHINE OPERATION	14
PARKING THE MACHINE	16
BURN PREVENTION	16
FIRE OR EXPLOSION PREVENTION	17
MAINTENANCE	18
WHEELS AND TIRES MAINTENANCE	19
ROLL-OVER PROTECTIVE STRUCTURE	19
CAST DUCTILE IRON	20
SAFETY DECALS	21
HAND SIGNALS	30
INSTRUMENTS AND CONTROLS	35
MACHINE CONTROLS	37
LOADER CONTROLS	49
BACKHOE CONTROLS WITH FOOT SWING	51
BACKHOE CONTROLS WITH HAND SWING	52
EXTENDAHOE CONTROL WITH FOOT SWING	53
EXTENDAHOE CONTROLS WITH HAND SWING	54
AUXILIARY ATTACHMENT CONTROL FOR BACKHOES	55
STANDARD SEAT	56
SUSPENSION SEAT	57
SEAT BELTS	59
CAB CONTROLS (If Equipped)	60
OPERATING INSTRUCTIONS	65
RUN-IN PERIOD OF A NEW MACHINE	65
ENGINE OPERATION	66
ENGINE STARTING AIDS.....	69
MACHINE OPERATION	73
TOWING A DISABLED MACHINE	78
OPERATING IN COLD WEATHER.....	81
OPERATING IN HOT WEATHER	82
LOADER OPERATION	83
BACKHOE OPERATION	89

WHEELS/TIRES	111
LUBRICATION / MAINTENANCE CHARTS	115
GENERAL SAFETY BEFORE YOU SERVICE	115
ENGINE HOURMETER	115
SUPPORT STRUT FOR LOADER LIFT ARMS	116
FLUIDS AND LUBRICANTS	117
LUBRICATION/MAINTENANCE CHART	118, 119
SYSTEMGARD LUBRICATION ANALYSIS PROGRAM	120
ENVIRONMENT	120
LUBRICATION/FILTERS/FLUIDS	121
OPENING THE ENGINE HOOD	121
LOADER GREASE FITTINGS	122
BACKHOE GREASE FITTINGS	124, 126, 128
FLUID LEVELS	133
AMBIENT AIR TEMPERATURE RANGES	135
ENGINE OIL RECOMMENDATIONS	135
ENGINE SERVICE SPECIFICATIONS	136
AIR FILTER SYSTEM	139
ENGINE COOLING SYSTEM	143
DIESEL FUEL SYSTEM	146
HYDRAULIC SYSTEM	150
TRANSMISSION	153
REAR AXLE	155
FRONT FOUR WHEEL DRIVE AXLE	158
CAB AIR FILTER	160
MAINTENANCE AND ADJUSTMENTS	163
LOADER RETURN-TO-DIG ADJUSTMENT	163
ETHER STARTING AID	164
FAN DRIVE BELT REPLACEMENT	165
PLASTIC AND RESIN PARTS	165
SPARK ARRESTER MUFFLER (IF EQUIPPED)	166
RIDE CONTROL ACCUMULATOR	167
CAB AIR CONDITIONING	168
ROLL-OVER PROTECTIVE STRUCTURE	169
FIRE EXTINGUISHER	173
ELECTRICAL SYSTEM	175
BATTERIES	175
LAMP REPLACEMENT	177
INSTRUMENT CLUSTER	179
FUSES	180

MACHINE STORAGE	181
REMOVAL FROM STORAGE	182
SPECIFICATIONS	183
TABLE OF CONTENTS	183
580L SPECIFICATIONS	183
ENGINE DATA - 580L	183
BOLT TORQUES	183
MAIN RELIEF VALVE PRESSURES - 580L	184
TRAVEL SPEEDS - 580L	184
OPERATING WEIGHTS - 580L	184
LOADER BUCKETS - 580L	185
BACKHOE BUCKETS - 580L	185
BASIC MACHINE DIMENSIONS - 580L	186
LOADER OPERATING DATA AND DIMENSIONS - 580L	187, 188
BACKHOE OPERATING DATA AND DIMENSIONS - 580L	190
BACKHOE LIFT CAPACITY - 580L	192
BACKHOE LIFT CAPACITY - 580L (2WD)	194
EXTENDAHOE OPERATING DATA AND DIMENSIONS - 580L	196
EXTENDAHOE LIFT CAPACITY - RETRACTED 580L	198
EXTENDAHOE LIFT CAPACITY - EXTENDED 580L	200
EXTENDAHOE LIFT CAPACITY - 580L (2WD)	202, 204
SPECIFICATIONS - 580 SUPER L	207
ENGINE DATA - 580 SUPER L	207
BOLT TORQUES	207
MAIN RELIEF VALVE PRESSURES - 580 SUPER L	207
TRAVEL SPEEDS - 580 SUPER L	208
OPERATING WEIGHTS - 580 SUPER L	208
LOADER BUCKETS - 580 SUPER L	209
BACKHOE BUCKETS - 580 SUPER L	209
BASIC MACHINE DIMENSIONS - 580 SUPER L	210
LOADER OPERATING DATA AND DIMENSIONS - 580 SUPER L	211, 212
BACKHOE OPERATING DATA AND DIMENSIONS - 580 SUPER L	214
BACKHOE LIFT CAPACITY - 580 SUPER L	216
BACKHOE LIFT CAPACITY - 580 SUPER L (2WD)	218
EXTENDAHOE OPERATING DATA AND DIMENSIONS - 580 SUPER L	220
EXTENDAHOE LIFT CAPACITY - RETRACTED 580 SUPER L	222
EXTENDAHOE LIFT CAPACITY - EXTENDED 580 SUPER L	224
EXTENDAHOE LIFT CAPACITY - 580 SUPER L (2WD)	226, 228
SPECIFICATIONS - 590 SUPER L	231
ENGINE DATA - 590 SUPER L	231
BOLT TORQUES	231
MAIN RELIEF VALVE PRESSURES - 590 SUPER L	231
TRAVEL SPEEDS - 590 SUPER L	232
OPERATING WEIGHTS - 590 SUPER L	232
LOADER BUCKETS - 590 SUPER L	233
BACKHOE BUCKETS - 590 SUPER L	233

BASIC MACHINE DIMENSIONS - 590 SUPER L	234
LOADER OPERATING DATA AND DIMENSIONS - 590 SUPER L	235, 236
BACKHOE OPERATING DATA AND DIMENSIONS - 590 SUPER L	238
BACKHOE LIFT CAPACITY - 590 SUPER L	240, 242
EXTENDAHOE OPERATING DATA AND DIMENSIONS - 590 SUPER L	244
EXTENDAHOE LIFT CAPACITY - RETRACTED 590 SUPER L	246
EXTENDAHOE LIFT CAPACITY - EXTENDED 590 SUPER L	248
EXTENDAHOE LIFT CAPACITY - 590 SUPER L	250, 252
AFTER DELIVERY CHECK	255, 257
ALPHABETICAL INDEX	259

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com