

CELTIS 426
CELTIS 436
CELTIS 446
CELTIS 456

Use and Maintenance

Thank you for choosing a CLAAS tractor.

In this guide you will find the instructions for use and maintenance that it is indispensable to know to obtain the best service from your tractor.

This document may not be considered as contractual. CLAAS has a policy of continuous technical improvement to all their products, and therefore reserve the right to change without notice and at any time the details contained in this booklet.

If you are still unsure about any points, the technicians of the CLAAS network will be pleased to give you any additional information you may require.

The description of the different models contained in this manual was established from technical characteristics known at the time of writing the document. The manual contains all existing equipment (standard or optional) for these models, and their presence in the tractor depends on the version and options chosen and on the country of commercialisation.

IMPORTANT: See chapter "M". The services during the guarantee period are mandatory without which the benefit of the contractual guarantee will be lost.

Failure to observe the instructions for use and maintenance as described in this manual definitively excludes any possibility of recourse to the CLAAS guarantee system.

For your safety

Before using the tractor for the first time, read the user's manual and observe the general safety instructions!



WARNING TRIANGLE

In this user's manual, this sign indicates all the paragraphs concerning safety aspects. Pass on these safety instructions to all of the other users.

The instruction and warning plates affixed to the tractor give important information about possible risks of use. Respect for these instructions is a guarantee of your safety!

Appropriate use

This tractor has been designed to be used exclusively for normal agricultural work (appropriate use).

Any use other than that defined above will be considered as inappropriate and will release the manufacturer from any liability in the event of damage or injury; the user alone will bear the risks resulting from such a misuse.

Appropriate use also supposes the observance of the rules of use, maintenance and repair stipulated by the manufacturer.

The tractor must be used, maintained and repaired only by persons with a thorough knowledge of the vehicle and aware of the possible risks.

Special accident prevention instructions must be observed as well as general rules concerning technical safety, occupational medicine and the highway code.





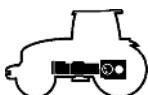


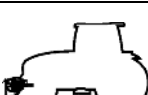




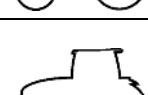
The manufacturer declines all responsibility for any damage resulting from any modification made to the tractor without their approval.





Model		Type	
		30km/h	40km/h
CELTIS 426 Roll bar	4 wheel drive	M 3612 AB	M 3612 AA
	2 wheel drive	M 3611 AB	-
CELTIS 426 Cabin	4 wheel drive	M 3612 DB	M 3612 DA
	2 wheel drive	M 3611 DB	-
CELTIS 436 Roll bar	4 wheel drive	M 3622 AB	M 3622 AA
	2 wheel drive	M 3621 AB	-
CELTIS 436 Cabin	4 wheel drive	M 3622 DB	M 3622 DA
	2 wheel drive	M 3621 DB	-
CELTIS 446 Roll bar	4 wheel drive	M 3632 AB	M 3632 AA
	2 wheel drive	M 3631 AB	-
CELTIS 446 Cabin	4 wheel drive	M 3632 DB	M 3632 DA
	2 wheel drive	M 3631 DB	-
CELTIS 456 Roll bar	4 wheel drive	M 3642 AB	M 3642 AA
	2 wheel drive	-	-
CELTIS 456 Cabin	4 wheel drive	M 3642 DB	M 3642 DA
	2 wheel drive	-	-

CHAPTER SYMBOLS

REF	CHAPTERS	SYMBOLS
A	IDENTIFICATION - APPROVAL	<div style="border: 1px solid black; padding: 2px; width: fit-content;"> HOMOLOGATION ACCORDEE AU TYPE/VERSION R <input type="text"/> ANNEE <input type="text"/> PAR LE MINISTERE DE L'AGRICULTURE SOUS LE NUMERO <input type="text"/> </div>
	SAFETY	
B	CAB - ROLL BAR	
C	ELECTRICITY	
D	ENGINE	
E	TRANSMISSION	
F	FRONT AXLE	
G	HYDRAULICS - REAR LIFT AND TOW LINKAGE	
H	FRONT POWER TAKE-OFF - FRONT LIFT AND FRONT TOW LINKAGE	
I	ON BOARD COMPUTER	
J	WHEELS AND TYRES	
K	DIMENSIONS, WEIGHTS, CAPACITIES AND BALLAST	
L	MAINTENANCE	
M	OPERATIONS THAT ARE MANDATORY UNDER THE GUARANTEE	

Notes

CONTENTS

A - IDENTIFICATION - CERTIFICATION - SAFETY

IDENTIFICATION	A.2
CERTIFICATION	A.2
SAFETY	A.3

B - CAB

CONTROLS AND DRIVING POSITION	B.2
INSTRUMENTS AND CONTROLS (DASHBOARD)	B.3
INDICATOR AND CONTROL LIGHTS	B.4
ALARMS	B.5
DIGITAL DISPLAYS	B.7
DRIVER'S SEAT	B.8
CONTROLS AND ACCESSORIES IN THE CAB ROOF	B.9
CONTROLS AND ACCESSORIES	B.9
RECOMMENDATION	B.14

B - ROLL BAR

INSTRUMENTS AND CONTROLS (DASHBOARD)	B.16
DRIVER'S SEAT	B.17

C - ELECTRICITY (CAB)

CHARACTERISTICS	C.2
-----------------------	-----

C - ELECTRICITY (ROLL BAR)

D - ENGINE

CHARACTERISTICS	D.2
OPERATIONS TO BE CARRIED OUT BEFORE MOVING OFF	D.3
STARTING THE ENGINE	D.4
ENGINE STARTING HELP WHEN COLD	D.5
STOPPING THE ENGINE	D.5
OPERATION	D.6
BLEEDING AIR FROM THE INJECTION CIRCUIT	D.8

E - TRANSMISSION

GEARBOX WITH TWINSHIFT AND REVERSHIFT	E.2
GEARBOX WITH INVERTER AND MECHANICAL DOUBLER	E.3
GEARBOX WITH HYDRAULIC DOUBLER	E.4
GEARBOX WITHOUT DOUBLER	E.5
TABLES OF FORWARD SPEEDS	E.6
CLUTCH	E.6
GEAR BOX	E.7
SELECTION OF RANGES	E.9
SELECTION OF THE CRAWLING SPEED	E.9
DIFFERENTIAL	E.9

BRAKING.....	E.10
POWER TAKE-OFF.....	E.11
PROCEDURE FOR SETTING OFF AGAIN	E.12
HITCHING-UP AND TOWING OF POWER TAKE-OFF IMPLEMENTS.....	E.13
STATIONARY WORKING	E.14
TOWING THE TRACTOR.....	E.14
F - FRONT LIVE AXLE - FRONT AXLE	
CHARACTERISTICS	F.2
FRONT AXLE ENGAGEMENT.....	F.3
G - HYDRAULICS - REAR LIFT AND TOW LINKAGE	
CHARACTERISTICS	G.2
REAR LIFT	G.3
LIFTING (ELECTRONIC TRACTO CONTROL) TCE 9.....	G.5
AUTOMATIC TOW LINKAGES.....	G.12
INSTRUCTIONS FOR ADJUSTING THE REAR TOW LINKAGE	G.14
AUXILIARY SPOOL VALVES	G.18
H - FRONT POWER TAKEOFF, LIFTING AND FRONT COUPLING	
CHARACTERISTICS	H.2
I - ON BOARD COMPUTER	
ON-BOARD COMPUTER (INFOTRAC)	I.2
OPERATION	I.4
INFOTRAC CALIBRATION PROCEDURE "OPERATING SPEED"	I.8
J - WHEELS AND TYRES	
GENERAL	J.2
TYRE PRESSURES.....	J.2
TYRES AND TRACKS.....	J.4
SETTING THE TRACK	J.9
STEERING STOPS.....	J.10
REAR AXLE.....	J.11
K - DIMENSIONS, WEIGHTS, CAPACITIES AND BALLAST	
DIMENSIONS.....	K.2
DIMENSIONS ROLL BAR VERSION.....	K.3
WEIGHT	K.4
BALLAST.....	K.4
CAPACITIES.....	K.5
L - MAINTENANCE	
GENERAL	L.2
M - OPERATIONS THAT ARE MANDATORY UNDER THE GUARANTEE	
OPERATIONS MANDATORY UNDER THE TERMS OF THE CONTRACTUAL GUARANTEE.....	M.2

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com