

**omal116326 - 6405 Tractors ( -265202)**  
**Identification Views**

---

**Identification Views**



LX1019717

LX1019717-UN: Identification Views

## omal116326 - 6405 Tractors ( -265202) Recognize Safety Information

---

### Recognize Safety Information



T81389-UN: Safety-Alert Symbol

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

## omal116326 - 6405 Tractors ( -265202) Understand Signal Words

---

### Understand Signal Words



TS187-19: Signal Words

A signal word-DANGER, WARNING, or CAUTION-is used with the safety-alert symbol. DANGER identifies the most serious hazards.


DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

# omal116326 - 6405 Tractors ( -265202)

## Follow Safety Instructions

---

### Follow Safety Instructions

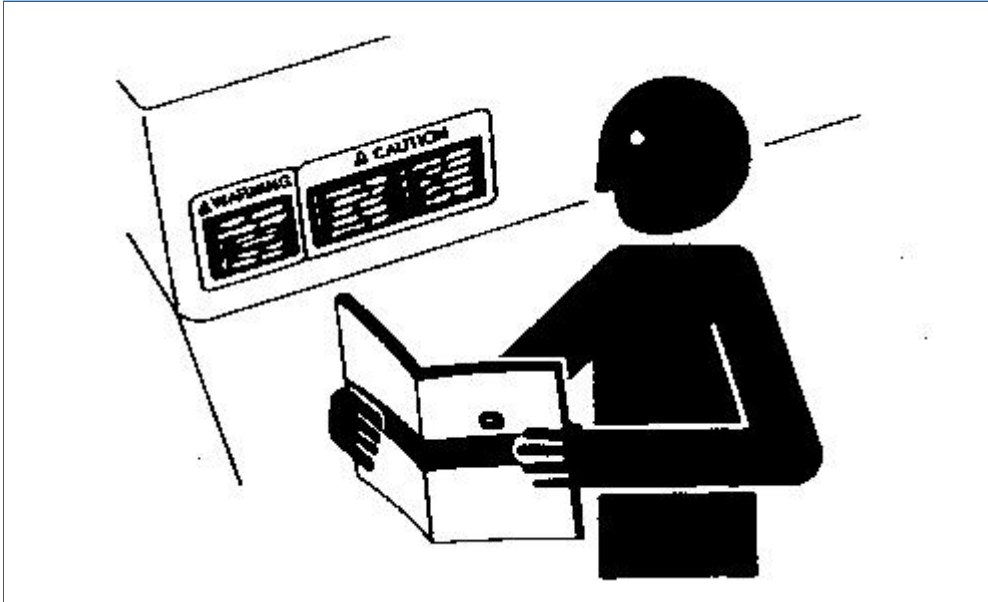

#### TS201-UN: Safety Messages

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

## omal116326 - 6405 Tractors ( -265202) Stay Clear of Moving Tractor

---

### Stay Clear of Moving Tractor



TS213-UN: Moving Tractor Safety

Always place transmission in PARK before dismounting. Leaving transmission in gear with engine stopped will NOT prevent the tractor from moving.

Be sure everyone is clear of tractor and attached equipment before starting engine. Some movement may occur as engine starts.


Never try to get on or off a moving tractor.

When tractor is left unattended, place in PARK, lower implements to the ground, stop the engine, and remove the key.

## omal116326 - 6405 Tractors ( -265202) Prevent Machine Runaway

---

### Prevent Machine Runaway

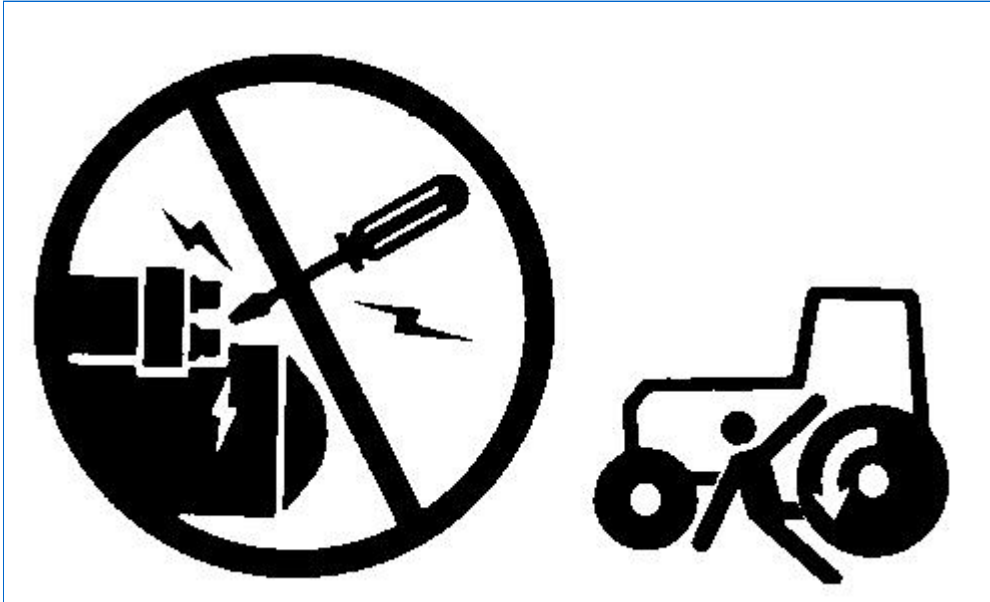

TS177-UN: Machinery Runaway

Avoid possible injury or death from machinery runaway.


Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

## omal116326 - 6405 Tractors ( -265202) Use ROPS and Seat Belt Properly

---

### Use ROPS and Seat Belt Properly

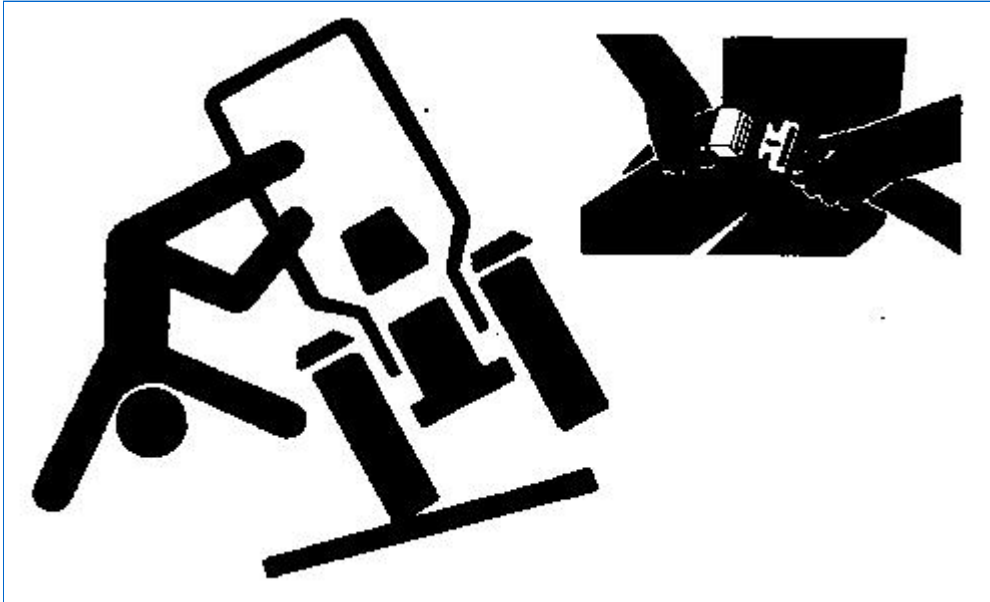

TS205-UN: Use ROPS and Seat Belt Properly

If this tractor is equipped with a foldable ROPS, keep the ROPS in the fully extended and locked position. If the tractor is ever operated with ROPS folded (e.g., to enter a low building), drive with extreme caution. Do NOT use seat belt with the ROPS folded.

Return the ROPS to the raised, fully extended and locked position as soon as the tractor is operated under normal conditions.

ALWAYS fasten your seat belt when the ROPS is fully extended and locked or the tractor is equipped with a 4-post roll guard or cab.

## omal116326 - 6405 Tractors ( -265202) Operating the Tractor Safely

---

### Operating the Tractor Safely



TS213-UN: Falling From Machine



TS276-UN: Avoid Entanglement

Careless use of the tractor can result in unnecessary accidents. Be alert to hazards of tractor operation. Understand causes of accidents and take every precaution to avoid them. Most common accidents are caused from:

- Tractor roll-over
- Improper starting procedures
- Crushing and pinching during hitching
- Collisions with other motor vehicles
- Entanglement in PTO shafts



- Falling from tractor

Avoid accidents by taking the following precautions:

Put transmission in PARK before dismounting. Leaving transmission in gear with engine stopped will NOT prevent the tractor from moving.

Be sure everyone is clear of tractor and attached equipment before starting engine.

Never try to get on or off a moving tractor.

When tractor is left unattended, place in PARK, lower implements to the ground, stop the engine, and remove the key.

Never go near an operating PTO or an operating implement.

Always fasten your seat belt in a ROPS equipped tractor.

## omal116326 - 6405 Tractors ( -265202)

### Shift to Low Gear on Hills

---

#### Shift to Low Gear on Hills



TS216-UN: Shift to Low Gear on Hills

Shift to a low gear before descending a steep hill to improve your control of the tractor with little or no braking. Use engine braking to reduce speed before applying tractor brakes. Run-away tractors often tip over. Never coast downhill.

When driving on icy, wet, or graveled surfaces, reduce speed and be sure tractor is properly ballasted to avoid skidding and loss of steering control. For best control, engage front-wheel drive for four-wheel braking.

Additional ballast may be needed for transporting heavy integral implements. When implement is raised, drive slowly over rough ground, regardless of how much ballast is used.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.  
You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:  
[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)