



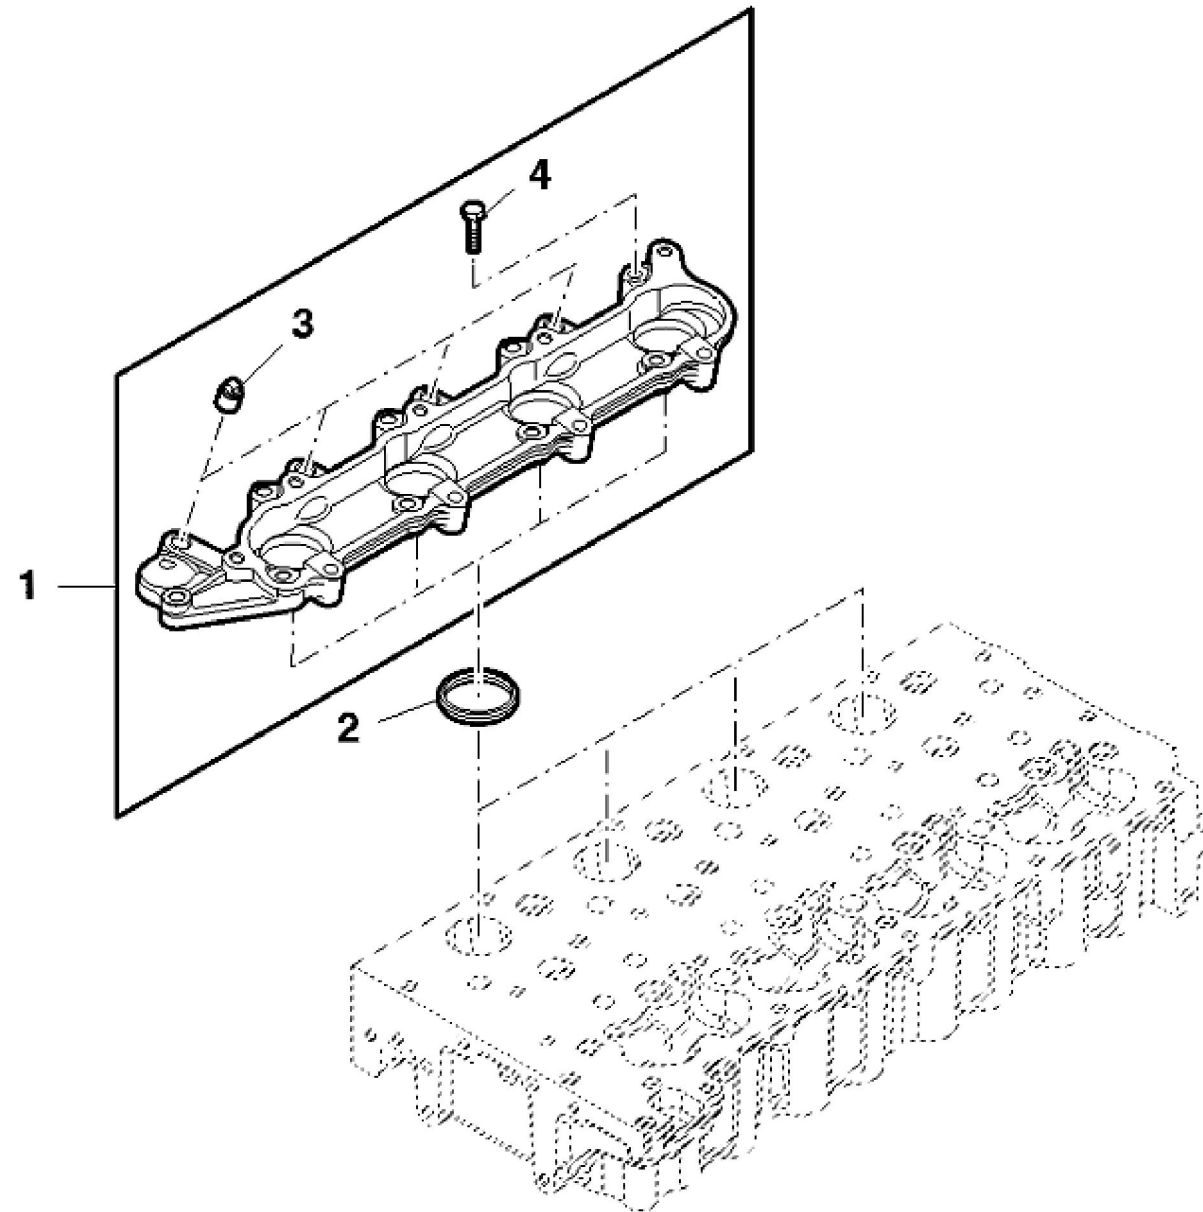


PY040245

KEY	PART NO.	PART NAME	QTY	REMARKS	
1	ER5801363172	HOUSING	1		
2	ER5801363175	GASKET	4		
3	ER0504273002	PLUG	4	M12 X 1.5	
4	ER0016673835	BOLT	9	M8 X 30	

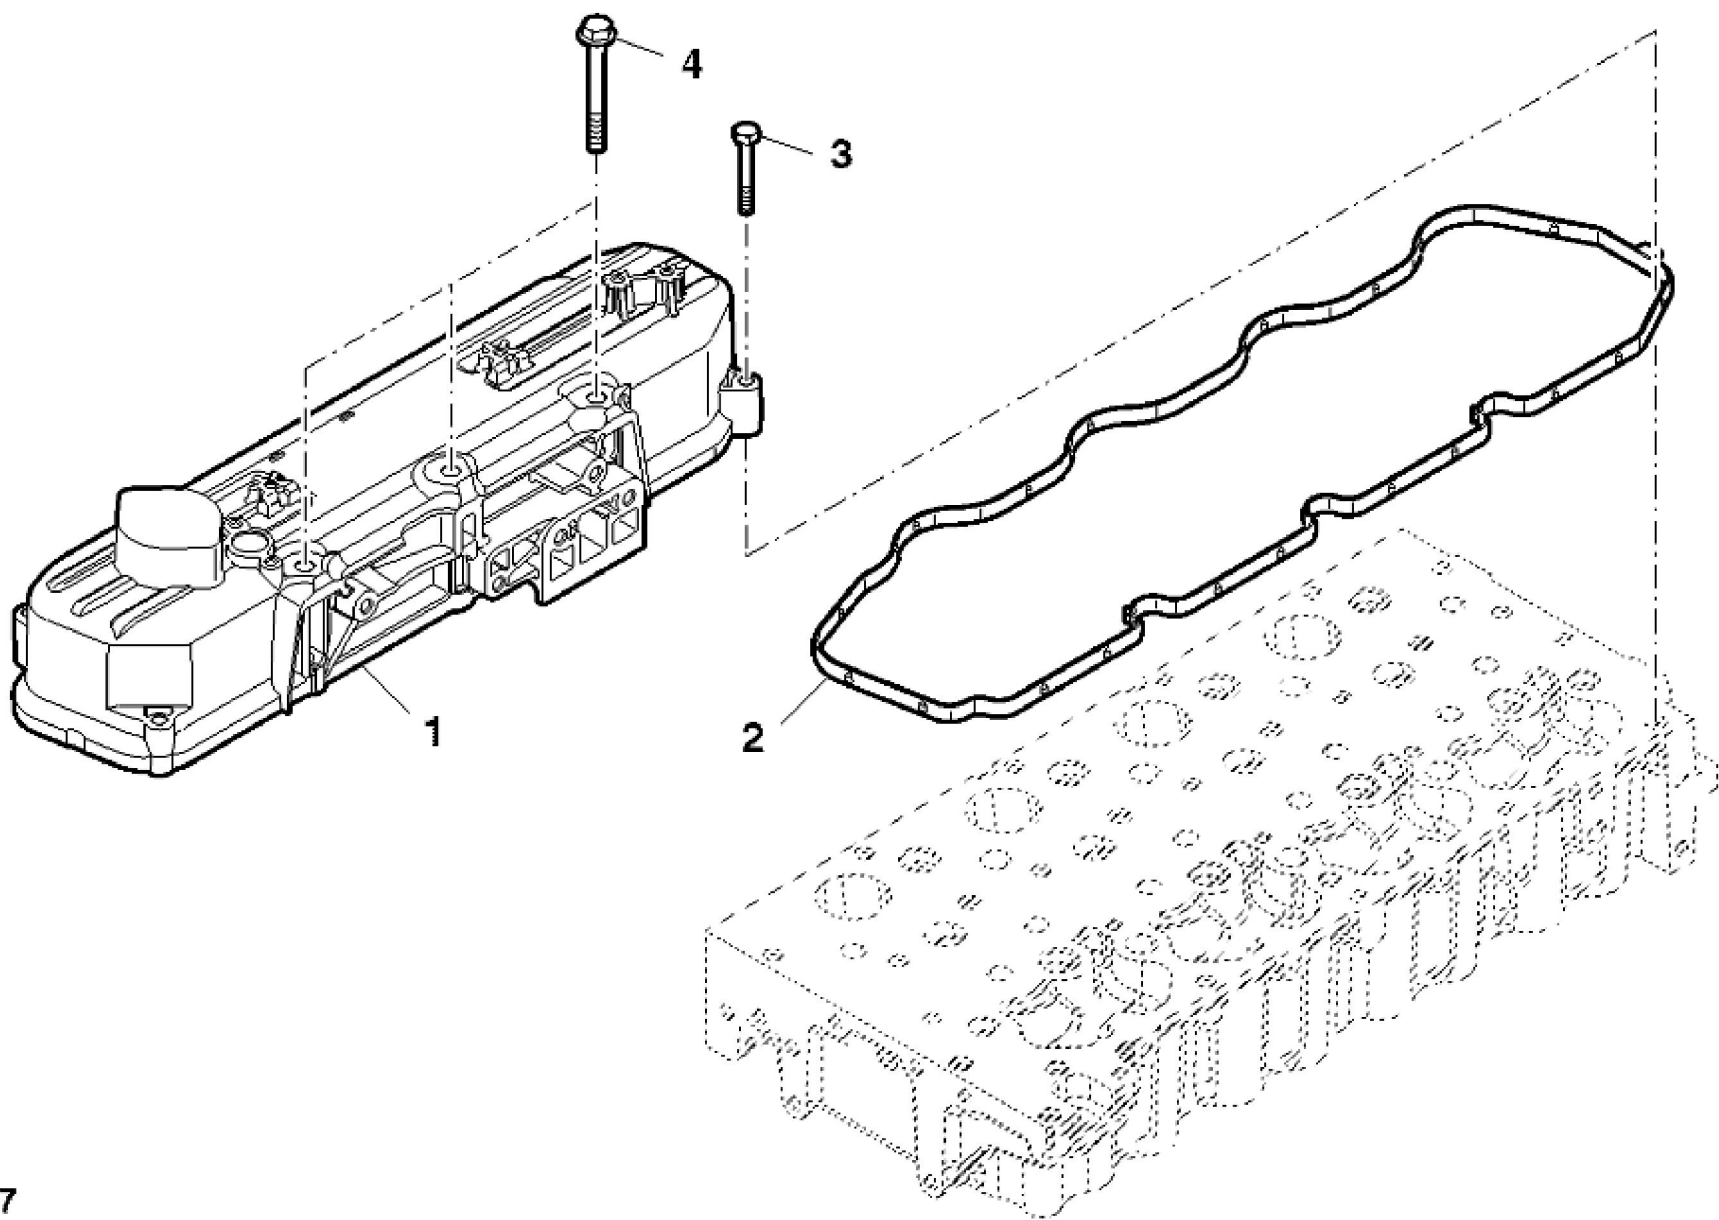


PY040247

KEY	PART NO.	PART NAME	QTY	REMARKS	
1	ER5801526315	COVER	1		
2	ER5801446795	GASKET	1		
3	ER0016591725	BOLT	7	M6 X 40	
4	ER0016598325	BOLT	3	M8 X 100	

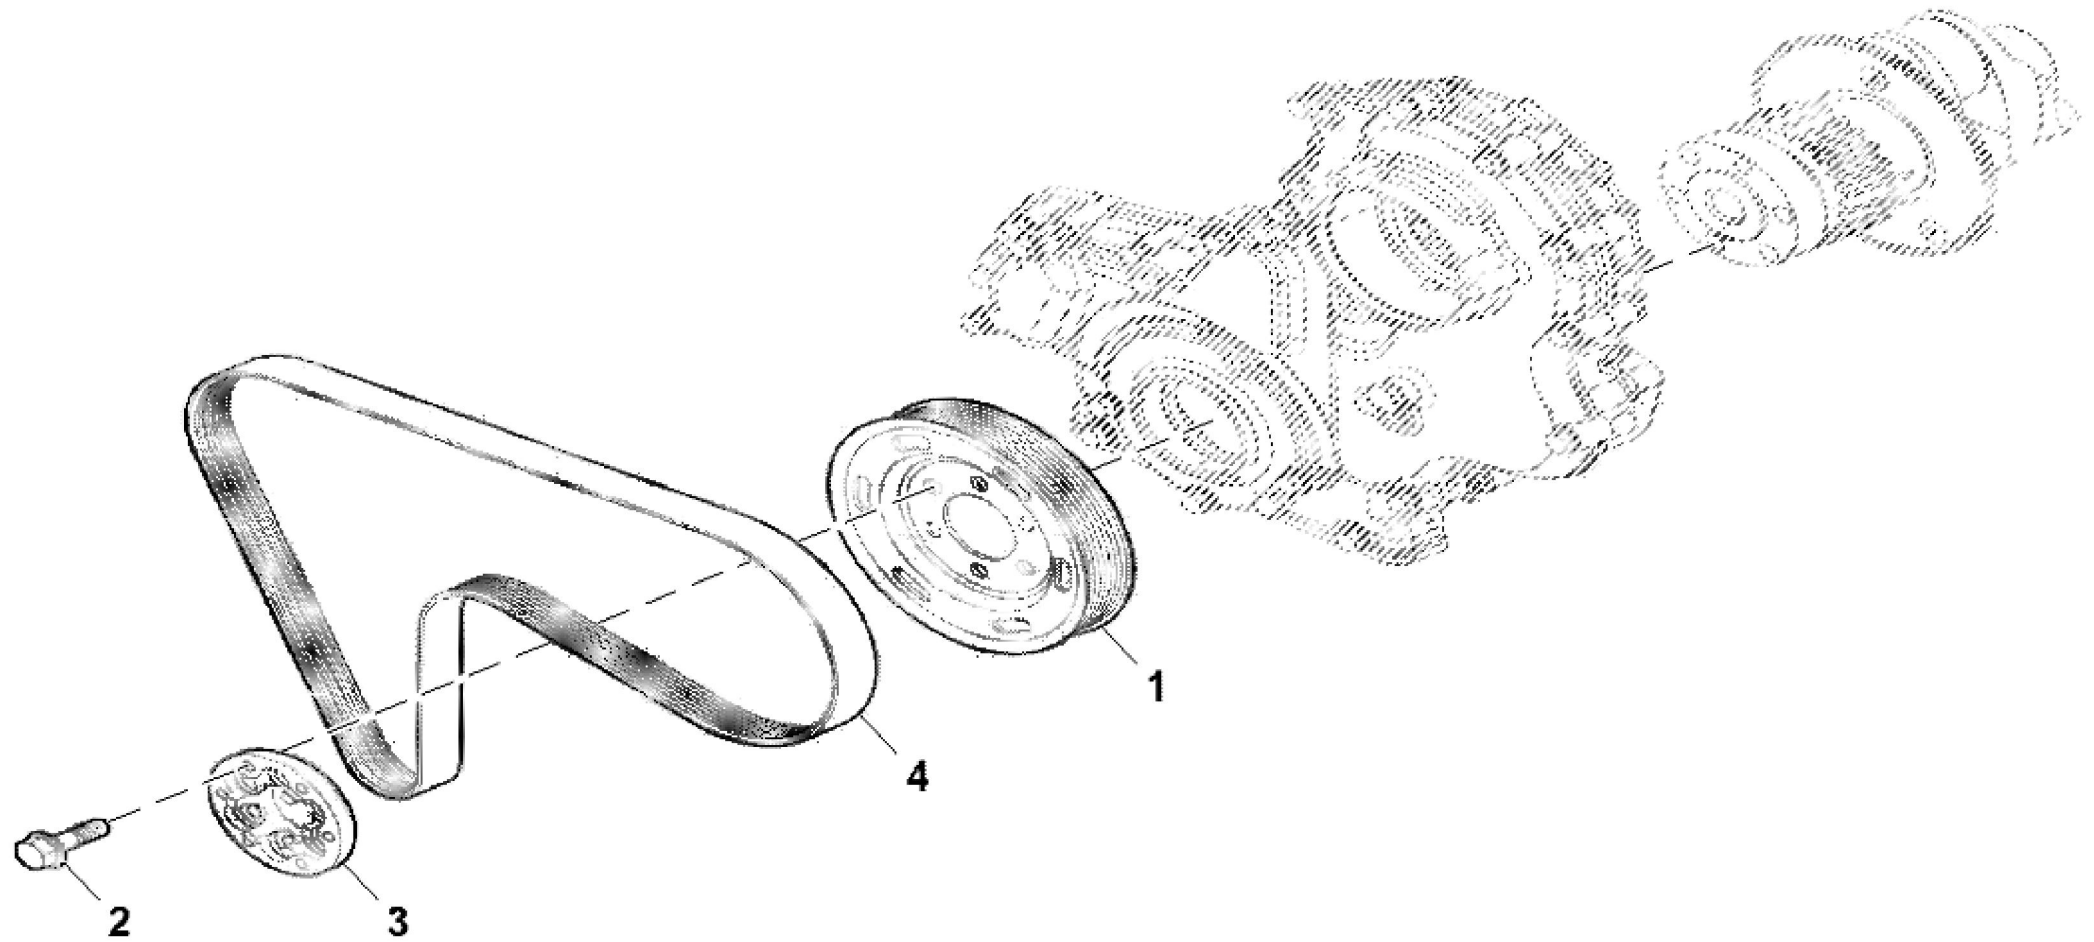



LX246142

KEY	PART NO.	PART NAME	QTY	REMARKS	
1	ER5801363585	PULLEY	1		
2	ER0016675835	BOLT	6		
3	ER5801380424	SPACER	1		
4	ER5801440074	V-BELT	1		

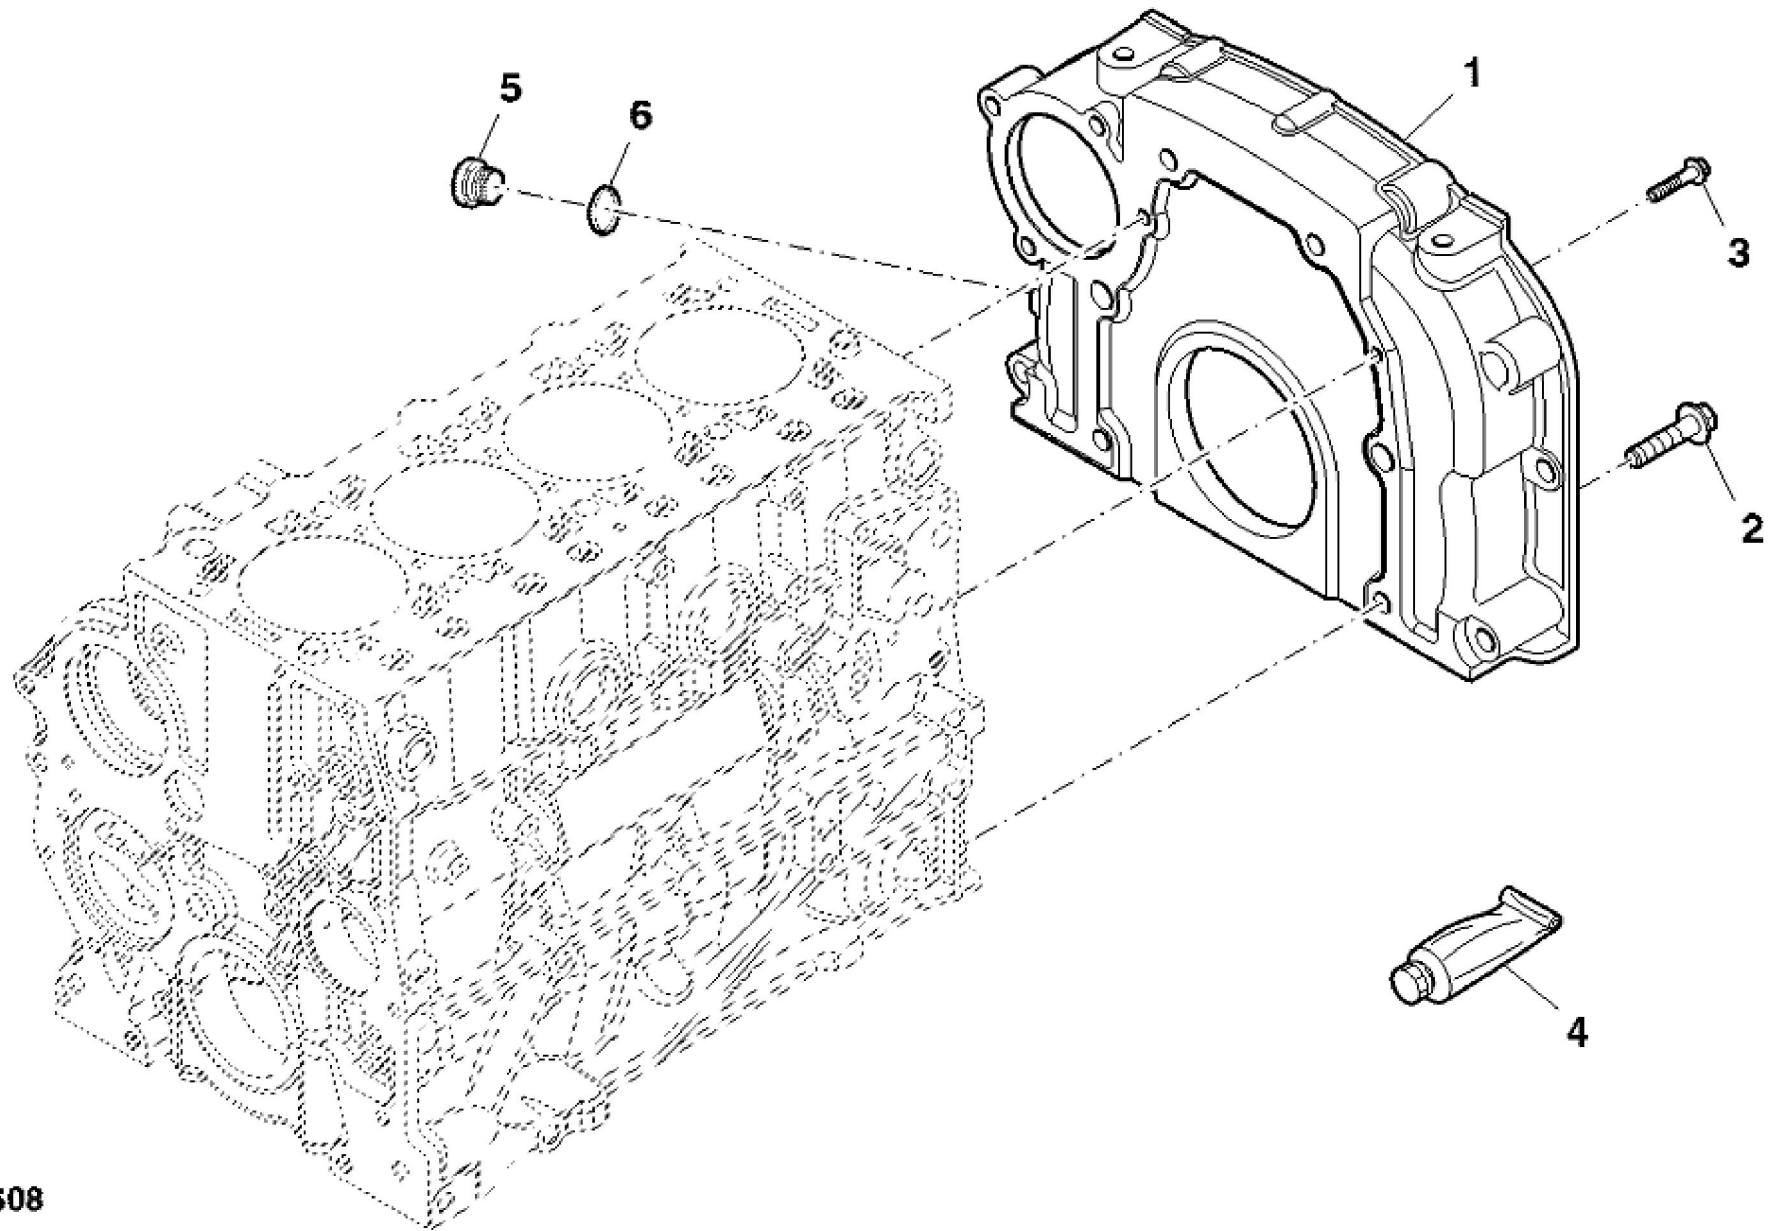


LX245608


KEY	PART NO.	PART NAME	QTY	REMARKS	
1	ER0504180348	HOUSING	1		
2	ER0016678034	BOLT	6	M12 X 40	
3	ER0016673735	BOLT	2	M8 X 1.25 X 25	
4	ER0002995644	ADHESIVE	1		
5	ER0004895378	PLUG	1		
6	ER0017288480	O-RING	1		

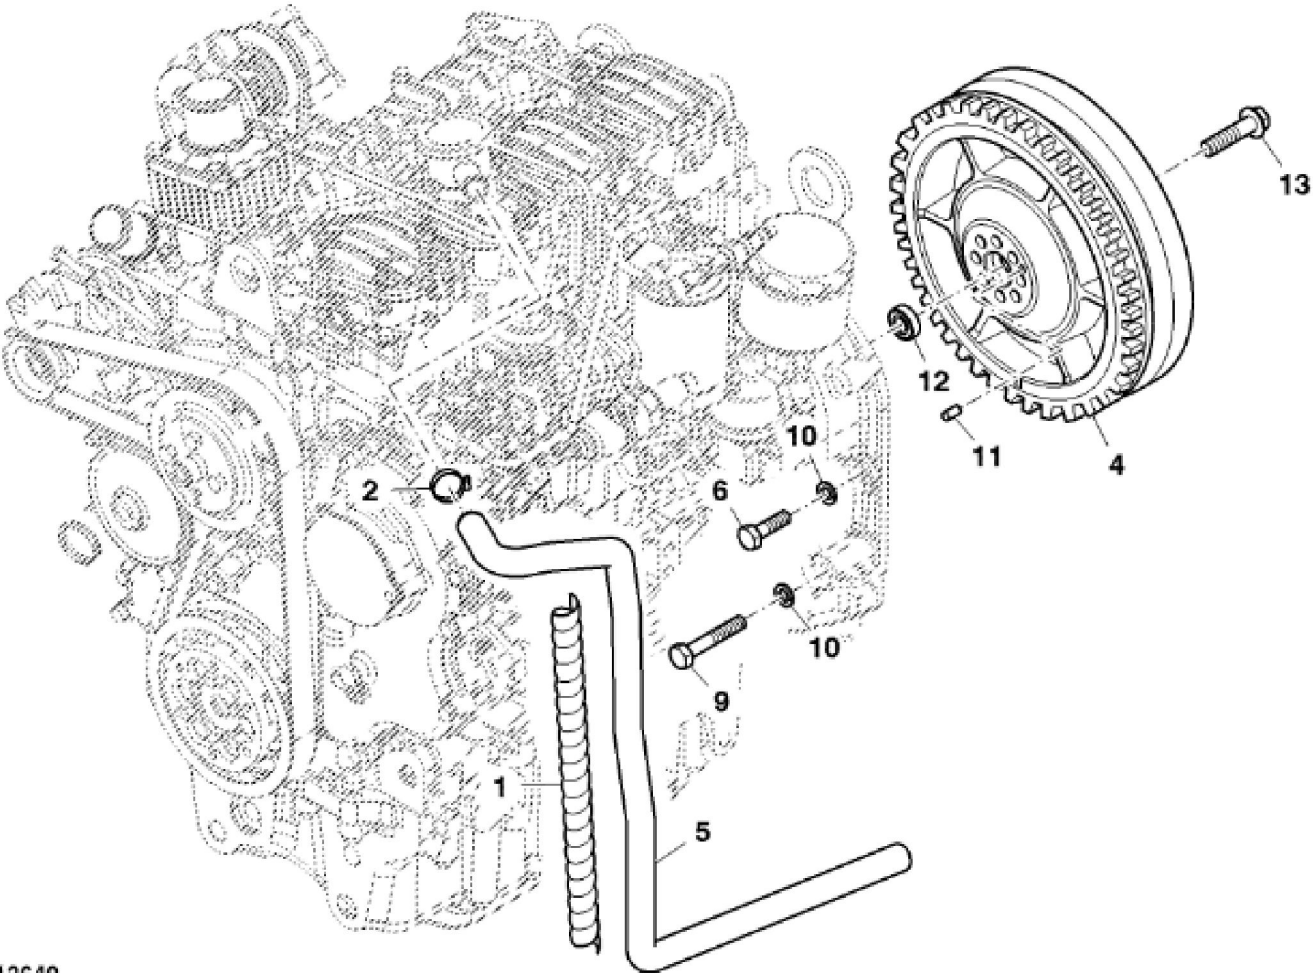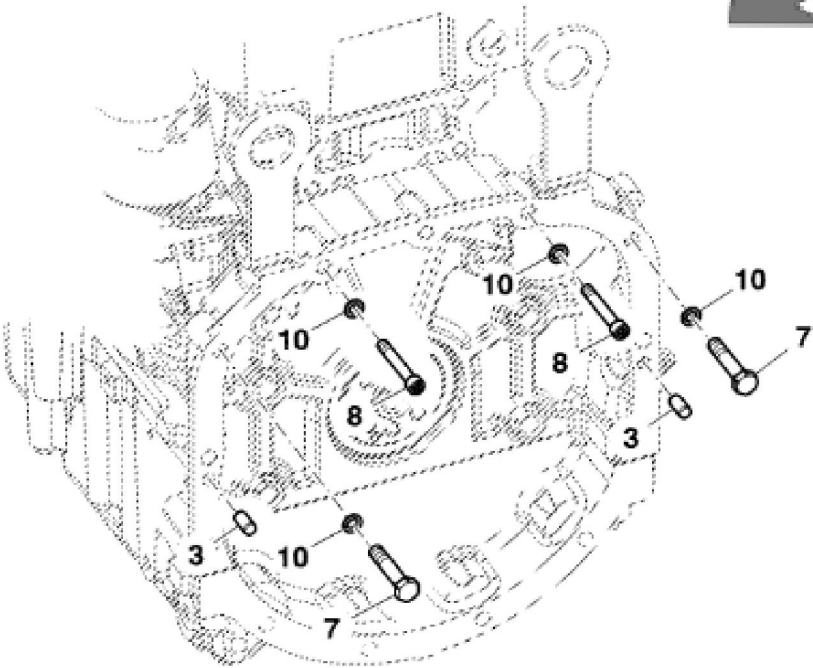


KEY	PART NO.	PART NAME	QTY	REMARKS	
1	ER201677	HOSE GUARD	1		
2	ER136575	CLAMP	1		
3	ER202960	DOWEL PIN	2		
4	ER372511	FLYWHEEL	1	(PowrReverser™) 11"	
4	ER436582	FLYWHEEL	1	(Mechanical Transmission) 12"	
5	ER383846	HOSE	1		
6	ER021143	BOLT	6	M12 X 50	
7	ER021148	BOLT	2	M12 X 60	
8	ER021155	BOLT	2	M12 X 80	
9	ER021157	BOLT	2	M12 X 90	
10	ER022861	WASHER	12		
11	ER024502	DOWEL PIN	1		
12	ER026017	BEARING	1	(Mechanical Transmission)	
13	ER393149	BOLT	8	M8 X 12	

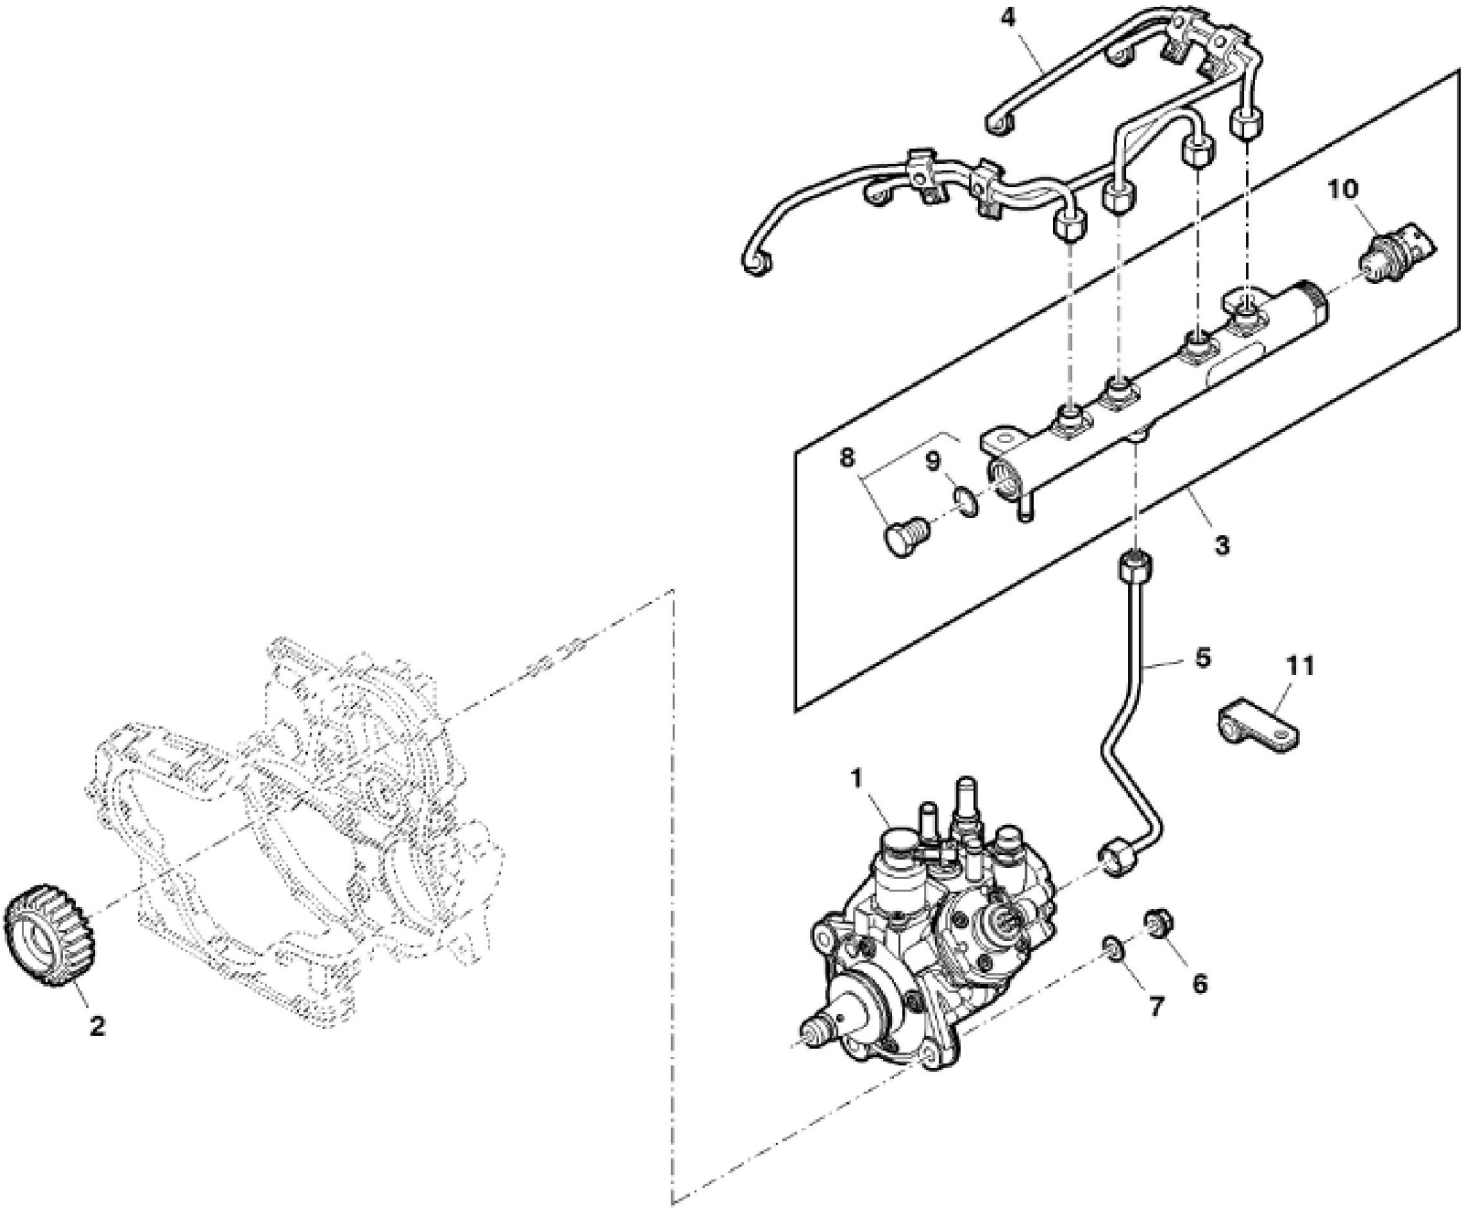


KEY	PART NO.	PART NAME	QTY	REMARKS	
1	ER5801470100	FUEL INJECTION PUMP	1		
2	ER0504387506	GEAR	1		
3	ER5801470105	FUEL RAIL	1		
4	ER0504387341	FUEL LINE	1		
5	ER0504387346	FUEL LINE	1		
6	ER0017044725	NUT	3	M8 X 1.25	
7	ER0017094904	WASHER	3		
8	ER5801474163	VALVE	1		
9	ER0042553494	O-RING	1		
10	ER5801474160	SENSOR	1	(Pressure Sensor)	
11	ER5801555843	BRACKET	1		

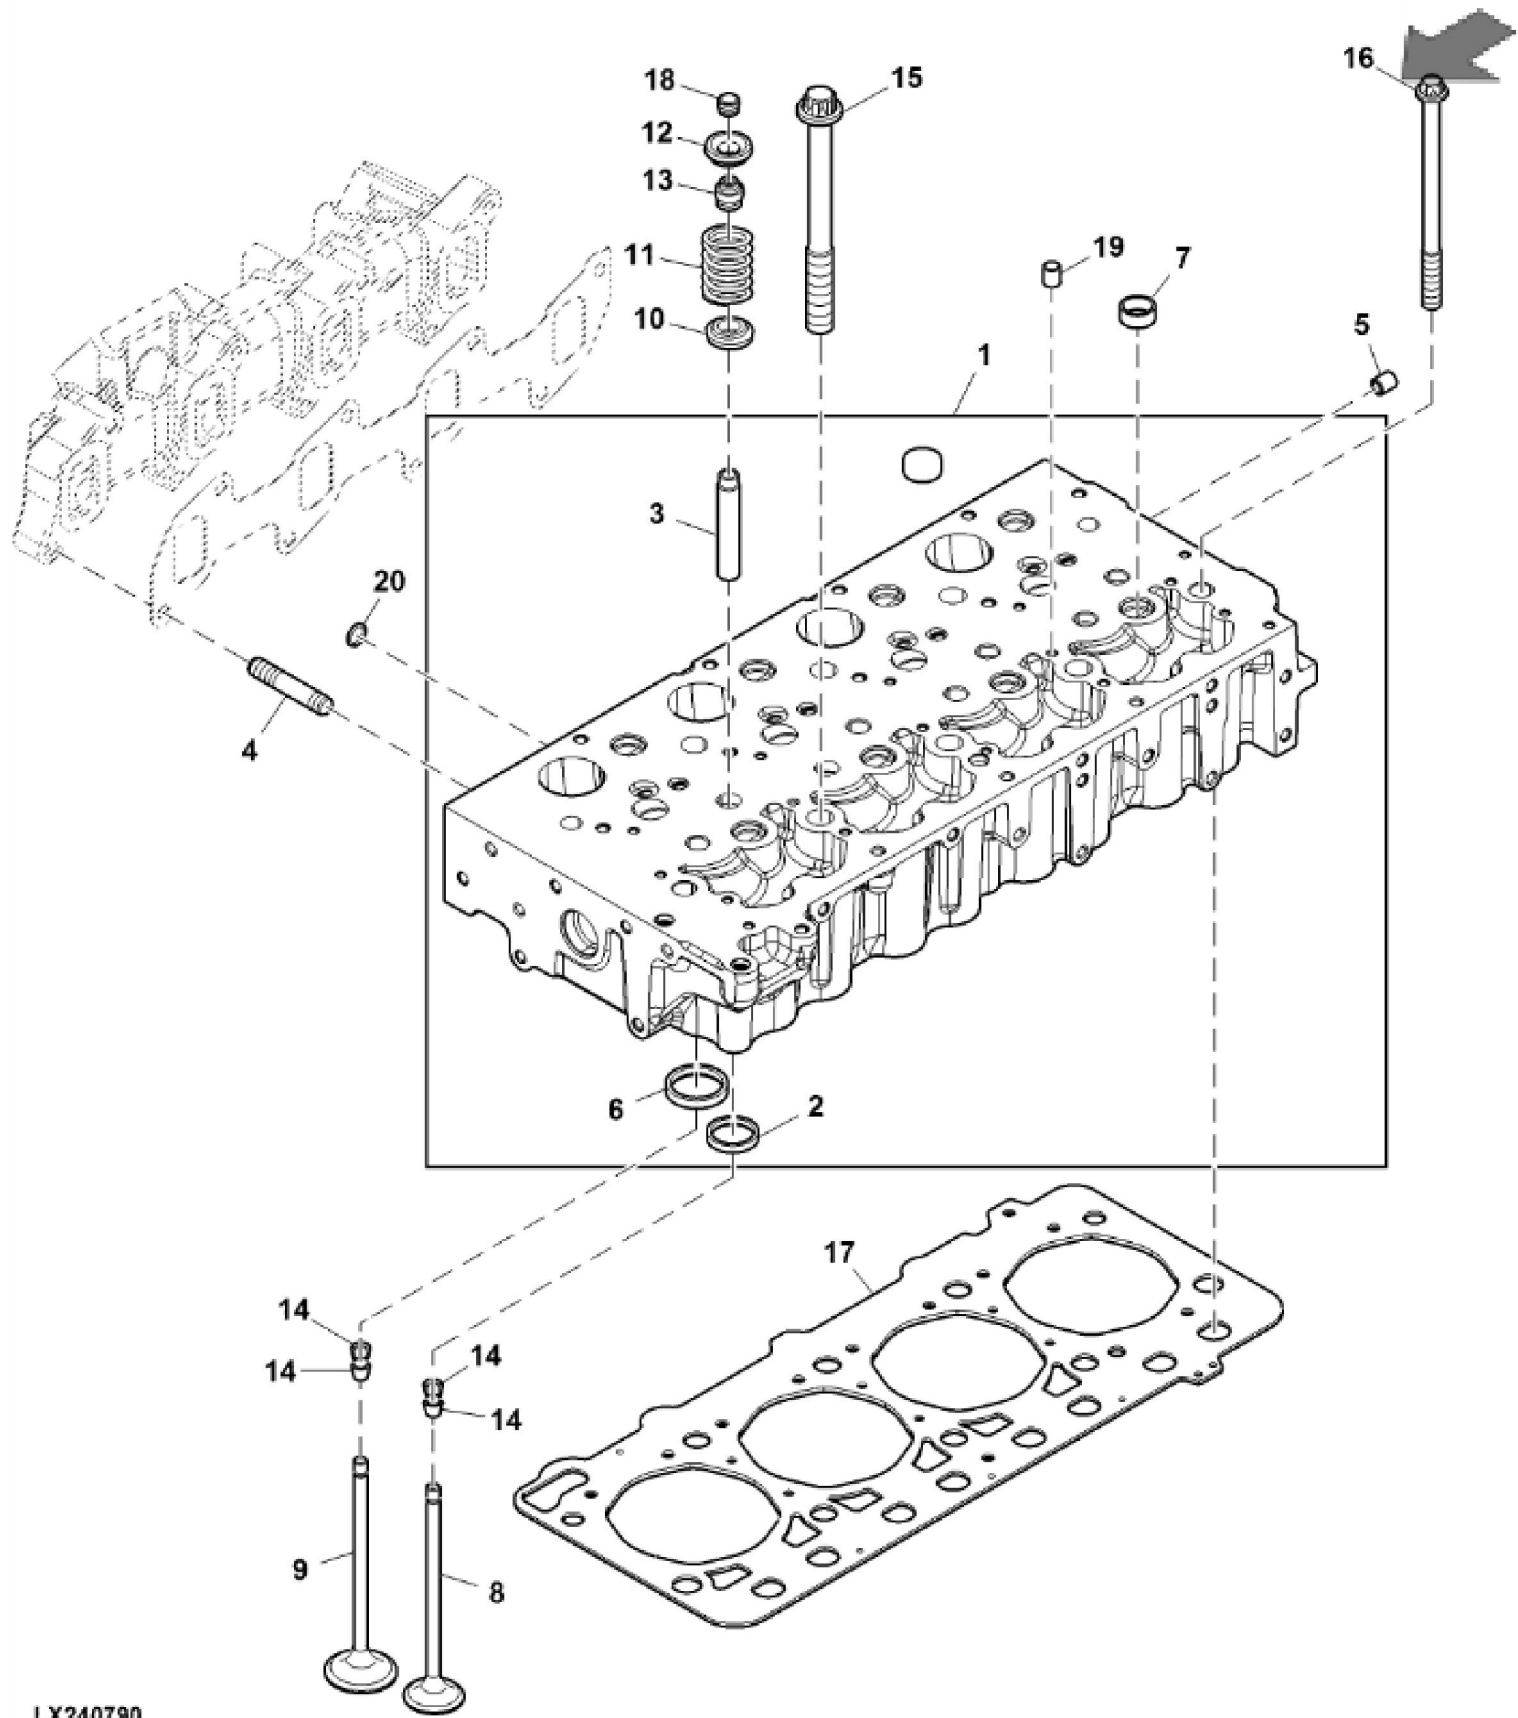


KEY	PART NO.	PART NAME	QTY	REMARKS	
1	ER0504389002	CYLINDER HEAD	1		
2	ER0504162949	VALVE SEAT	4		
3	ER0004749397	GUIDE	8	STD	
3	ER0004749398	GUIDE	8	DIA = + 0.1 mm	
3	ER0004749399	GUIDE	8	DIA = + 0.2 mm	
4	ER5801475385	STUD	8	M8 X 1.25	
5	ER0016990970	PLUG	1		
6	ER0504254094	VALVE SEAT	4		
7	ER0016988301	PLUG	8		
8	ER0504387778	INTAKE VALVE	4		
9	ER0504387779	EXHAUST VALVE	4		
10	ER0504178119	CAP	8		
11	ER0004812347	SPRING	8		
12	ER0004780558	CAP	8		
13	ER0040101573	CAP	8		
14	ER0004819891	RETAINER	16		
15	ER0504081521	STUD	6	M15 X 1.5 X 193	
16	ER0504081533	STUD	4	M12 X 1.5 X 162	
17	ER5801450757	GASKET	1	TK = + 0.8 mm	
17	ER5801450758	GASKET	1	TK = + 0.7 mm	
18	ER0504387777	VALVE COVER	8		
19	ER0099435557	DOWEL PIN	1		
20	ER0016990670	PLUG	4		

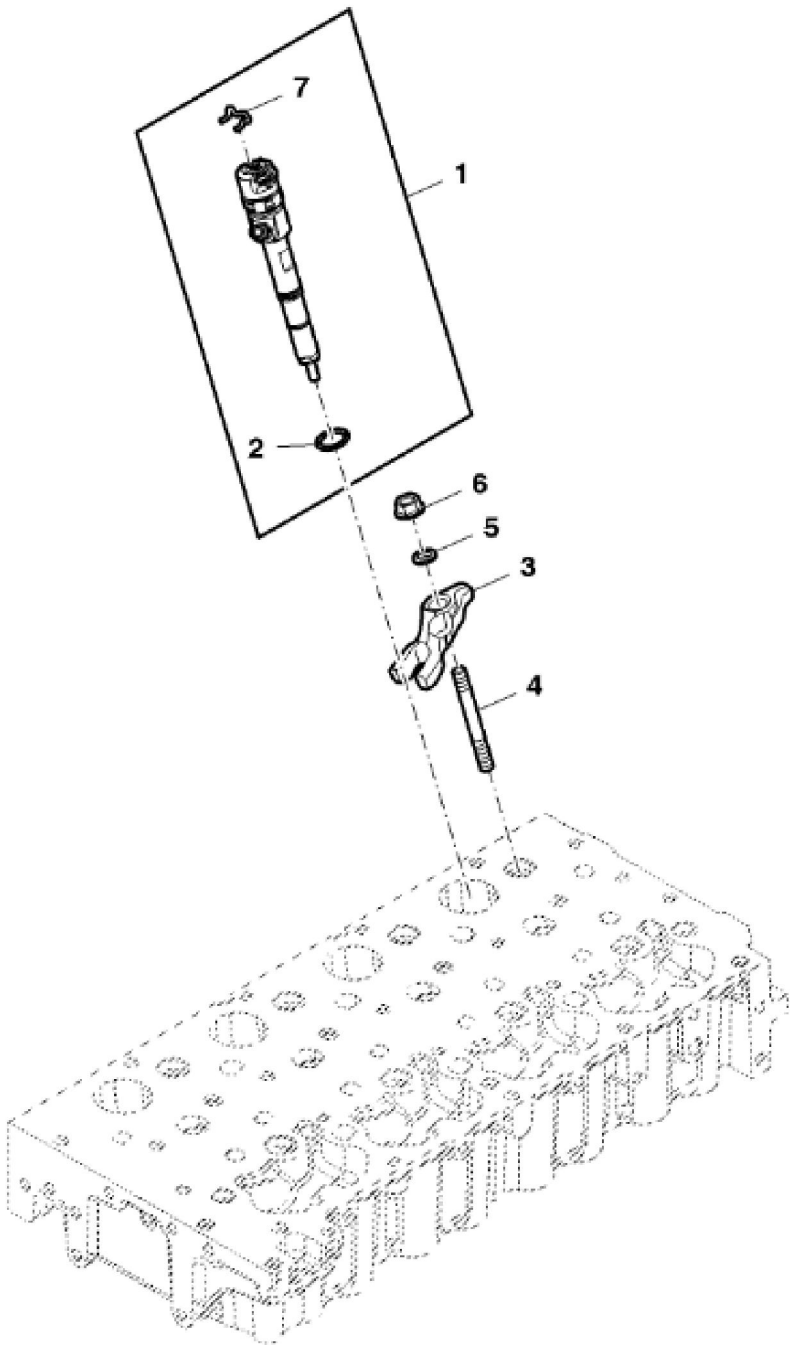


KEY	PART NO.	PART NAME	QTY	REMARKS	
1	ER5801470098	ELECTRONIC UNIT INJECTOR	4		
2	ER0004899689	WASHER	4		
3	ER0504378841	BRACKET	4		
4	ER5801473742	STUD	4	M8 X 65	
5	ER0500353601	WASHER	4		
6	ER0017044735	NUT	4		
7	ER0008097971	CLAMP	4		

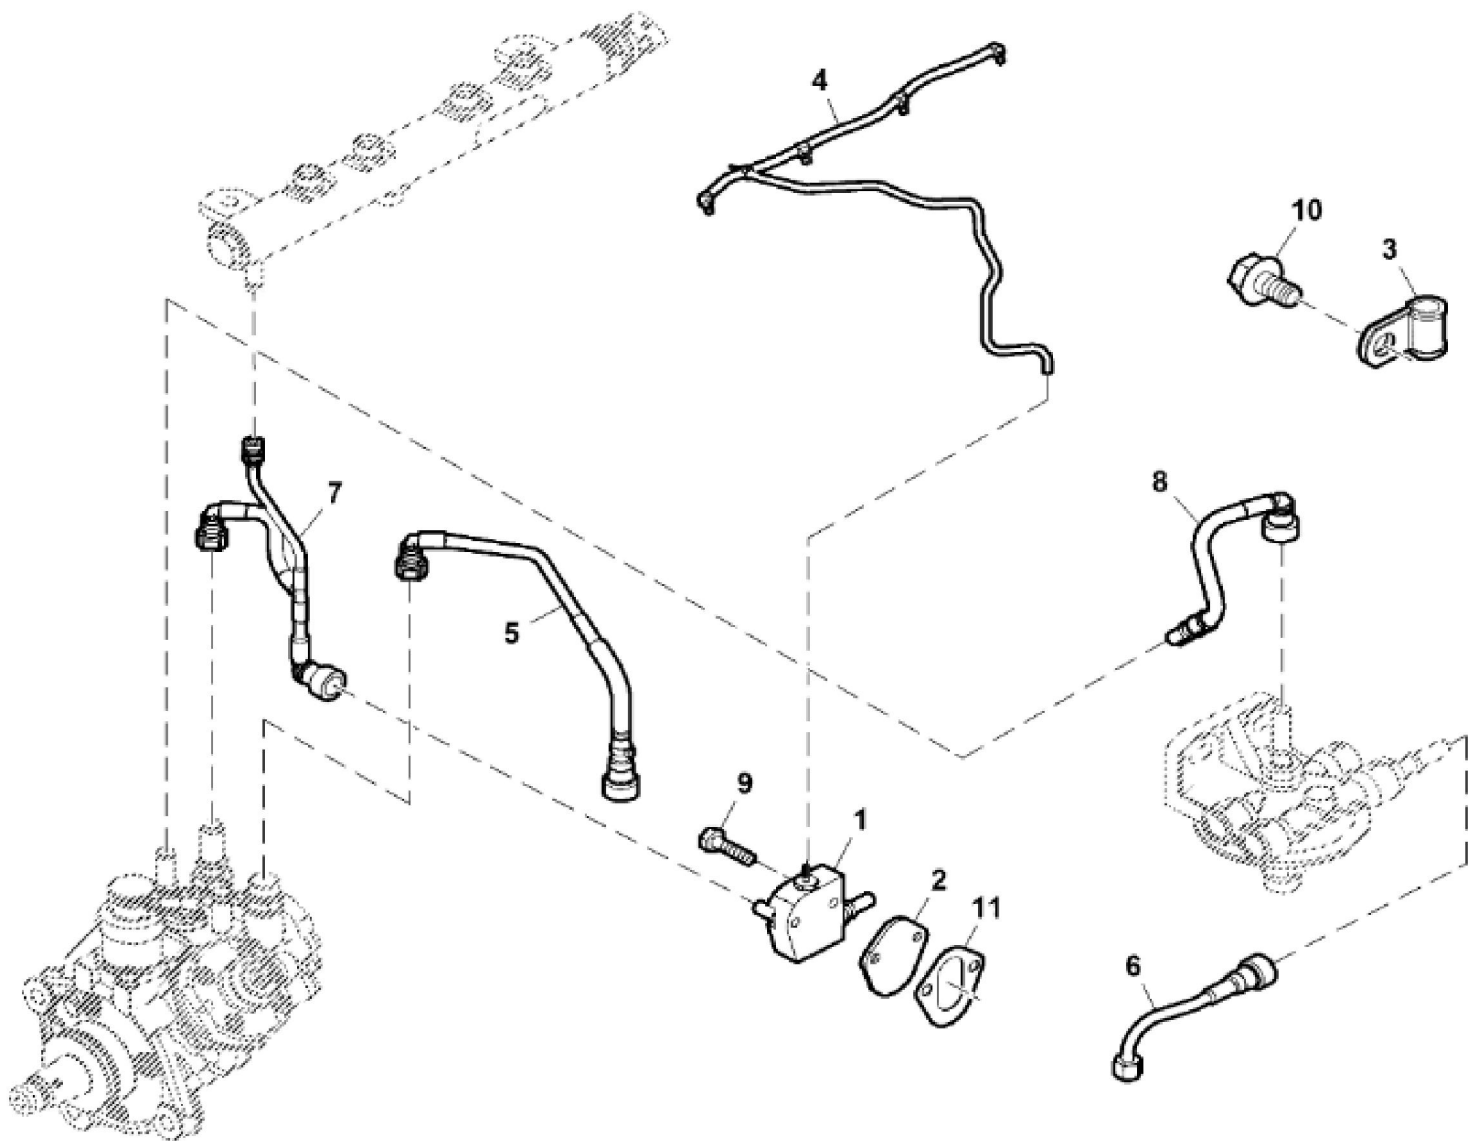

KEY	PART NO.	PART NAME	QTY	REMARKS	
1	ER5801698739	VALVE	1		
2	ER0504332869	COVER	1		
3	ER0017316290	CLIP	1		
4	ER5801476218	FUEL LINE	1		
5	ER5801496365	FUEL LINE	1		
6	ER0504385537	FUEL LINE	1		
7	ER0504388781	FUEL LINE	1		
8	ER0504385539	FUEL LINE	1		
9	ER0016586725	BOLT	2	M8 X 30	
10	ER0016597925	BOLT	2	M8 X 14	
11	ER0504332889	GASKET	1		

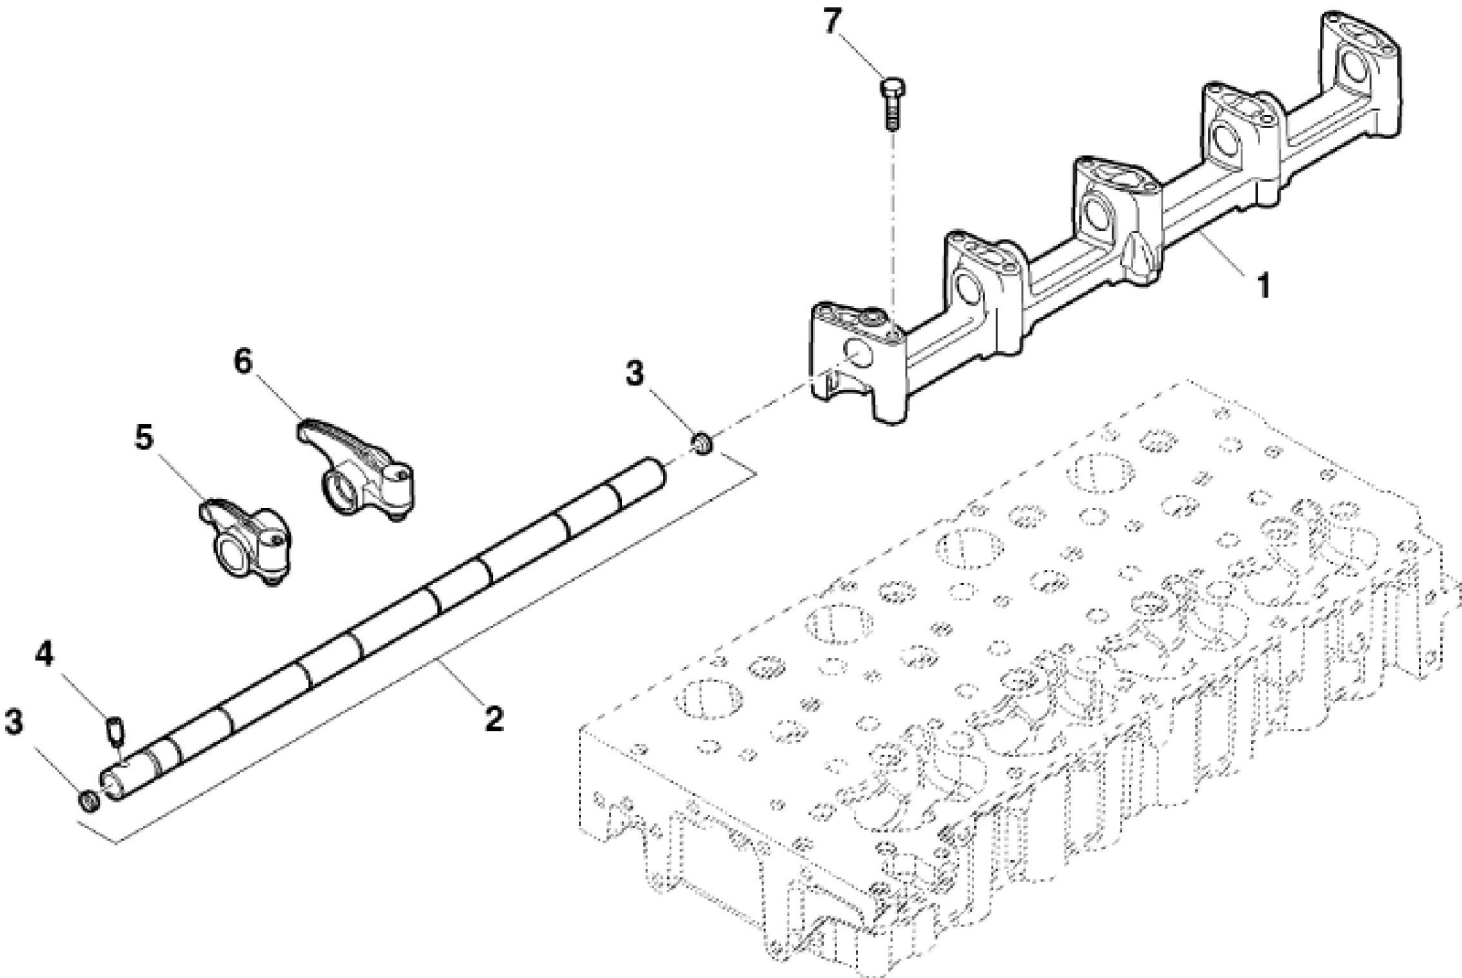

KEY	PART NO.	PART NAME	QTY	REMARKS	
1	ER5801364420	SUPPORT	1		
2	ER5801364425	SHAFT	1		
3	ER0016987801	PLUG	2		
4	ER0099454296	SCREW	1		
5	ER0504389302	ROCKER ARM	4	(Intake)	
6	ER0504389297	ROCKER ARM	4	(Exhaust)	
7	ER0018139224	BOLT	10	M6 X 1.0 X 70	

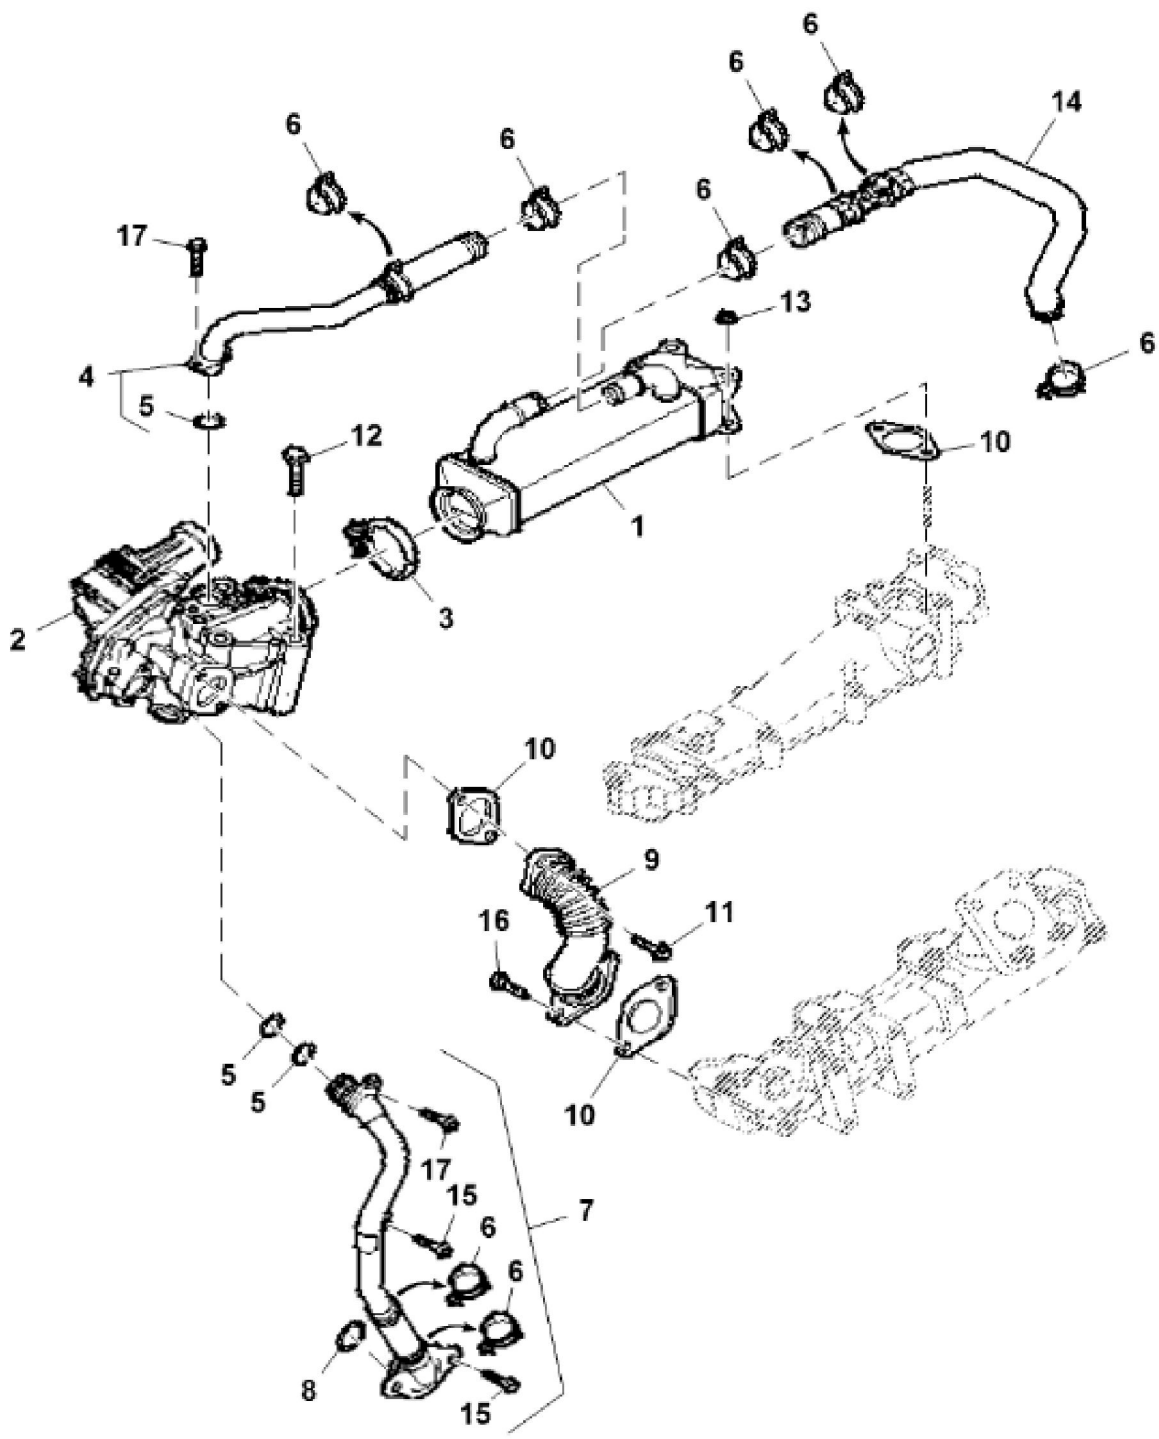

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com