



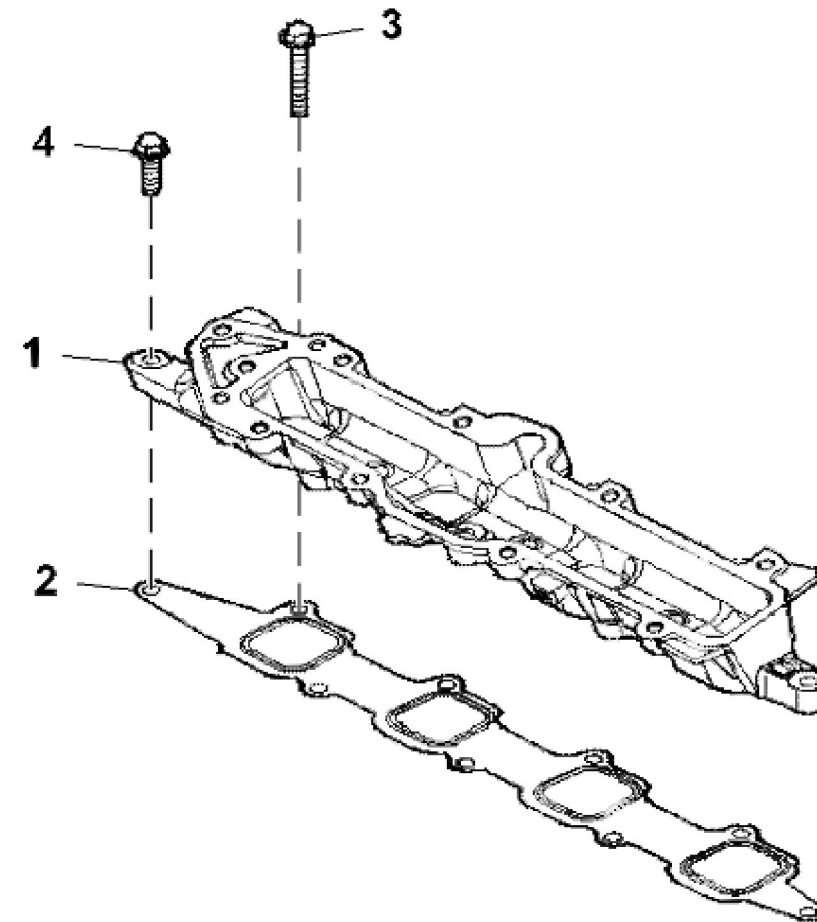


LX259820

KEY	PART NO.	PART NAME	QTY	REMARKS	
1	ER5801701355	COVER	1		
2	ER5801752064	GASKET	1		
3	ER0016592225	SCREW	4		
4	ER0016673835	SCREW	5		

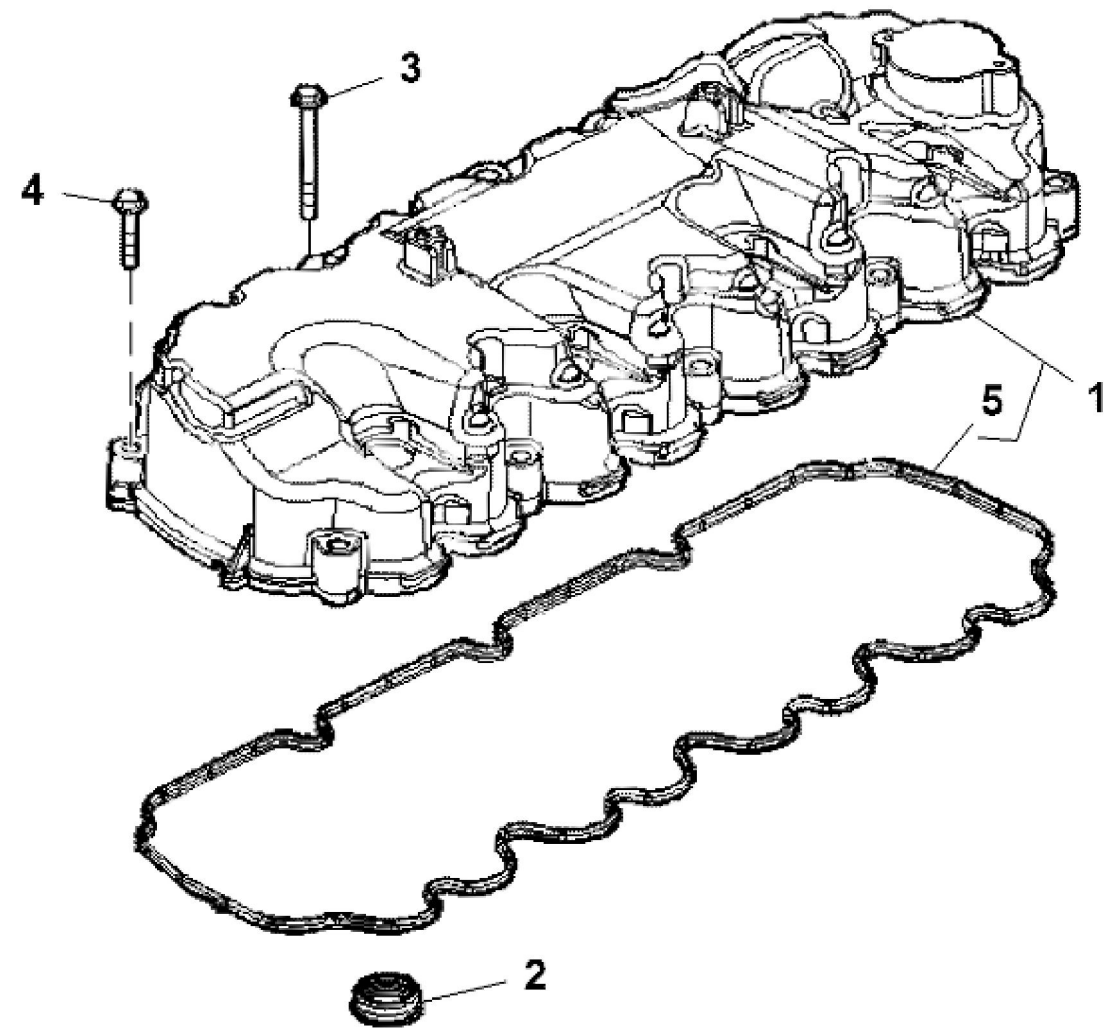


LX259821

KEY	PART NO.	PART NAME	QTY	REMARKS	
1	ER5801764433	COVER	1		
2	ER5801714865	SEALING RING	4		
3	ER0016598325	BOLT	3		
4	ER0016591725	BOLT	7		
5	ER5801714864	ENGINE CYLINDER HEAD GASKET	1		

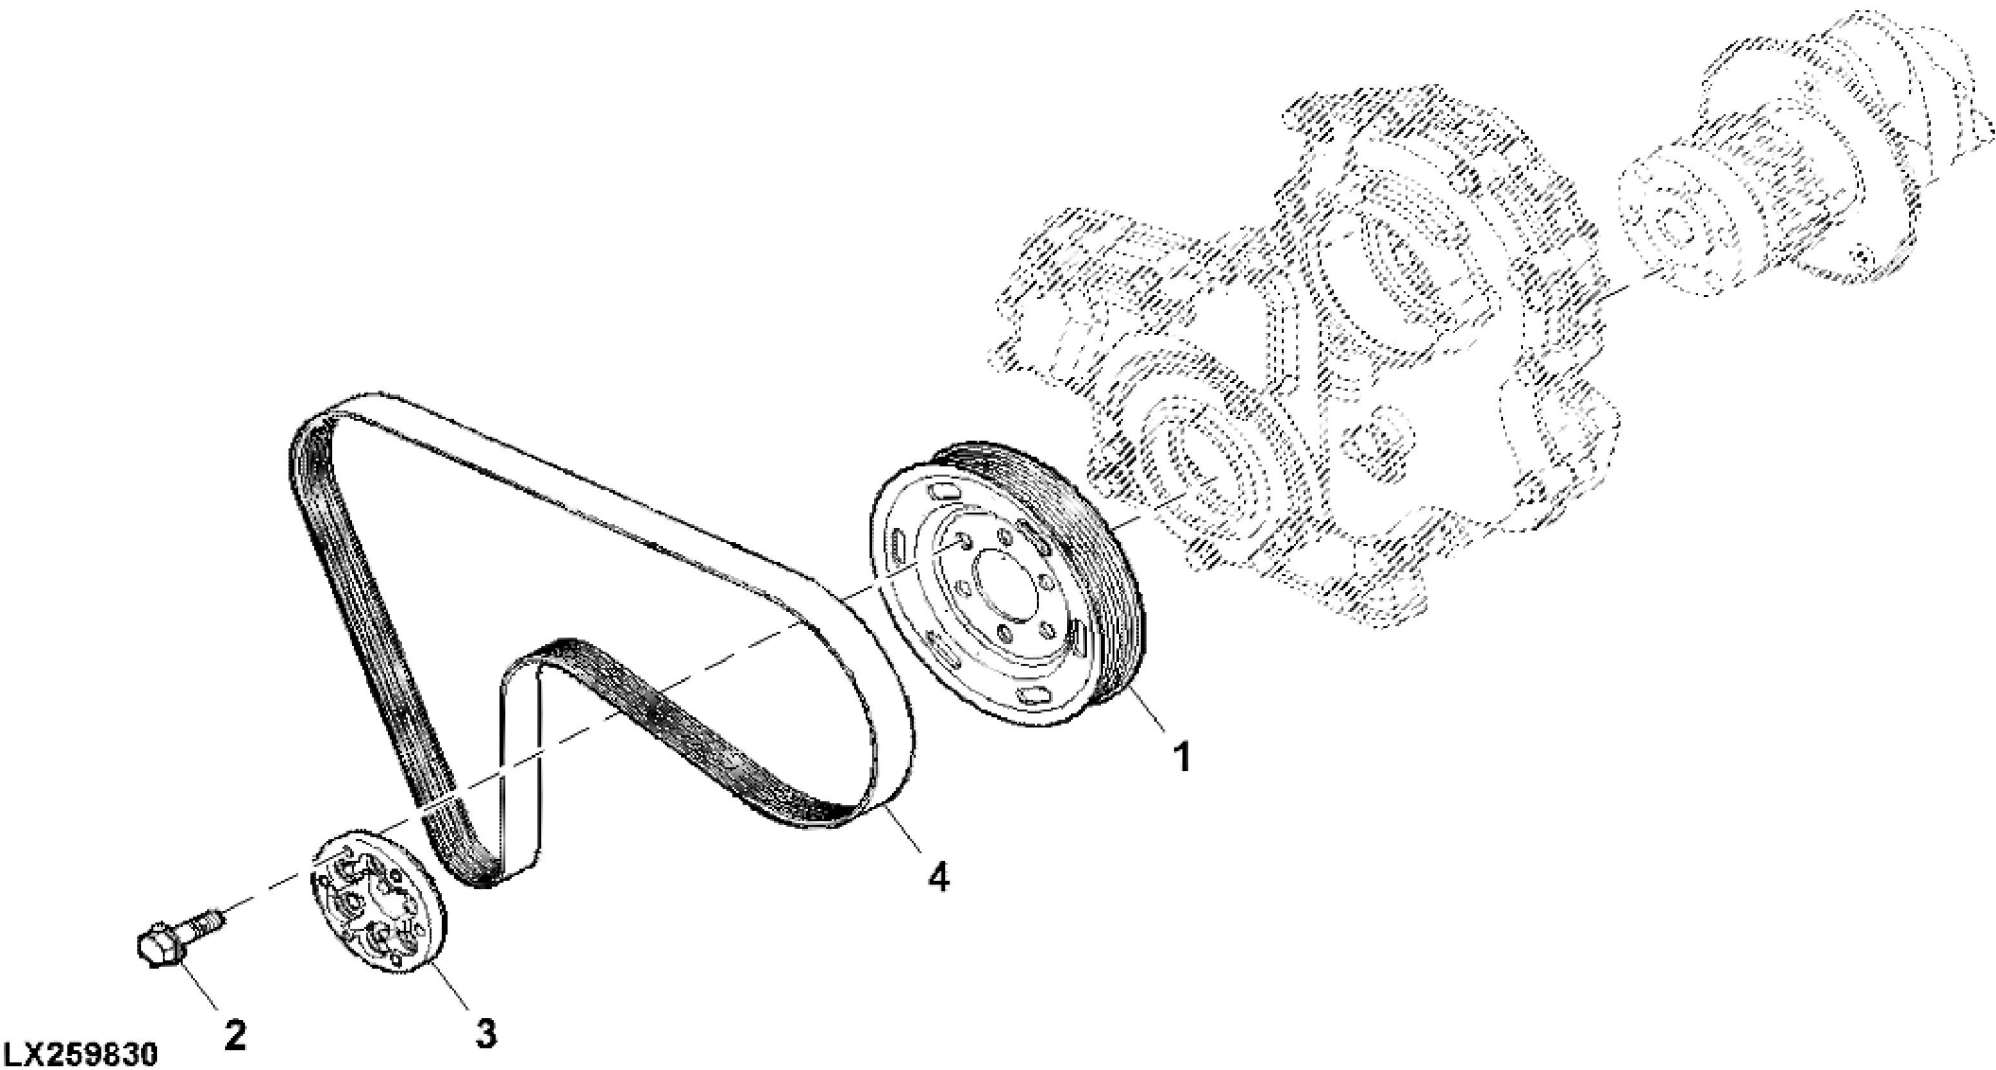


KEY	PART NO.	PART NAME	QTY	REMARKS	
1	ER5801363585	PULLEY	1		
2	ER0016675835	BOLT	6		
3	ER5801380424	SPACER	1		
4	ER5801440074	V-BELT	1		

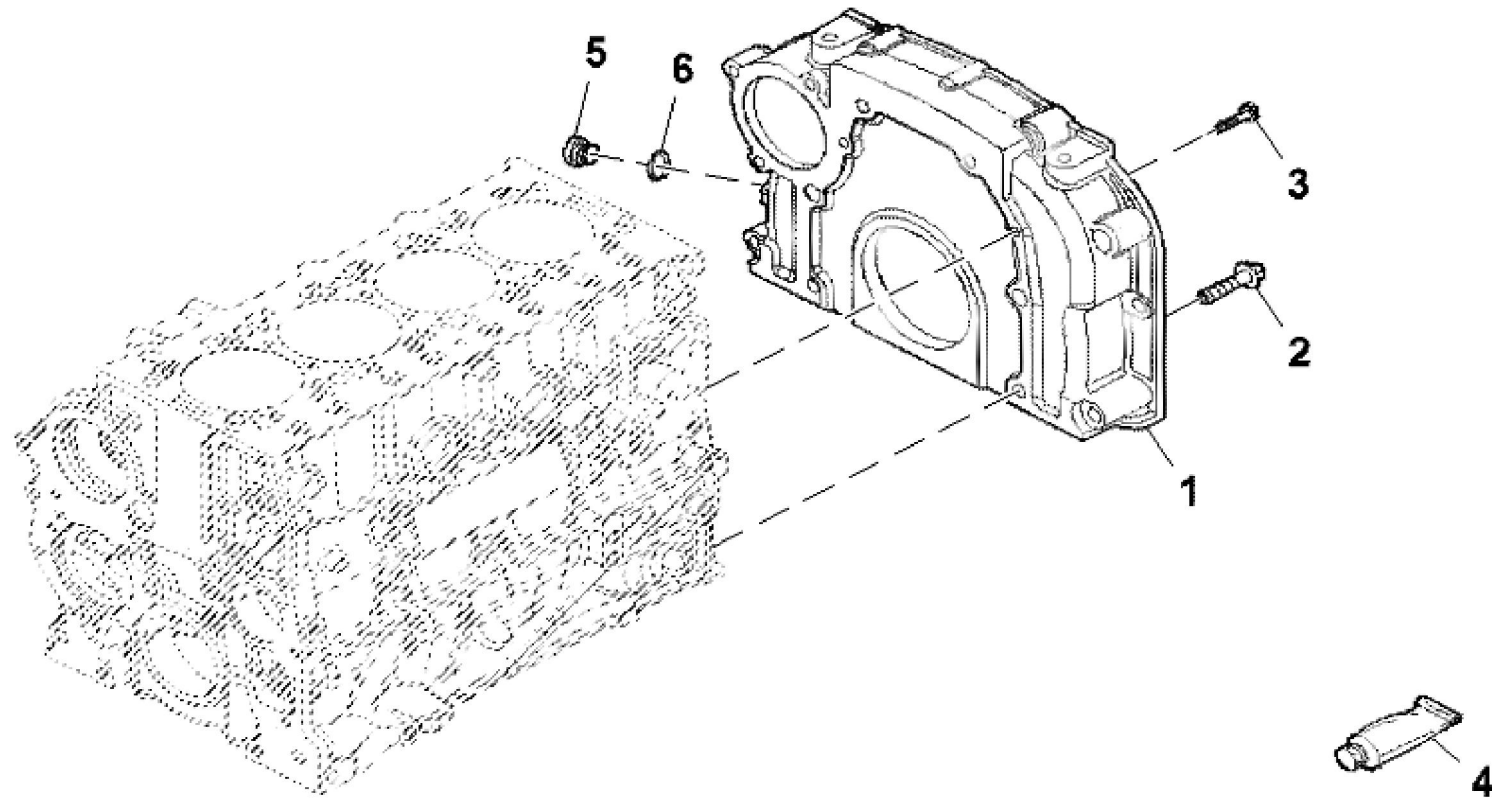


LX259816

KEY	PART NO.	PART NAME	QTY	REMARKS	
1	ER0504180348	HOUSING	1		
2	ER0016678034	BOLT	6		
3	ER0016673735	BOLT	2		
4	ER0002995644	ADHESIVE	1		
5	ER0004895378	PLUG	1		
6	ER0017288480	O-RING	1		

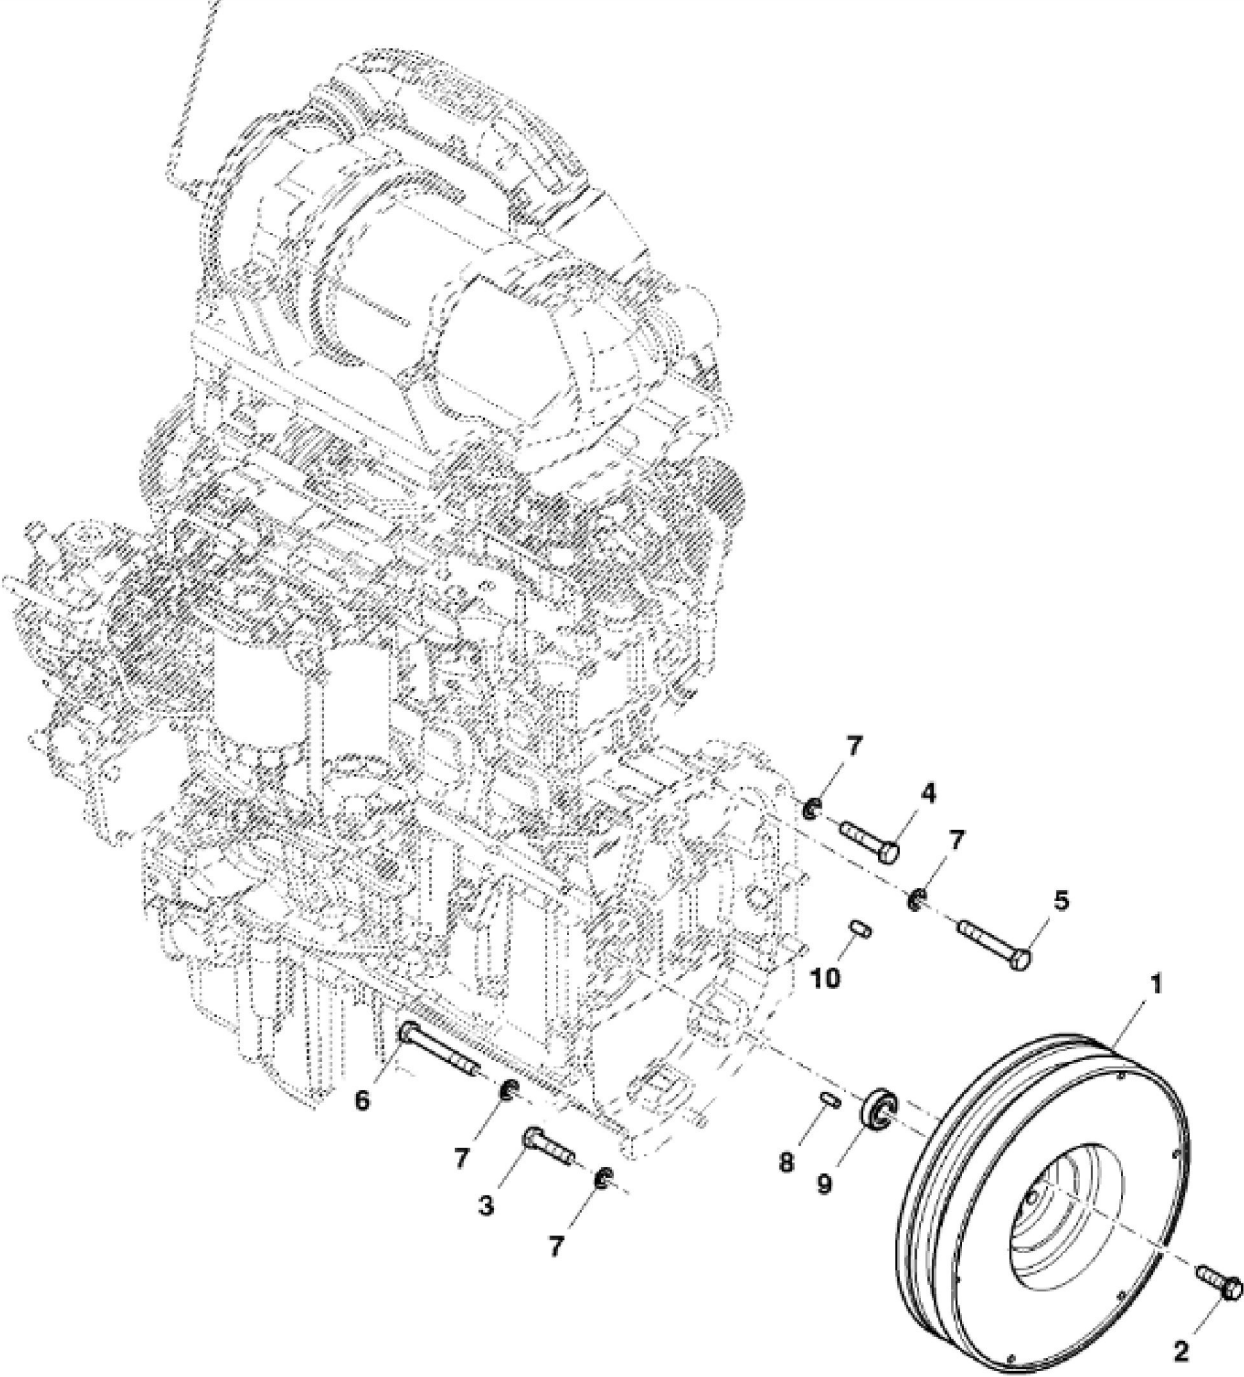


KEY	PART NO.	PART NAME	QTY	REMARKS	
1	ER372511	FLYWHEEL	1	(PowrReverser™) 11”	
1	ER436582	FLYWHEEL	1	(Mechanical Transmission) 12”	
2	ER393149	SELF-LOCKING SCREW	8	M12 X 42.5	
3	ER021143	SCREW	6	M12 X 50	
4	ER021148	SCREW	2	M12 X 60	
5	ER021155	SCREW	2	M12 X 80	
6	ER021157	BOLT	2	M12 X 90	
7	ER022861	WASHER	12		
8	ER024502	PIN	1		
9	ER026017	BEARING	1	(Mechanical Transmission)	
10	ER202960	DOWEL PIN	2		

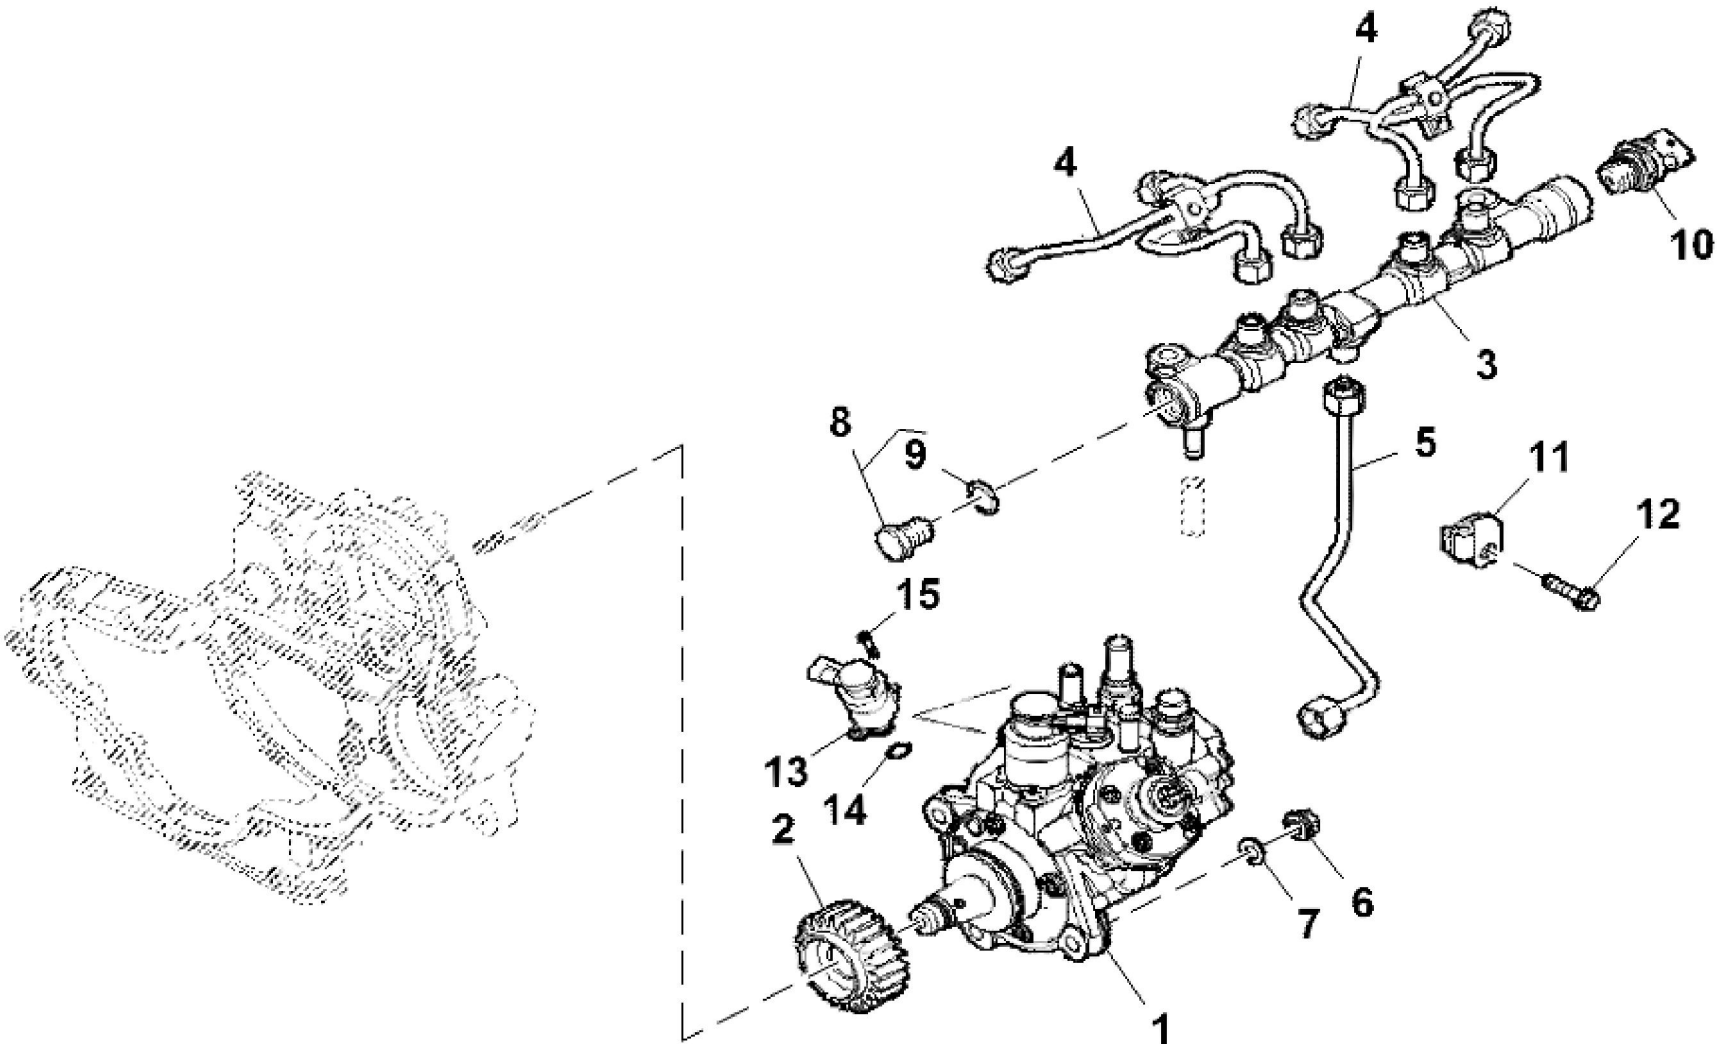


LX259833

KEY	PART NO.	PART NAME	QTY	REMARKS	
1	ER5801470100	FUEL INJECTION PUMP	1		
2	ER0504387506	GEAR	1		
3	ER5801790327	HYDRAULIC CYLINDER	1		
4	ER5801714290	FUEL LINE	2		
5	ER5801726553	FUEL LINE	1		
6	ER0017044735	NUT	3		
7	ER0017094904	WASHER	3		
8	ER5801593459	VALVE	1		
9	ER0042553494	O-RING	1		
10	ER0504382373	SENSOR	1		
11	ER5801555842	BRACKET	1		
12	ER0016597925	SCREW	1	M8 X 14 mm	
13	ER0042574911	VALVE	1	SUB FOR ER0042567116	
14	ER0042567117	O-RING	1		
15	ER0042567118	SCREW	2		

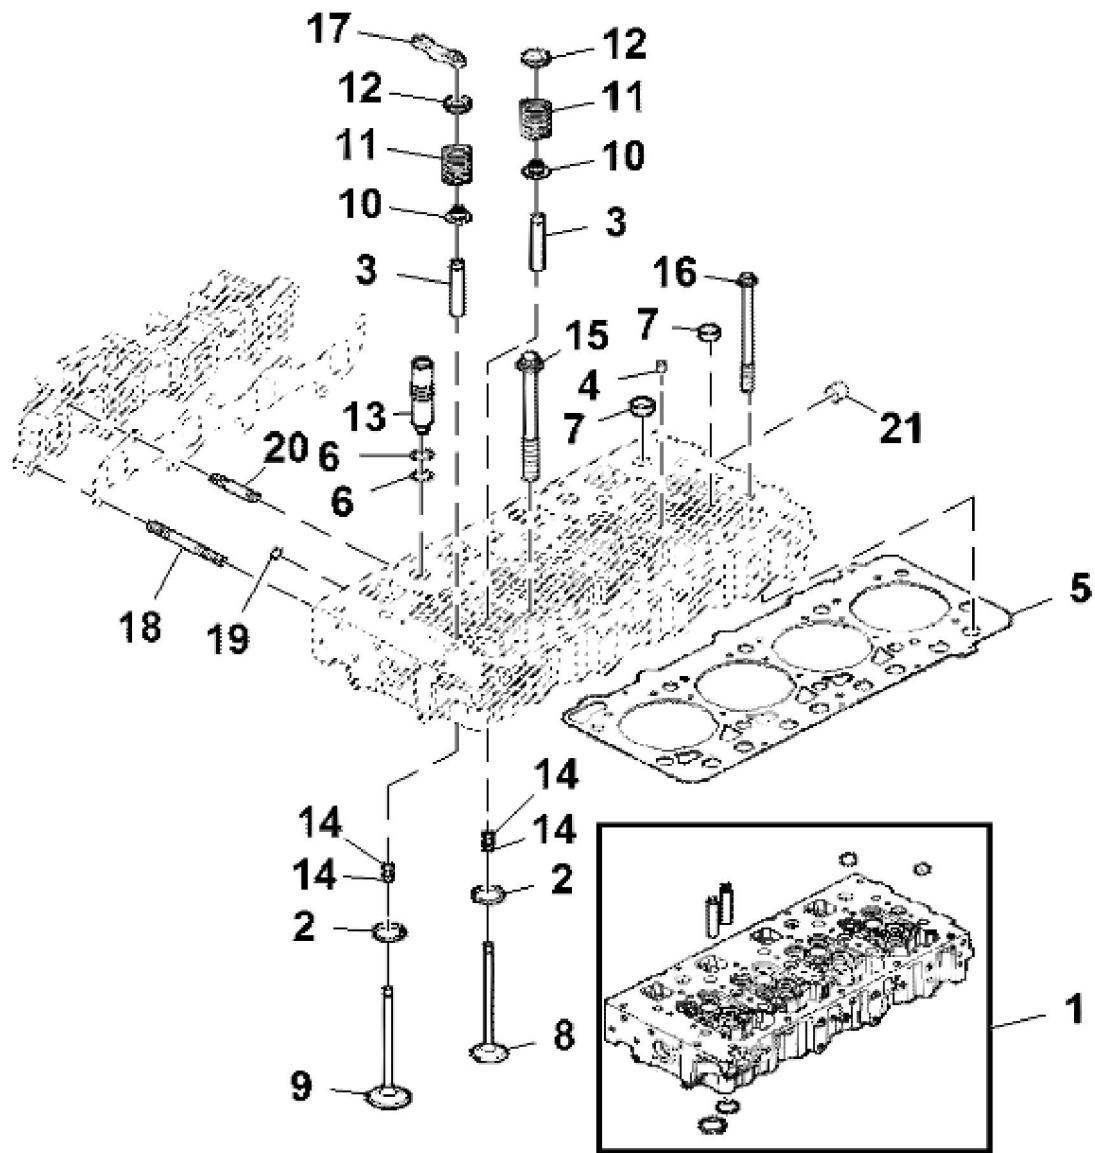


LX259819

KEY	PART NO.	PART NAME	QTY	REMARKS	
1	ER5801823163	CYLINDER HEAD	1		
2	ER0504075442	VALVE SEAT	16		
3	ER0504053804	GUIDE	16		
3	ER0504053805	GUIDE	16	DIA = + 0.1 mm	
3	ER0504053806	GUIDE	16	DIA = + 0.25 mm	
4	ER0099435557	DOWEL PIN	3		
5	ER5801753236	GASKET	1		
5	ER5801753235	GASKET	1		
6	ER0017278781	O-RING	8		
7	ER0016988301	PLUG	12		
8	ER0504072531	INTAKE VALVE	8		
9	ER0504081062	EXHAUST VALVE	8		
10	ER5801700319	SEAL	16		
11	ER5801696188	SPRING	16		
12	ER5801700312	CAP	16		
13	ER5801742343	NOZZLE	6		
14	ER0014194670	RETAINER	32		
15	ER0504081533	BOLT	4	M12 X 1.5 X 165 mm	
16	ER0504081521	BOLT	6	M15 X 1.5 X 193 mm	
17	ER5801712619	VALVE	8		
18	ER5801744018	STUD	1		
19	ER0014282170	PLUG	3		
20	ER5801475385	STUD	8		
21	ER0016990970	PLUG	1		

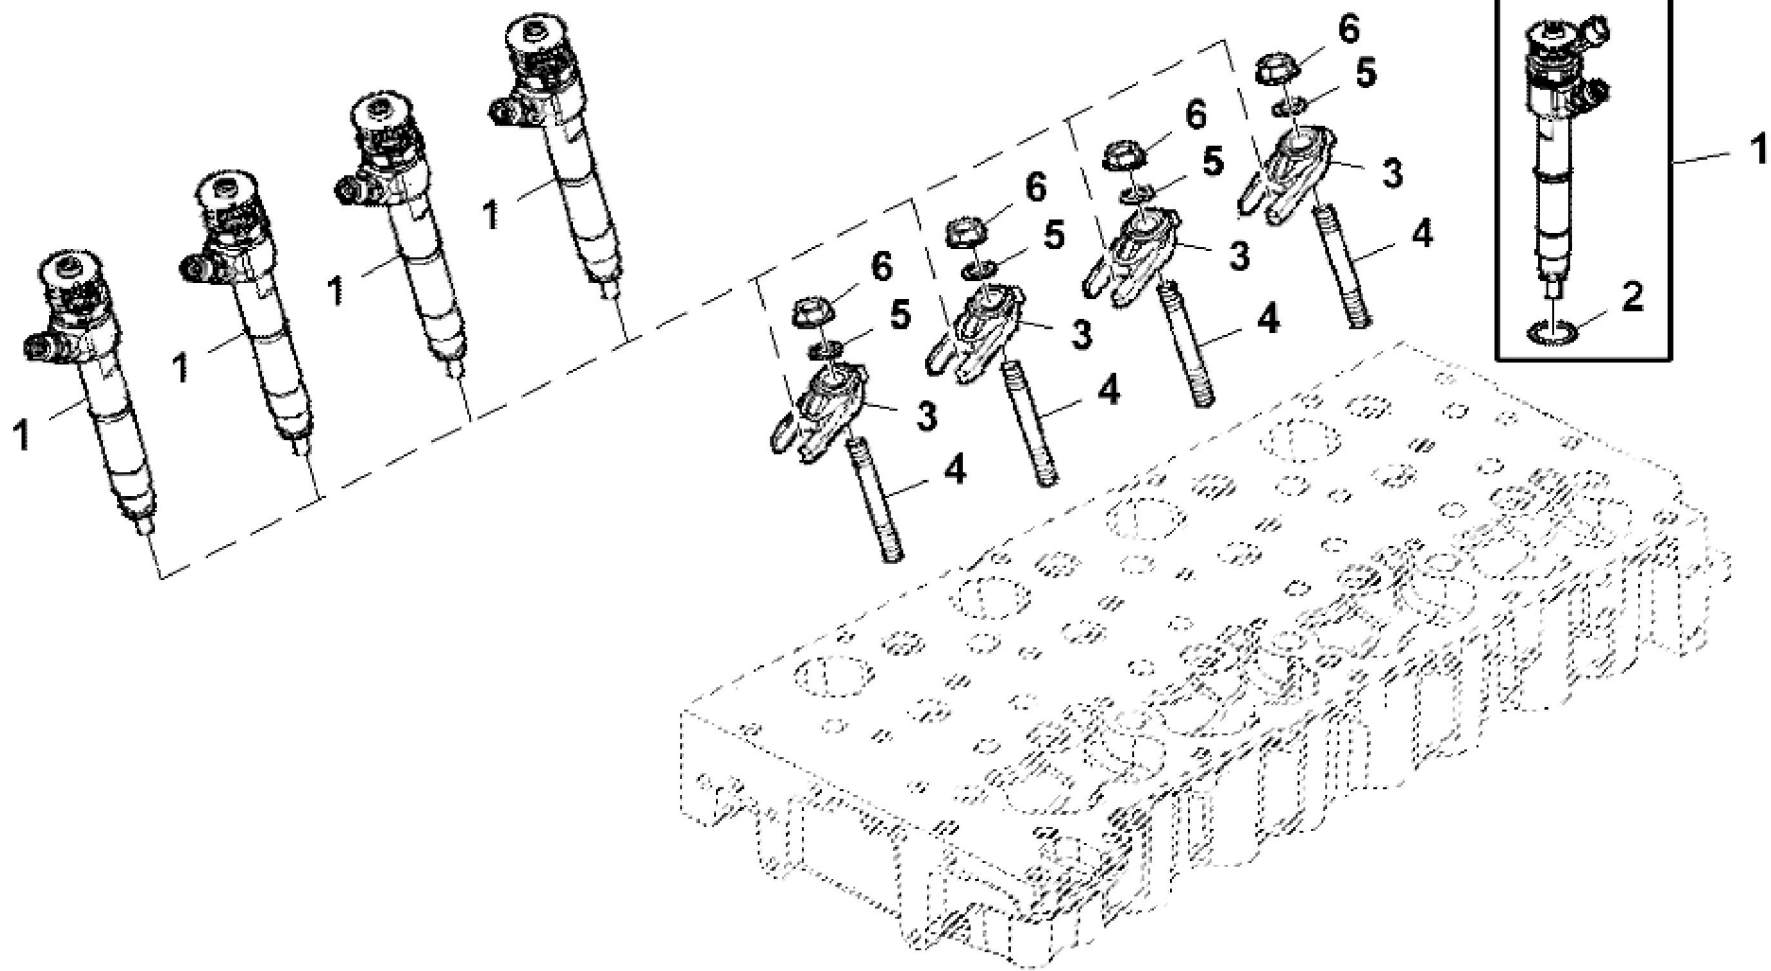

LX259834

KEY	PART NO.	PART NAME	QTY	REMARKS	
1	ER5801790338	ELECT UNIT INJECTOR REMAN	4		
2	ER0004899689	WASHER	4		
3	ER5801718290	RETAINER	4		
4	ER0016730534	STUD	4		
5	ER0500353601	WASHER	4		
6	ER0017044735	NUT	4		

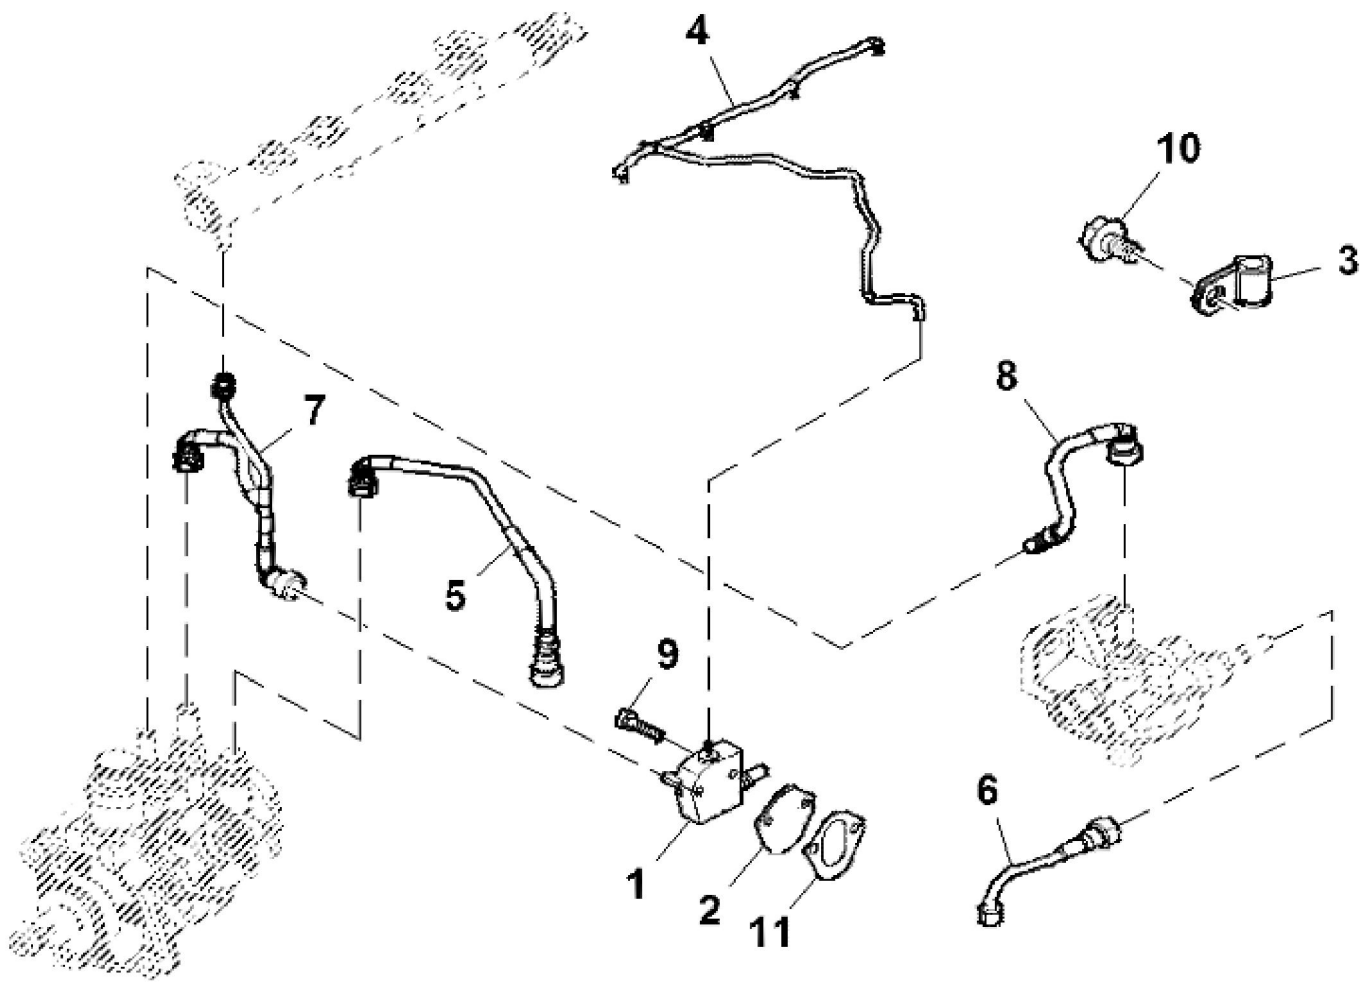

LX263319

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com