

CROWN



Parts Manual

RT3030 Series

CROWN

TABLE OF CONTENT

Table of Content

MA – SAFETY	PAGE	SERIAL NR. CUT	REV.
Safety Symbols used in the Manual	7		Rev.1 01/01
ITD – INTRODUCTION	PAGE	SERIAL NR. CUT	REV.
General	11		
Model-Number	12		
P-1.1 – LUBRICATION	PAGE	SERIAL NR. CUT	REV.
Lubrication Type	15		
Grease Intervals	16		
DIA – ELECTRICAL DIAGRAMS	PAGE	SERIAL NR. CUT	REV.
Diagrams/Control Circuit	19		
M/P – HYDRAULIC	PAGE	SERIAL NR. CUT	REV.
Hydraulic Schematic	23		
SECTION 1 – COVERS	PAGE	SERIAL NR. CUT	REV.
Covers	28,30		
Caster Wheel	32		
SECTION 2 – HYDRAULIC PARTS	PAGE	SERIAL NR. CUT	REV.
Tube/Hose Layout	36		
Pumpen Motor and Pump	38		
SECTION 3 – DRIVE UNIT	PAGE	SERIAL NR. CUT	REV.
Gearbox	42		
Drive Motor	44		
SECTION 4 – ELEKTICAL	PAGE	SERIAL NR. CUT	REV.
Elektrical Parts	48,50,52		Rev.1 04/02
Wiring Harness	54		
SECTION 5 – BRAKE	PAGE	SERIAL NR. CUT	REV.
Brake	58		
SECTION 6 – STEERING	PAGE	SERIAL NR. CUT	REV.
Steering	62		Rev.1 04/02
SECTION 7 – MAST/LIFT STRUCTURE	PAGE	SERIAL NR. CUT	REV.
Lift Structure	66		Rev.1 04/02
SECTION 8 – CYLINDER	PAGE	SERIAL NR. CUT	REV.
Lift Cylinder	70		



SECTION 10 – MISCELLANEOUS SERVICE INF.	PAGE	SERIAL NR.	CUT	REV.
Battery Trolley	74			
This Manual contains 76 Pages				

CROWN

SAFETY

Safety Symbols used in the Manual

To help guide you through the manual and to highlight particular danger areas, we have used graphic illustrations:

DANGER



This symbol indicates life-threatening risks

- Failure to comply with this notice may result in severe or fatal injuries to yourself or other people.

WARNING



This symbol indicates the risk of serious injury and/or serious material damage.

- Failure to comply with this notice may result in severe injuries to yourself or other people and/or serious material damage.

CAUTION



This symbol indicates the risk of minor injury and/or minor material damage.

- Failure to comply with this notice may result in minor injuries to yourself or other people and/or minor material damage.

INFORMATION



Contains additional information with supplementary notes and hints.

OPTION



These items relate to optional features not supplied with the standard version.

General Maintenance and Repair Safety Notes

DANGER



Read the safety notices in the truck Maintenance and Operator's Manuals.

- Failure to do so could result in severe or fatal injuries to maintenance personnel and/or other persons.

Motorised vehicles can be dangerous if maintenance and service are neglected. For this reason maintenance and inspections must be carried out at regular short intervals by trained personnel working to approved company guidelines.

DANGER



Follow all national/local safety regulations applicable for maintenance work, e.g. for work on higher levels.

- Failure to do so could result in severe or fatal injuries to maintenance personnel and/or other persons.

Maintenance and Repair

1. Maintenance work must only be carried out in accordance with the test and maintenance program contained in the present Maintenance Manual and any applicable service notices.
2. Only qualified and authorised personnel may carry out work on the truck.
3. Always keep fire extinguishers in good working condition. Do not approach fluid levels or leaks with a naked flame.
4. To clean, use a non flammable, non combustible cleaning solution which is groundwater-neutral. Only carry out cleaning with an oil separator. Protect the electrical system from dampness.
5. Keep the service area clean, dry and well-ventilated.
6. Do not allow oil to penetrate the ground or enter the draining system. Used oil must be recycled. Oil filters and desiccants must be treated as special waste products. Relevant applicable regulations must be followed.
7. Neutralise and thoroughly rinse any spilled battery fluid immediately.

8. Keep the truck clean. This will facilitate the location of loose or faulty components.
9. Make sure that capacity and data plates, warnings and labels are legible at all times.
10. Alterations or modifications by the owner or operator are not permitted without the express written authorisation from Crown.
11. Only use original Crown spare parts to ensure the reliability, safety and suitability of the Crown truck.

Before Leaving the Truck

- Stop the truck.
- Lower the fork carriage fully.
- Apply the parking brake.
- Turn off the travel switch and remove the key.
- Block all wheels when parking on an uneven surface.

Before Carrying out Work on the Truck

- Raise the truck to free the drive wheel. Press the emergency Stop button and disconnect the battery.
- Prevent the truck from rolling away.
- Before carrying out work on the hoist frame, the lift mast or on the fork carriage: Block these parts according to maintenance instructions in order to prevent them from dropping.
- Only carry out operational testing when there is sufficient room to manoeuvre, to avoid the risk of injury to yourself and others.

Before Operating the Truck

- Check the safety devices.
- Get into the driver's seat.
- Check the operation of the lifting device, travel direction switch, speed control, steering, warning devices and brakes.

Warnings and Labels on the Truck

During regular maintenance check that the warnings and labels on the truck are complete and legible.

- Clean any illegible labels.
- Replace any faulty or missing labels.

The order and meaning of the warnings and labels on the truck are described in section 10.9 of the parts manual.

CROWN

INTRODUCTION

General

The present manual is designed for Customer Service engineers who wish to familiarise themselves with the maintenance work required for the various truck components.

It also contains troubleshooting sections which can be used to identify and remedy truck faults.

INFORMATION



This book is not an operating manual. It is designed solely for specialist personnel who have been trained and authorised to carry out the work described in the manual.

This manual therefore contains fewer and less detailed warnings than the Operator's Manual, as the latter is aimed at persons who have very little or no prior experience at all.

Operating Instructions

This manual contains no operating instructions. An operating instructions manual is supplied with the vehicle. Additional copies can be ordered as required.

With the help of this manual you and your personnel will be able to ensure the long service life, operational safety and error free functioning of your CROWN vehicle.

Service Training

CROWN offers the appropriate vehicle related training for service personnel. Details on this training can be obtained from CROWN on request.

Ordering Spare Parts

Spare parts can be ordered by quoting:

- The truck specification number
- The truck model number
- The truck serial number

This information can be found on the truck's data plate. Only if this information is provided can the order be processed quickly, correctly and reliably.

Please refer to the Technical Specifications Sheet for the utilisable loads, technical data and dimensions for this series. Brochures can be obtained from your CROWN dealer or from the following address:

CROWN Gabelstapler GmbH
Moosacher Str. 52
80809 Munich
GERMANY
Tel.: +49 (0)89 / 93 002 -0
Fax: +49 (0)89 / 93 002 -175 oder 133

Model-Number

RT3030

Modeldescription

Rider Pallet Truck with 3.300 kg capacity



LUBRICATION AND ADJUSTMENT

Lubricant Type	Product Description	Manufacturer	CROWN-Part-No.	Type
Grease (multi purpose)	Aralube HLP-2 LM-Grease Regulus A2 Beacon EP2 EP2 Mobiluxe E2 Retinax LX	Aral Castrol Century Esso Maxol Mobil Shell	053002-001	B
Low temperature grease	Aralube SKL2 Unirex Lotemp EP	Aral Mobil	053002-005	BB
Lubrication oil (chain)	Kowal 40 Essolube HDX Plus + 40 Delvac 1240	Aral Esso Mobil	053002-007	G
Low temperature lubrication oil	SHC 626	Mobil	053002-008	GG
Hydraulic oil	Vitam GF 32 Hyspin AWS-32 Nuto H32 DTE 24 Tellus 32	Aral Castrol Esso Mobil Shell	053001-003	D
Low temperature hydraulic oil	Univis J 13 Aero HFA	Aral Mobil	053001-008	DD
Transmission oil	Hyp 85W90 GX - D 85W90 Mobilube HD85/90 Spirax MB 90	Aral Esso Mobil Shell	053002-004	A
Low temperature transmission oil	Mobilube SHC	Mobil	053002-006	AA
Rubber and vinyl dressing				H
Special grease	MOS ₂ Lithium	Dow Corning	063002-022	M
Universal lubrication oil	SAE 40			C

L01-gb

Grease Points / Intervals

Item	Component	Type	Vol.	100 hours	250 hours	500 hours	1000 hours	2000 hours
L-1	Check hydraulic oil level, replenish if necessary	D	A/R	X				
L-2	Replace hydraulic oil and filter	D	A/R	Initially after 500 service hours			X	
L-3	All hinges	C	A/R		X			
L-4	Grease steering linkage	B	A/R			X		
L-5	Grease steering chain	G	A/R			X		
L-6	Drive unit live ring bearing	B	A/R			X		
L-7	Grease lifting mechanism	B	A/R			X		
L-8	Lift cylinder attachment	B	A/R			X		
L-9	Piston rod attachment	B	A/R			X		
L-10	Change gear oil	A	A/R	Initially after 250 service hours				X
L-11	Seat rails	B	A/R				X	

L08-GB

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com