 


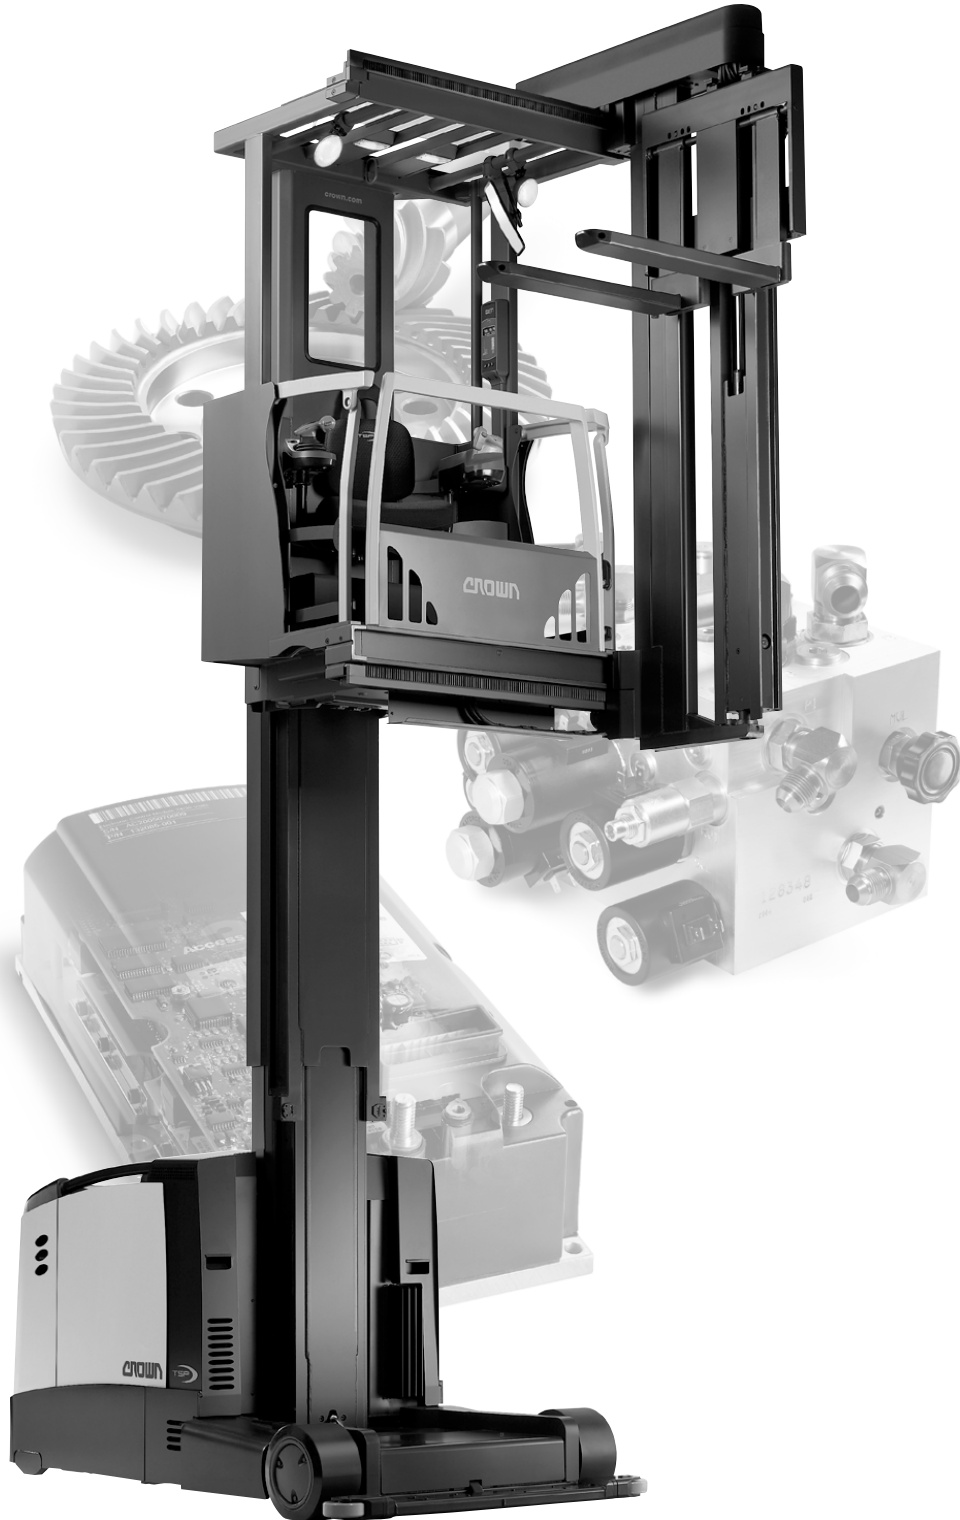

TSP6000 SERIES PARTS MANUAL



Order Number: 812732-006
Revision: A • Printed in U.S.A

Revision No. - Date	Title	Page Number
	Introduction	ITD-1961-001
SECTION 1 POWER UNIT PARTS		
	Power Unit	01.0-1961-001
	Battery Compartment Components	01.2-1961-001
SECTION 2 HYDRAULIC PARTS		
01 - 3/06	Hydraulic System - Main Frame	02.0-1960-001
	Hydraulic System - Platform	02.0-1960-100
	Hydraulic System - Load Handler	02.0-1960-200
	Pump	02.1-1960-001
	Pump Motor	02.2-1960-001
	High Performance Pump Motor	02.2-1960-050
	Manifold - Main Frame	02.4-1960-001
	Manifold - Load Handler	02.4-1960-050
	Fork Extend Manifold	02.4-1960-100
	Motor	02.6-1960-001
SECTION 3 DRIVE UNIT PARTS		
	Drive Unit	03.0-1960-001
	Traction Motor	03.1-1960-001
01 - 3/06	Drive Wheel	03.2-1960-001
SECTION 4 ELECTRICAL PARTS		
	Electrical Components - Power Unit	04.0-1961-001
	Electrical Components - Power Unit (Grounding Pads)	04.0-1961-050
	Electrical Components - Main Frame	04.0-1960-100
	Electrical Components - Platform	04.0-1961-200
	Contactor Panel	04.1-1961-001
	Power Unit Distribution Panel	04.3-1960-001
	Platform Distribution Board	04.3-1960-050
	Contactor - ED1 & ED2	04.4-1960-001
	Armrest Left	04.5-1960-001
01 - 3/06	Lights, Fan, Key Switch Panel	04.5-1960-100
	Armrest Right	04.6-1960-001
	Connectors	04.8-1960-001
	Display & Vehicle Control Module	04.8-1960-250
	Control Cables	04.8-1960-500
	Strobe/Flashing Light	04.9-1960-001
	Operator Fan	04.9-1961-050

Revision No. - Date	Title	Page Number
SECTION 5 BRAKE PARTS		
	Brake	05.3-1960-001
SECTION 6 STEERING PARTS		
	Steering Gearbox	06.0-1960-001
	Steering Feedback	06.0-1960-500
	Steering Motor	06.2-1960-001
01 - 3/06	Wire Guidance Components	06.7-1960-001
SECTION 7 MAST PARTS		
	Counterweights 1.0 & 1.25	07.0-1961-001
	Counterweights 1.0 & 1.25 PDS Ready	07.0-1961-050
	Counterweights 1.5 PDS Ready	07.0-1961-100
01 - 3/06	Height Cable Switch Assembly	07.0-1960-500
	Mast - TF	07.1-1960-001
	Mast - TN	07.1-1960-100
	Load Wheel	07.4-1960-001
	Yoke - TF	07.5-1960-001
	Mast Pulleys - Rear	07.5-1960-050
	Tip Out - TF	07.5-1960-100
	Tip Out - TN	07.5-1960-150
	Hose Take Up - TF	07.5-1960-200
	Hose Take Up Pulleys - TF	07.5-1960-250
01 - 3/06	Lift Chain	07.6-1960-001
01 - 3/06	Auxiliary Mast	07.7-1960-001
	Fork - Telescopic	07.9-1960-003
	Fork - Fixed	07.9-1960-050
SECTION 8 CYLINDER PARTS		
	Lift Cylinder - TN	08.1-1960-001
	Primary Lift Cylinder - TF	08.2-1960-001
	Secondary Lift Cylinder - TF	08.2-1960-100
	Auxiliary Lift Cylinder	08.4-1960-001
02 - 12/05	Tilt Cylinder	08.6-14.0-002
01 - 3/06	Fork Cylinder	08.7-1960-001
	Pivot Cylinder	08.8-1960-001
	Shock Absorber	08.9-1960-001

Revision No. - Date	Title	Page Number
SECTION 9 PLATFORM PARTS		
01 - 3/06	Platform	09.0-1961-001
	Seat Assembly	09.0-1960-150
	Height Sensor - Platform	09.0-1960-200
	Gates	09.1-1961-001
01 - 3/06	Load Handler	09.1-1960-050
	Traverse Drive	09.1-1960-100
	Pivot Mechanism	09.1-1960-150
	Fixed Fork Carriage	09.1-1960-350
01 - 3/06	Telescopic Fork Carriage	09.1-1960-400
	Tilting Fork Carriage	09.1-1960-450
01 - 3/06	Brake Pedals	09.2-1960-001
	Operator Presence Pedals	09.2-1960-050
SECTION 10 ACCESSORIES		
01 - 3/06	Work Assist Accessories	10.0-1960-001
	Power Unit Rail Guide	10.4-1960-001
01 - 3/06	Power Unit Rail Guide - Low Profile	10.4-1960-050
	Main Frame Rail Guide	10.4-1960-100
	Main Frame Rail Guide - EAC	10.4-1960-150
	Main Frame Rail Guide - Low Profile	10.4-1960-200
	Main Frame Rail Guide - Low Profile EAC	10.4-1960-250
	Labels & Decals	10.9-1960-001

This manual is intended for the service technician who is seeking information about maintenance and service replacement parts. It contains a section on troubleshooting which will enable a qualified technician to locate and solve problems which may occur.

OPERATOR INSTRUCTIONS

This manual *does not* contain operator instructions. Operator Instructions in tag or booklet form are sent with each truck. Additional copies can be ordered if required. These booklets are for you and your personnel to insure years of safe, trouble-free operation of your Crown Lift Truck. For turret stockpicker operator instructions, refer to Crown publication, "TSP 6000 Operator Manual".

OPERATOR TRAINING

Crown produces a complete series of operator training programs available through your local Crown dealer. A complete listing of these and other available programs can also be found under "Training" on crown.com.

SERVICE TRAINING

Complete Service Training is available for the lift truck technician covering all Crown Lift Trucks, module systems, wire guidance, hydraulic and electrical systems. To obtain more information concerning service training, contact your Crown Dealer or under "Training" on crown.com.

REPLACEMENT PARTS


When ordering replacement parts from this manual, always specify, along with the part number, model and serial number of the truck. This information will further enable us to give correct, fast and efficient service.

For current part numbers of service manuals, operator manuals, operator training programs, truck capacities and technical specifications, contact your local dealer or at www.crown.com.

This manual is arranged according to major sections covers maintenance and replacement parts. The sectional descriptions are as follows:

MAINTENANCE		REPLACEMENT PARTS	
SECTION	DESCRIPTION	SECTION	DESCRIPTION
M1	Lubrication and Adjustments	1	Basic Chassis or Power Unit
M2	Hydraulics	2	Hydraulic System and Components
M3	Drive Unit	3	Drive Unit and Components, Drive Tire
M4	Electrical Including Event Codes	4	Electrical Components
M5	Brake	5	Brake Assemblies and Brake Systems
M6	Steering	6	Steering System and Components
M7	Mast and Main Frame	7	Main Frame and Mast Assemblies
M8	Cylinder	8	Cylinders
M9	Platform	9	Platform Assembly
M10	Glossary	10	Accessories and Labels and Decals
		11	Specifications

The truck data number provides you and your Crown dealer with a wealth of information to insure selection of proper parts for your Crown truck. You may simply provide this number to your Crown dealer, or use the following breakdown if selecting your own part numbers or service information from this manual.

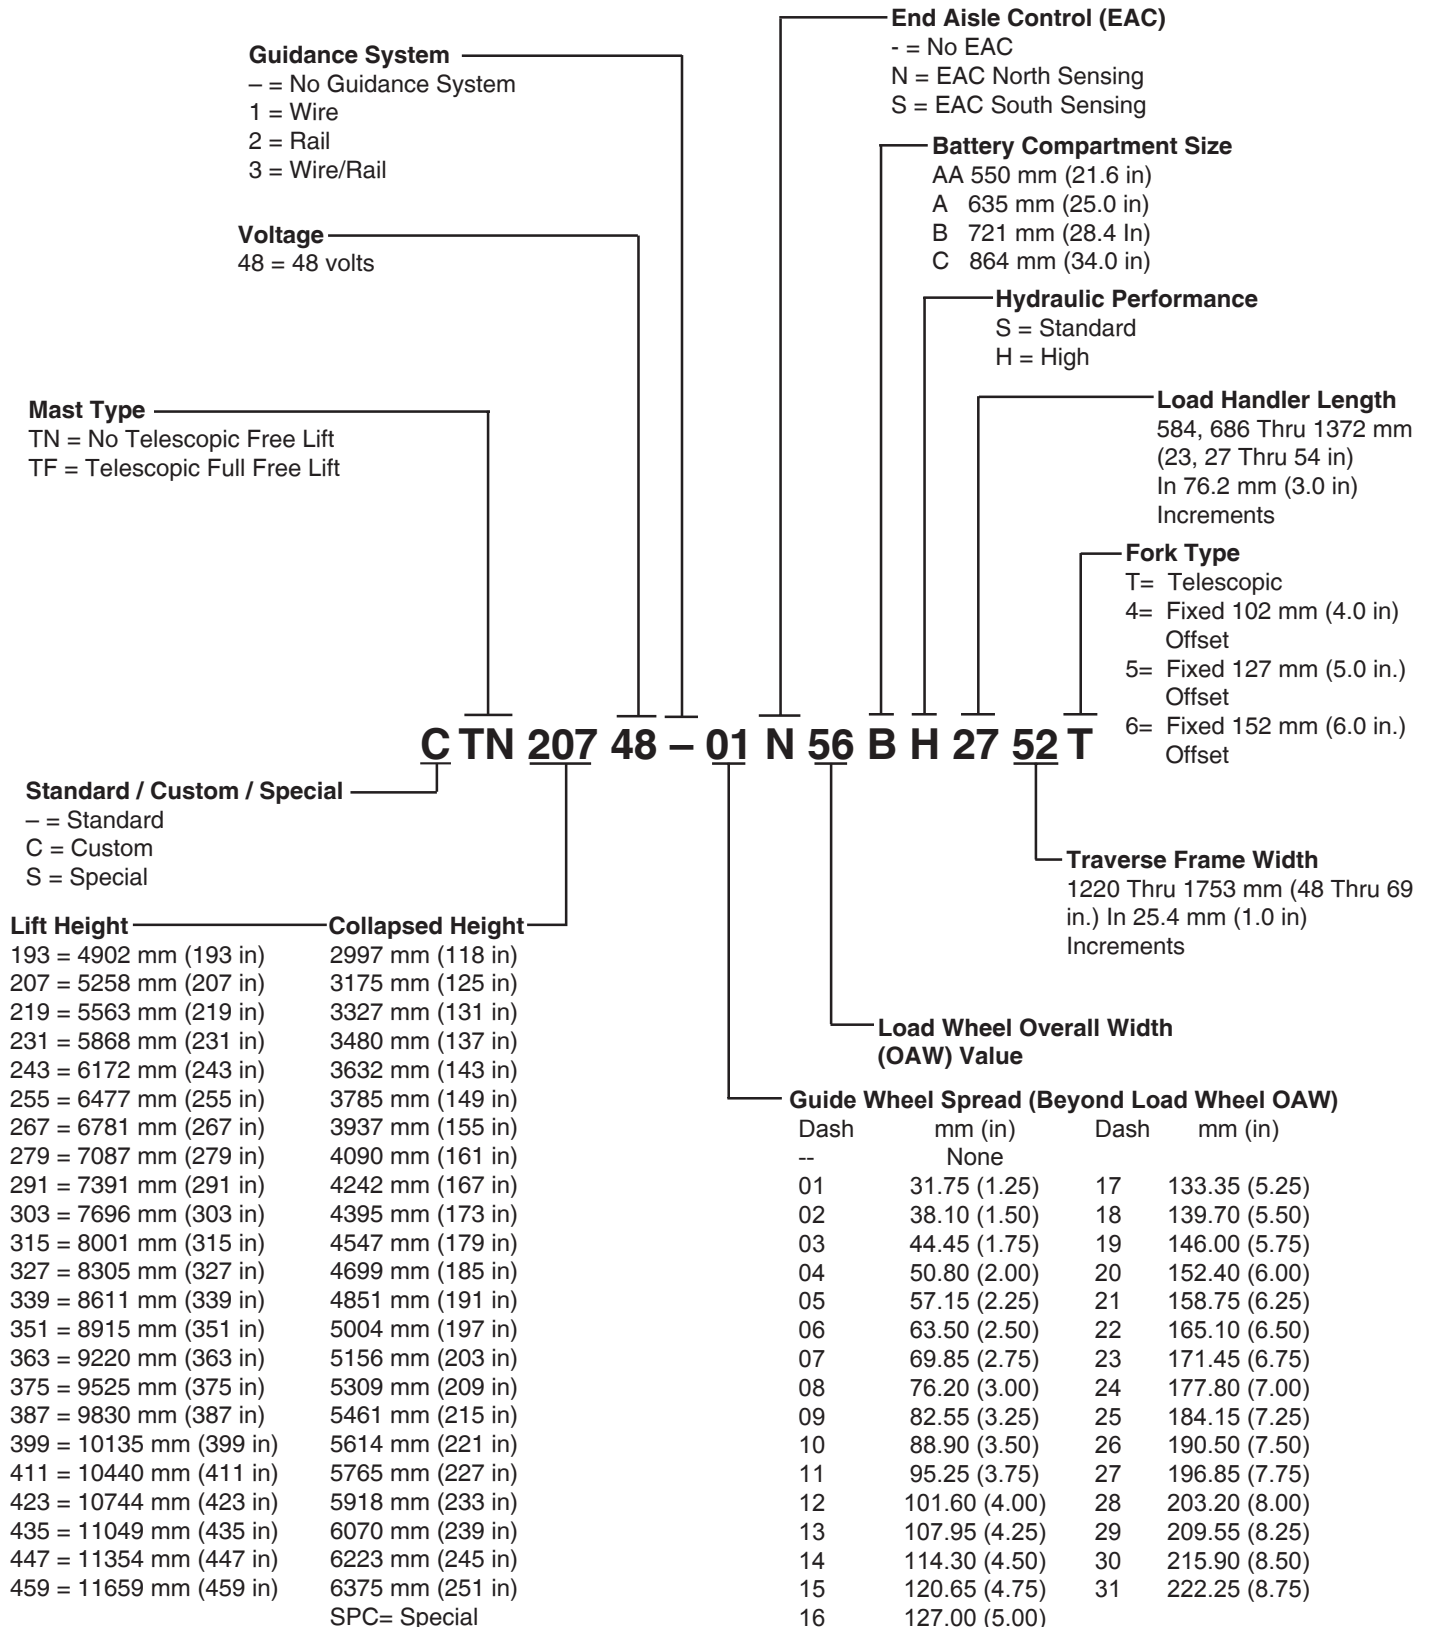

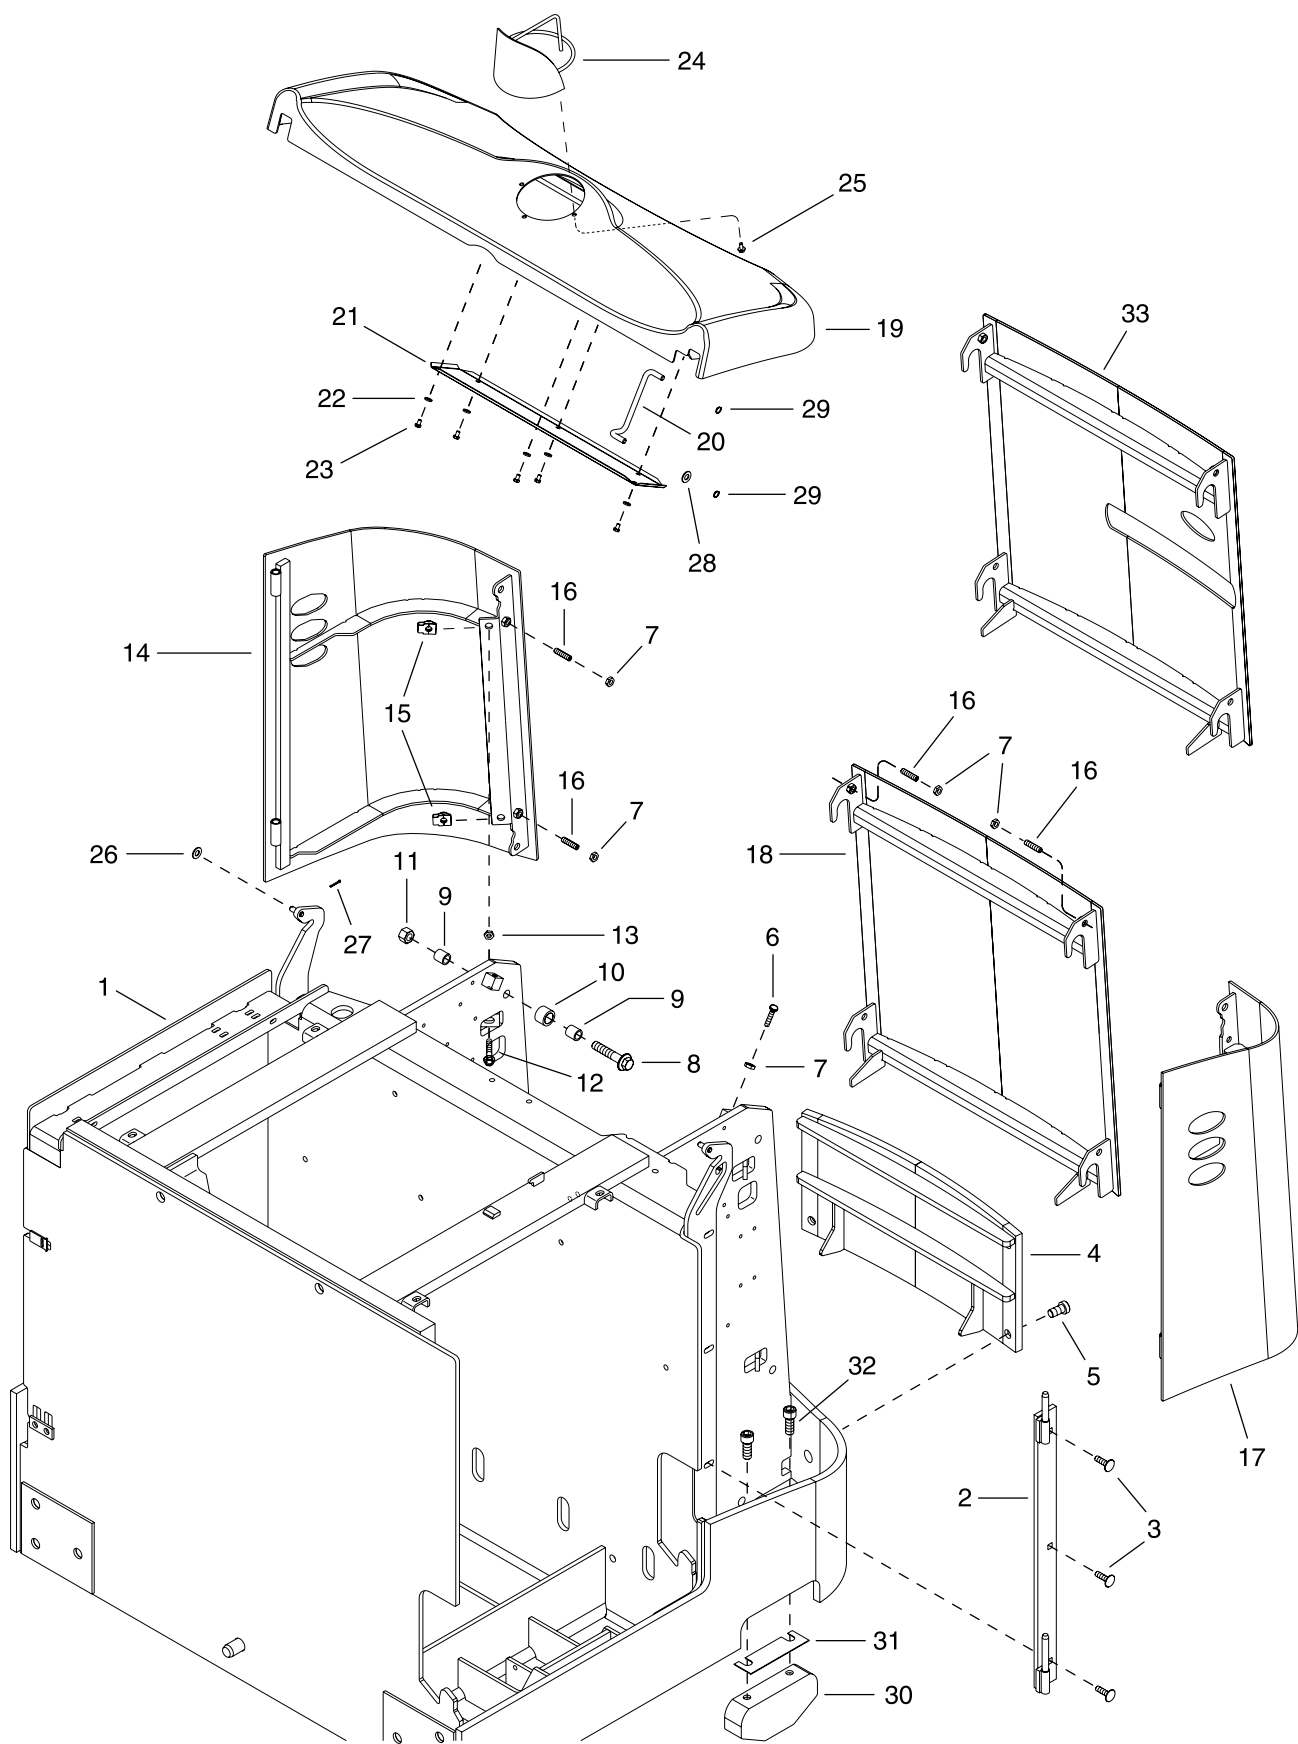


Figure 13886

INDEX	PART NUMBER	PART NAME	NUMBER REQUIRED
1	131420-001*	Power Unit ("AA" Battery Compartment)	1
	131420-002*	Power Unit ("A" Battery Compartment)	1
	131420-003*	Power Unit ("B" Battery Compartment)	1
	131420-004*	Power Unit ("C" Battery Compartment)	1
2	133052-001	Hinge LH (Shown)	1
	133052-002	Hinge RH	1
3	060075-023	Screw	6
	060059-029	Nut	6
4	133344	Cover	1
5	060117-014	Screw	4
6	130525	Screw (With Pad)	2
7	060059-007	Nut	8
8	060117-006	Screw	4
9	132846-005	Spacer	8
10	133063	Elastomer Tube	4
11	060059-012	Nut	4
12	060075-022	Screw	4
13	060059-007	Nut	4
14	133054-002	Rear Door RH	1
15	060102-006	U-Nut	4
16	060075-021	Screw	6
17	133054-001	Rear Door LH	1
18	133058	Rear Door	1
19	133193	Rear Cover	1
20	133203	Rod	1
21	133204	Screen	1
22	060030-092	Flatwasher	6
23	060062-004	Screw	6
24	133199	Guard	1
25	060062-017	Screw	3
26	060030-026	Flatwasher	8
27	060038-006	Cotter Pin	2
28	060030-026	Flatwasher	1
29	060009-175	Retaining Ring	2
30	133508	Skid Bar	2
31	133509-001	Shim	AR
32	060017-012	Screw	2
33	133058-002	Rear Door (For trucks equipped with PDS)	1

Always Specify Model, Data & Serial Numbers

***To select appropriate part number, refer to truck data number.
The truck data number represents truck features. Refer to Introduction.**

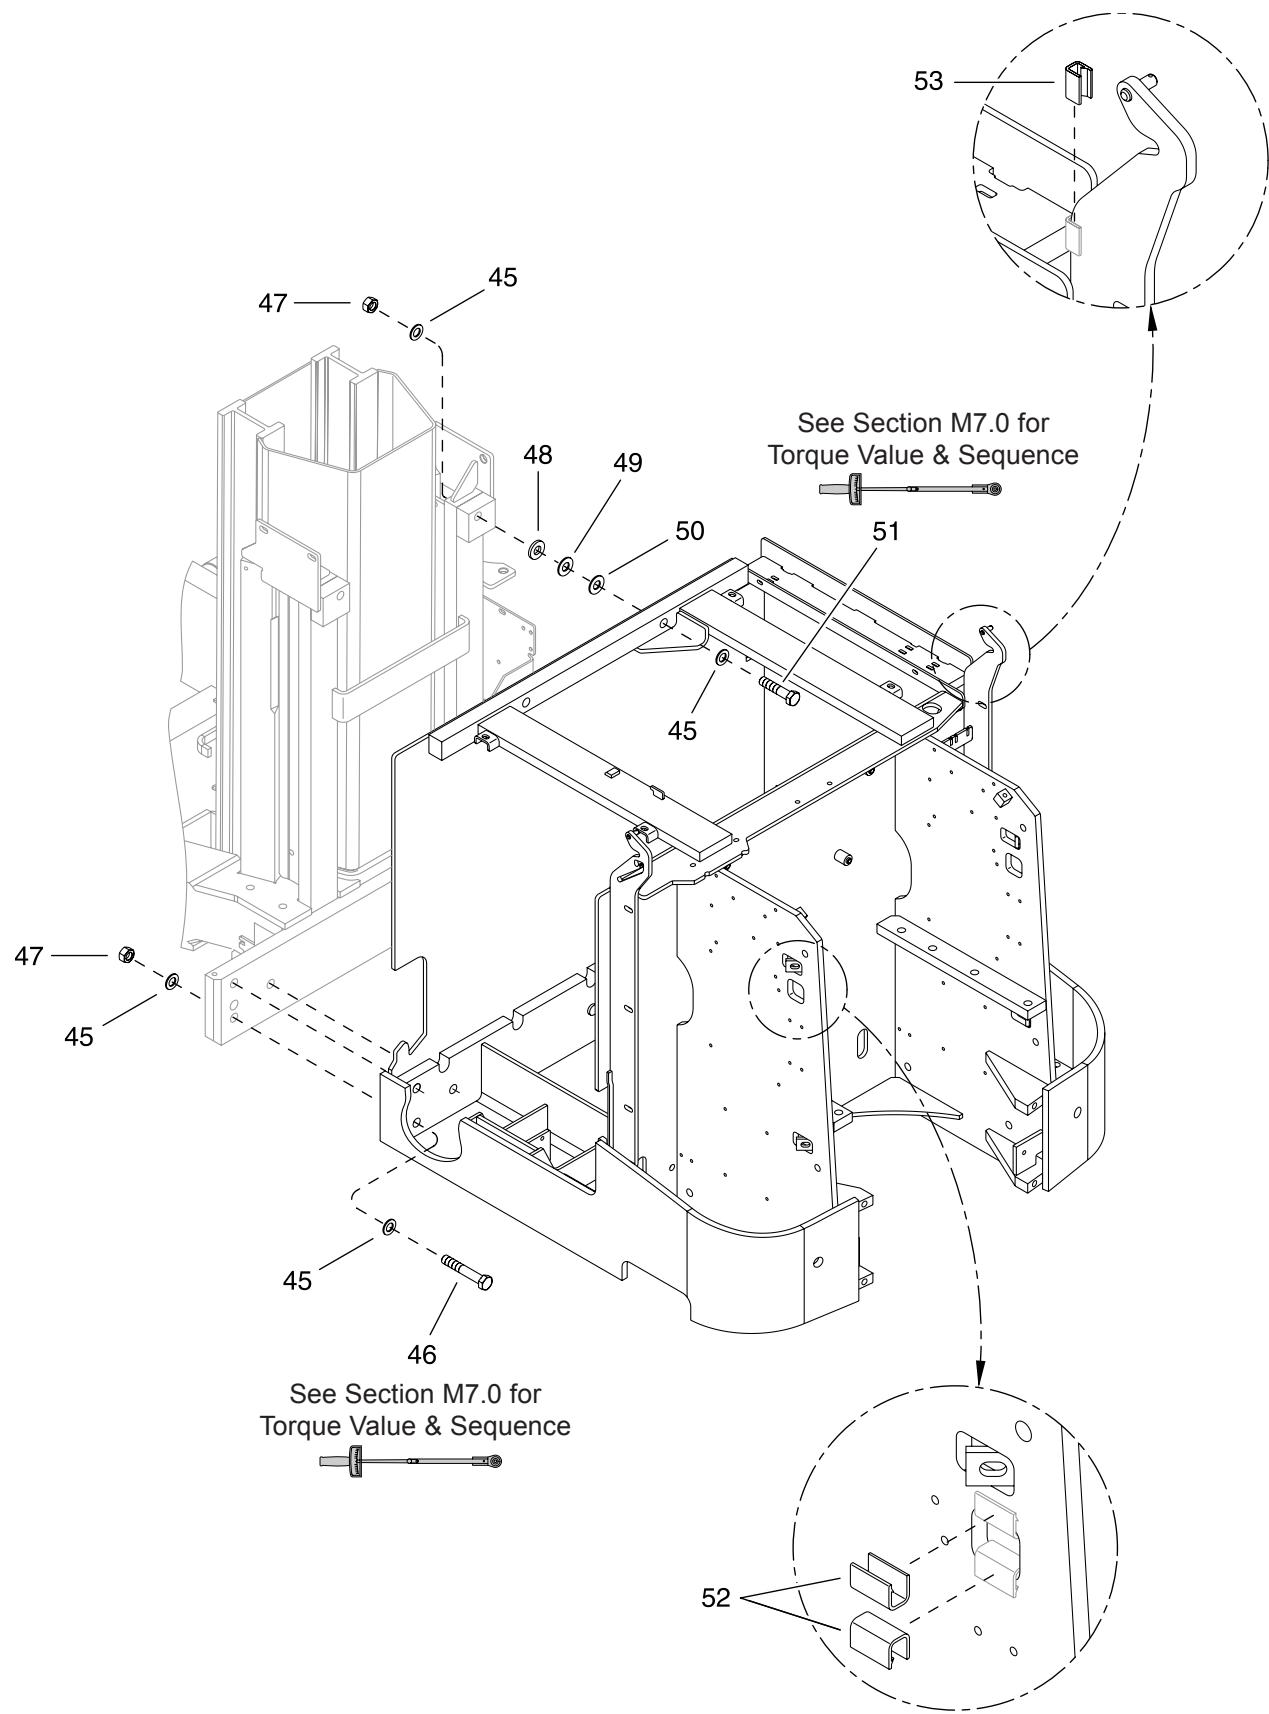


Figure 13887

INDEX	PART NUMBER	PART NAME	NUMBER REQUIRED
45	060131-005	Flatwasher	16
46	060099-008	Screw	6
47	060059-035	Nut	8
48	060131-006	Flatwasher (6 mm (0.24 in) thick)	2
49	060131-007	Flatwasher (3 mm (0.12 in) thick)	AR
50	060131-008	Flatwasher (1.6 mm (0.06 in) thick)	AR
51	060099-007	Screw	2
52	127341-016	Edging	2
53	127341-017	Edging	1

Always Specify Model, Data & Serial Numbers

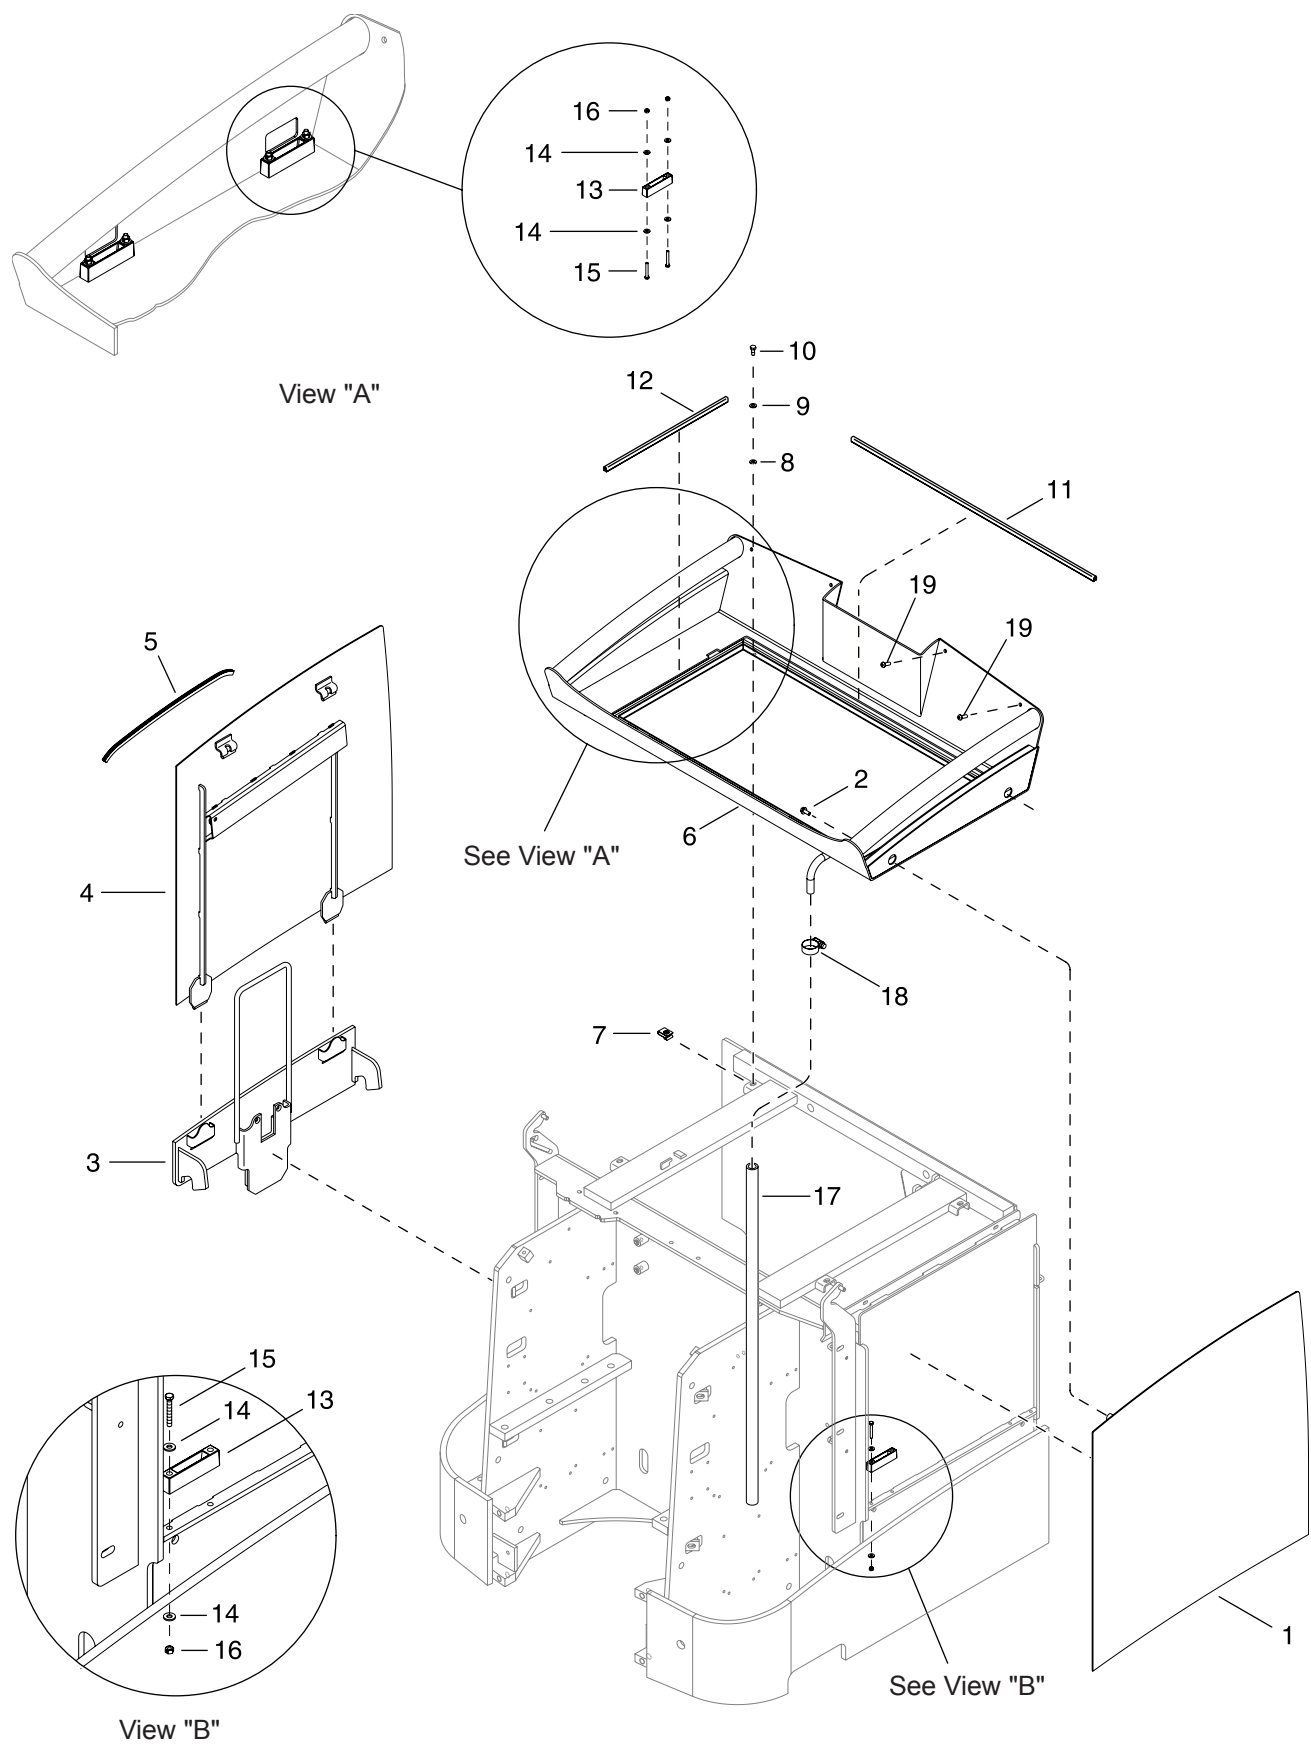


Figure 12560

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.
You can download the most
perfect and complete manual in
the world immediately.

Our support email:
ebooklibonline@outlook.com