




9802/4530 E2-4-1 PUMP, MAIN HYDRAULIC MANUAL

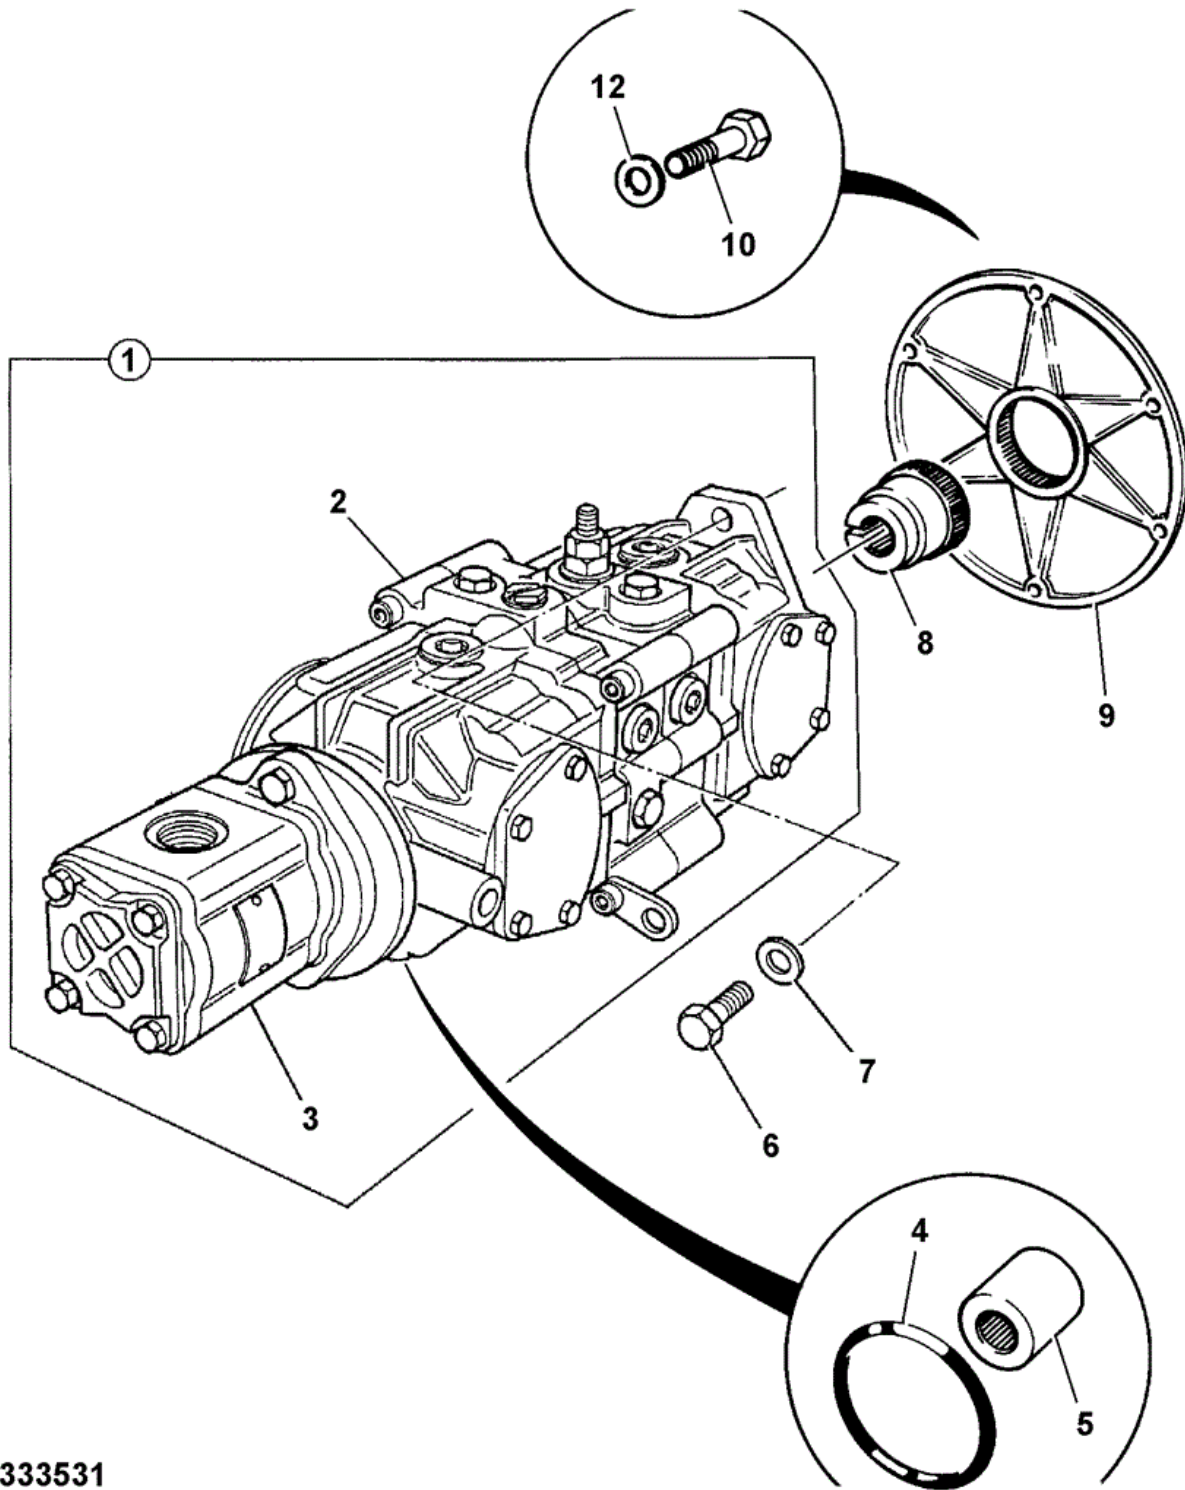


333531

Item	Part #	Change No	Description	Usage Code	QTY
1	20/213100	<M680971	Pump std. flow, manual single gear pump		1
1	20/925248	<Feb-2002	Pump std. flow, manual single gear pump		1

1	20/925351		Pump std. flow, manual single gear pump		1
1	20/213200	<M681213	Pump Hi-flow, manual double gear		1
1	20/925245		Pump Hi-Flow, manual double gear		1
2	:20/212500	<M680971	Pump hydrostatic, std.		1
2	:20/925249		Pump hydrostatic std.		1
2	:20/212600	<M681213	Pump hydrostatic, Hi-flow		1
2	20/925247		Pump hydrostatic Hi-Flow		1
3	:20/212700	<Feb-2002	Pump gear, single		1
3	20/925349		Pump gear, single		1
3	:20/212800		Pump gear, double		1
4	:20/950100		O Ring		1
5	:20/950080		Coupling 22t/11t		1
6	1315/0509Z	<Dec 2005	Setscrew M12 x 35mm		2
6	1315/0509D	>Jan 2006	Screw M12x35mm		2
7	1420/0009Z		Washer (M12)		2
8	45/906800		Clamp hub coupling		1
9	45/913700		Coupling outer		1
10	1305/1608Z		Setscrew (5/16 UNC x 1-1/4")		8
12	1422/0007Z		Washer Hardened (M8)		8


JCB 9802/4530 E2-4-2 PUMP, HYDROSTATIC MANUAL, COMPONENTS

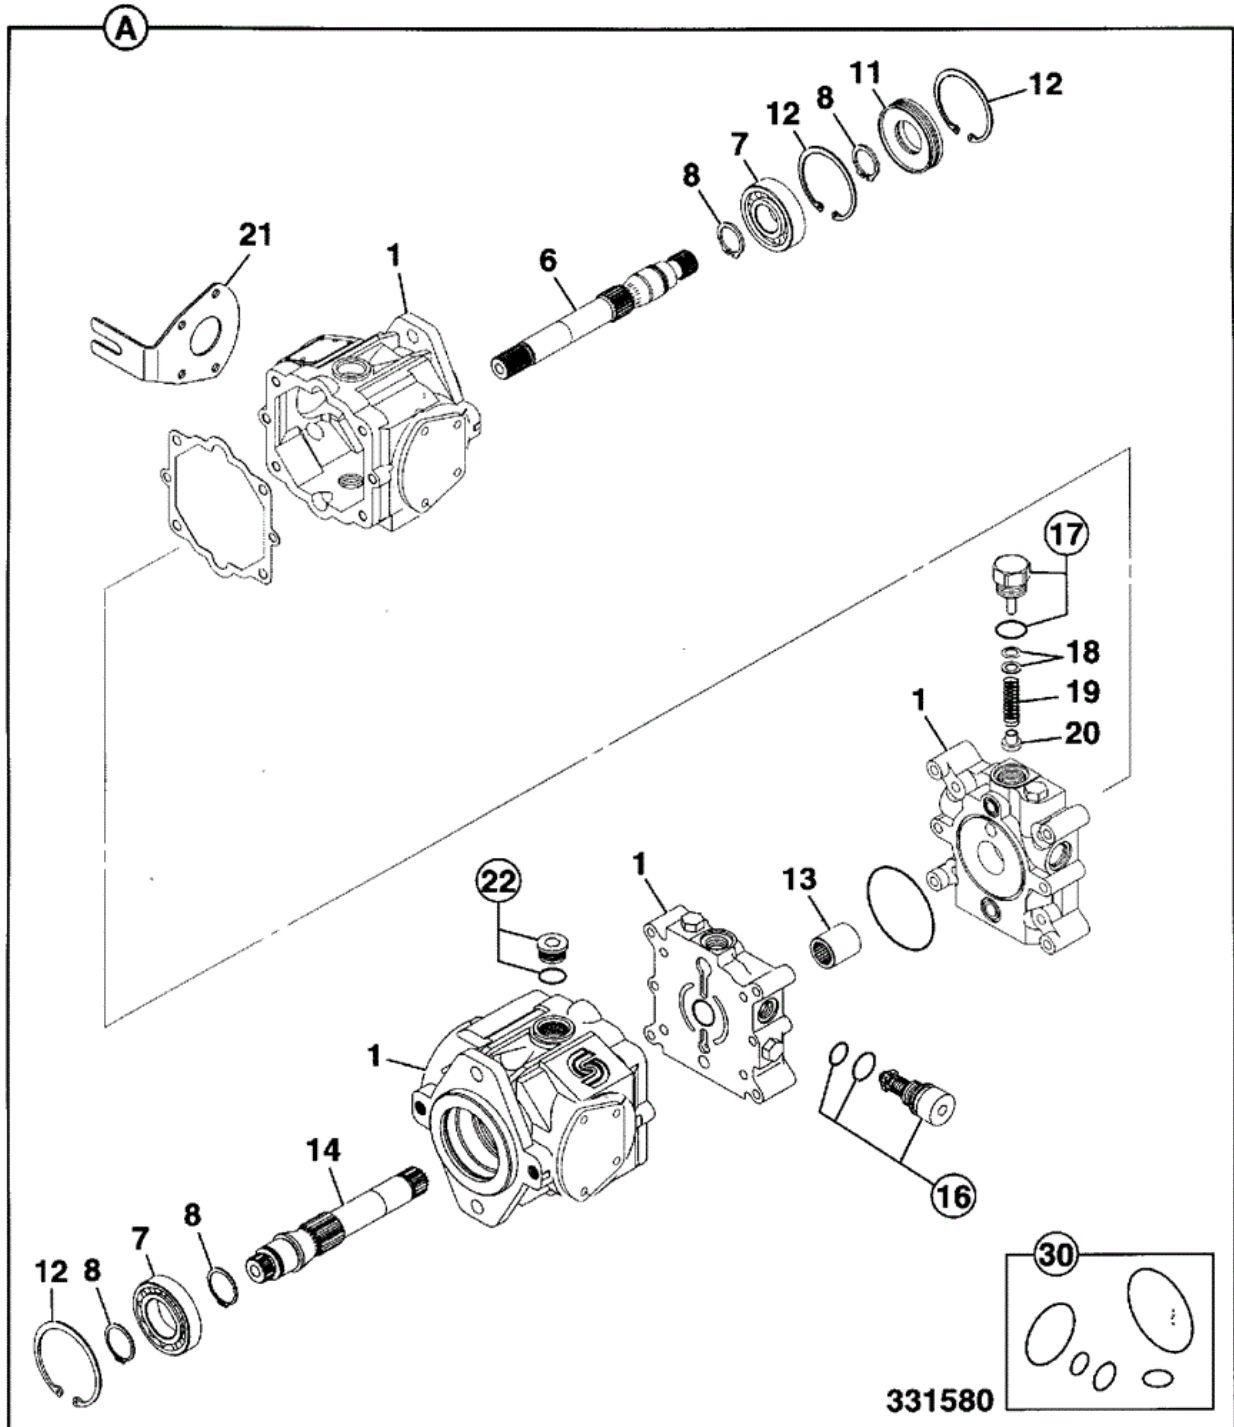

Item	Part #	Change No	Description	Usage Code	QTY
A	20/212500	<M680971	Pump hydrostatic, std.		1
A	20/925249		Pump hydrostatic std.		1

1	****		None serviced part		1
6	:20/950061		Shaft front		1
7	:20/950067		Bearing		1
8	:20/950040		Ring retaining		4
11	:20/950070		Seal		1
12	:20/950041		Ring retaining internal		1
14	:20/950068		Shaft rear		1
16	:20/950066		Valve 385 bar		1
17	:20/950062		Valve charge relief		1
18	:20/950064		Kit-shim		1
19	:20/950063		Spring		1
20	:20/950065		Poppet charge relief		1
21	:20/950069		Bracket trunnion		1
22	:20/205619		Plug		1
30	:20/950226		Kit-seal		1

JCB 9802/4530 E2-5-1 PUMP, HYDROSTATIC SERVO, COMPONENTS

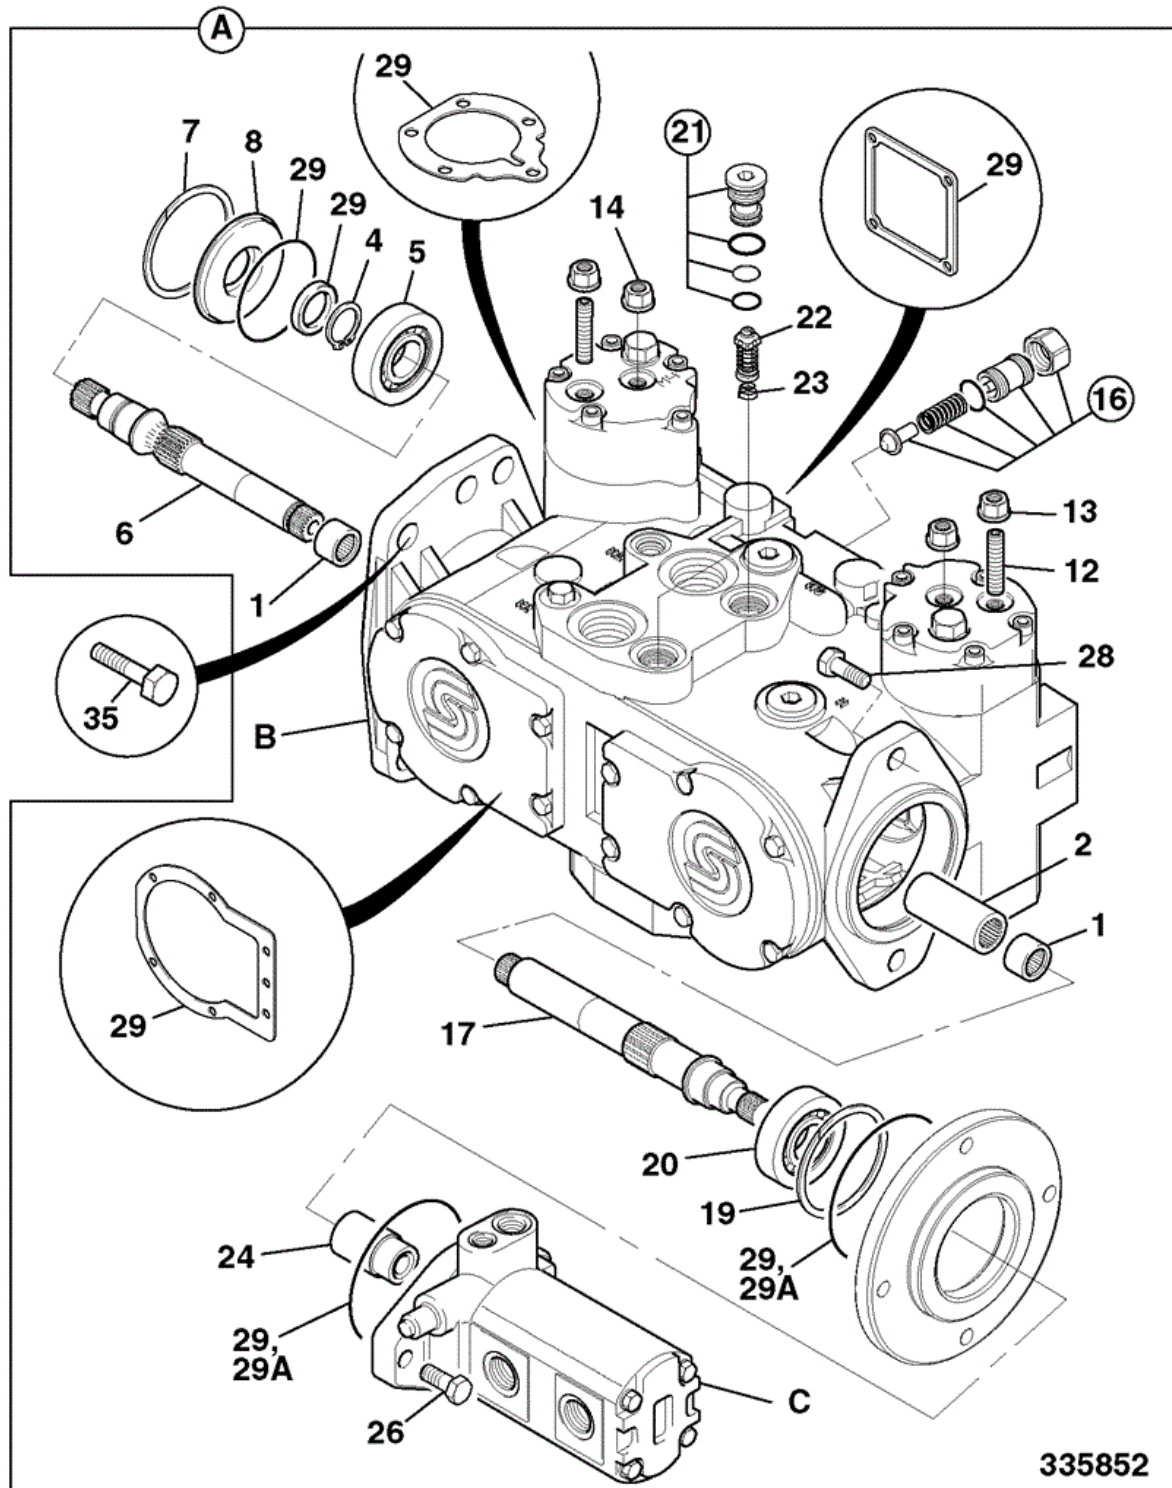



Item	Part #	Change No	Description	Usage Code	QTY
A	20/212900	<Feb-2002	Pump hydrostatic, servo with gear pump		1

A	20/925350	Superseded	Pump hydrostatic,servo with gear pump		1
A	M.S.S.		Multi Supersession <i>MSS Components are items B,C,24 and 29A See Note 1</i>		1
B	:20/212300		Pump hydrostatic		1
C	:20/212700	<Feb-2002	Pump gear, single		1
C	20/925349		Pump gear, single		1
1	::20/205614		Bearing needle		2
2	::20/950180		Coupling 22 teeth		1
4	::20/207604		Ring retaining		1
5	::20/950181		Bearing		1
6	::20/950182		Shaft shaft 15 teeth		1
7	::20/207609		Ring internal retaining		1
8	::20/207654		Carrier shaft seal		1
12	::20/950361		Stud		2
13	::20/950362		Nut		2
14	::20/207621		Nut seal M10 x 1.0		2
16	::20/950183		Valve charge relief		1
17	::20/950184		Shaft 13 teeth		1
19	::20/950185		Ring retaining		1
20	::20/950186		Bearing		1
21	::20/950187		Plug assembly		4
22	::20/950188		Valve assembly 385bar		4
23	::20/950189		Spring		4
24	::20/950190		Coupling		1
29	:20/950360		Kit seal-overhaul		1
29A	:20/950100		O Ring		1
35	1315/0709Z	<Dec 2005	Bolt M16 x 35mm		6
35	1315/0709D	>Jan 2006	Screw M16x35 long		6

Note 1: Assembled pump no longer available,parts to be assembled by dealer, re-use existing bolts




9802/4530 E2-6-1 PUMP, GEAR

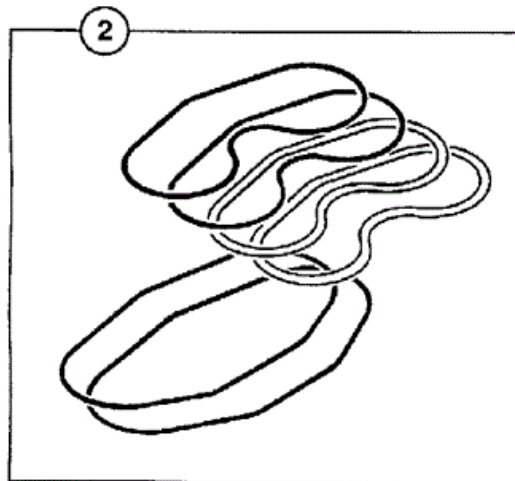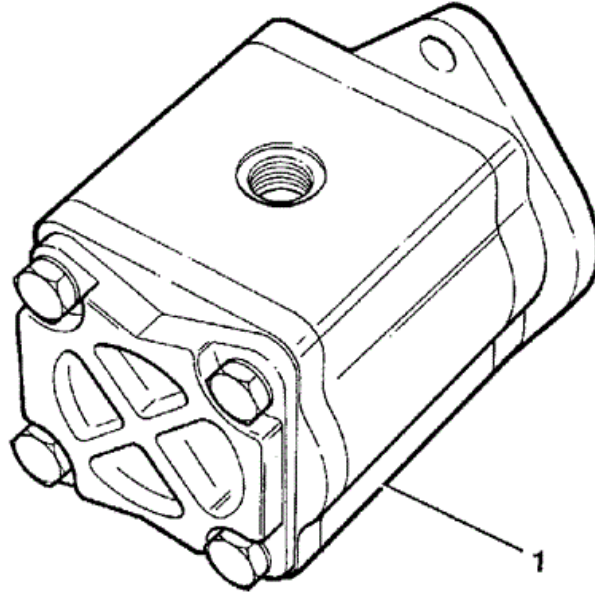

Item	Part #	Change No	Description	Usage Code	QTY
1	20/212700	<Feb-2002	Pump gear, single		1
1	20/925349		Pump gear, single		1
2	:20/950193		Kit seal <i>for 20/212700 & 20/925349</i>		1



9802/4530 E3-1-2 VALVE MOUNTING MANUAL, HAND OR FOOT

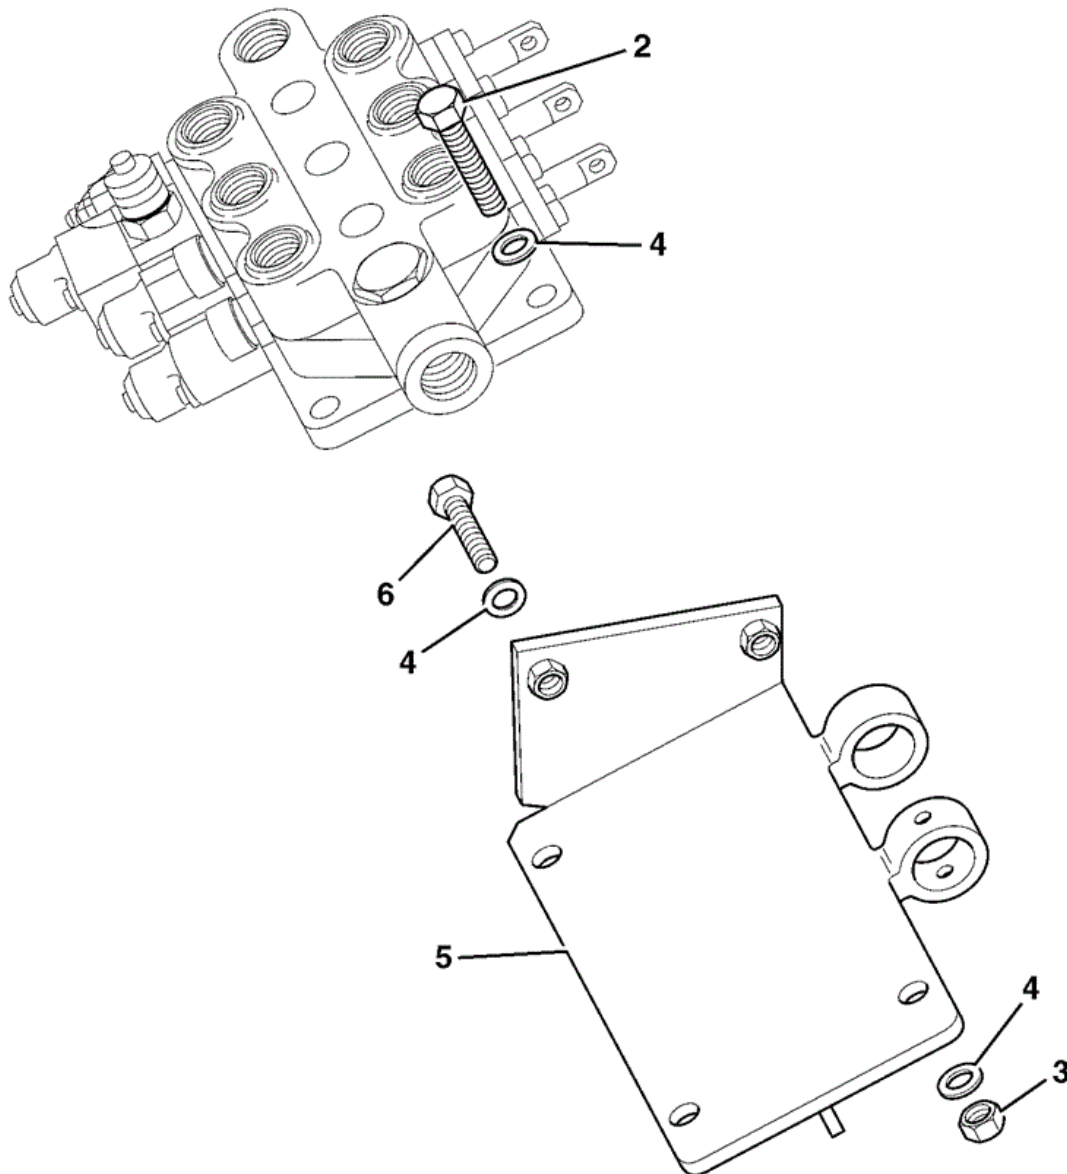


379120

Item	Part #	Change No	Description	Usage Code	QTY
2	1315/0412Z		Bolt M10 x 1.5 x 50		3

3	1370/0303Z		Nut lock M10		4
4	1420/0008Z		Washer (M10)		4
5	335/02183	Superseded	Bracket manual valve block		1
5	335/02331		Bracket servo valve mounting		1
6	1315/0409Z		Setscrew M10 x 35		3



9802/4530 E3-2-2 VALVE, MANUAL FITTINGS & ADAPTERS

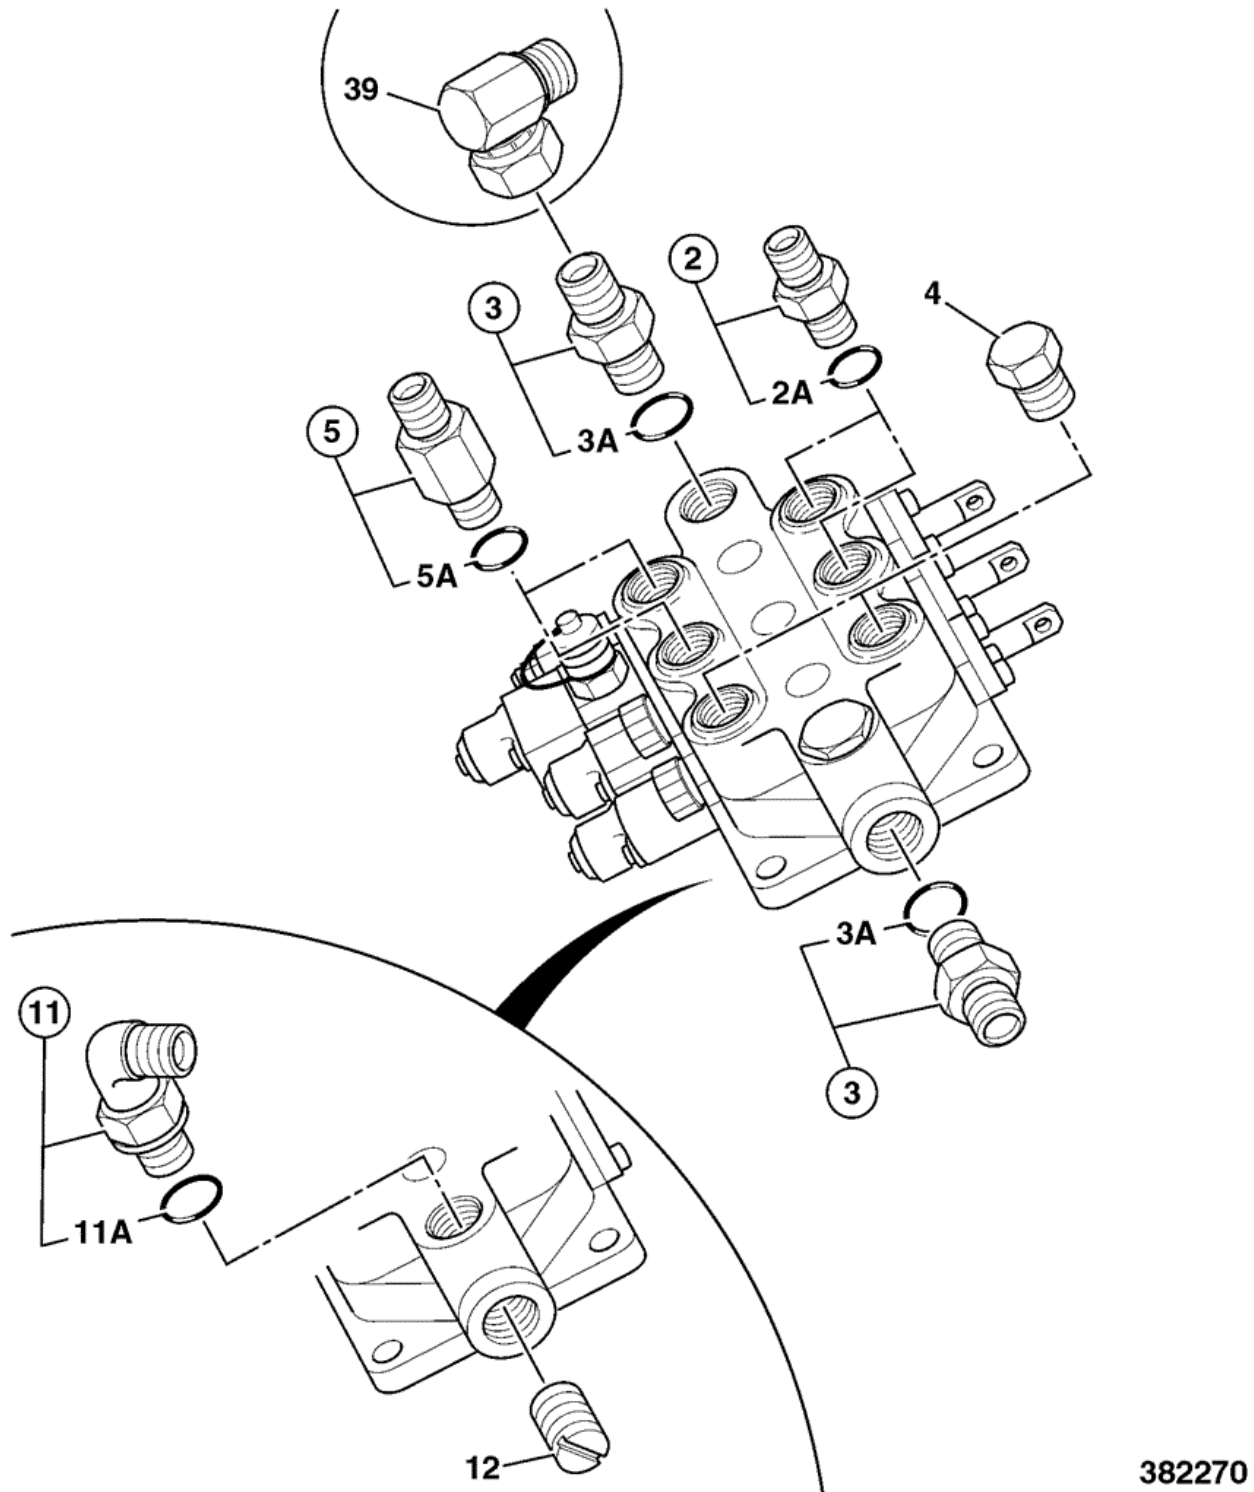


382270

Item	Part #	Change No	Description	Usage Code	QTY
1	25/220814		Valve 3 spool, manual hand control		1
1	25/220824		Valve 3 spool, manual hand with float		1

1	25/220815		Valve 3 spool, manual foot control		1
1	25/220825		Valve 3 spool, manual foot with float		1
2	1620/0006	<M682525	Adapter 39.5mm		2
2	1620/2055	>M682526	Adaptor 39.5mm Long. M/M 1/2"BSP x 7/8"SAE		2
2A	:2401/0507		O Ring		1
3	1620/0008	<M682525	Adapter		2
3	1620/2057	>M682526	Adaptor M/M 5/8BSPx1-1/16SAE		2
3A	:2401/0508		O Ring		1
4	1745/0004		Plug 7/8 UNF Boss		2
4A	:2401/0507		O Ring		1
5	816/17085	<M682525	Adapter 59.5mm long		2
5	816/90214	>M682526	Adaptor Extended		2
5A	:2401/0507		O Ring		1
11	JHJ0046		Adapter elbow M/M <i>high flow only</i>		1
11A	:2401/0508		O Ring		1
12	816/13281		Plug 1/2 NPTF <i>high flow only</i>		1
39	816/40008		Adapter 90 degree 5/8"bsp <i>hiflow only</i>		1


9802/4530 E3-2-3 VALVE, SERVO CONTROL FITTINGS & ADAPTERS

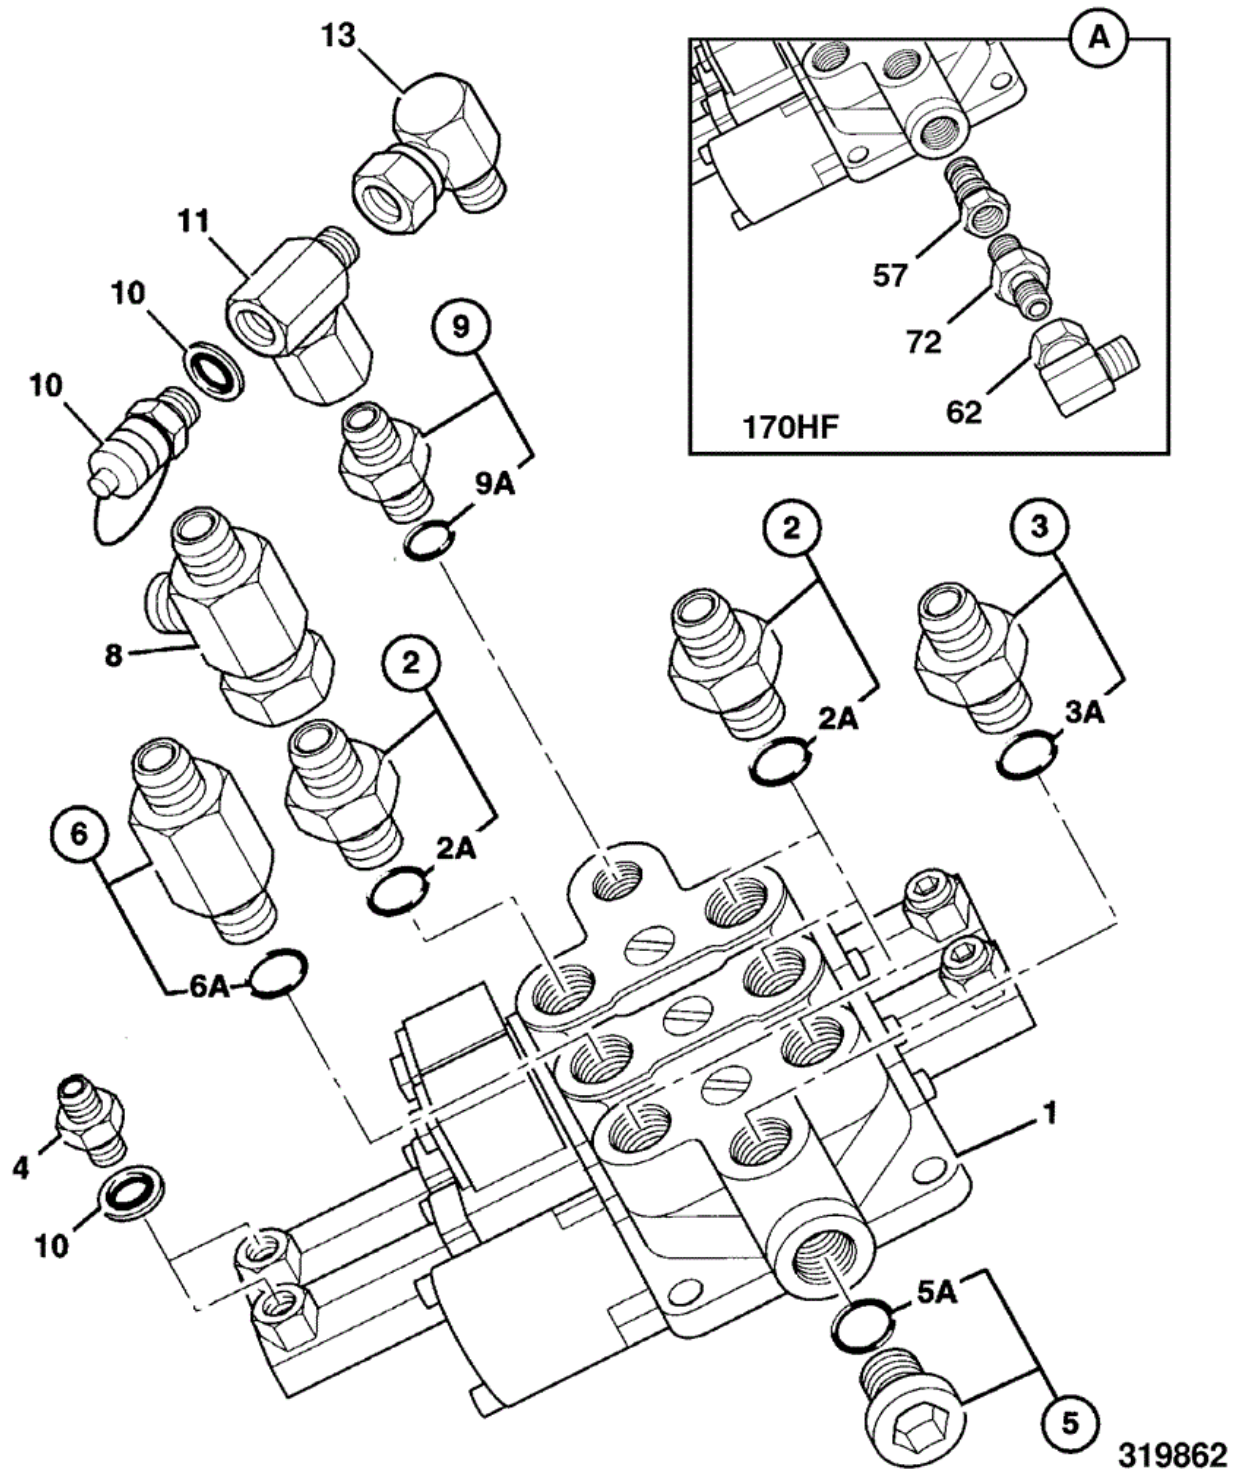

Item	Part #	Change No	Description	Usage Code	QTY
1	25/214100		Valve 3 spool, servo		1

2	1620/0006	<M682525	Adapter 39.5mm		2
2	1620/2055	>M682526	Adaptor 39.5mm Long. M/M 1/2"BSP x 7/8"SAE		2
3	1620/0008	<M682525	Adapter		2
3	1620/2057	>M682526	Adaptor M/M 5/8BSPx1-1/16SAE		2
4	1604/0002		Adapter		4
5	1745/0004		Plug 7/8 UNF Boss		2
6	816/17073		Adapter		1
8	816/17085	<M682525	Adapter 59.5mm long		1
8	816/90283	>M682526	Adaptor Extended		2
9	1620/0007	<M682525	Adapter		1
9	1620/2056	>M682526	Adaptor		1
10	1406/0011		Washer Bonded (1/4")		5
11	816/50102	<M682525	Adapter tee		1
11	816/90406	>M682526	Adapter tee		1
12	45/905000		Adapter Pressure Test 1/4BSP Male		1
13	816/40008		Adapter 90 degree 5/8"bsp		1
57	816/13123		Adapter <i>high flow only</i>		1
62	816/00335	<M682525	Adaptor 90 Elbow <i>high flow only</i>		1
62	816/90163	>M682526	Adaptor Elbow M/F		1
72	816/15159		Adapter <i>high flow only</i>		1

9802/4530 E3-2-4 VALVE, SERVO CONTROL FITTINGS & ADAPTERS HUSCO

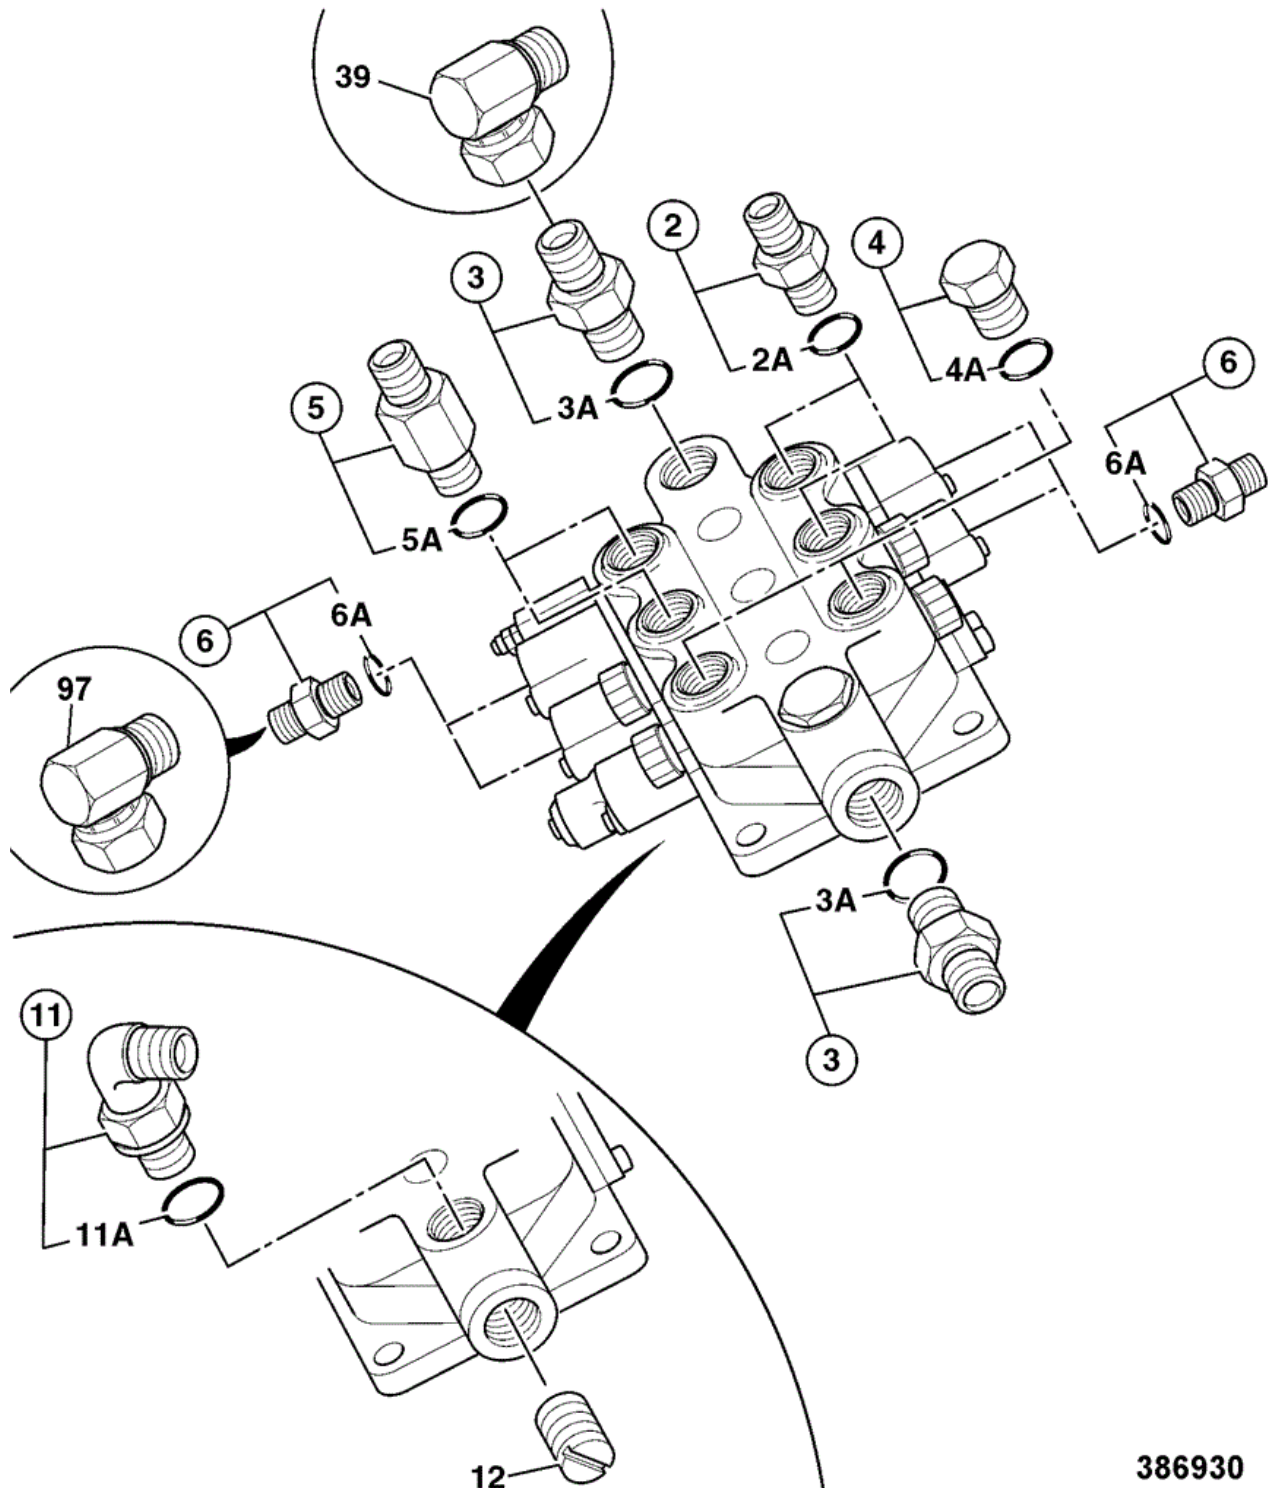


386930

Item	Part #	Change No	Description	Usage Code	QTY
1	25/220813		Valve 3 spool, servo		1

2	1620/0006	<M 682525	Adapter 39.5mm		2
2	1620/2055	>M 682526	Adaptor 39.5mm Long. M/M 1/2"BSP x 7/8"SAE		2
2A	:2401/0507		O Ring		1
3	1620/0008	<M 682525	Adapter		2
3	1620/2057	>M 682526	Adaptor M/M 5/8BSPx1-1/16SAE		2
3A	:2401/0508		O Ring		1
4	1745/0004		Plug 7/8 UNF Boss		2
4A	:2401/0507		O Ring		1
5	816/17085	<M 682525	Adapter 59.5mm long		2
5	816/90214	>M 682526	Adaptor Extended		2
5A	:2401/0507		O Ring		1
6	1620/0002	<M 682525	Adapter		1
6	1620/2051	>M 682526	Adaptor 1/4"BSP x 9/16"SAE		4
6A	:2401/0505		O Ring		1
11	JHJ0046	<M 682525	Adapter elbow M/M <i>high flow only</i>		1
11	816/90594	>M 682526	Adaptor elbow M/M 1-1/16SAEx3/4BSP		1
11A	2401/0508		O Ring		1
12	816/13281		Plug 1/2 NPTF <i>high flow only</i>		1
39	816/40008		Adapter 90 degree 5/8"bsp <i>high flow only</i>		1
97	816/00464	<Jan 2002	Adapter elbow - male/female <i>Hiflow only. Not required with hose 627/00032</i>		2



9802/4530 E3-6-2 VALVE SELF LEVEL

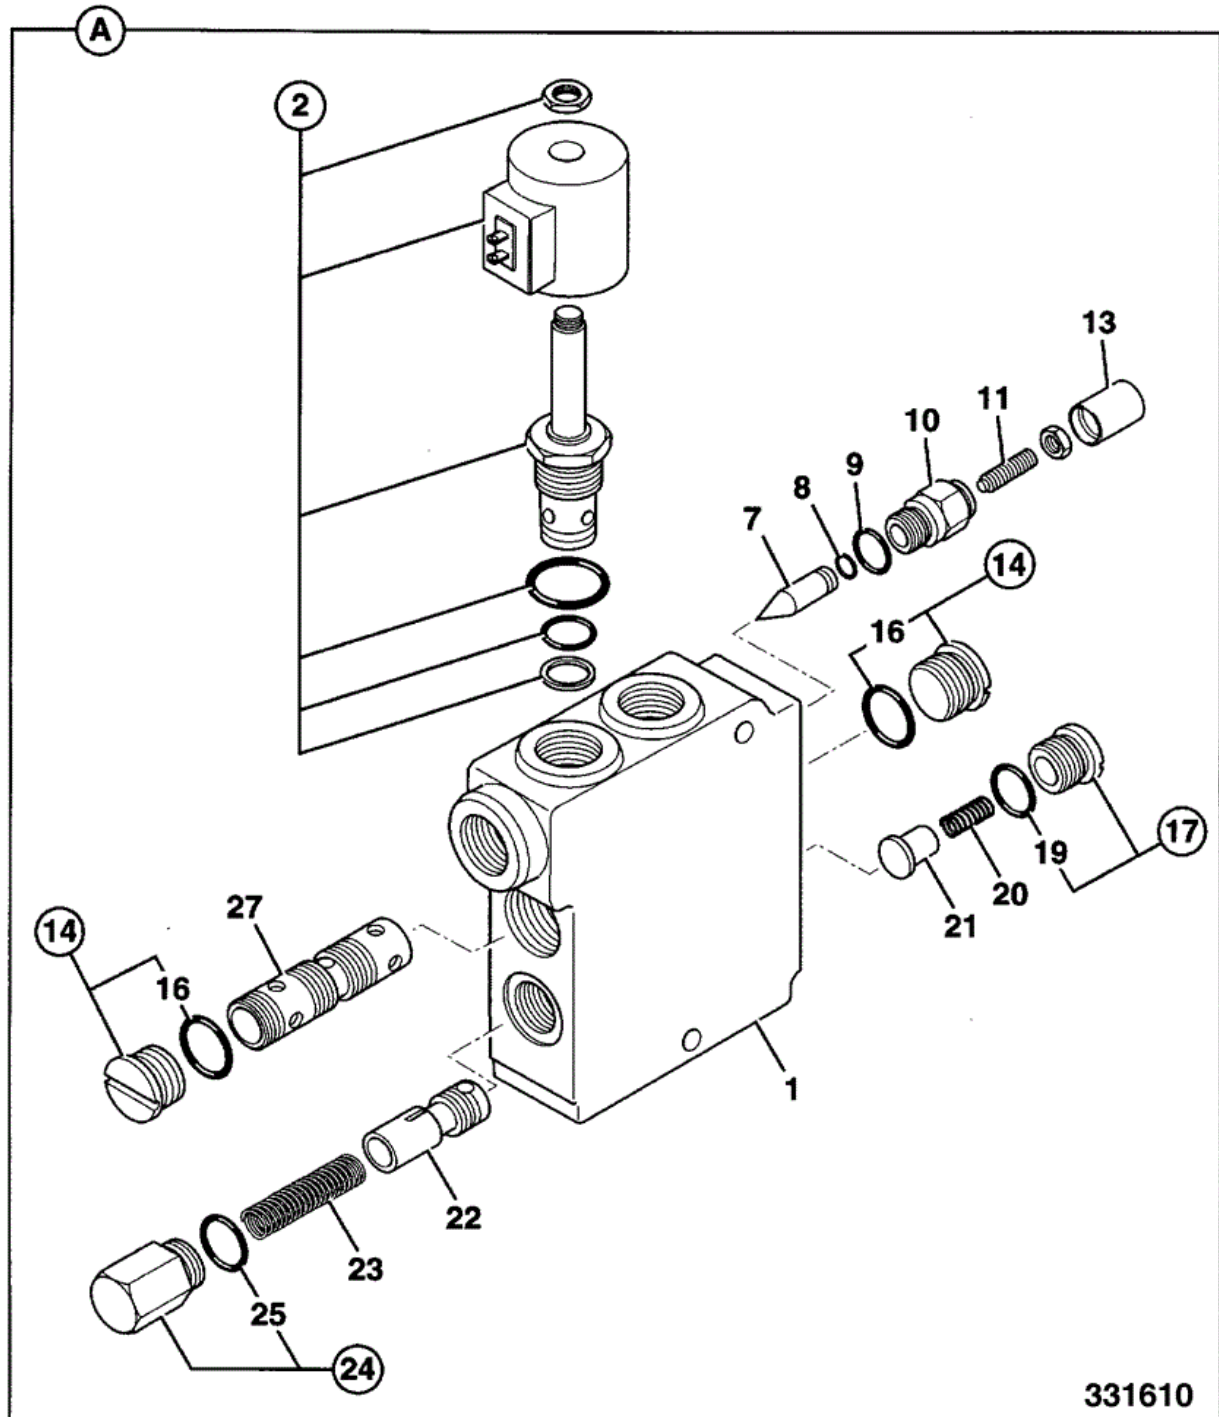

Item	Part #	Change No	Description	Usage Code	QTY
A	25/220809		Valve self level		1
1	****		None serviced part		1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com