


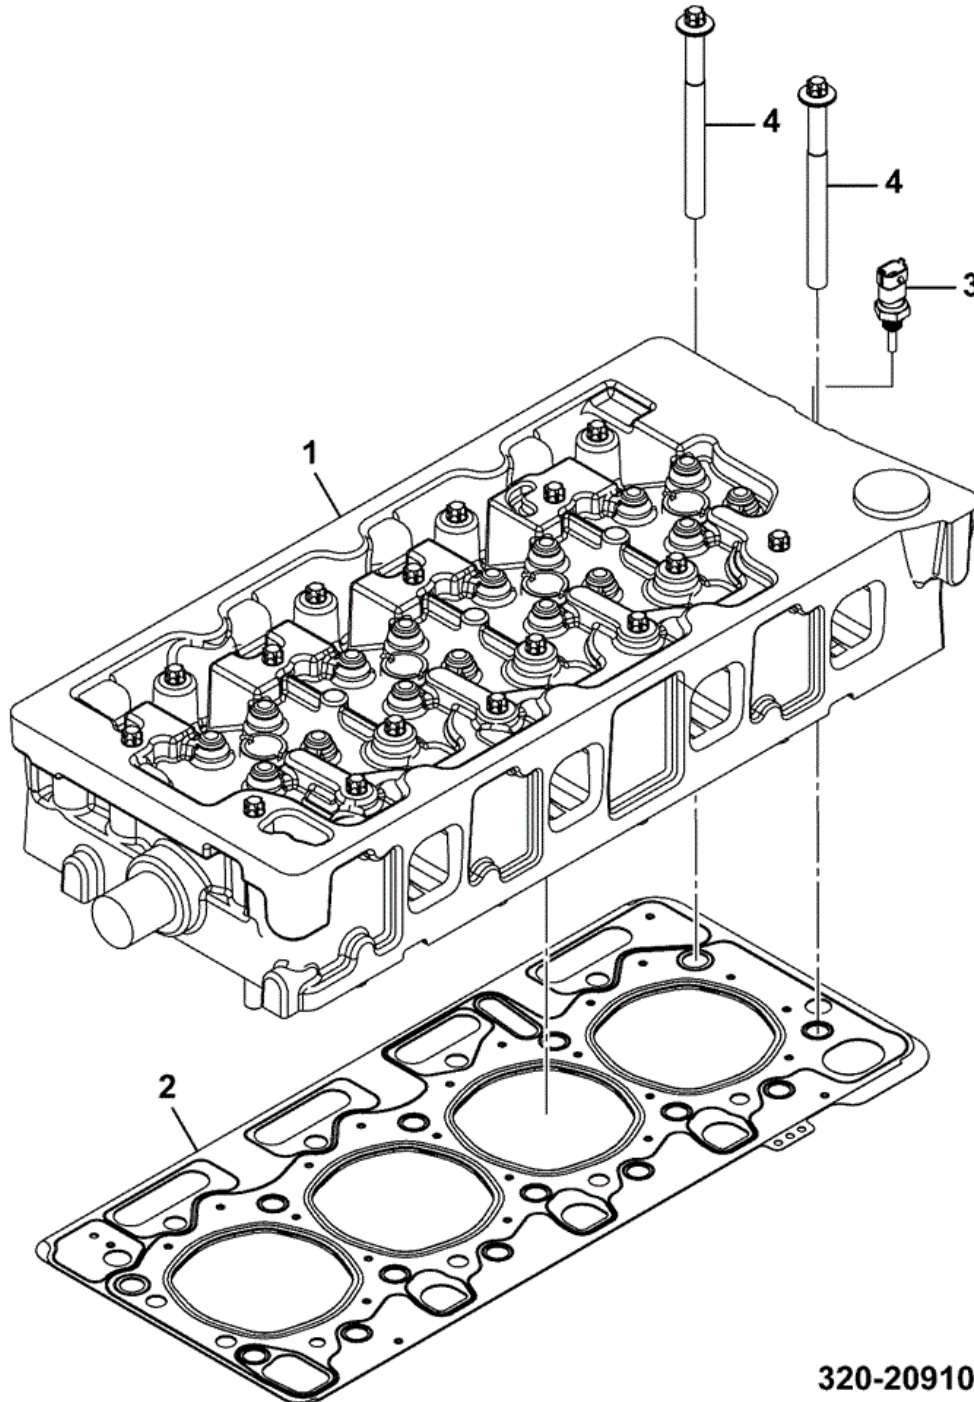

9822/0075 V210-50-1 CYLINDER HEAD 320/20910,TIER 4



320-20910-2


Item	Part #	Change No	Description	Usage Code	QTY
1	320/02712		Cylinder head,4.4L		1
2	320/02709		Gasket cylinder head		1

3	320/04555		Sensor Temperature coolant (2 pin)		1
4	320/02711		Bolt M12 X 140		18



9822/0075 V210-55-1 CYLINDER HEAD ASSEMBLY

320/02712,TIER 4

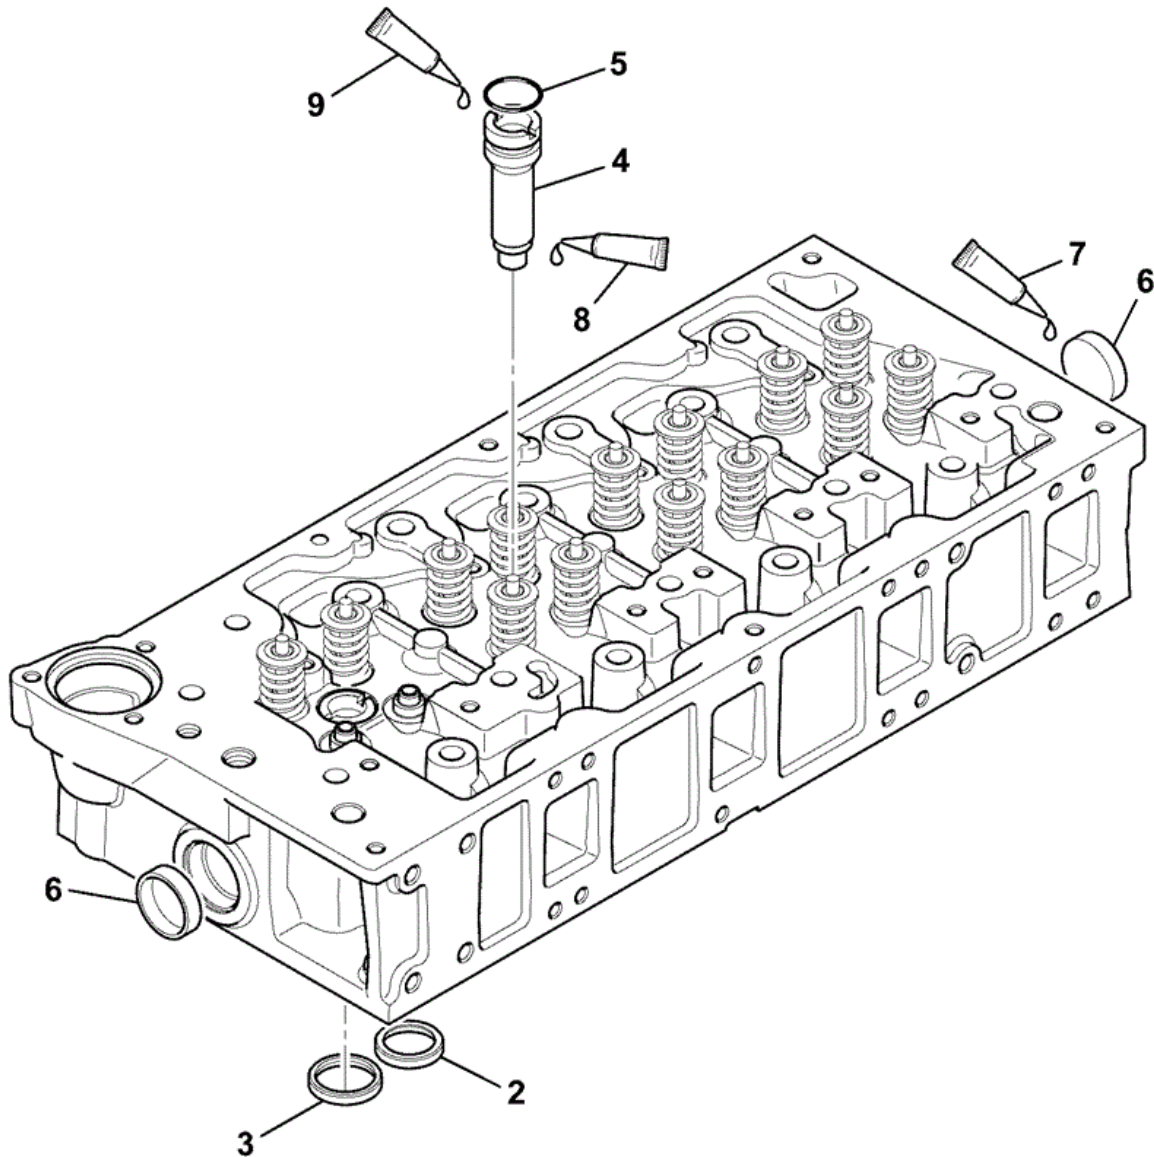


W00-10019-0-OOX

Item	Part #	Change No	Description	Usage Code	QTY
1	****		Casting Cylinder head		1

2	320/02596		Seat exhaust valve		8
3	320/02691		Seat Inlet Valve		8
4	****		Injector Sleeve		4
5	320/02595		O Ring injector		4
6	320/00803		Plug core d=40mm		2
7	4101/0600		Sealant		0
8	320/00828		Sealant 620		0
9	320/00829		Lubricant O Ring P80		0



9822/0075 V220-50-1 INLET VALVE 320/20194,TIER 4

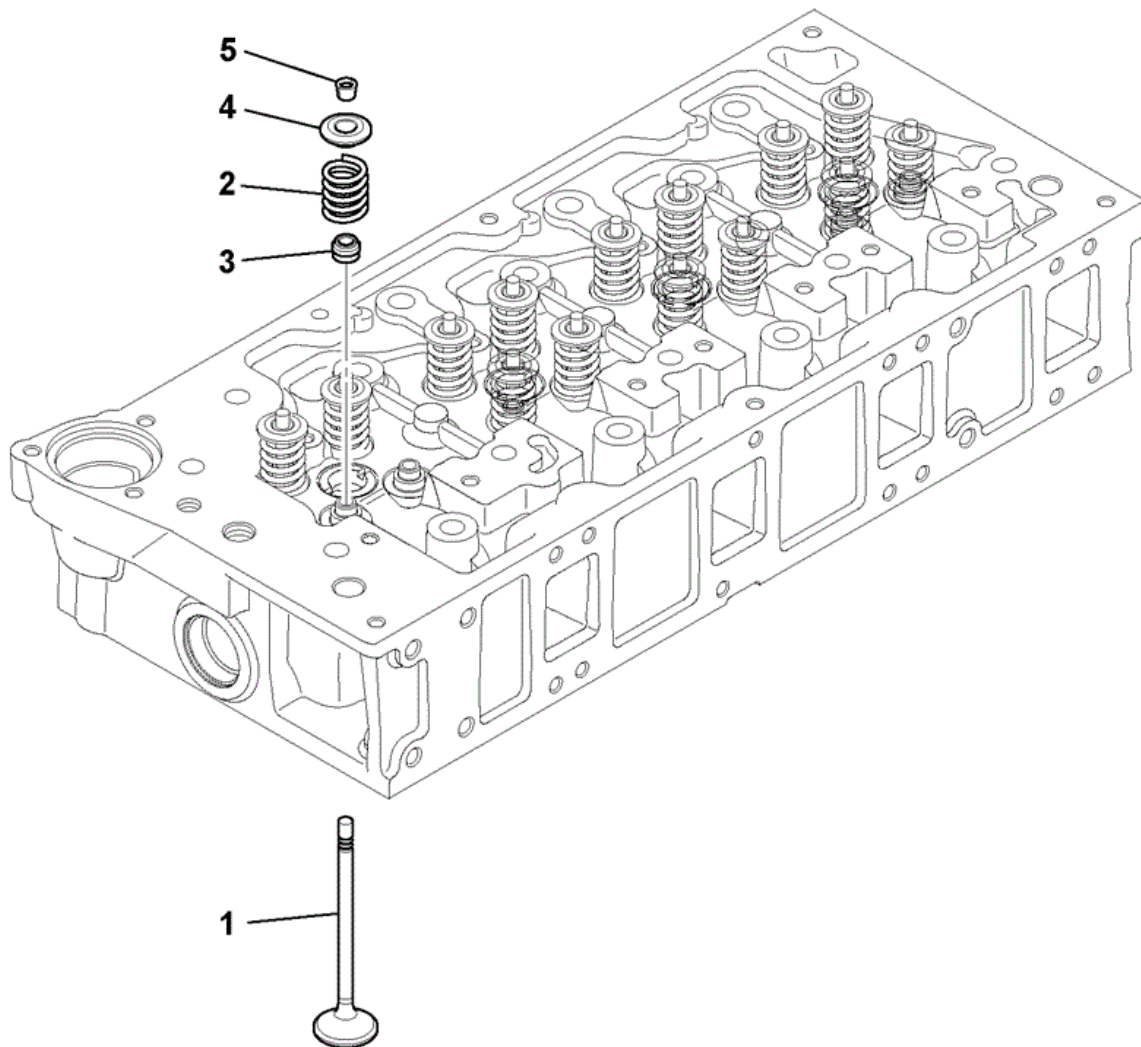


W00-10020-0-OOX
 (778340)

Item	Part #	Change No	Description	Usage Code	QTY
1	320/03697		Valve Inlet Eaton		1
2	320/03674		Spring valve		1

3	320/03528		Valve cotter		2
4	320/03689		Retainer valve spring		1
5	320/03533		Seal valve stem		1



9822/0075 V230-50-1 EXHAUST VALVE 320/20195,TIER 4

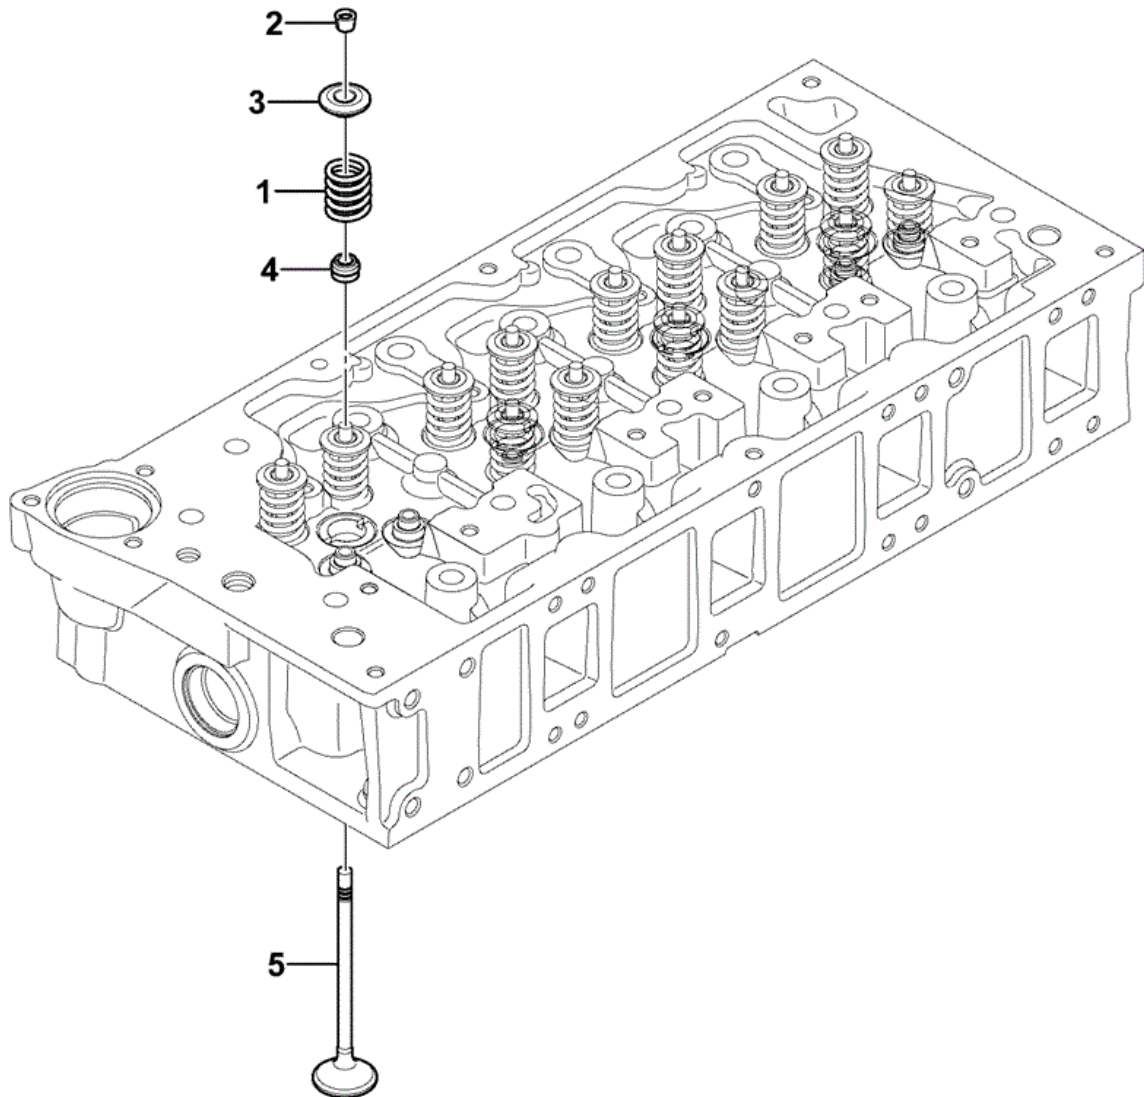


320-20195-2

Item	Part #	Change No	Description	Usage Code	QTY
1	320/03674		Spring valve		1
2	320/03528		Valve cotter		2

3	320/03689		Retainer valve spring		1
4	320/03533		Seal valve stem		1
5	320/03616		Valve exhaust		1



9822/0075 V240-1-1 ROCKER SHAFT ASSEMBLY

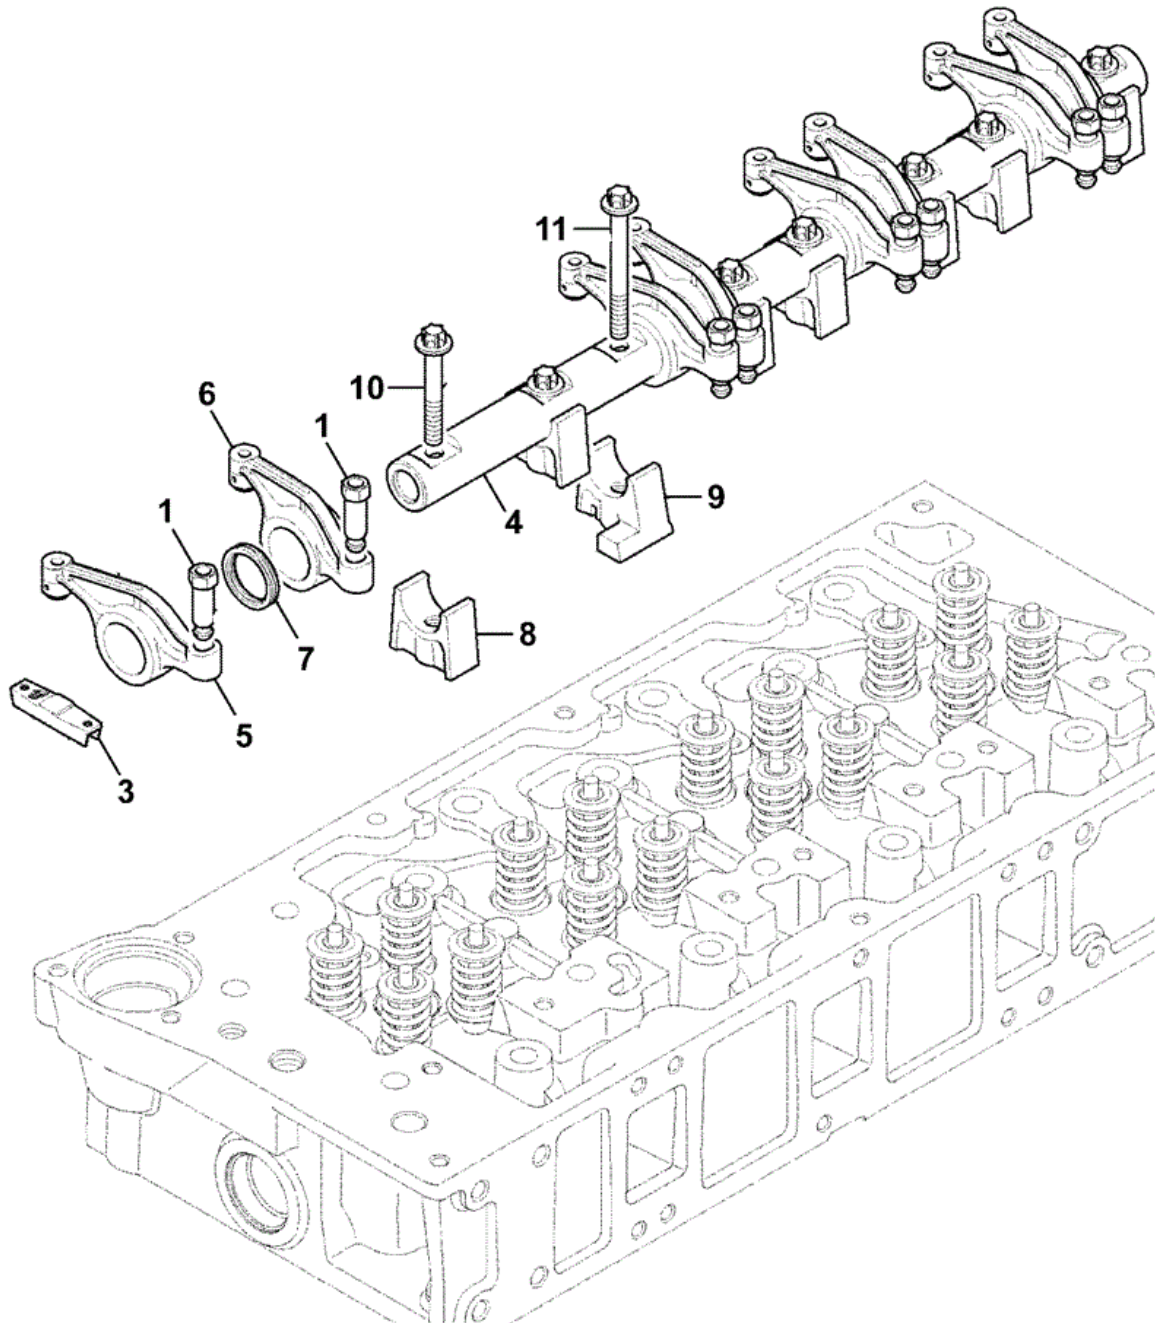


320-20196-1

Item	Part #	Change No	Description	Usage Code	QTY
1	320/03511		Adjuster valve lash		8
3	320/03647		Piece bridge		8

4	320/03617		Shaft Rocker		1
5	320/03650		Arm exhaust rocker		4
6	320/03653		Arm inlet rocker		4
7	320/03523		Washer Spring		4
8	320/03656		Pedestal rocker shafy		7
9	320/03657		Pedestal rocker shaft oil feed		1
10	1317/3312Z		Bolt M8 x 50		7
11	1317/3315Z		Bolt Flange Head M8 x 65		1



9822/0075 V250-50-1 ROCKER COVER 320/20838,TIER 4

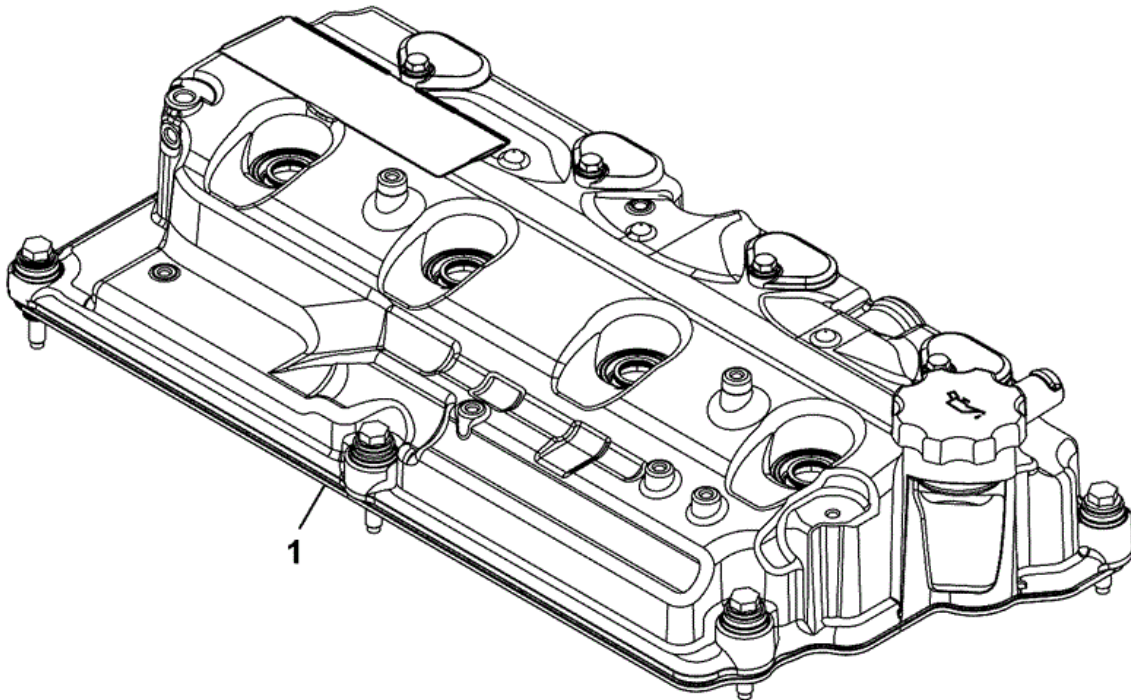


320-20838-3

Item	Part #	Change No	Description	Usage Code	QTY
1	320/07771		Cover rocker ABI		1



9822/0075 V250-55-1 ROCKER COVER ABI,320/07771,TIER

4

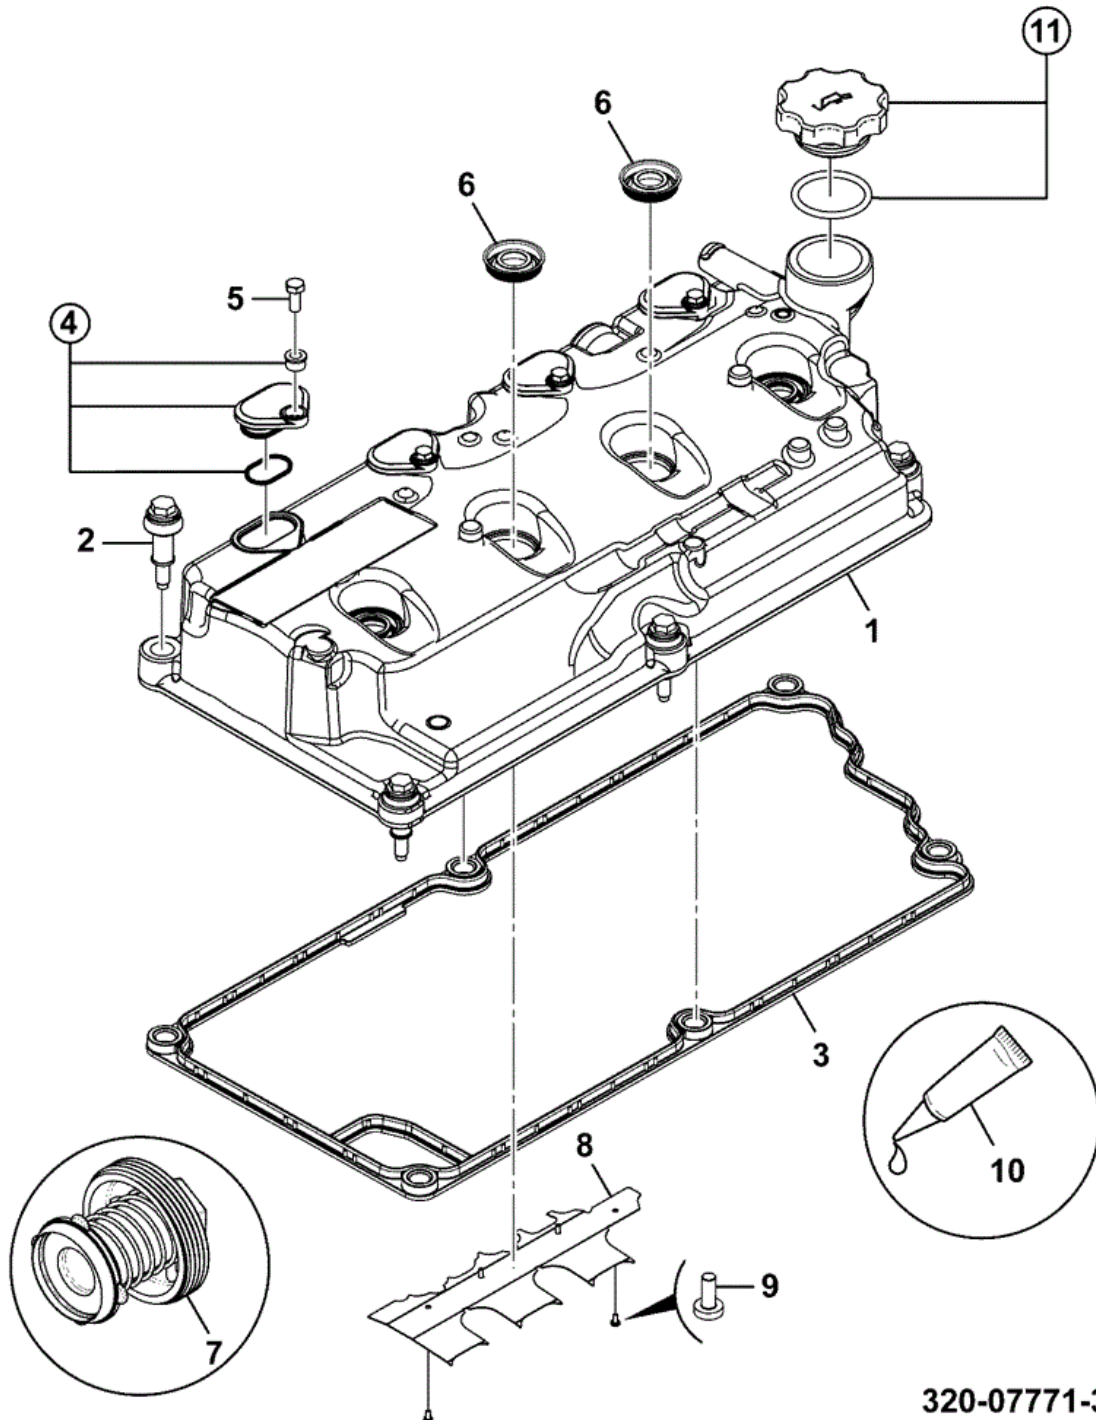


320-07771-3

Item	Part #	Change No	Description	Usage Code	QTY
1	320/07772		Cover rocker		1

2	320/07640		Bolt Isolated 60m x M8 HEX Head		6
3	320/07580		Seal Rocker Cover		1
4	320/07683		Cover valve adjusting		4
5	1315/0203V		Screw set m6 x 16 grade 8.8		4
6	320/07779		Injector seal		4
7	320/07780		Valve relief CCV		1
8	320/07778		Baffle plate		1
9	320/07609		Screw Torx Socket Pan Head M5 x12		4
10	332/D5695		Sealant HYLOMAR 607 <i>AS REQUIRED</i>		1
11	320/04090		Cap Oil Filler Assembly		1



9822/0075 V250-60-1 ROCKER COVER OIL FILLER CAP,320/0490,TIER 4

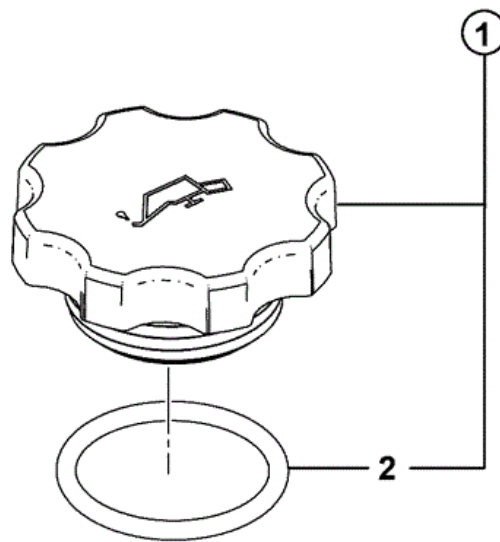

320-04090-3

Item	Part #	Change No	Description	Usage Code	QTY
1	320/04091		Cap oil filler		1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com