




9822/0075 L730-1-1 IDLER BRACKET ASSEMBLY NON A/C

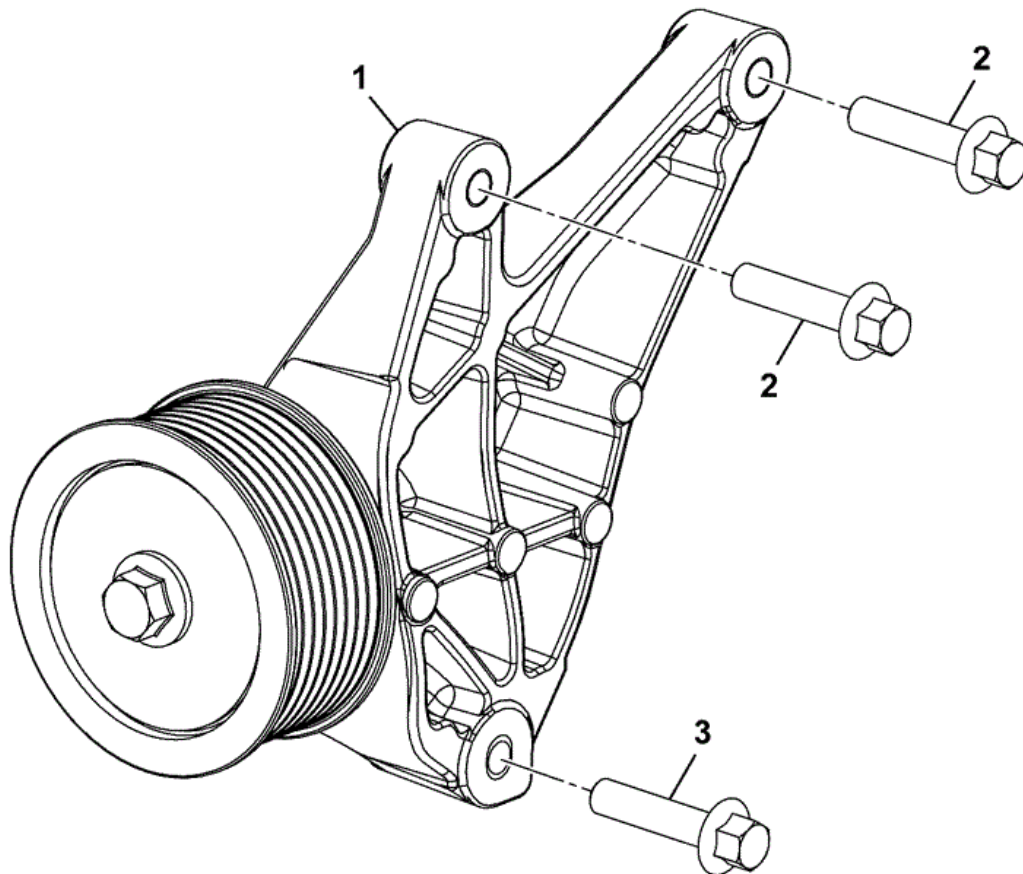


320-20072-2

Item	Part #	Change No	Description	Usage Code	QTY
A	****		Installation Idler Assembly		1
1	320/08586		Idler Assembly , Non Aircon		1
2	1317/3309Z		Bolt M8 X 35		2

3	1317/3311Z		Bolt Flanged Hex (M8 x 45)		1
---	------------	--	----------------------------	--	---



9822/0075 L780-5-1 COMPRESSOR AIR CONDITIONING SYSTEM 18cc,12V,TIER 4

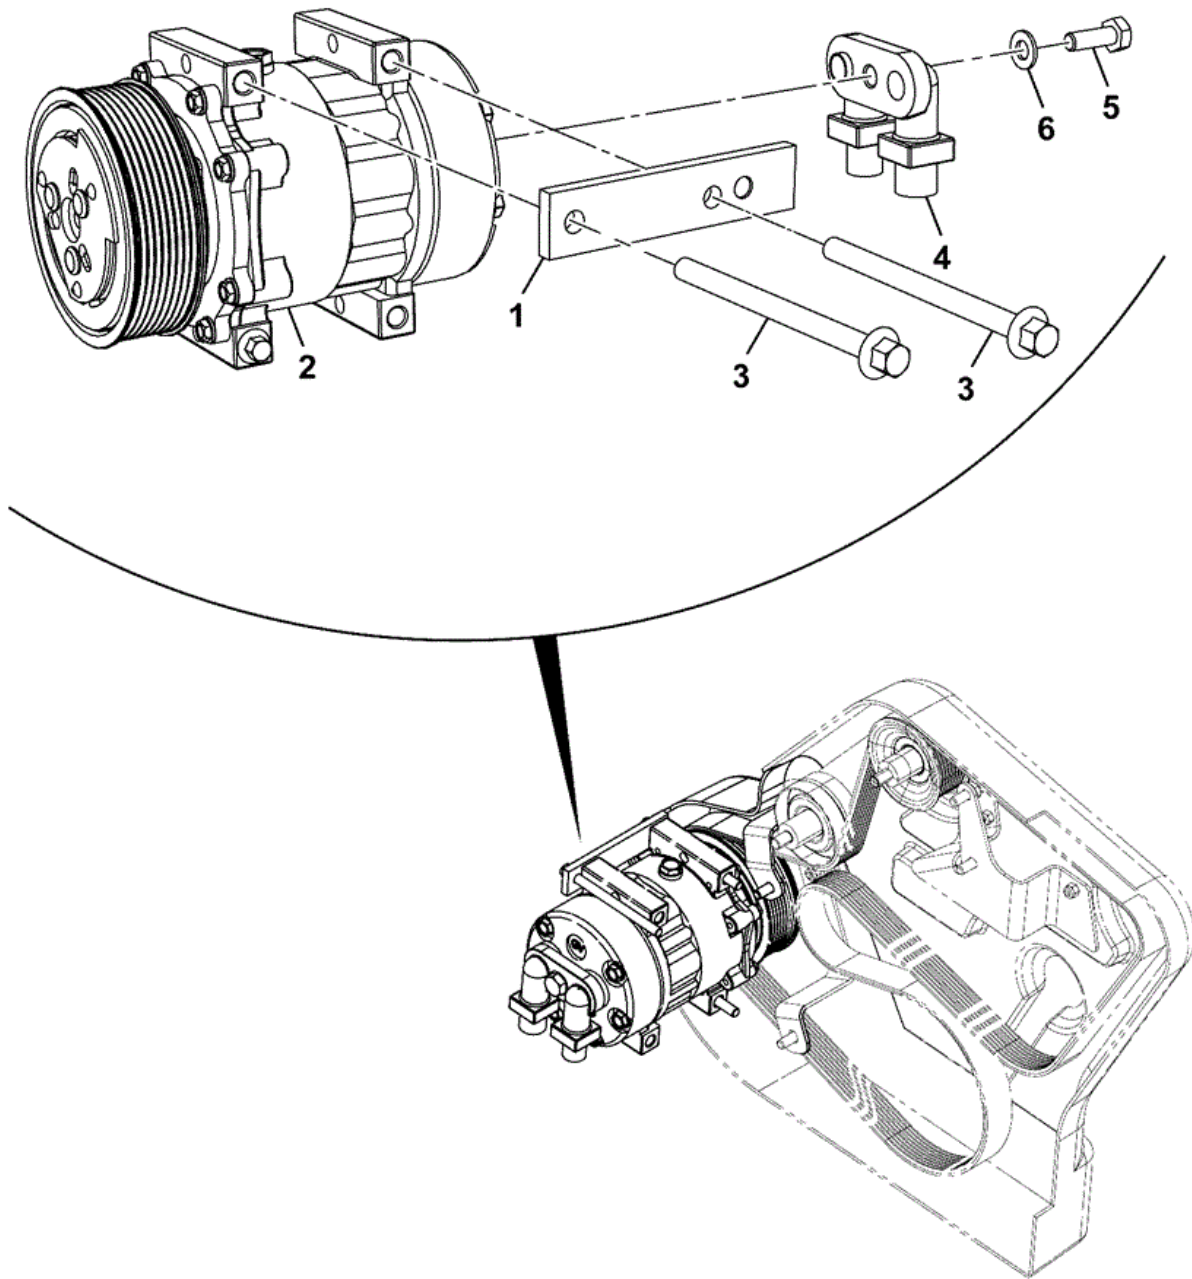


332-X9517-1

Item	Part #	Change No	Description	Usage Code	QTY
1	332/X2949		Mounting Compressor		1

2	332/X9269		Compressor Aircon 18cc, 12v		1
3	1317/3320Z		Bolt M8 x 100 Flange Reduced		3
4	332/X9270		Port Fitting 90deg, Compressor		1
5	1315/0408Z		Setscrew M10 x 30		1
6	1420/0008Z		Washer (M10)		1



9822/0075 L800-5-1 FUEL SYSTEM INSTALLATION ASSEMBLIES JCB LP,TIER 4

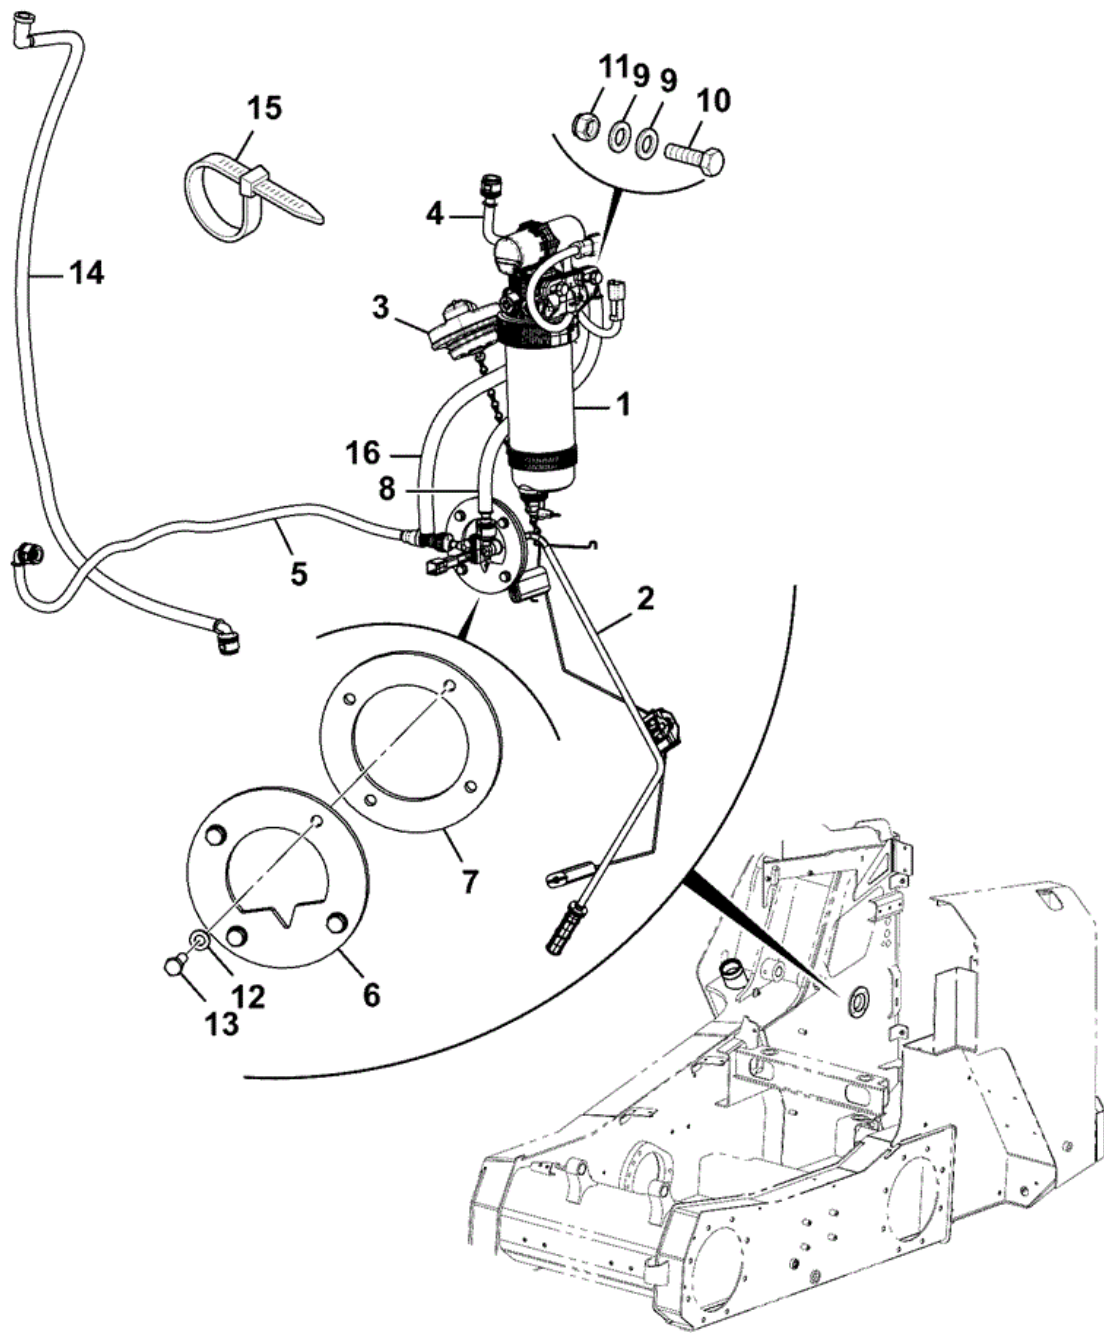


334-P7622-1

Item	Part #	Change No	Description	Usage Code	QTY
1	333/X0443		Filter Fuel 5 Micron		1

2	332/X2916		Sender Fuel ABI		1
3	332/F4780		Cap Diesel Filler Vented		1
4	332/X9469		Hose Filter to Fuel Cooler		1
5	332/X9183		Hose Engine to Sender		1
6	332/X2996		Plate Clamping fuel sender		1
7	332/V0994		Plate		1
8	332/X8769		Hose Sender to Filter		1
9	1420/0007Z		Washer (M8)		4
10	1315/0309Z		Setscrew M8 x 35		2
11	1370/0203Z		Nut Nut M8		2
12	1420/0006Z		Washer (M6)		4
13	1315/0205Z		Setscrew M6 x 20mm		4
14	332/X9470		Hose Fuel Cooler to Filter		1
15	826/01347		Tie Cable 160mm		5
16	333/X0451		Hose Pump to Sender		1



9822/0075 L800-5-5 FUEL SYSTEM INSTALLATION ASSEMBLIES JCB LP,TIER 4

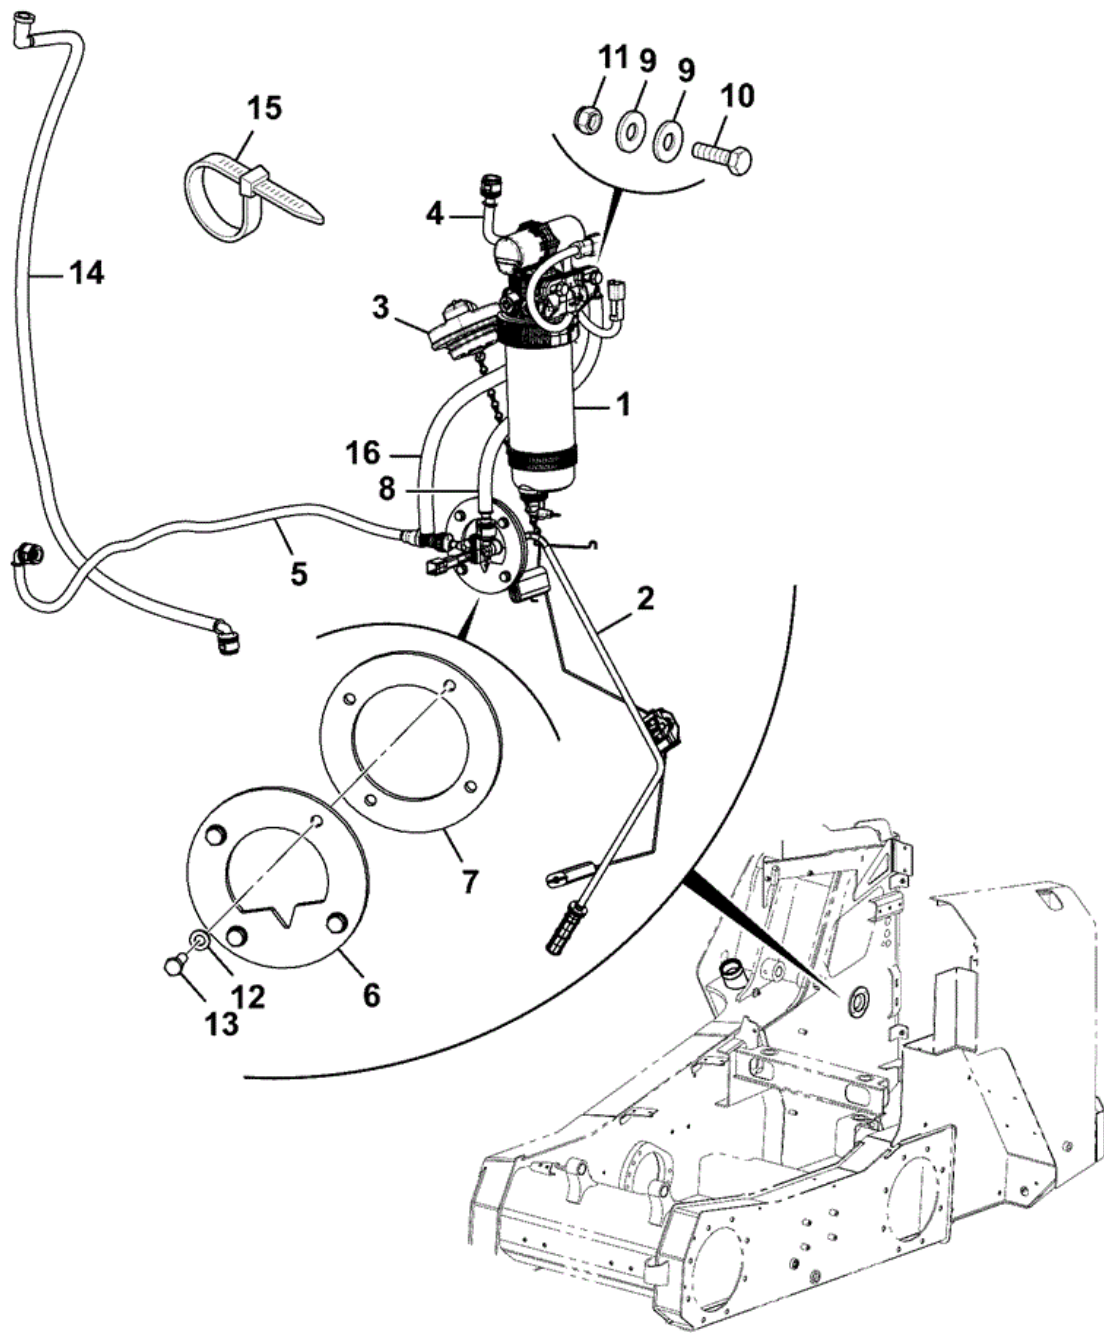


334-P7622-2

Item	Part #	Change No	Description	Usage Code	QTY
1	333/X0443		Filter Fuel 5 Micron		1

2	333/X2809		Sender Fuel ABI		1
3	333/X2708		Cap Diesel Filler Vented ABI		1
4	332/X9469		Hose Filter to Fuel Cooler		1
5	332/X9183		Hose Engine to Sender		1
6	332/X2996		Plate Clamping fuel sender		1
7	332/V0994		Plate		1
8	332/X8769		Hose Sender to Filter		1
9	823/00322		Washer (8.5mm x 24mm x 2mm)		4
10	1315/0309Z		Setscrew M8 x 35		2
11	1370/0203Z		Nut Nut M8		2
12	1420/0006Z		Washer (M6)		4
13	1315/0205Z		Setscrew M6 x 20mm		4
14	332/X9470		Hose Fuel Cooler to Filter		1
15	826/01347		Tie Cable 160mm		5
16	333/X0451		Hose Pump to Sender		1



9822/0075 L800-20-1 FUEL SYSTEM INSTALLATION ASSEMBLIES FUEL SENDER,ABI

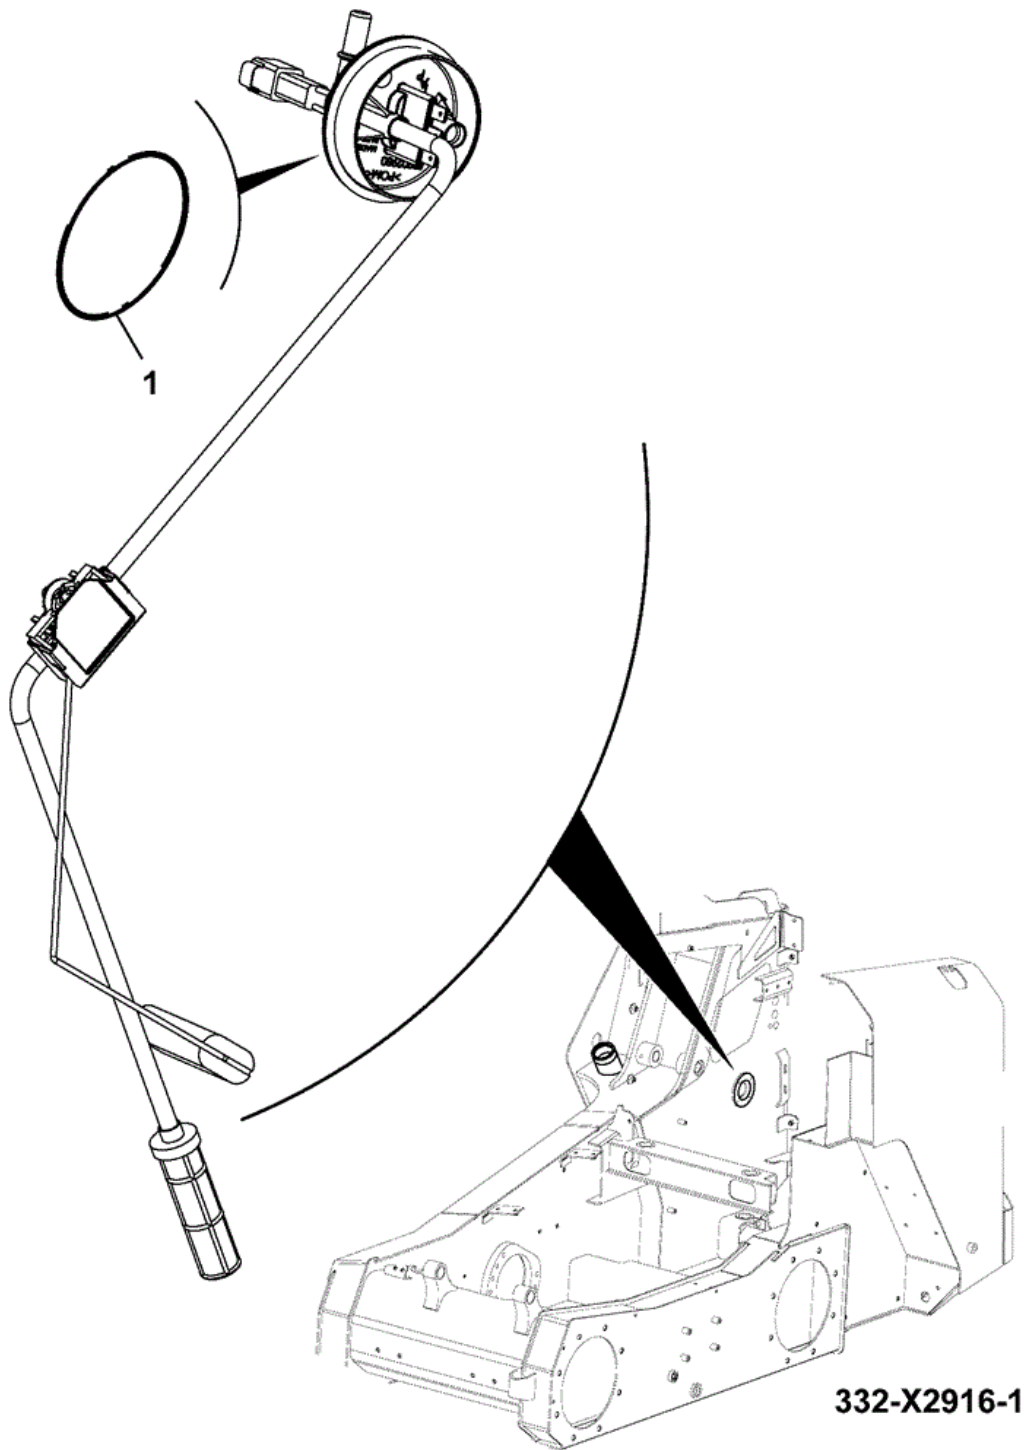


Item	Part #	Change No	Description	Usage Code	QTY
A	332/X2916		Sender Fuel ABI		1

1	:332/L6096	O Ring	1
---	------------	--------	---



9822/0075 L820-5-1 FUEL FILTER ASSEMBLY

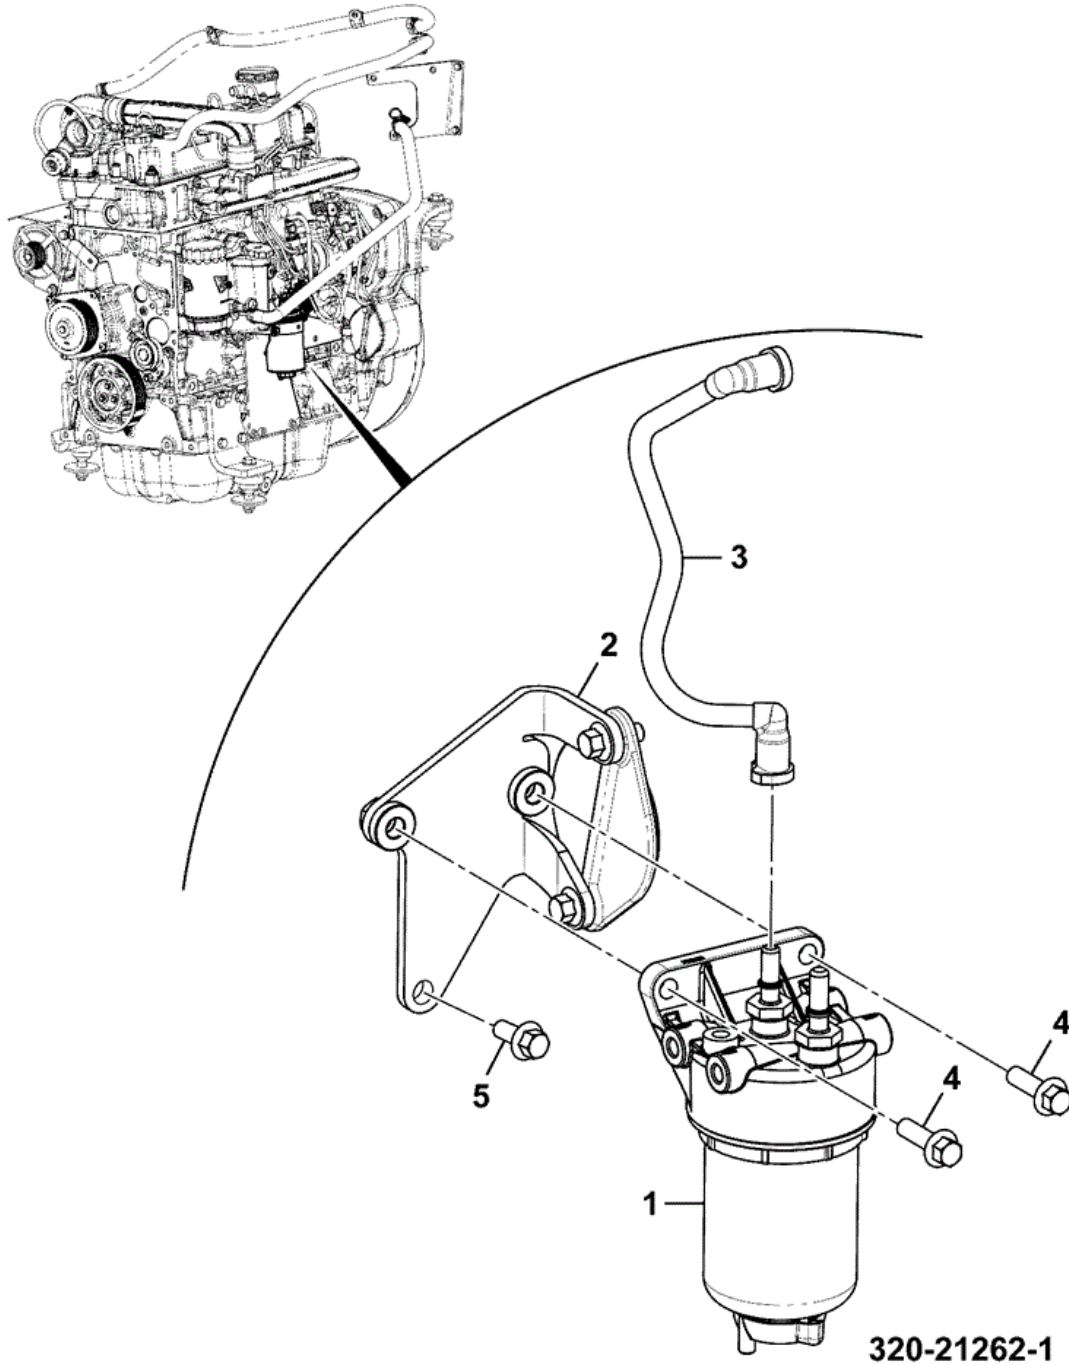

Item	Part #	Change No	Description	Usage Code	QTY
1	320/07401		Filter Fuel, T4		1
2	320/07383		Bracket Filter		1
3	320/07387		Pipe LP		1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com