


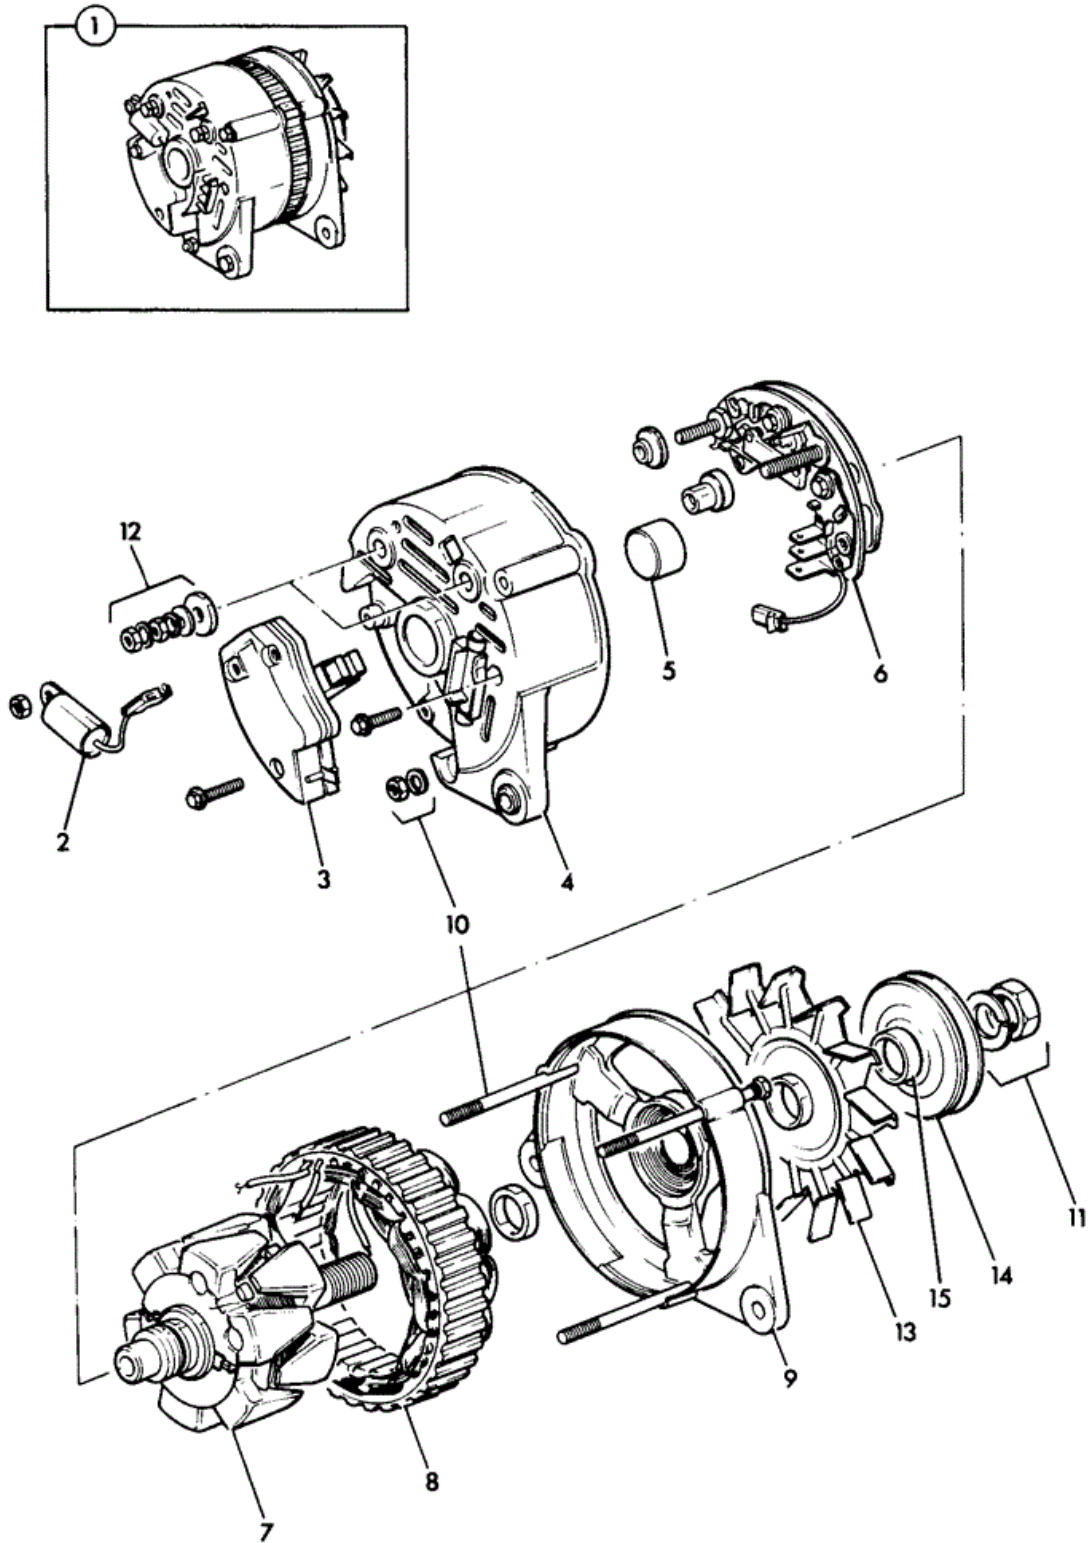


084141

Item	Part #	Change No	Description	Usage Code	QTY
1	714/11300		Alternator	P/Ex	1
2	:714/10801		Capacitor Suppression		1
3	:714/10802		Regulator & Brush box assembly		1
4	:714/10803		Bracket Slip ring end		1
5	:714/10804		Bearing slip ring end		1

6	:714/11302		Rotor		1
7	:714/11302		Rotor		1
8	:714/11303		Stator		1
9	:714/11301		Bracket Drive end		1
10	:714/10809		Kit-through bolt		1
11	714/10810		Kit-sundry parts		1
12	:714/10811		Kit-terminal		1
13	714/10812		Fan alternator		1
14	714/11305		Pulley alternator		1
15	714/11304		Collar Spacer		1



9802/8000 C2-4-4 ALTERNATOR A127-45AMP 12.VOLT 4.236 ENGINES

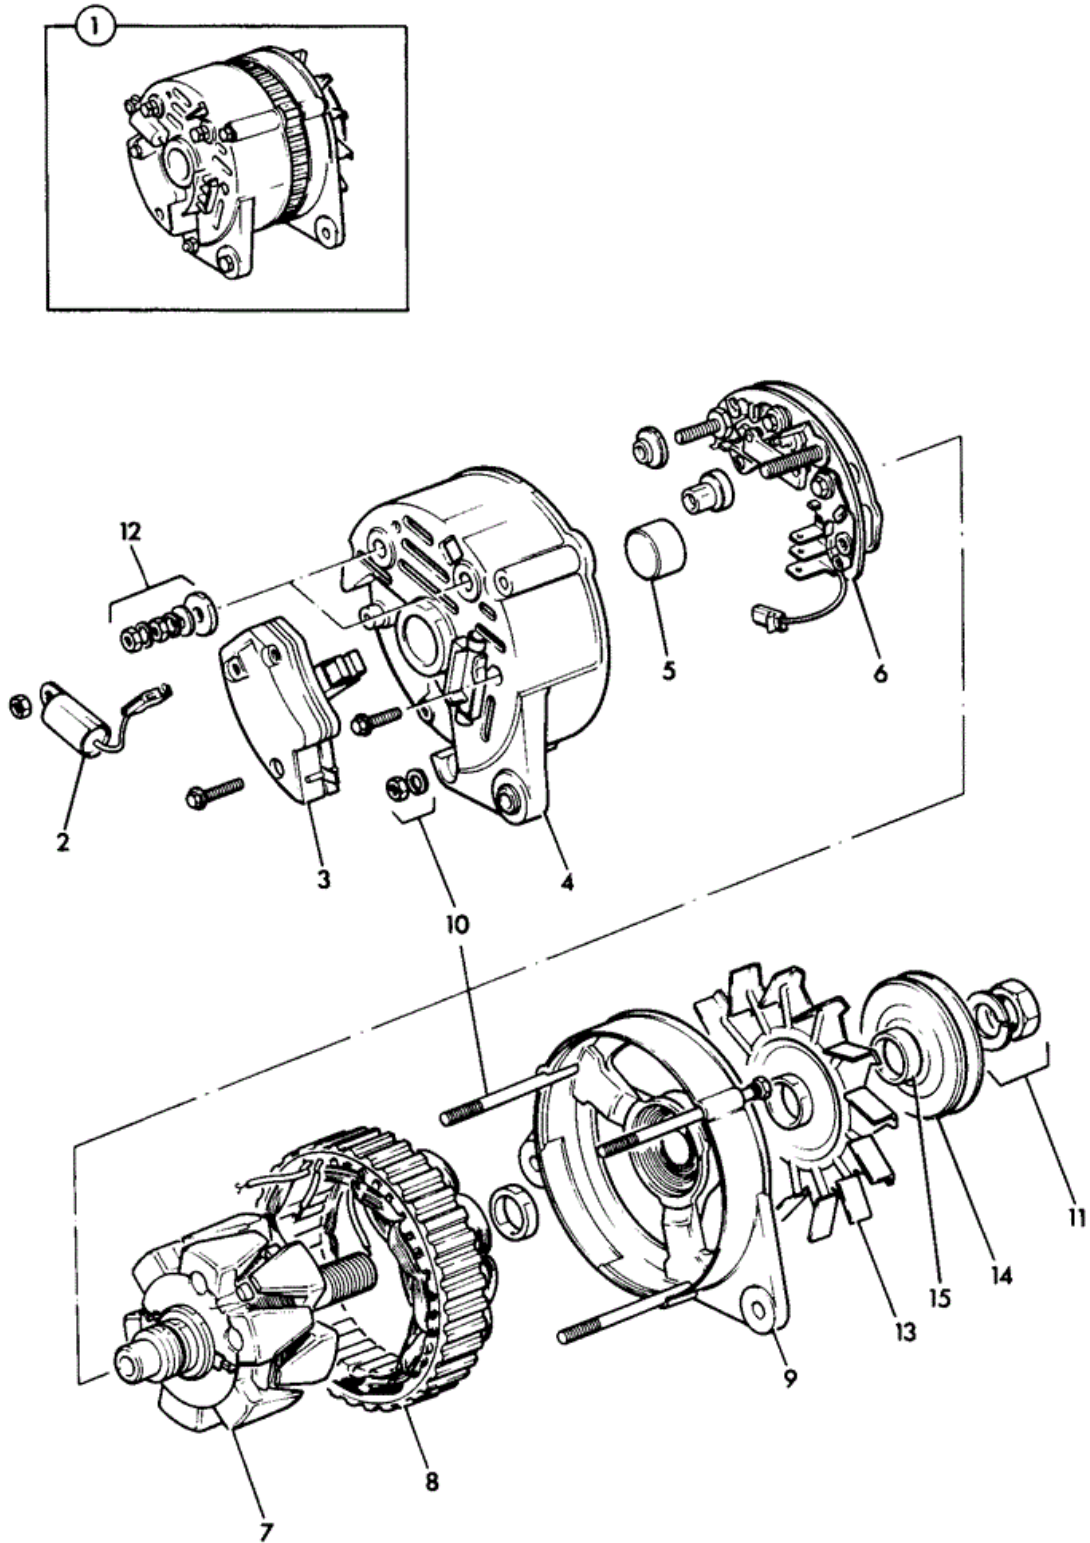


084141

Item	Part #	Change No	Description	Usage Code	QTY
1	714/11400		Alternator 45Amp	P/Ex	1
2	:714/10801		Capacitor Suppression		1
3	:714/10802		Regulator & Brush box assembly		1
4	:714/10803		Bracket Slip ring end		1
5	:714/10804		Bearing slip ring end		1

6	:714/10805		Rectifier		1
7	:714/11401		Rotor		1
8	:714/11303		Stator		1
9	:714/11301		Bracket Drive end		1
10	:714/10809		Kit-through bolt		1
11	:714/10811		Kit-terminal		1
12	714/10810		Kit-sundry parts <i>NOT INCLUDED WITH ITEM 1</i>		1
13	714/10812		Fan alternator <i>NOT INCLUDED WITH ITEM 1</i>		1
14	714/11306		Pulley alternator		1
15	714/11304		Collar Spacer		1



9802/8000 C2-5-1 MOTOR, STARTER

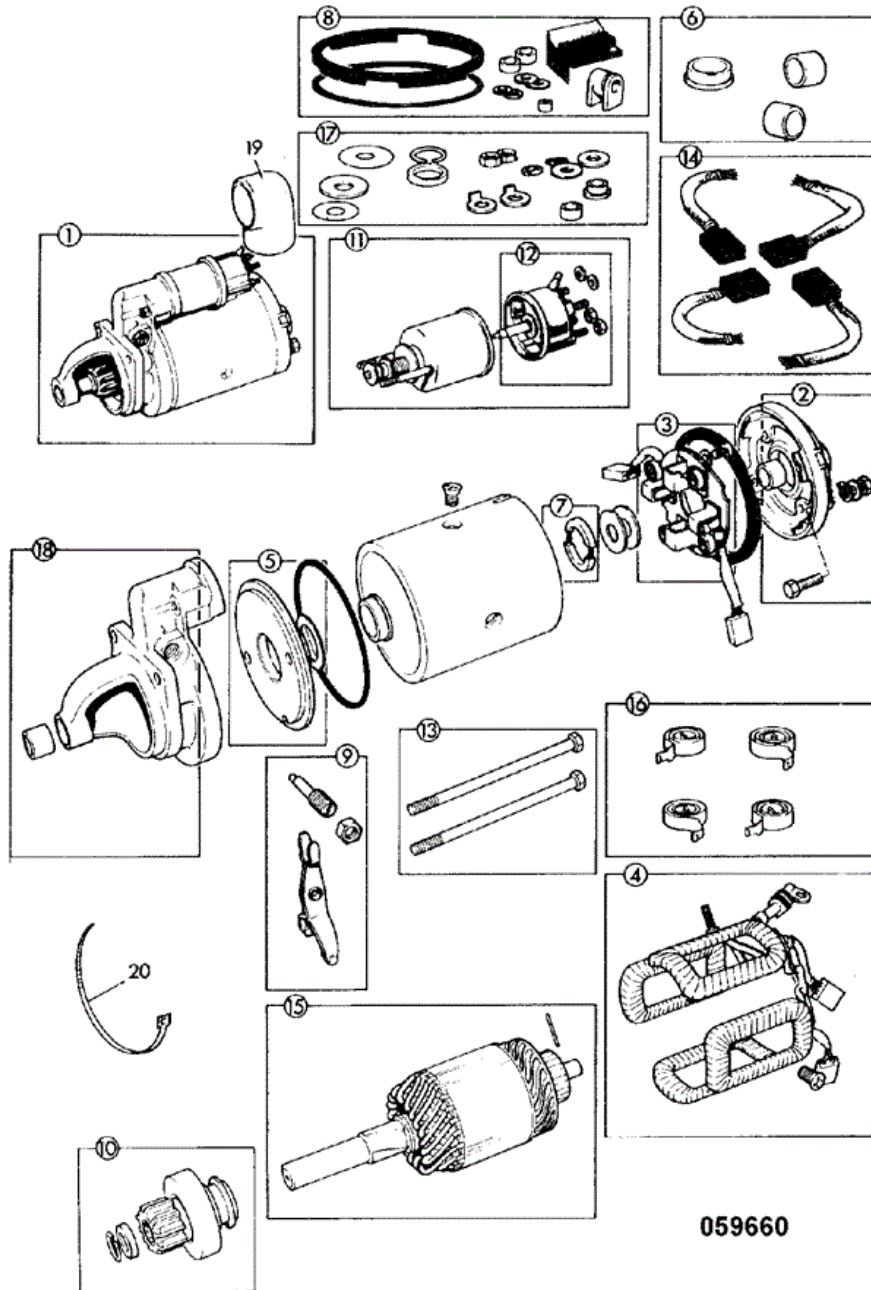

Item	Part #	Change No	Description	Usage Code	QTY
1	714/03000	Superseded	Motor Starter <i>BLMC 498 Engines</i>	A	1

1	714/11200		Motor Starter <i>REFER TO PAGE C2-5-3 FOR SERVICE PARTS</i>	A	1
1	714/03100	Superseded	Motor Starter <i>4.236 Engines</i>	B	1
1	714/09000		Motor Starter <i>REFER TO PAGE C2-5-4 FOR SERVICE PARTS</i>	B	1
2	:709/02801		Bracket Commutator end	AB	1
3	:714/00506		Kit-brush mounting	AB	1
4	:709/02803		Coil field Assembly	AB	1
5	:714/03001		Bracket Intermediate <i>BLMC 4.98 Engine</i>	A	1
5	:714/03101	Superseded	Bracket Intermediate <i>4.236 Engines</i>	B	1
5	:714/09106		Bracket Intermediate	B	1
6	:709/02805		Kit-bush	AB	1
7	:709/02806		Kit-brake	AB	1
8	:714/03002		Kit-seal	AB	1
9	:709/02809	Superseded	Lever assembly Engaging	AB	1
9	:714/03102		Lever assembly Engaging	AB	1
10	:714/03003	Superseded	Drive assembly Kit	AB	1
10	:714/03103		Drive assembly kit	AB	1
11	:714/03104	Superseded	Solenoid	AB	1
11	:714/03004		Solenoid	AB	1
12	::N.S.P.		None serviced part <i>Solenoid End Cover Kit</i>	AB	1
13	:709/02814		Kit-through bolt	AB	1
14	:714/03105	Superseded	Kit-brush	AB	1
14	:714/03005		Kit-brush	AB	1
15	:714/00507		Armature	AB	1
16	:709/02817		Spring brush	AB	1
17	:709/02819		Kit-sundry parts	AB	1
18	:714/03006		Bracket Drive end <i>BLMC 4.98 Engines</i>	A	1
18	:714/03106		Bracket Drive end <i>4.236 Engines</i>	B	1
19	120/29506		Cover Solenoid		1
20	121/77603		Tie Cable 300mm		1


This diagram illustrates the exploded view of a mechanical assembly, likely a pump or motor component. The parts are numbered as follows:

- 1**: Main housing or base plate.
- 2**: Flange or mounting plate.
- 3**: Bolt or screw.
- 4**: Nut or washer.
- 5**: Seal or gasket.
- 6**: Pin or small screw.
- 7**: Pin or small screw.
- 8**: Pin or small screw.
- 9**: Bolt or screw.
- 10**: Nut or washer.
- 11**: Pin or small screw.
- 12**: Pin or small screw.
- 13**: Pin or small screw.
- 14**: Pin or small screw.
- 15**: Pin or small screw.
- 16**: Pin or small screw.
- 17**: Pin or small screw.
- 18**: Pin or small screw.
- 19**: Pin or small screw.
- 20**: Pin or small screw.
- 21**: Pin or small screw.
- 22**: Pin or small screw.
- 23**: Pin or small screw.
- 24**: Pin or small screw.
- 25**: Pin or small screw.
- 26**: Pin or small screw.
- 27**: Pin or small screw.
- 28**: Pin or small screw.
- 29**: Pin or small screw.
- 30**: Pin or small screw.
- 31**: Pin or small screw.
- 32**: Pin or small screw.
- 33**: Pin or small screw.
- 34**: Pin or small screw.
- 35**: Pin or small screw.
- 36**: Pin or small screw.
- 37**: Pin or small screw.
- 38**: Pin or small screw.
- 39**: Pin or small screw.
- 40**: Pin or small screw.
- 41**: Pin or small screw.
- 42**: Pin or small screw.
- 43**: Pin or small screw.
- 44**: Pin or small screw.
- 45**: Pin or small screw.
- 46**: Pin or small screw.
- 47**: Pin or small screw.
- 48**: Pin or small screw.
- 49**: Pin or small screw.
- 50**: Pin or small screw.
- 51**: Pin or small screw.
- 52**: Pin or small screw.
- 53**: Pin or small screw.
- 54**: Pin or small screw.
- 55**: Pin or small screw.
- 56**: Pin or small screw.
- 57**: Pin or small screw.
- 58**: Pin or small screw.
- 59**: Pin or small screw.
- 60**: Pin or small screw.

Item	Part #	Change No	Description	Usage Code	QTY
1	714/07200	Superseded	Motor starter <i>BLMC 4.98 Engines</i>		1
1	N.L.A		No longer available		1
1	714/07400	Superseded	Motor starter <i>4.236 Engines</i>		1
1	N.L.A		No longer available		1
2	:714/07202		Bracket end		1
3	::714/07201		Bearing		1
4	:714/07203		Bolt		2
5	:714/07204		Washer		4
6	:714/07205		Pin		1
7	:714/07206		Ring safety		1
8	:714/07207		Seal ring		1
9	:714/07208		Ring spring		1
10	:714/07209		Ring		1
11	:714/07211		Gear pinion assembly starter		1
17	:714/07214		Lever		1
18	:714/07229		Solenoid assembly		1
19	::714/07217		Core solenoid		1
20	::714/07218		Spring		1
32	:714/07238		Bearing		1
33	:714/07239		Spacer		1
34	:714/07240		Spring		1
35	:714/07241		Kit-segment		1
36	:714/07242		Washer		1
37	:714/07231		Armature		1
38	:714/07232		Washer		1
39	:714/07233		Washer		1
40	:714/07248		Stator assembly		1
44	::714/07237		Connector		1
46	::714/07245		Coil field		1
47	::714/07246		Coil field		1
48	::714/07247		Bolt		4
49	:714/07257		Seal ring		1
50	:714/07249		Bolt		2
51	:714/07258		Bearing		1
52	:714/07254		Mounting assembly brushes		1
53	::714/07250		Spring		8
54	::714/07251		Brush		4
55	::714/07252		Washer		4
56	::714/07253		Bolt		2
57	:714/07255		Nut		4
58	:714/07256		Cap		1
59	:714/07230		Washer		2
60	:714/07240		Spring		1



9802/8000 C2-5-3 STARTER MOTOR TYPE M127 - 12.VOLT BLMC 4.98 ENGINES, (ALTERNATIVE)

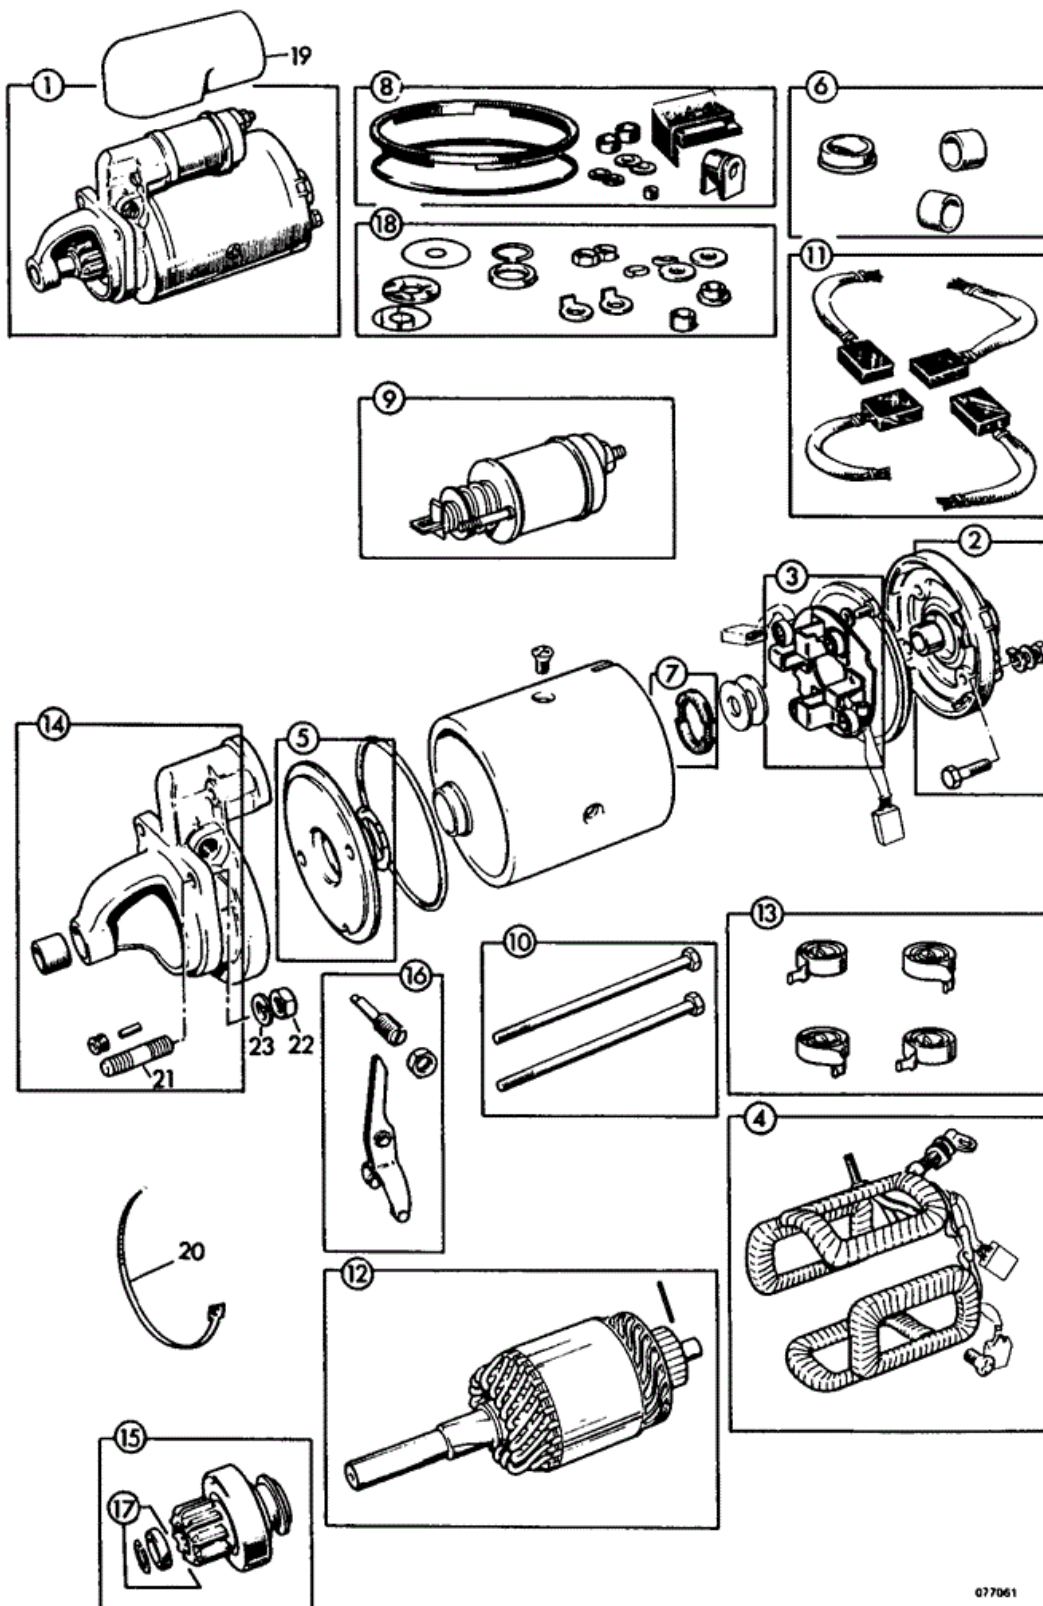


Q77061

Item	Part #	Change No	Description	Usage Code	QTY
1	714/11200		Motor Starter	P/Ex	1
2	:709/02801		Bracket Commutator end		1
3	:714/00506		Kit-brush mounting		1
4	:714/09107		Coil field Assembly		1
5	:714/03101		Bracket Intermediate		1

6	:709/02805		Kit-bush		1
7	:709/02806		Kit-brake		1
8	:709/02807		Kit-seal		1
9	:714/09104		Solenoid		1
10	:N.S.P.		None serviced part		1
11	:714/03005		Kit-brush		1
12	:714/09103		Armature		1
13	:709/02817		Spring brush		1
14	:N.S.P.		None serviced part		1
15	:714/09102		Kit-drive end		1
16	:714/09105		Kit-engaging lever		1
17	:714/09101		Kit-retention		1
18	:709/02819		Kit-sundry parts		1
19	120/29506		Cover Solenoid		1
20	121/77603		Tie Cable 300mm		1
21	1305/3316Z		Bolt		3
22	1340/0201Z		Nut		3
23	1410/0004		Washer		3
23	1416/0007		Washer		3



9802/8000 C2-5-4 MOTOR, STARTER M127 12.VOLT 4.236 ENGINES

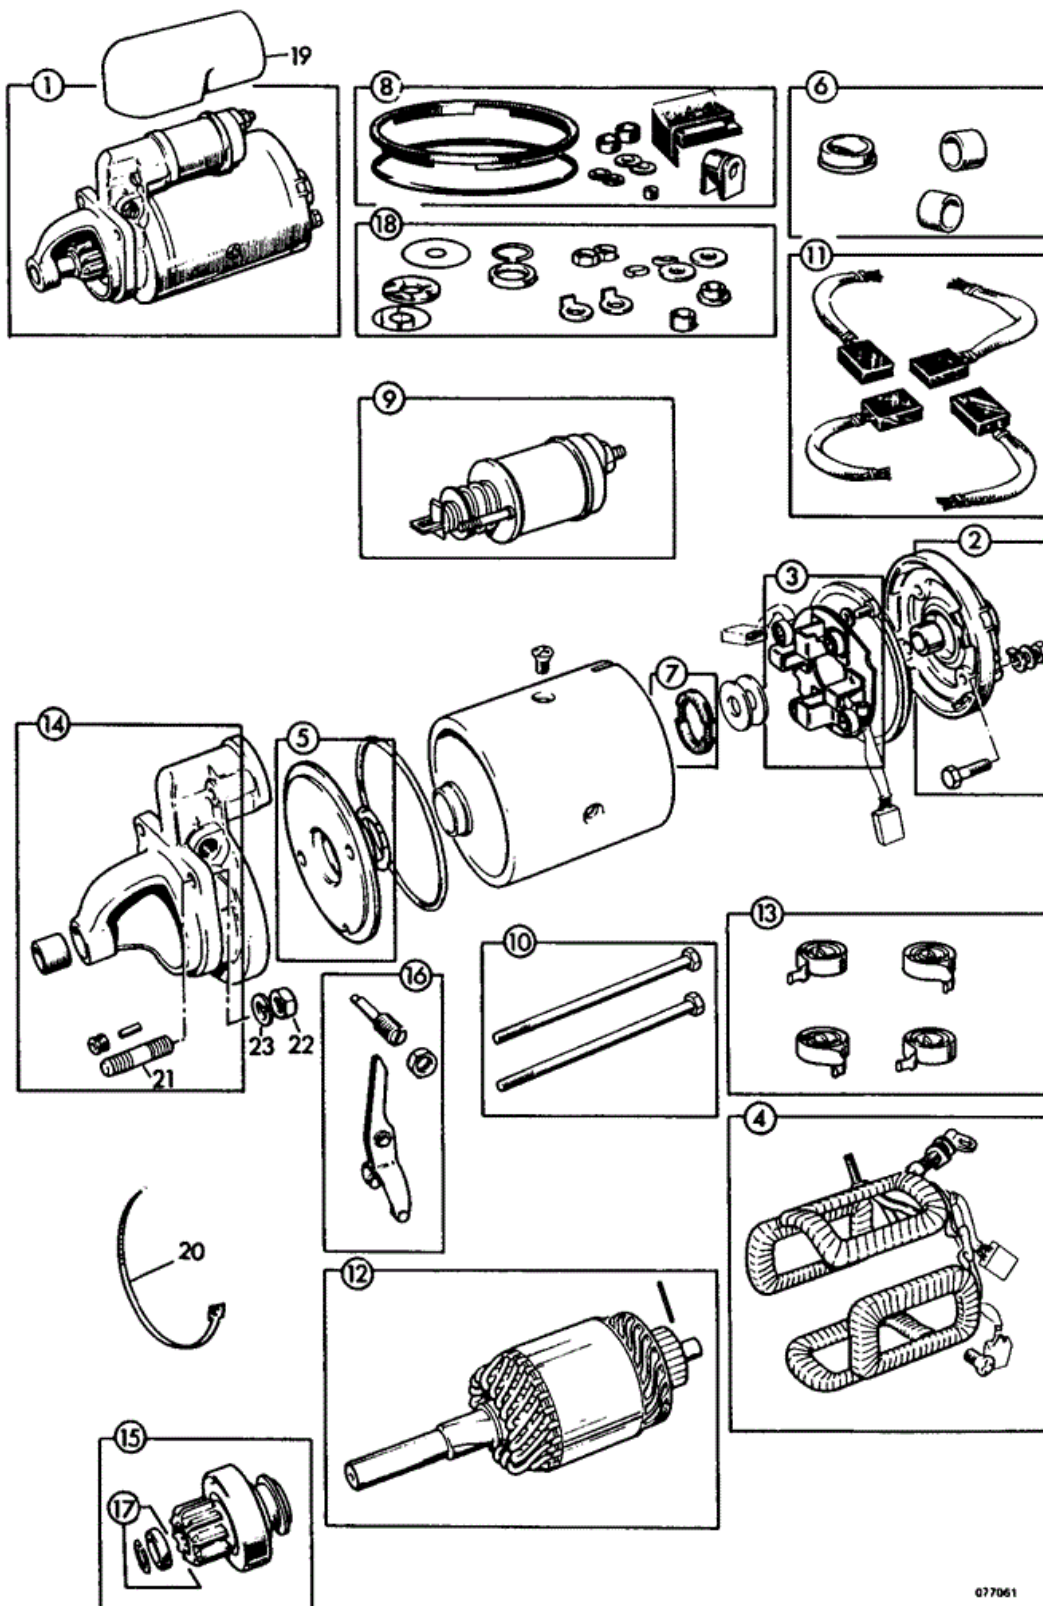

Q77061

Item	Part #	Change No	Description	Usage Code	QTY
1	714/09000	Superseded	Motor Starter <i>Lucas ref.27541</i>		1
1	714/14300		Motor Starter <i>REFER TO C2-5-5 FOR SERVICE PARTS</i>		1
2	:709/02801		Bracket Commutator end		1
3	:714/00506		Kit-brush mounting		1

4	:714/09107		Coil field Assembly		1
5	:714/03101	Superseded	Bracket Intermediate		1
5	:714/09106		Bracket Intermediate		1
6	:709/02805		Kit-bush		1
7	:709/02806		Kit-brake		1
8	:709/02807		Kit-seal		1
9	:714/09104		Solenoid		1
10	:N.S.P.		None serviced part <i>Through bolt</i>		1
11	:714/03005		Kit-brush		1
12	:714/09103		Armature		1
13	:709/02817		Spring brush		1
14	:N.S.P.		None serviced part <i>Drive end bracket</i>		1
15	:714/09102	Superseded	Kit-drive end		1
15	714/29301		Kit-drive end		1
16	:714/09105		Kit-engaging lever		1
17	:714/09101		Kit-retention		1
18	:709/02819		Kit-sundry parts		1
19	120/29506		Cover Solenoid		1
20	121/77603		Tie Cable 300mm		1
21	822/00123		Stud		3
22	1340/0201Z		Nut		3
23	1416/0005Z		Washer spring - 5/16" Zinc plated		3

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com