 





9802/9800 P5-1-1 SUMP, OIL & FITTINGS AR & AK BUILDS

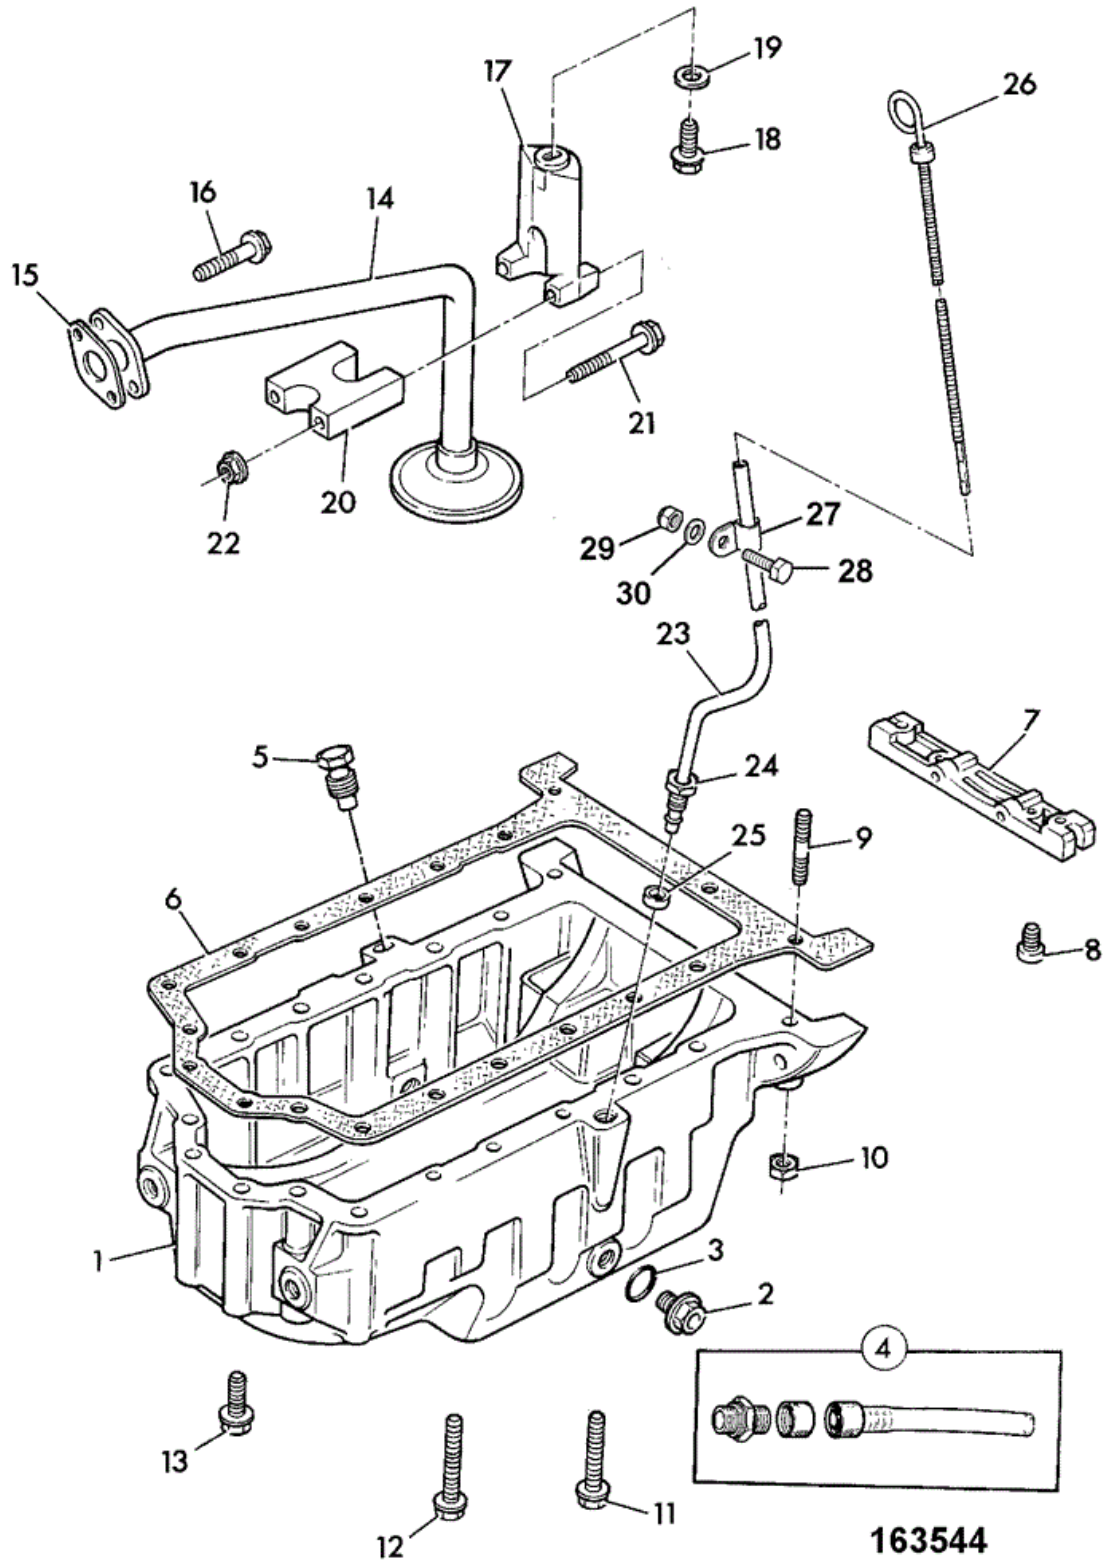

Item	Part #	Change No	Description	Usage Code	QTY
1	02/201095		Sump oil		1
2	02/101782		Plug oil drain		2
3	02/200198		O Ring		2
4	993/29700		Kit-drain		1
5	02/200512		Plug		1
6	02/201379		Gasket oil sump		1
6	02/102069		Gasket oil sump <i>ALTERNATIVE</i>		1
7	02/202369		Piece bridge		1
8	1391/3205Z		Capscrew M6x20		2
9	02/291237		Stud		2
10	02/291058		Nut flanged M8		2
11	02/291076		Screw		1
12	02/291077		Screw		5
13	02/291028		Bolt		12
14	02/200204		Pipe oil suction		1
15	02/201187		Gasket		1
16	02/291020		Bolt		2
17	02/200427		Bracket		1
18	02/291017		Screw		1
19	02/100326		Spacer		1
20	02/200428		Clamp		1
21	02/291119		Screw		2
22	02/291070		Nut		2
23	123/05933		Tube dipstick		1
24	02/291090		Nut		1
25	02/200203		Olive		1
26	123/06297		Dipstick oil level		1
27	826/00410		Clip 'P' 9mm		1
28	1315/0205Z		Setscrew M6 x 20mm		1
29	1370/0103Z		Nut Self Lock M6		1
30	1420/0006Z		Washer (M6)		1



 9802/9800 P5-2-2 PUMP, OIL & RELIEF VALVE AK BUILD

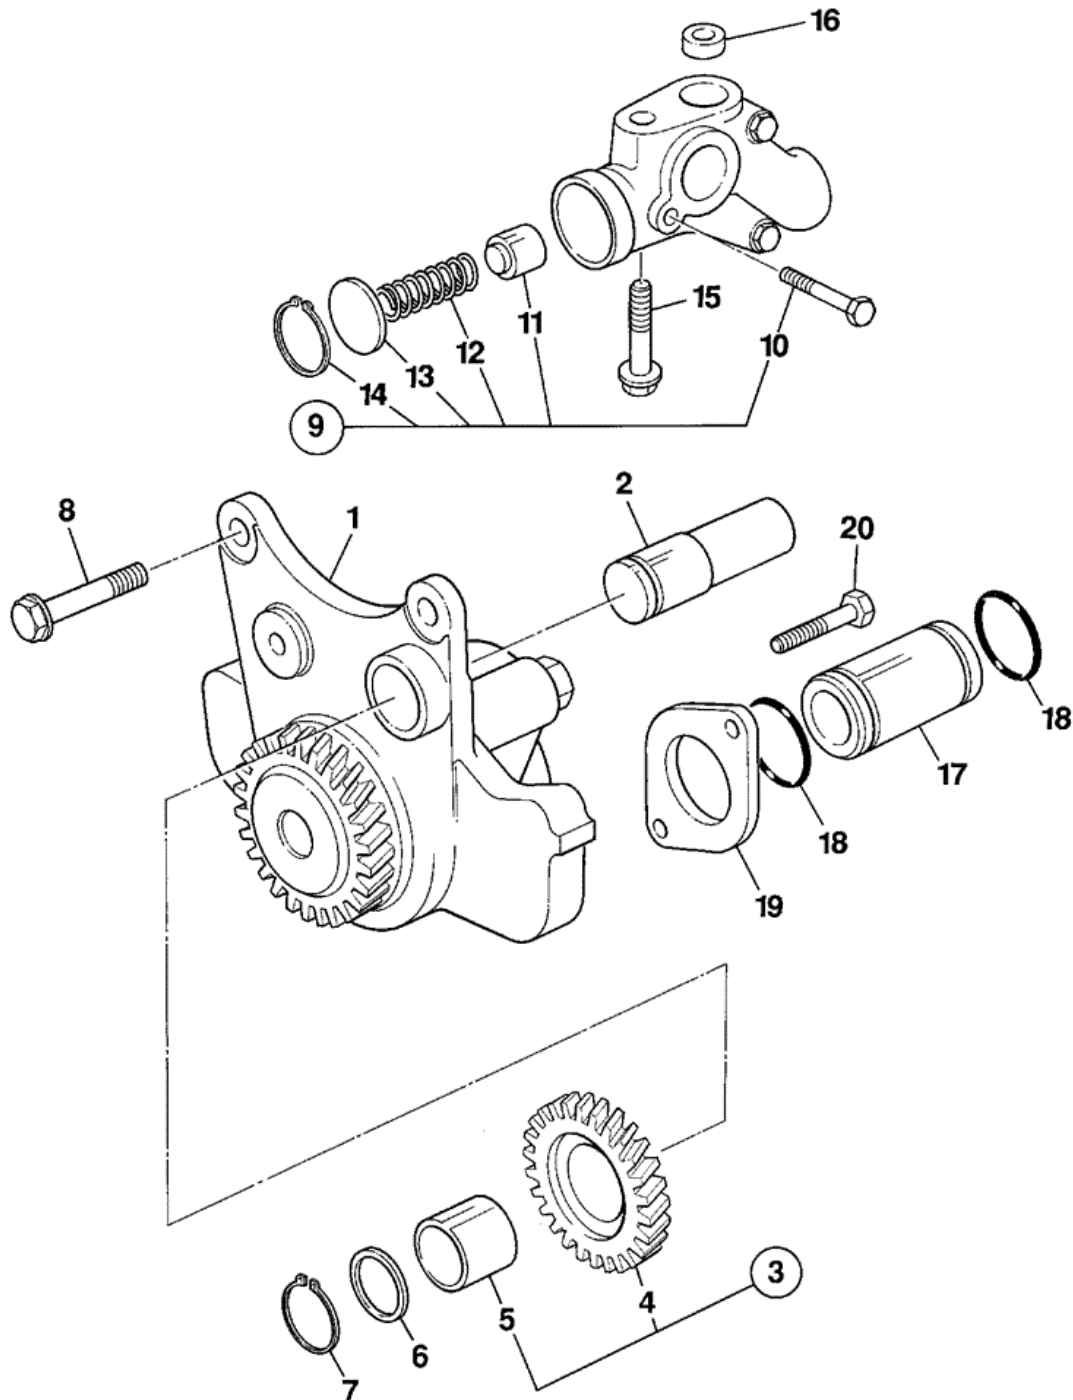


247430

Item	Part #	Change No	Description	Usage Code	QTY
1	02/201050		Pump oil		1
2	02/201131		Shaft		1


3	02/290005		Gear assembly		1
4	****		None serviced part <i>Gear</i>		1
5	:02/290006		Bush		1
6	02/200104		Washer		1
7	02/100328		Circlip		1
8	02/291018		Bolt		3
9	02/202447		Valve oil relief		1
10	:02/291134		Screw M6x30mm		3
11	:02/100599		Plunger		1
12	:02/202448		Spring		1
13	:02/101309		Seat		1
14	:02/200108		Circlip		1
15	02/291038		Bolt		1
16	02/100319		Thimble		1
17	02/200109		Pipe oil delivery		1
18	02/200112		O Ring		2
19	02/200111		Flange		1
20	02/291017		Screw		2



 9802/9800 P5-3-1 PISTON COOLING JETS AK BUILD

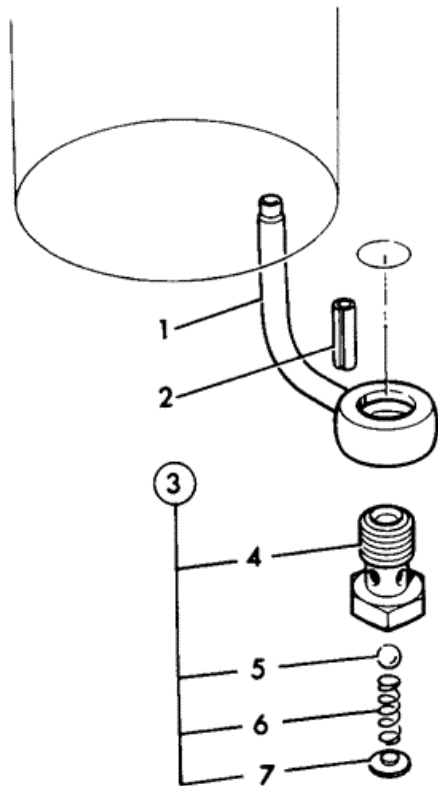

Item	Part #	Change No	Description	Usage Code	QTY
1	02/201734		Jet piston cooling		4
2	02/201731		Pin roll		4
3	02/101898		Valve		4
4	****		None serviced part <i>Body</i>		1
5	:02/200099		Ball		1
6	:02/200098		Spring		1
7	:02/200097		Retainer		1

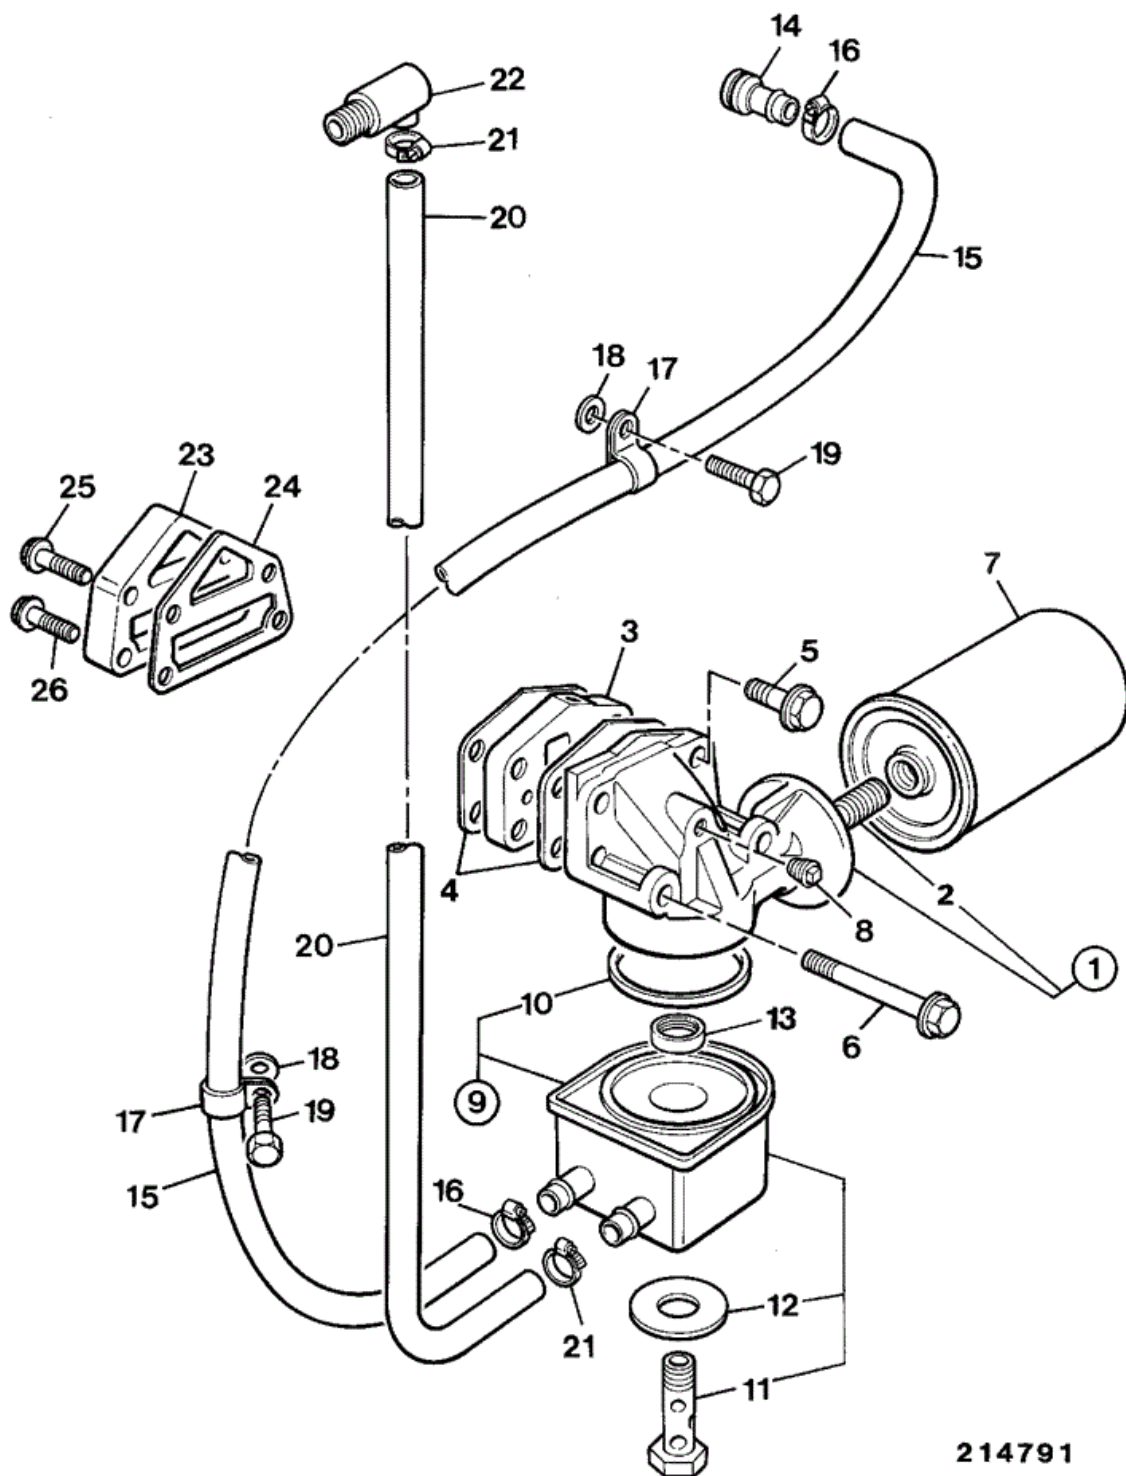 


Item	Part #	Change No	Description	Usage Code	QTY
1	02/201150		Head oil filter		1
2	:02/201116		Connector		2
3	02/200931		Adapter		1
4	02/200484		Gasket		2
5	02/291184		Screw		2

6	02/291087		Bolt		2
7	02/100073		Element oil filter canister type - long		2
8	826/00765		Plug		1
9	02/201118		Cooler oil		1
10	:02/200749		Seal		1
11	:02/201119		Connector		1
12	:02/201123		Washer seal		1
13	02/101405		Seal		1
14	02/101642		Adapter straight		1
15	02/202336		Hose		1
16	2201/0004		Clip Jubilee		2
17	02/200916		Clip 'p'		2
18	02/100618		Spacer		2
19	826/00869		Screw flange head		1
20	02/200918		Hose		1
21	2201/0004		Clip Jubilee		2
22	02/201109		Elbow by-pass connection		1
23	02/200732		Adapter oil feed		1
24	02/200484		Gasket		1
25	02/291044		Bolt		1
26	02/291042		Bolt		3



 9802/9800 P5-5-3 COOLER, OIL HOSE & PIPEWORK AK BUILD, 100BHP

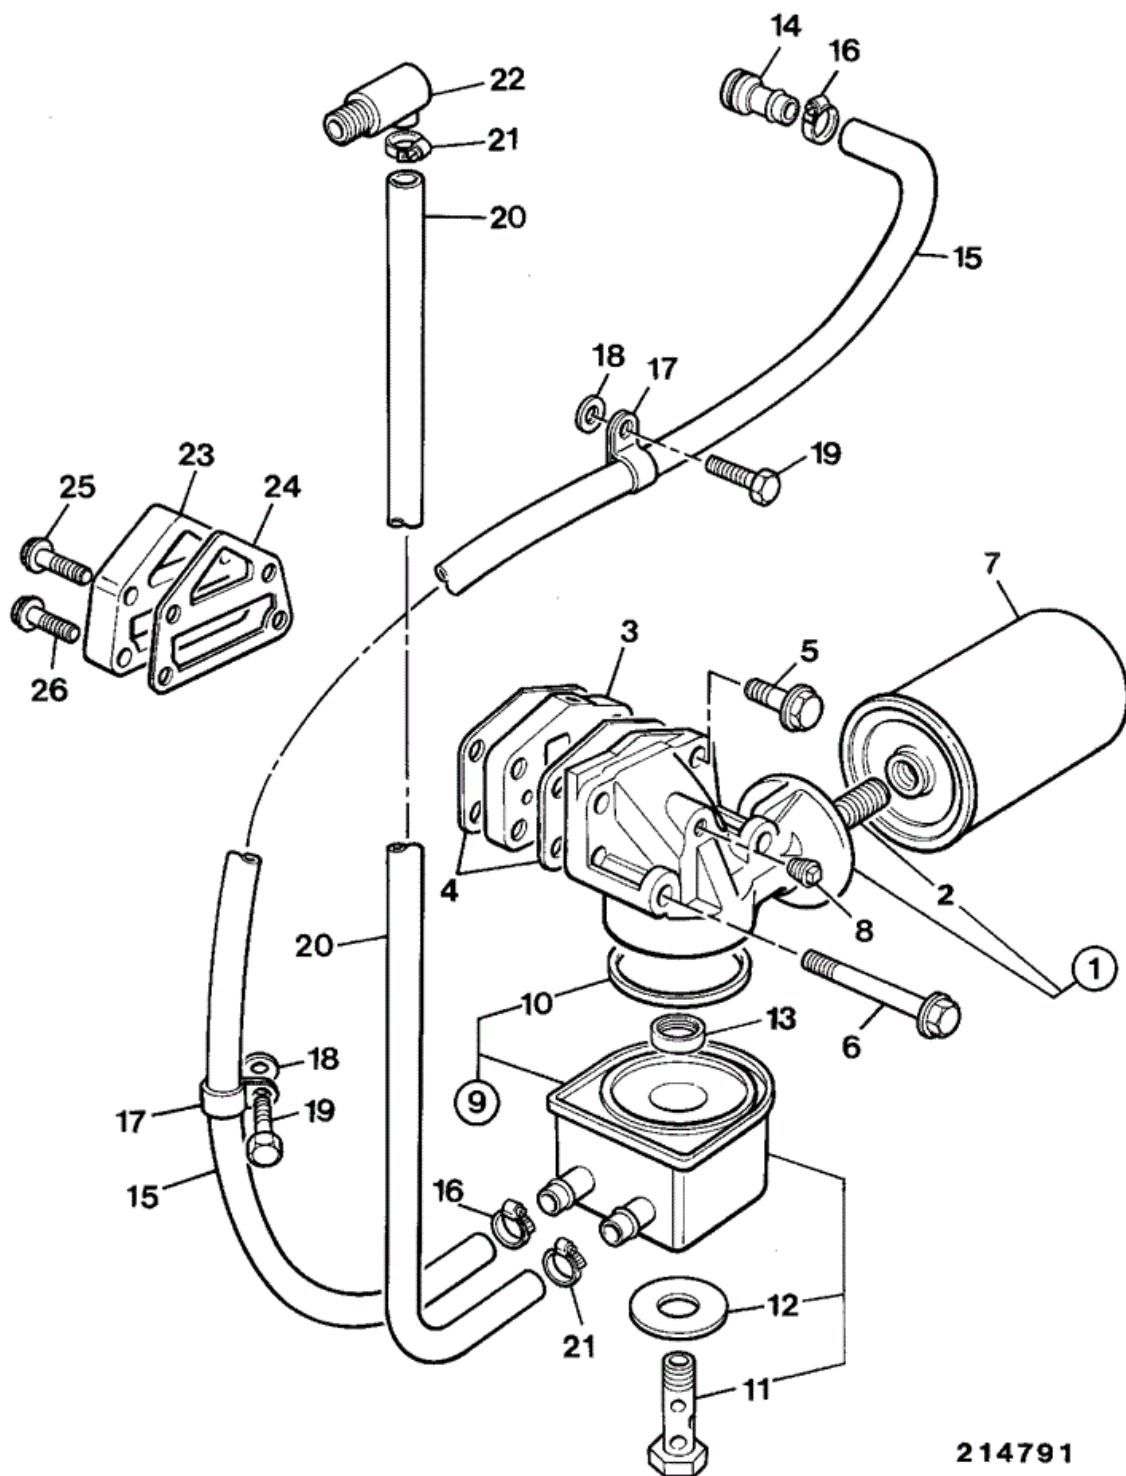


Item	Part #	Change No	Description	Usage Code	QTY
1	02/201150		Head oil filter		1
2	:02/201116		Connector		2
3	02/200931		Adapter		1
4	02/200484		Gasket		2
5	02/291184		Screw		2

6	02/291087		Bolt		2
7	02/100073		Element oil filter canister type - long		2
8	826/00765		Plug		1
9	02/202242	Superseded	Cooler 12 plate modene		1
9	M.S.S		Multi Supersession		1
9A	02/202497		Cooler 12 plate modem		1
10	:02/200749		Seal		1
11	:02/201119		Connector		1
11A	02/202306		Bolt banjo adaptor		1
12	:02/201123		Washer seal		1
13	02/101405		Seal		1
14	02/101642		Adapter straight		1
15	02/200917		Hose		1
16	2201/0004		Clip Jubilee		2
17	02/200916		Clip 'p'		2
18	02/100618		Spacer		2
19	02/291017		Screw		1
20	02/200918		Hose		1
21	2201/0004		Clip Jubilee		2
22	02/201109		Elbow by-pass connection		1
23	02/200732		Adapter oil feed		1
24	02/200484		Gasket		1
25	02/291044		Bolt		1
26	02/291042		Bolt		3



9802/9800 P6-1-2 PUMP, FUEL INJECTION AK BUILD

 92BHP

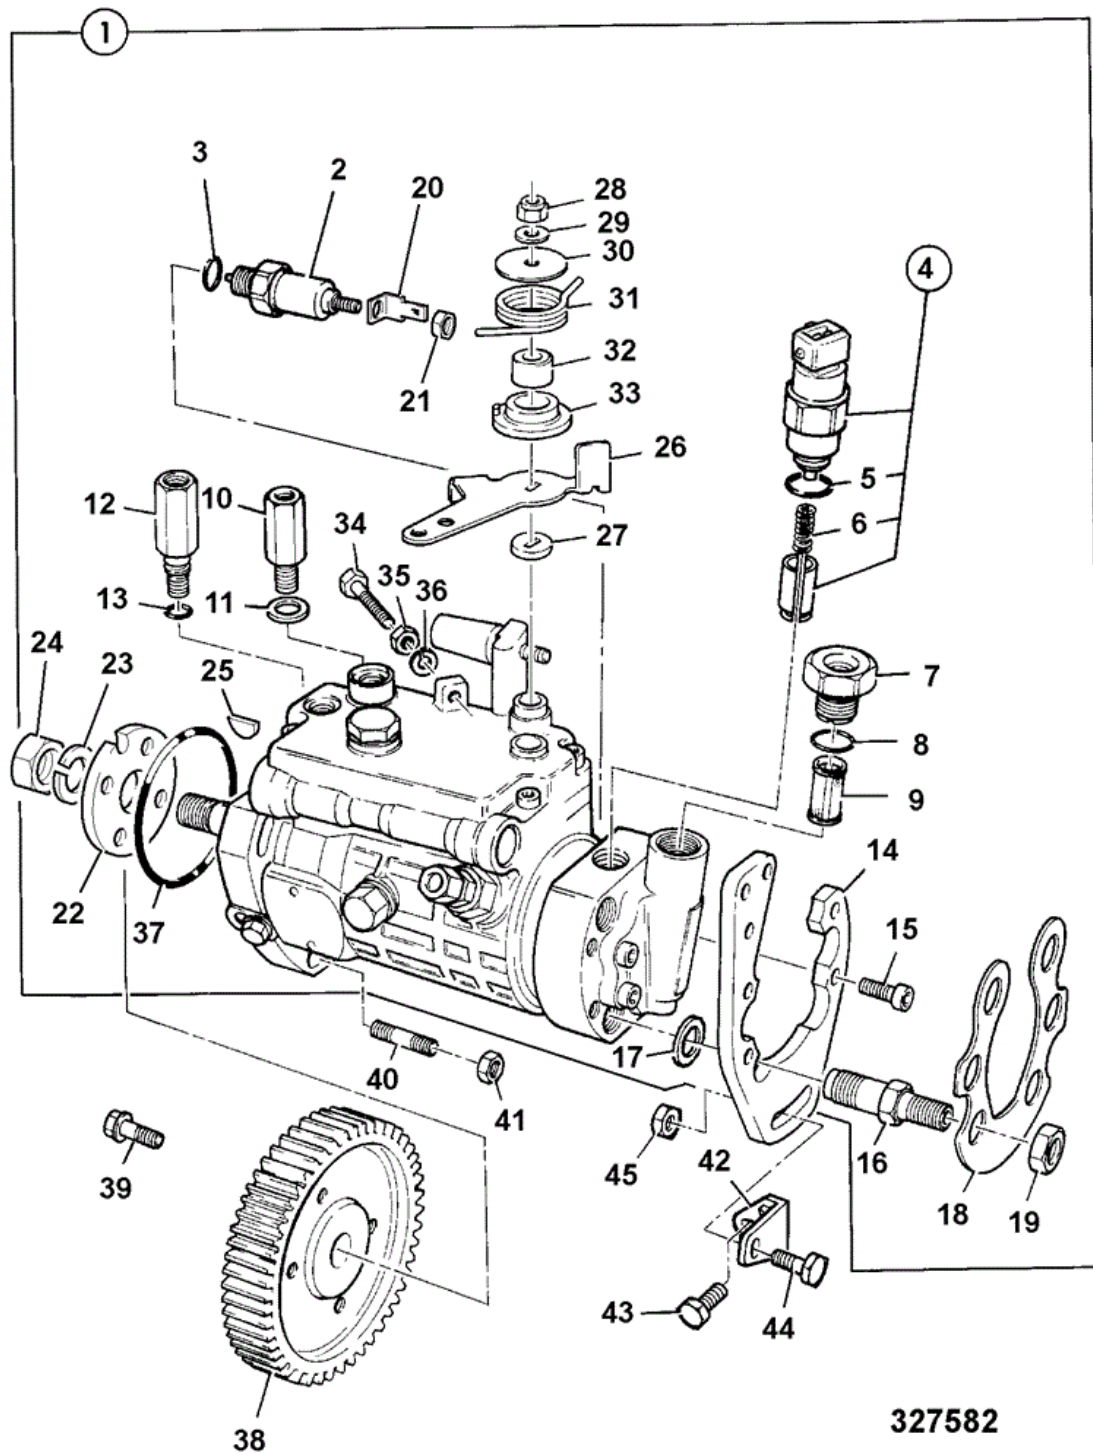


Item	Part #	Change No	Description	Usage Code	QTY
1	17/912200		Pump fuel injection	P/Ex	1

2	:17/111901	Motor thermal waxtat	1
3	:17/111902	O Ring	1
4	:17/105201	Solenoid E.S.O.S	1
5	:17/110701	Ring seal	1
6	:17/105301	Spring	1
7	:17/109503	Connector fuel	1
8	:17/108705	Ring seal	1
9	:17/105207	Filter injection pump	1
10	:17/110702	Connector fuel leak-off	1
11	:17/108708	Washer	1
12	:17/110703	Valve non-return	1
13	:17/108720	Ring sealing	1
14	:17/108721	Bracket	1
15	:17/108703	Screw	1
16	:17/108701	Connector fuel pressure	4
17	:17/114101	Washer seal	4
18	:17/110704	Plate support	1
19	:17/105210	Nut Union	1
20	:17/111903	Terminal male lucar 90 degree	1
21	:17/111904	Nut	1
22	:17/912201	Flange drive	1
23	:17/912202	Washer spring	1
24	:17/912203	Nut	1
25	:17/108707	Washer	1
26	:17/108712	Lever throttle	1
27	:17/105222	Washer cup	1
28	:17/108715	Nut lock	1
29	:17/108714	Washer	1
30	:17/110904	Guide spring	1
31	:17/110903	Spring return lever	1
32	:17/108710	Bush	1
33	:17/108709	Bush flanged	1
34	:17/912204	Screw	1
35	:17/105228	Nut	1
36	:17/108718	Washer spring	1
37	02/201712	O Ring	1
38	02/290037	Gear injection pump	1
39	02/291016	Screw	4
40	02/291236	Stud	3
41	02/291058	Nut flanged M8	3
42	02/201563	Bracket support	1
43	826/00901	Screw	1
44	826/00869	Screw flange head	1
45	02/291058	Nut flanged M8	1



9802/9800 P6-1-3 PUMP, FUEL INJECTION AK BUILD

 100BHP

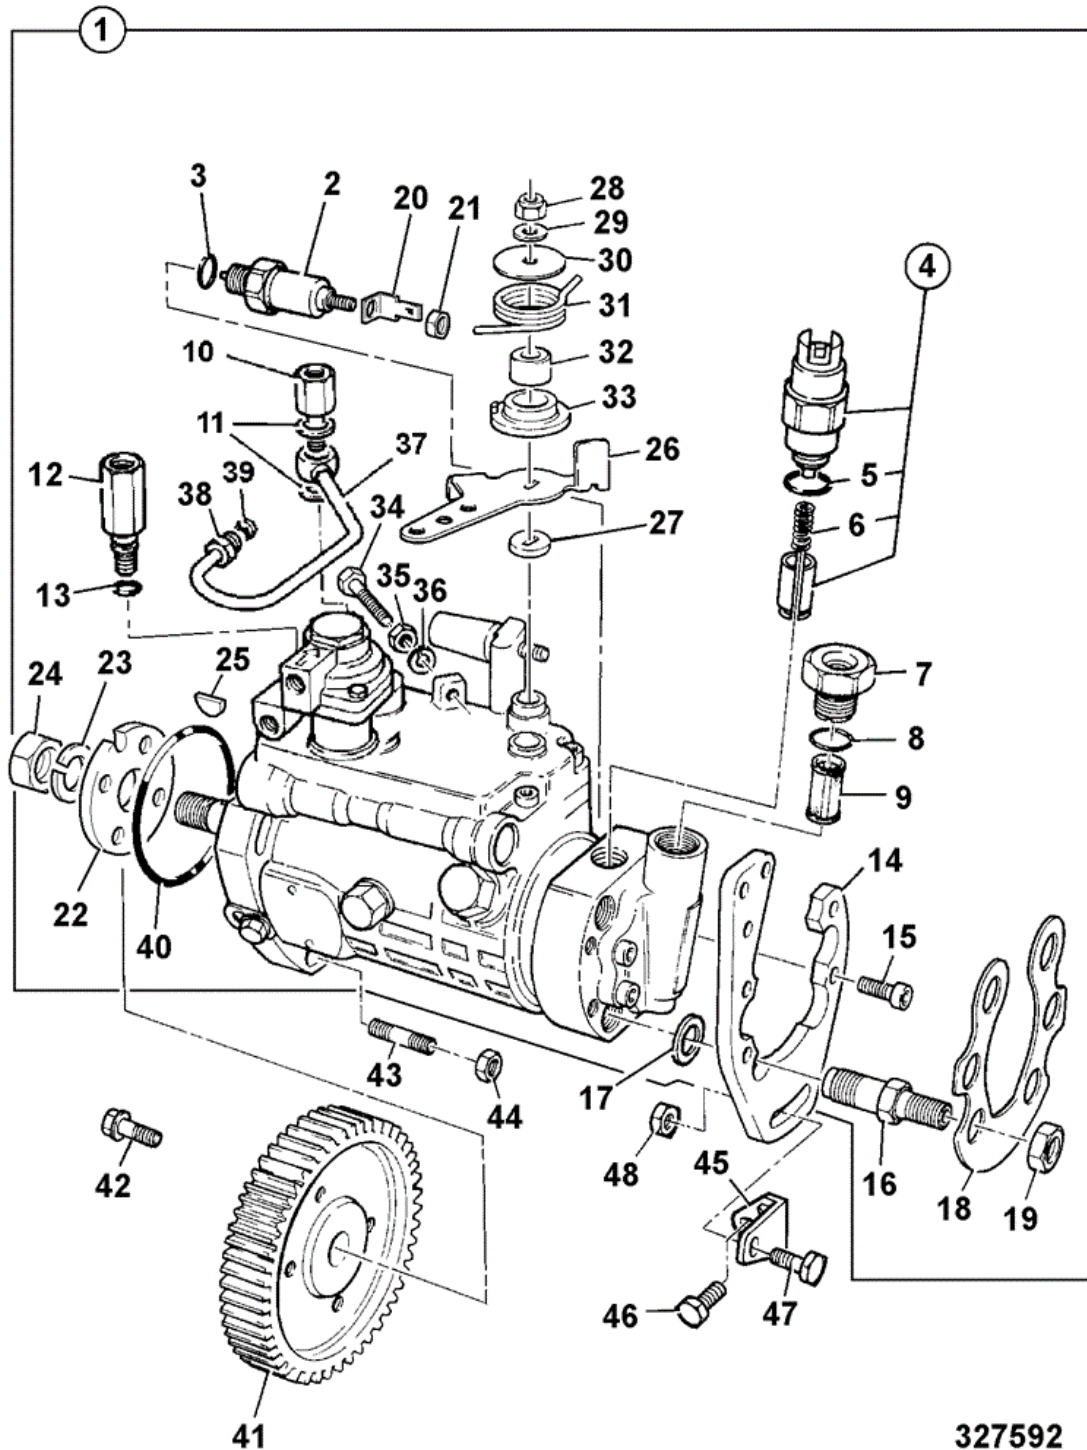


327592

Item	Part #	Change No	Description	Usage Code	QTY
1	17/910000		Pump fuel injection	P/Ex	1

2	:17/111901		Motor thermal waxtat		1
3	:17/111902		O Ring		1
4	:17/105201		Solenoid E.S.O.S		1
5	:17/110701		Ring seal		1
6	:17/105301		Spring		1
7	:17/109503		Connector fuel		1
8	:17/108705		Ring seal		1
9	:17/105207		Filter injection pump		1
10	:17/110901		Connector leak-off		1
11	:17/103906		Washer seal		2
12	:17/110703		Valve non-return		1
13	:17/108720		Ring sealing		1
14	:17/108721		Bracket		1
15	:17/108703		Screw		1
16	:17/108701		Connector fuel pressure		4
17	:17/114101		Washer seal		4
18	:17/110704		Plate support		1
19	:17/105210		Nut Union		1
20	:17/111903		Terminal male lucar 90 degree		1
21	:17/111904		Nut		1
22	:17/912201		Flange drive		1
23	:17/912202		Washer spring		1
24	:17/912203		Nut		1
25	:17/108707		Washer		1
26	:17/108712		Lever throttle		1
27	:17/105222		Washer cup		1
28	:17/108715		Nut lock		1
29	:17/108714		Washer		1
30	:17/110904		Guide spring		1
31	:17/110903		Spring return lever		1
32	:17/108710		Bush		1
33	:17/108709		Bush flanged		1
34	:17/912204		Screw		1
35	:17/105228		Nut		1
36	:17/108718		Washer spring		1
37	:17/110902		Pipe fuel boost control to inj/pump		1
38	:02/200179		Nut		2
39	::02/100322		Olive		1
40	02/201712		O Ring		1
41	02/290036		Gear injection pump		1
42	826/00869		Screw flange head		4
43	02/291052		Stud		3
44	02/291058		Nut flanged M8		3
45	02/201086		Bracket		1
46	826/00901		Screw		1
47	826/00869		Screw flange head		1
48	02/291058		Nut flanged M8		1

 JCB 9802/9800 P6-2-2 INJECTORS, FUEL & INJECTION PIPES
 AK BUILD, 92BHP

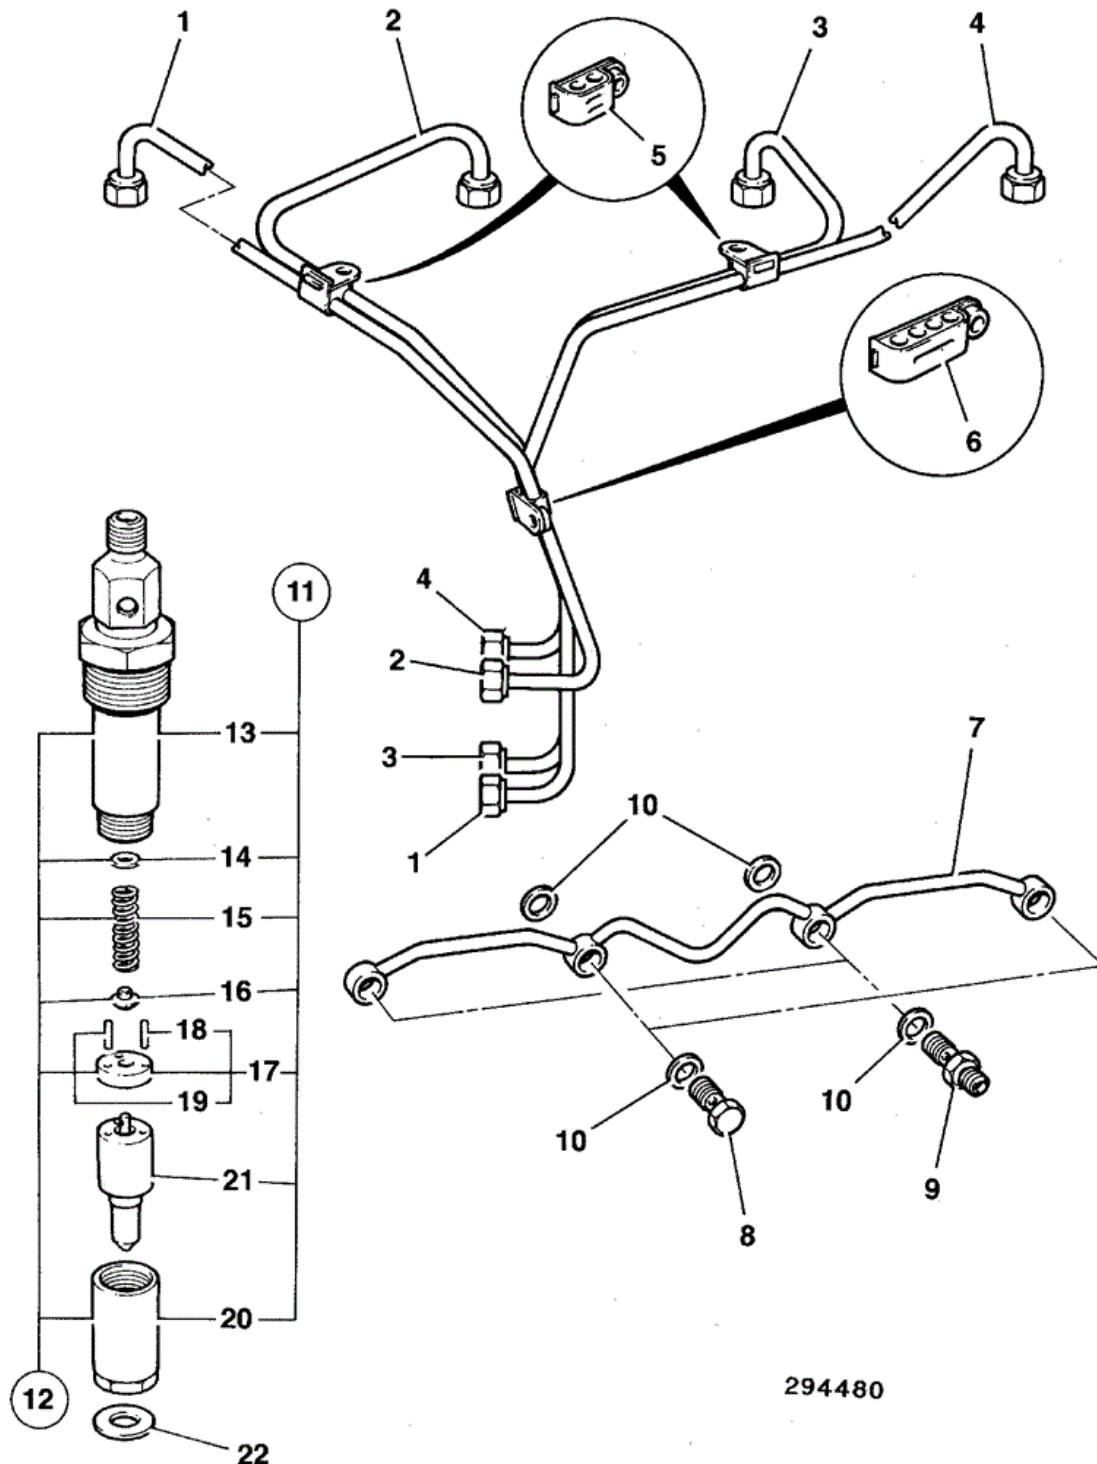

Item	Part #	Change No	Description	Usage Code	QTY
1	02/201831		Pipe injector No.1		1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com