


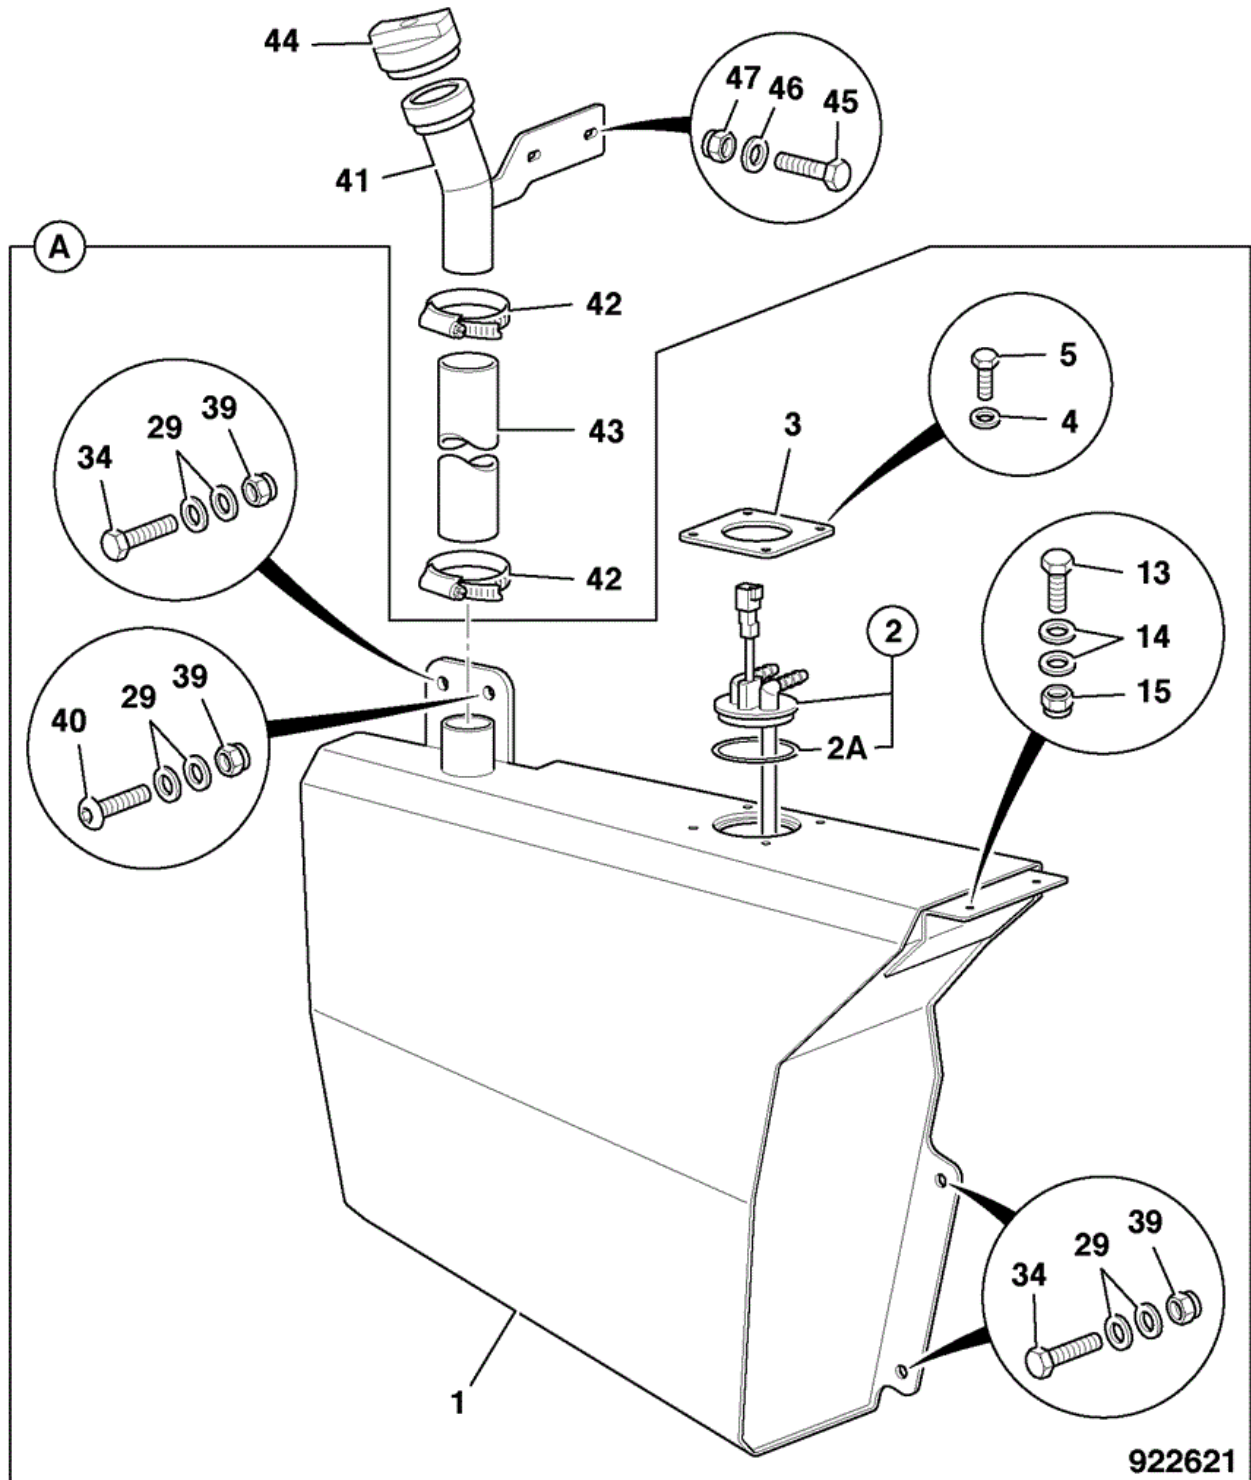

9822/0220 B120-1-1 FUEL TANK



Item	Part #	Change No	Description	Usage Code	QTY
A	****	to M1770251	Assembly fuel tank		1
A	****		Assembly fuel tank		1
1	335/14483	to M1770251	Tank fuel		1

1	333/L4197		Tank fuel		1
2	332/R6491		Sender fuel		1
2A	332/C3372		Gasket		1
3	331/62680		Plate clamping		1
4	1420/0006D		Washer (M6)		4
5	1315/0207D		Setscrew M6 x 25mm		4
13	1315/0305D		Setscrew M8 x 20mm		1
14	1420/0007D		Washer (M8)		2
15	1370/0203D		Nut Lock M8		1
29	1420/0008D		Washer (M10)		8
34	1315/0410D		Setscrew M10 x 40mm		3
39	1370/0303D		Nut Self Lock M10		4
40	826/10878		Screw Button Head		1
41	332/U3256		Pipe oil filler WA		1
42	2201/0011		Clip Worm Drive 40/64mm		2
43	332/S0409		Hose fuel filler		1
44	331/45599		Cap fuel		1
45	1315/0203D		Setscrew M6 x 16mm		2
46	1420/0006D		Washer (M6)		4
47	1370/0103D		Nut (M6)		2



9822/0220 B120-1-2 FUEL TANK ASSEMBLY

Item	Part #	Change No	Description	Usage Code	QTY
10	1315/0305D		Setscrew M8 x 20mm		1
20	1420/0007D		Washer (M8)		2
30	1370/0203D		Nut Lock M8		1
40	****		Assembly fuel tank		1
50	1420/0008D		Washer (M10)		12
60	1315/0410D		Setscrew M10 x 40mm		5
70	1370/0303D		Nut Self Lock M10		6
80	826/10878		Screw Button Head		1




9822/0220 B120-5-1 FUEL TANK ASSEMBLY ABI

Item	Part #	Change No	Description	Usage Code	QTY
1	332/R6491		Sender fuel		1
2	331/62680		Plate clamping		1
3	1420/0006D		Washer (M6)		4
4	333/L4197		Tank fuel		1
5	1315/0207D		Setscrew M6 x 25mm		4



9822/0220 B130-1-1 HYDRAULIC TANK

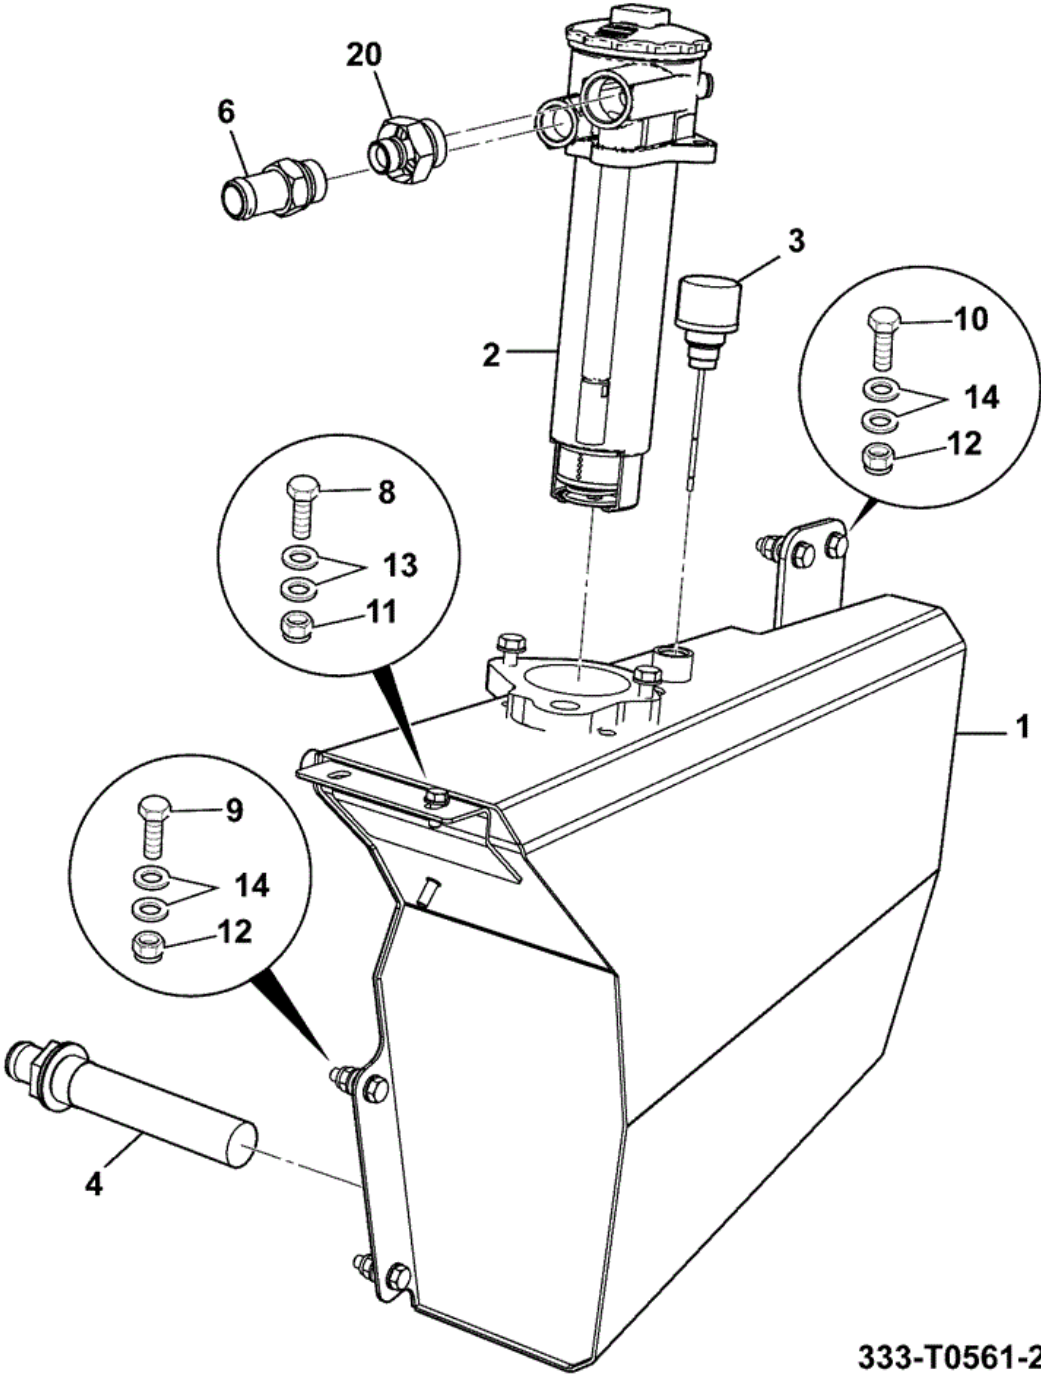


333-T0561-2

Item	Part #	Change No	Description	Usage Code	QTY
1	333/T6398	to JUL2011	Tank hydraulic WA A		1
1	333/L4195		Tank hydraulic WA		1

			<i>B</i>		
1A	:32/925390		Plug Drain G1A <i>B</i>		1
2	332/V8852		Filter tank return ABI		1
3	332/V3241		Breather		1
4	32/926049		Filter Strainer Tank		1
6	816/90929		Adaptor 1"1/16 SAE - BEAD		1
8	1315/0305D		Setscrew M8 x 20mm		1
9	1315/0410D	to JUL2011	Setscrew M10 x 40mm		4
9	1315/0410D		Setscrew M10 x 40mm		6
10	1315/0407D		Setscrew M10 x 25		2
11	1370/0203D		Nut Lock M8		1
12	1370/0303D	to JUL2011	Nut Self Lock M10		4
12	1370/0303D		Nut Self Lock M10		6
13	1420/0007D		Washer (M8)		2
14	1420/0008D	to JUL2011	Washer (M10)		10
14	1420/0008D		Washer (M10)		14
20	816/90217		Adaptor		1



9822/0220 B150-1-1 FENDERS FRONT TYRE WIDTH 254MM
(10")

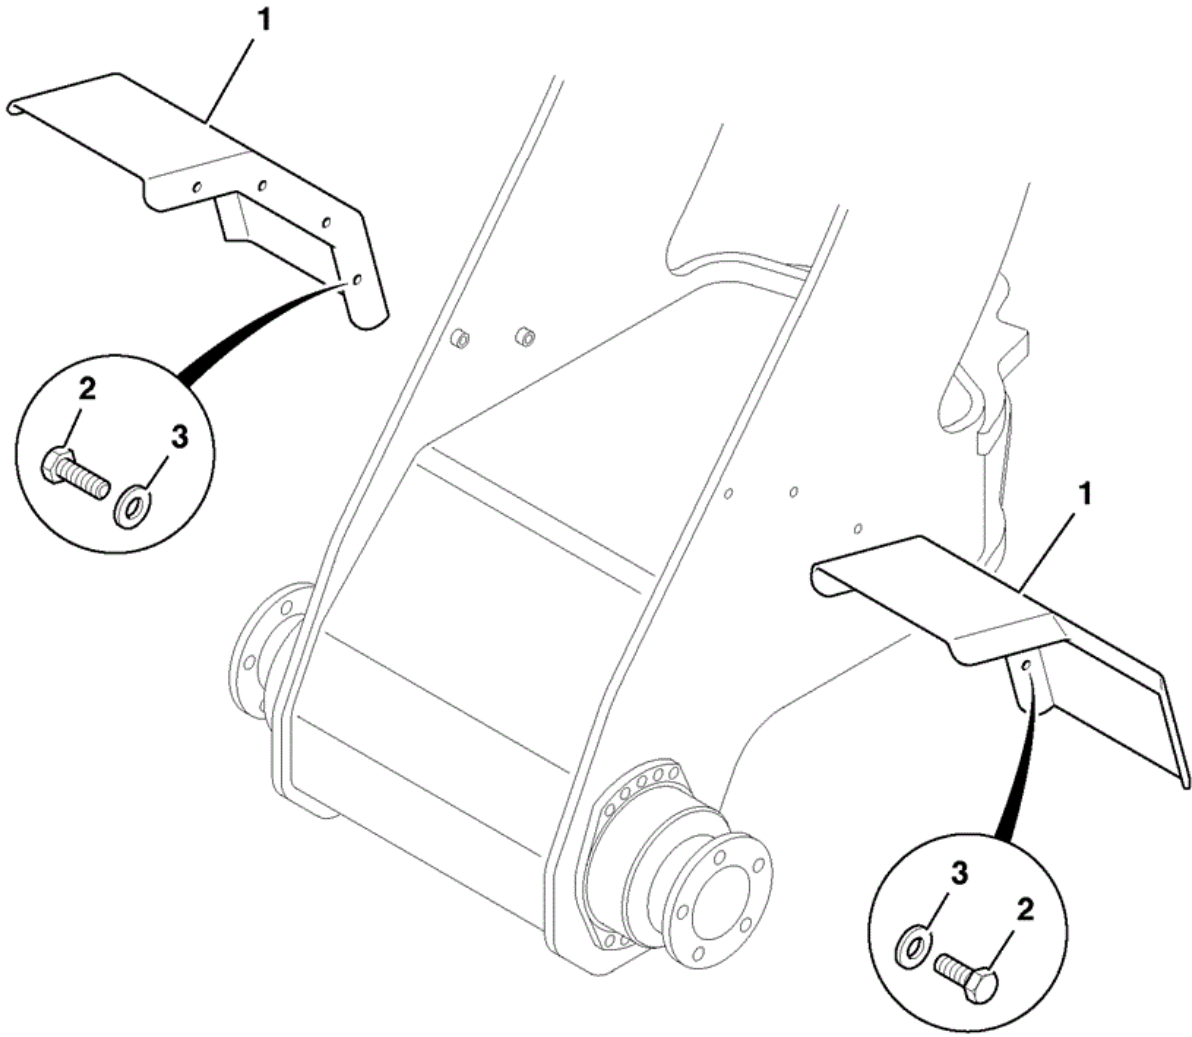


922690

Item	Part #	Change No	Description	Usage Code	QTY
1	332/R6882		Fender front 252mm wide <i>Left and right side</i>		2

2	1315/0309D		Setscrew M8 x 35 mm		8
3	1420/0007D		Washer (M8)		8



9822/0220 B150-2-1 FENDERS FRONT WIDE TYRE OPTION
380MM (15")

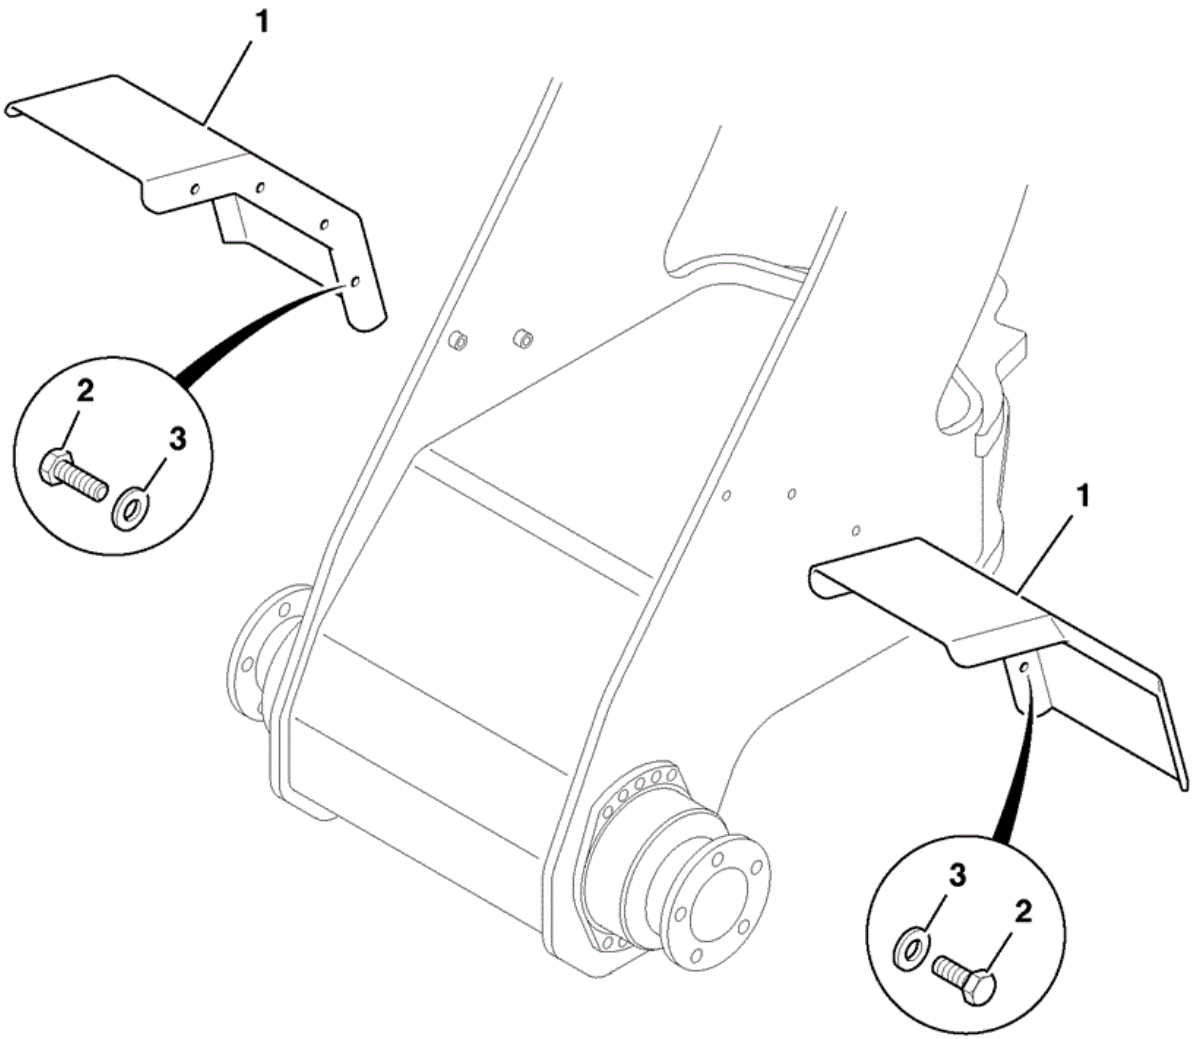


922690

Item	Part #	Change No	Description	Usage Code	QTY
1	332/T9231		Fender front 313mm wide <i>Left and right side</i>		2

2	1315/0309D		Setscrew M8 x 35 mm		8
3	1420/0007D		Washer (M8)		8



9822/0220 B150-3-1 FENDERS REAR TYRE WIDTH 254MM
(10")

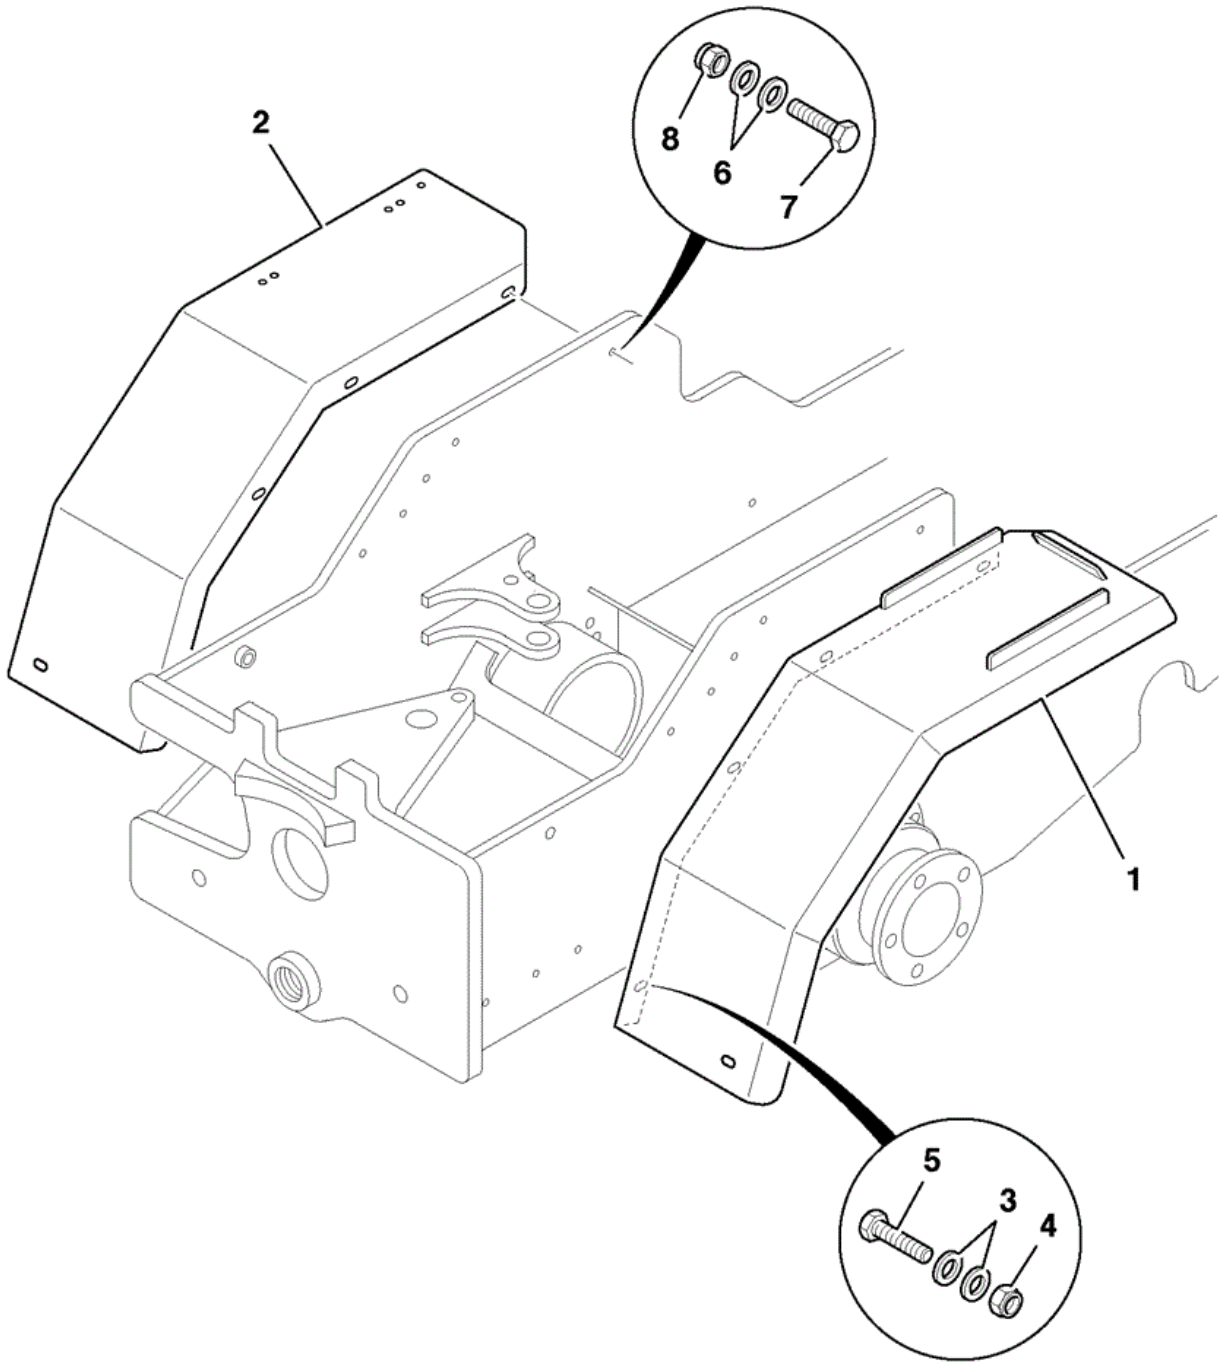


922701

Item	Part #	Change No	Description	Usage Code	QTY
1	332/R0165	to M1770161	Fender rear LH 252mm wide		1

1	333/L3864	Superseded	Fender rear LH 252mm wide	1
1	333/L5369		Fender rear LH 252mm wide	1
2	332/R0166	to M1770161	Fender rear RH 252mm wide	1
2	333/L3866	Superseded	Fender rear RH 252mm wide	1
2	333/L5372		Fender rear RH 252mm wide	1
3	1420/0007D		Washer (M8)	12
4	1370/0203D		Nut Lock M8	6
5	1315/0309D		Setscrew M8 x 35 mm	6
6	1420/0008D		Washer (M10)	4
7	1315/0411D		Setscrew M10X45	2
8	1370/0303D		Nut Self Lock M10	2



9822/0220 B150-4-1 FENDERS REAR WIDE TYRE OPTION
380MM (15")

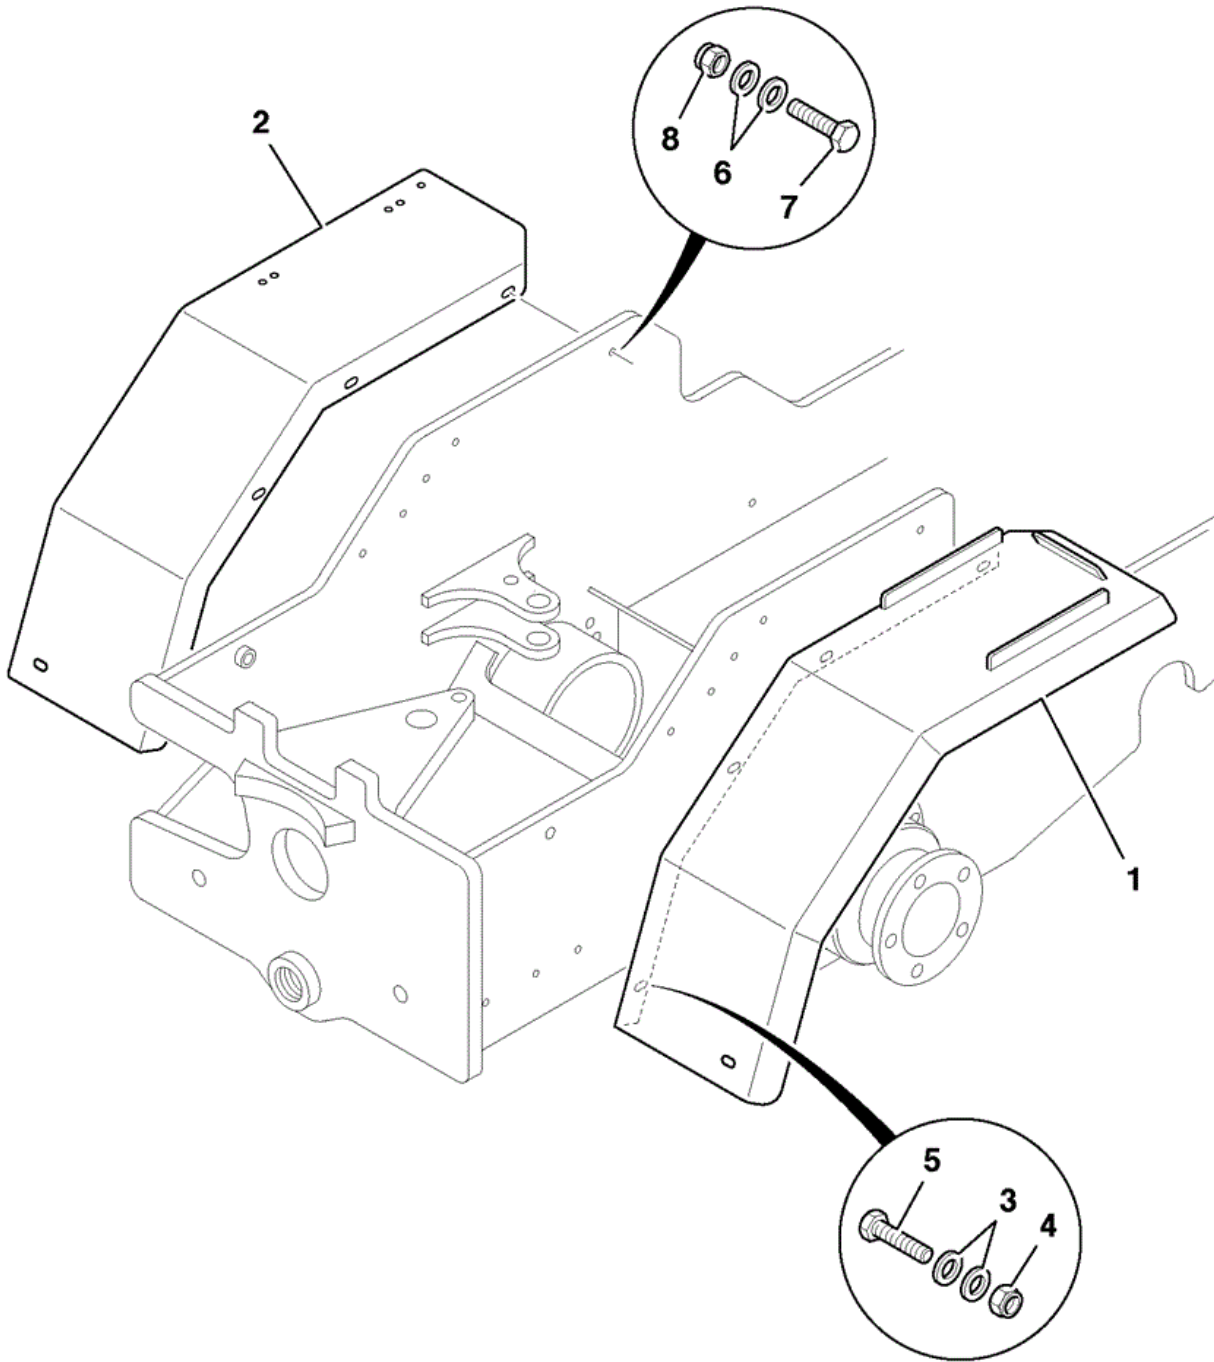


922701

Item	Part #	Change No	Description	Usage Code	QTY
1	332/T9339	to M1770141	Fender rear LH 313mm wide		1

1	333/L3868	Superseded	Fender rear LH 313mm wide	1
1	333/L5374		Fender rear LH 313mm wide	1
2	332/T9340	to M1770141	Fender rear RH 313mm wide	1
2	333/L3872	Superseded	Fender rear RH 313mm wide	1
2	333/L5376		Fender rear RH 313mm wide	1
3	1420/0007D		Washer (M8)	12
4	1370/0203D		Nut Lock M8	6
5	1315/0309D		Setscrew M8 x 35 mm	6
6	1420/0008D		Washer (M10)	4
7	1315/0411D		Setscrew M10X45	2
8	1370/0303D		Nut Self Lock M10	2



9822/0220 B170-1-1 BONNET/ ENGINE COVERS/ GRILLES

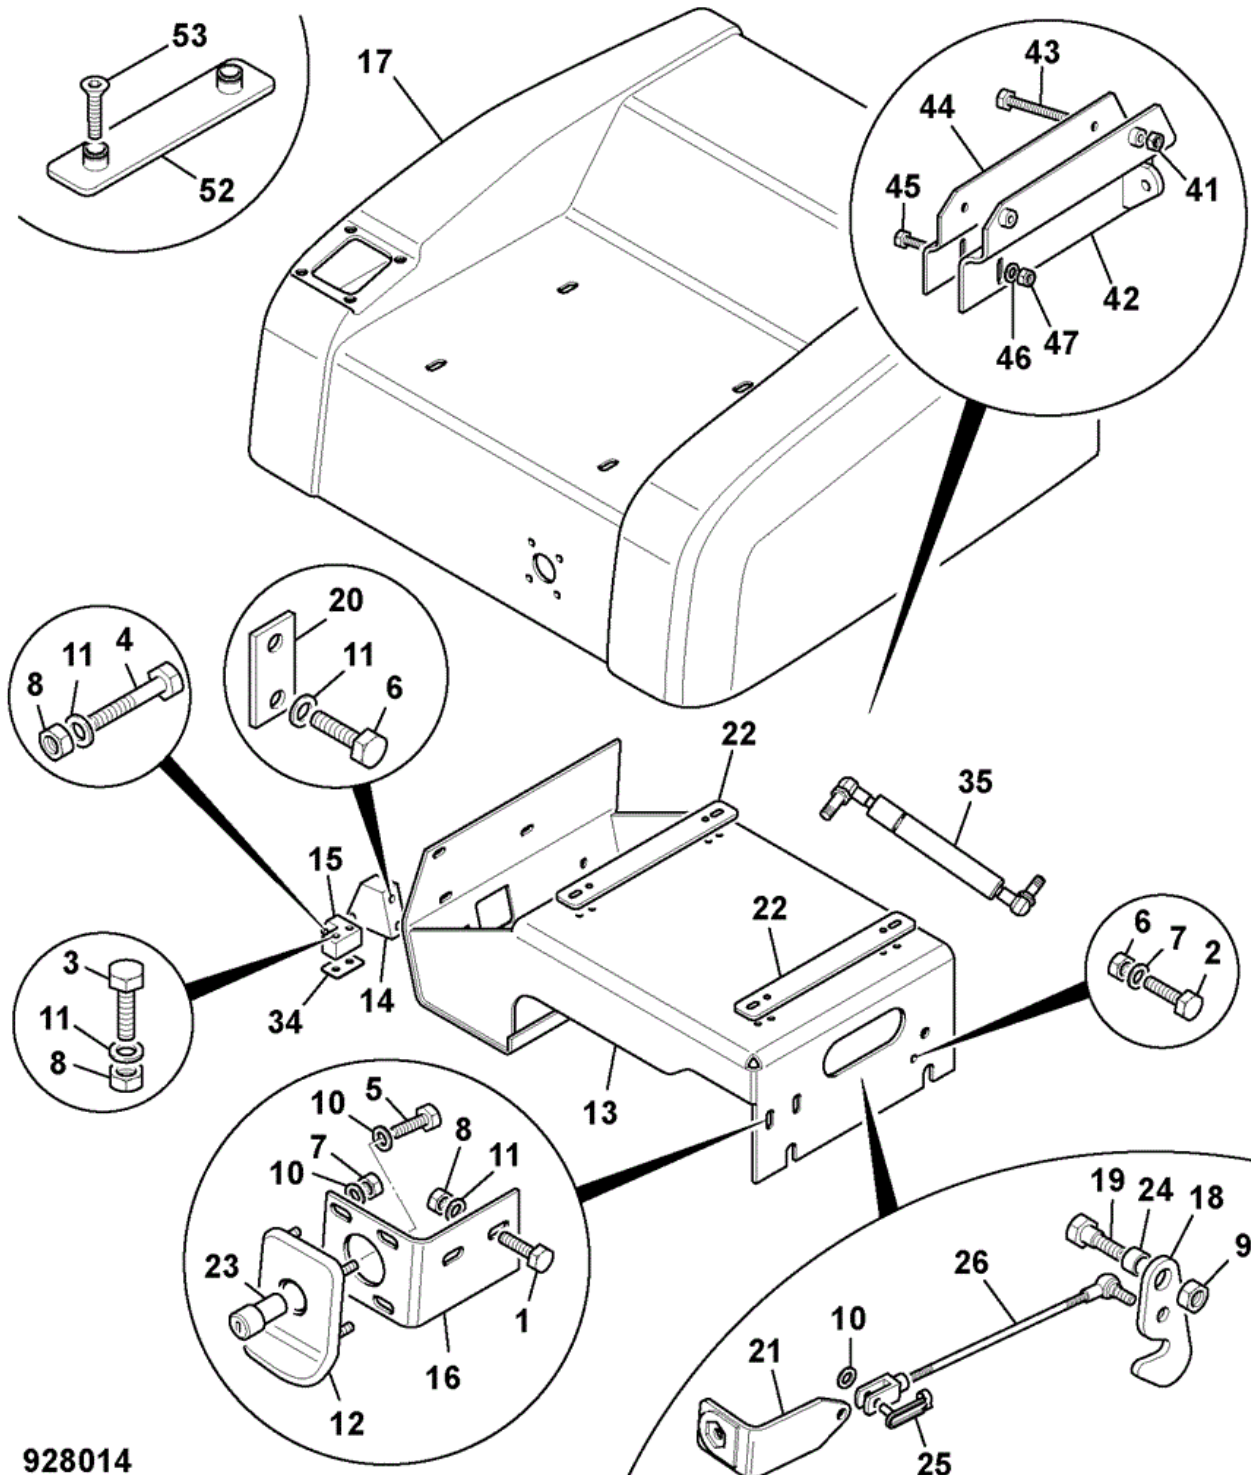

928014

Item	Part #	Change No	Description	Usage Code	QTY
1	1315/0307D		Setscrew M8 x 25 mm		2
2	1315/0308D		Setscrew M8 x 30 mm		1
3	1315/0312D		Setscrew M8 x 50		4

4	1315/3314D		Bolt M8 x 60mm	2
5	****		'See Remark' <i>1318/0201D</i>	1
6	1315/0307D		Setscrew M8 x 25 mm	4
7	1370/0103D		Nut (M6)	4
8	1370/0203D		Nut Lock M8	9
9	1370/0302D		Nut thin	1
10	1420/0006D		Washer (M6)	6
11	1420/0007D		Washer (M8)	12
12	332/R1479		Handle engine cover	1
13	332/S7987		Mounting frame WA seat	1
14	332/R7307		Block hinge seat base	2
15	332/R7309		Block hinge chassis	2
16	332/R7326		Plate catch support	1
17	332/T3213		Cover engine, ABI inc. soundproofing	1
18	332/S1485		Plate hook	1
19	332/S2282		Pivot	1
20	332/S2528		Spacer	2
21	332/S2545		Bracket latch	1
22	332/T0701		Plate clamp	2
23	826/10101		Lock barrel assembly	1
24	831/00119		Bearing <i>Replaces 831/00067</i>	1
25	913/00031		Pin spring,6mm clevis	1
26	332/U0881		Rod control assembly	1
34	332/U6243		Spacer hinge	2
35	332/U0984		Strut gas 550N	1
41	1370/0301D		Nut (M10)	2
42	332/U0976		Latch engine cover	1
43	1315/3415D		Bolt M10x65	2
44	332/U0959		Plate support	1
45	1315/0309D		Setscrew M8 x 35 mm	2
46	1420/0007D		Washer (M8)	2
47	1370/0203D		Nut Lock M8	2
52	332/T0511		Plate tapping	2
53	826/10811		Screw countersunk, socket head M8 x 30	4

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com