





9802/2550 E2-2-1 PUMP, MAIN HYDRAULIC ADAPTERS

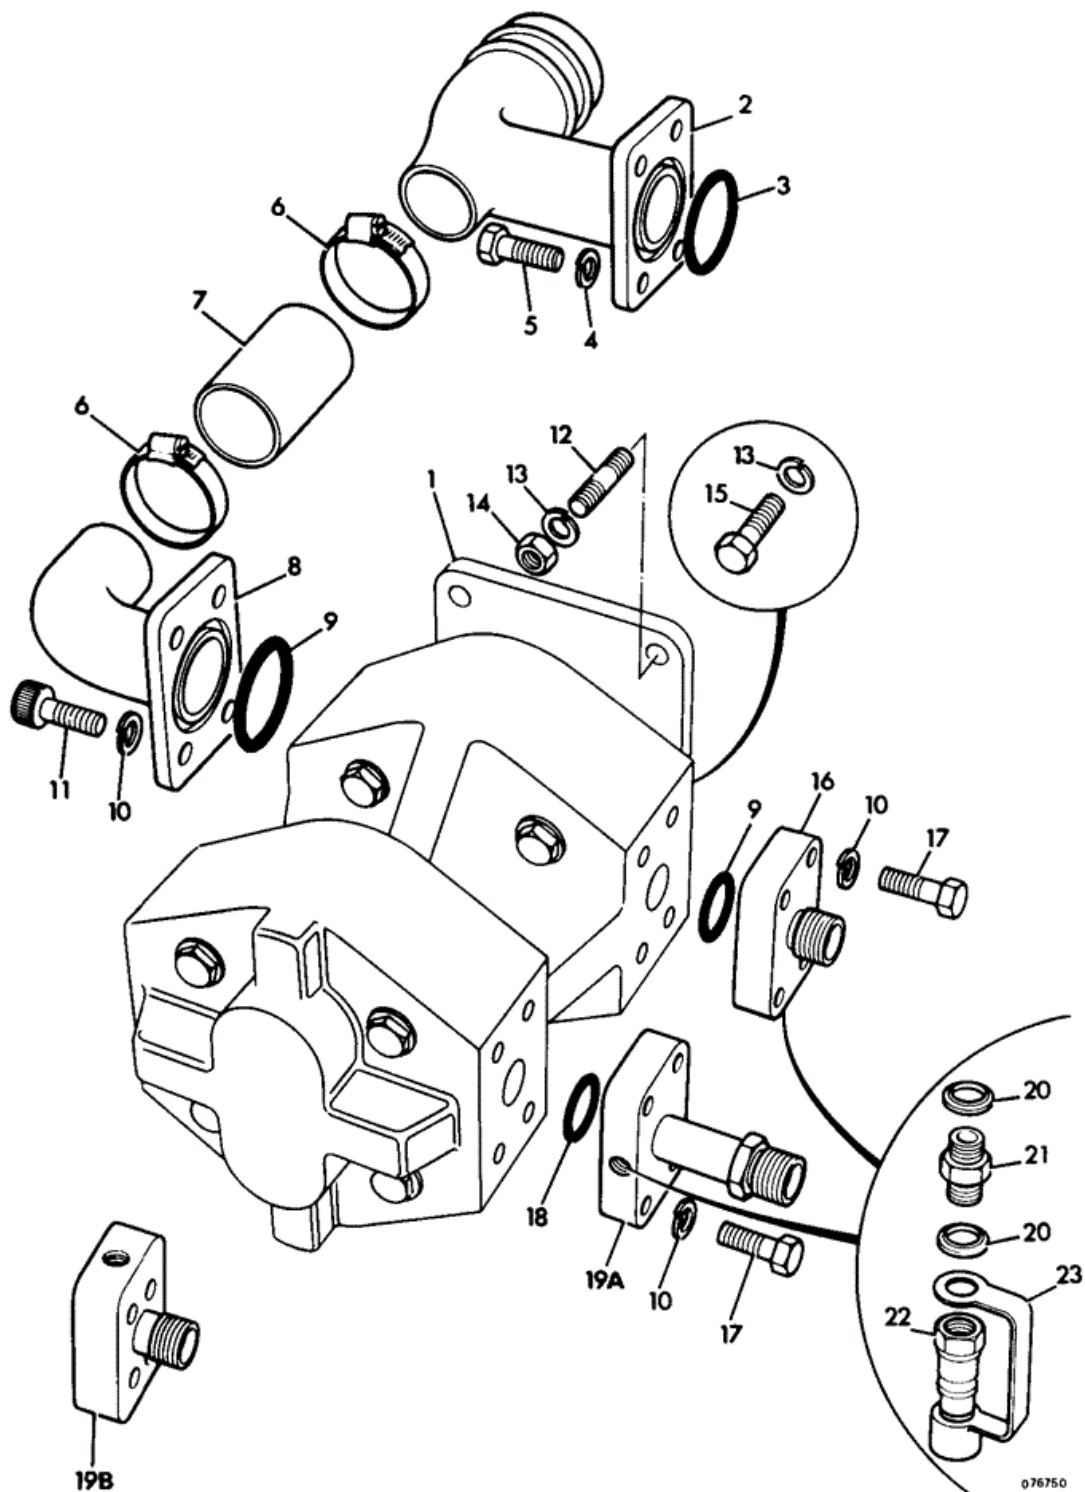

Item	Part #	Change No	Description	Usage Code	QTY
1	****		'See Remark' <i>Main pump see index E2</i>		1
2	833/00010		Adapter		1
3	2401/0216		O Ring		1
4	1425/0009		Washer		4
5	1315/0508		Bolt M12 x 30mm		4
6	2201/0012		Clip Jubilee, 46/70mm		2
7	648/01100		Hose filler <i>102mm.Long</i>		0
8	833/00027		Adapter		1
9	2401/0213		O Ring		2
10	1425/0008		Washer 'S'		12
11	1391/3407		Capscrew M10 x 25mm		4
12	826/00338		Stud		2
13	1416/0008		Washer Spring		4
14	1340/1901		Nut 1/2" UNC		2
15	1305/1908		Bolt		2
16	933/03400		Adapter delivery		1
17	1315/0409		Bolt M10 x 35		8
18	2401/0205		O Ring		1
19A	933/06300		Adapter <i>428 STD</i>		1
19B	933/12500		Adapter <i>428 Compactor</i>		1
20	1406/0011		Washer Bonded (1/4")		4
21	1604/0002		Adapter		2
22	45/902100		Coupling Quick release male		2
23	835/00012		Cap dust		2



9802/2550 E2-3-1 PUMP, MAIN HYDRAULIC

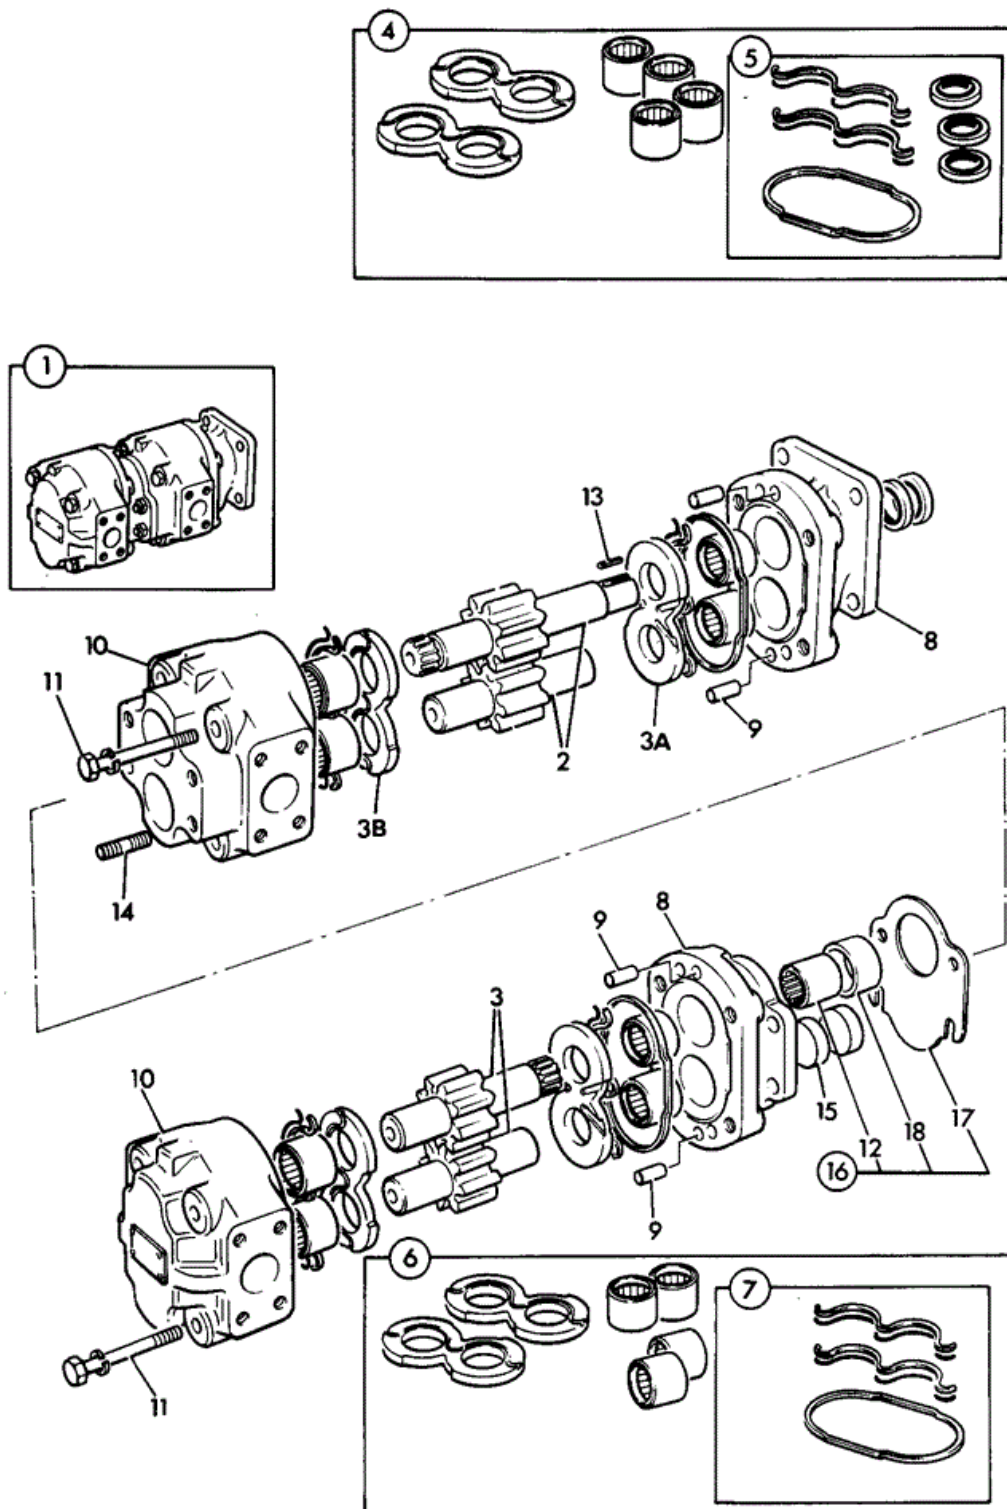


077781

Item	Part #	Change No	Description	Usage Code	QTY
1	919/25300		Pump <i>JCB 423</i>		1
1	919/25400		Pump <i>JCB 428</i>		1
2	:920/00937		Gear set		1
3	:920/00938	Superseded	Gear set rear		1
3	:920/00951		Gear set		1
4	:920/00669	Superseded	Kit-repair		1
4	920/01012		Kit-repair		1
4A	::920/01677		Plate wear		1
4B	::920/01676		Plate wear		1
5	::920/00670	Superseded	Kit-seal		1
5	920/01013		Kit-seal pump (2 small 'o' rings need to be cut)		1
6	:920/00974		Kit-repair		1
7	::920/00975		Kit-seal		1
8	:N.S.P.		None serviced part		2
9	:920/00673		Dowel		4
10	:N.S.P.		None serviced part		2
11	:920/00672	Superseded	Screw cap		8
11	:1305/3632		Bolt		8
12	****		'See Remark' <i>See item 16 coupling</i>		1
13	****		'See Remark' <i>See item 16 dowel</i>		1
14	:920/00689		Stud		4
15	:920/00691		Plug <i>Not req'd when Item 17 is fitted</i>		2
16	920/00973		Kit-coupling <i>Comprising Items 12, 18, & 17</i>		1
17	:920/00976		Gasket		1
18	:920/00977		Spacer		1
19	1416/0008		Washer Spring		4
20	920/00787		Nut		4



9802/2550 E2-4-1 VALVE, LOADER

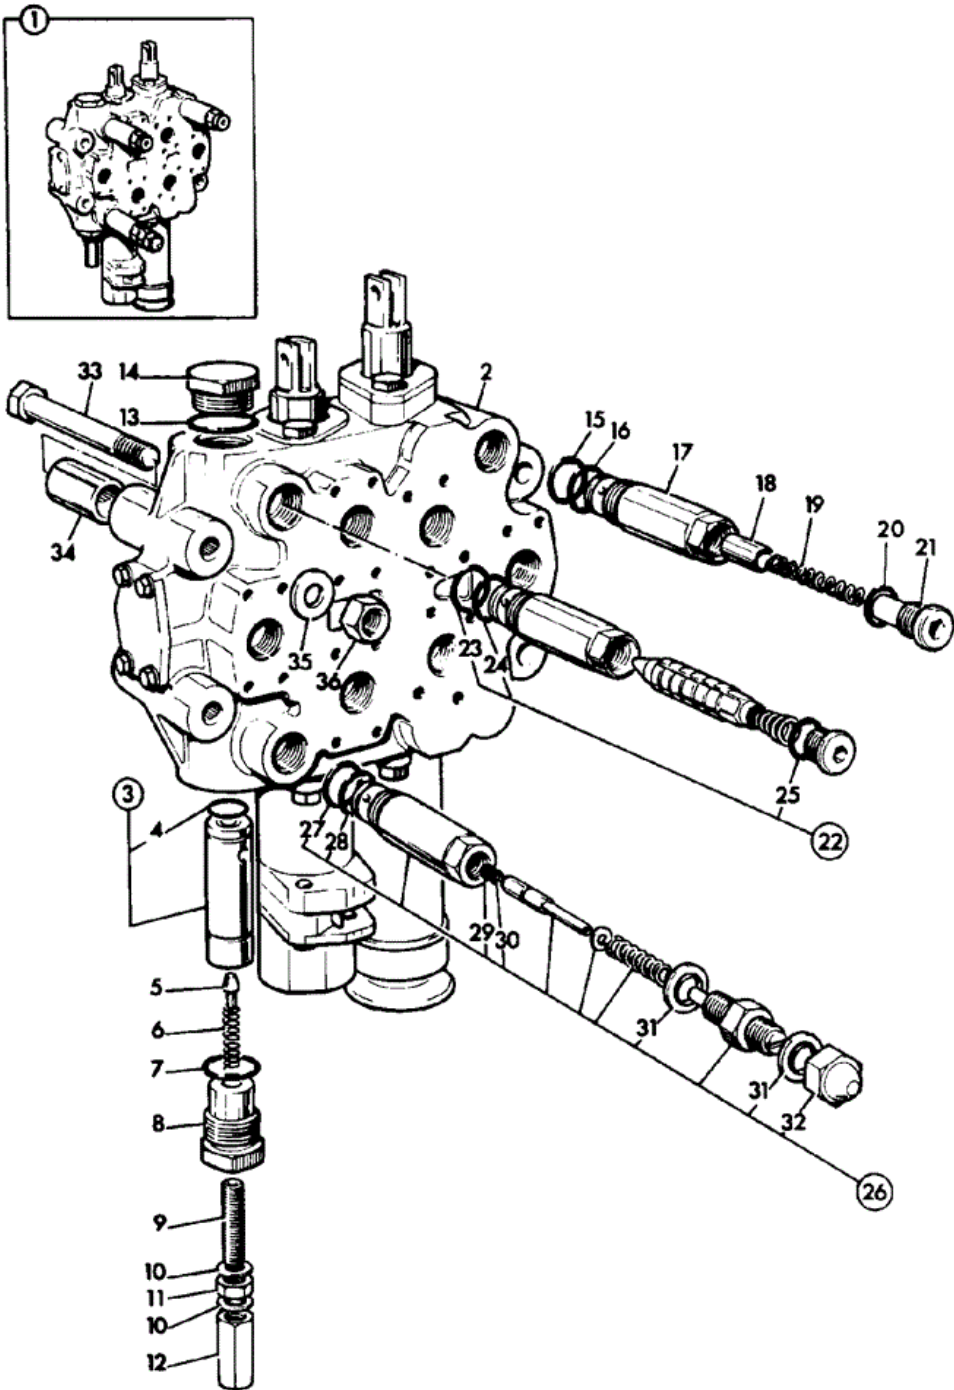


037210

Item	Part #	Change No	Description	Usage Code	QTY
1	919/50000		Valve loader	P/Ex	1
1	919/50100		Valve loader 3 Spool	P/Ex	1

2	:N.S.P.		None serviced part <i>Housing & spool</i>		1
3	:920/00852		Valve main relief		1
4	::920/00853		Seal		1
5	:920/00029		Valve poppet		1
6	:920/00191		Spring		1
7	:920/00854		O Ring		1
8	:920/00855		Cap		1
9	:920/00148		Screw adjusting		1
10	:920/00242		Washer		2
11	:920/00152		Nut		1
12	:920/00185		Nut acorn		1
13	:2401/0207		O Ring 2.75in		1
14	:920/00856		Plug		1
15	:2401/0108		O Ring		1
16	:2401/0015		O Ring		1
17	:920/00447		Housing <i>For Compactor see 17A A.R.V cartridge</i>		1
17A	920/00450		Cartridge <i>Compactor only 800 P.S.I</i>		1
18	:920/00448		Valve check		1
19	:920/00212		Spring		1
20	:2401/0103		O Ring		1
21	:920/00449		Cap		1
22	:920/00711		Valve overload relief		1
23	::2401/0108		O Ring		1
24	::2401/0015		O Ring		1
25	::920/00167		Seal		1
26	:920/01010		Valve overload relief		1
27	::2401/0015		O Ring		1
28	::2401/0108		O Ring		1
29	::920/00704		Ring back-up		1
30	::920/00703		O Ring		1
31	::920/00218		Washer		2
32	::N.S.P.		None serviced part		1
33	1305/3438		Bolt		1
34	656/00018		Spacer		2
35	1410/0005		Washer		2
36	1340/0404		Nut		2



9802/2550 E2-5-1 VALVE, SPOOL

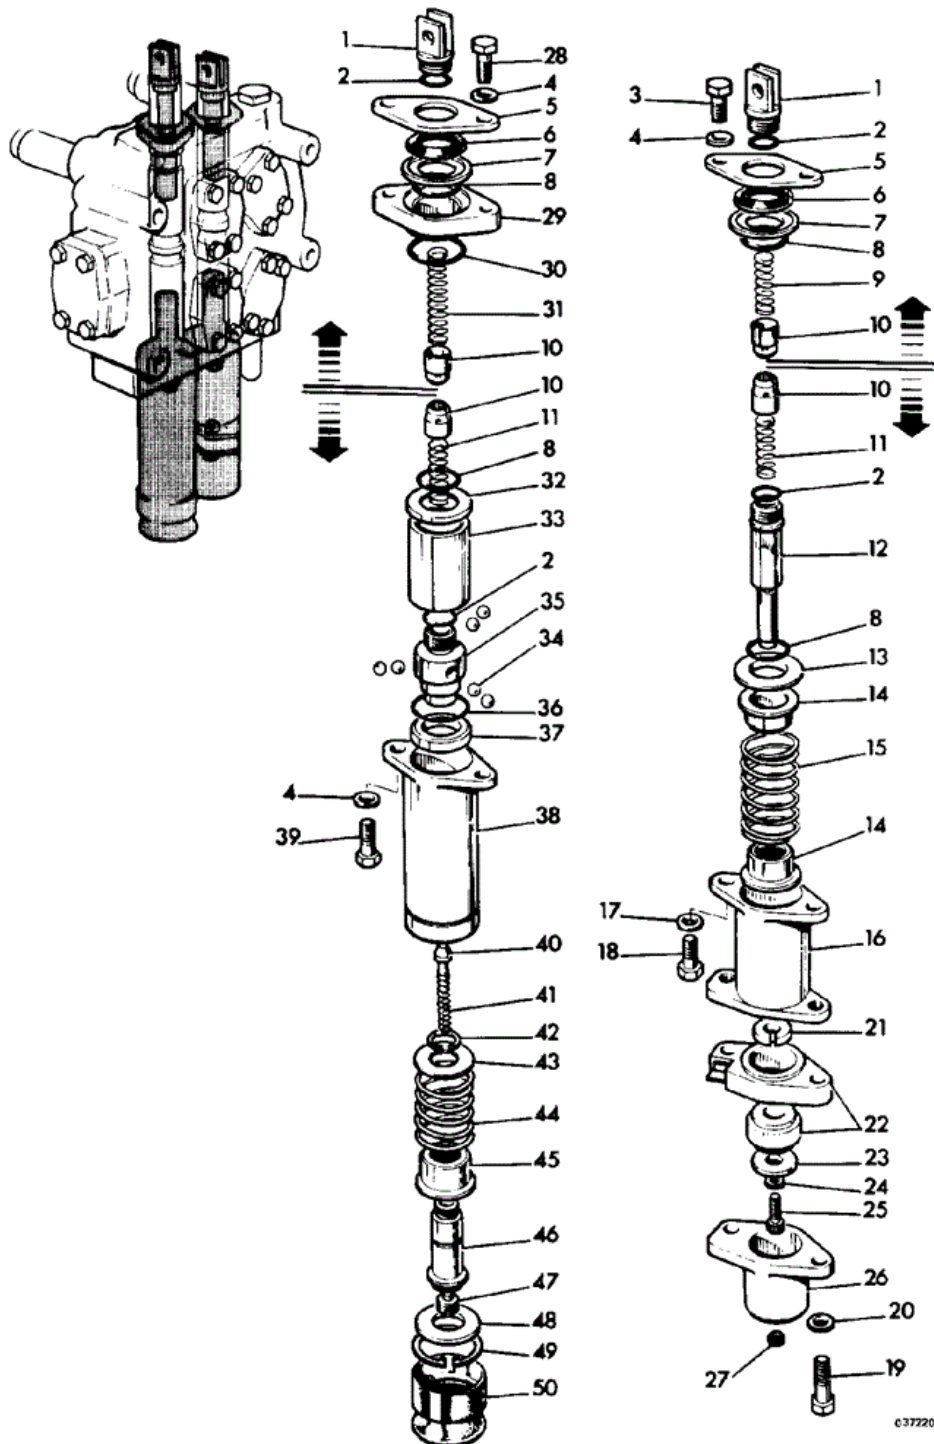


© 37220

Item	Part #	Change No	Description	Usage Code	QTY
1	920/00859		Pivot female spool end		2
2	920/00174	Superseded	O Ring		4
2	2401/0203		O Ring		4

3	920/00474		Screw cap		2
4	920/00157		Washer		6
5	920/00860		Retainer wiper		2
6	920/00861	Superseded	Seal wiper		2
6	920/01343		Seal wiper		2
7	920/00862		Retainer		2
8	920/00863		Seal ring		4
9	920/00864		Spring		1
10	920/00875		Plunger		4
11	920/10025		Spring		2
12	920/00865		Shaft		1
13	920/00866		Retainer seal		1
14	920/00867		Retainer spring		2
15	920/00868		Spring		1
16	920/00869		Cover		1
17	920/00157		Washer		2
18	920/00133	Superseded	Bolt		2
18	1305/1606		Bolt		1
19	920/00811		Screw cap		2
20	920/00157		Washer		2
21	920/00870		Washer retaining		1
22	920/01268		Coil assembly valve		1
23	920/00872		Armature		1
24	920/00873	Superseded	Washer		1
24	920/00912		Washer		1
25	920/00136		Screw cap		1
26	920/00874		Cover		1
27	920/00758		Plug		1
28	920/00446		Screw cap		2
29	920/00876		Flange extension		1
30	2401/0216		O Ring		1
31	920/00878		Spring		1
32	920/00879		Retainer seal		1
33	920/00880		Sleeve detent		1
34	920/00881		Ball		6
35	920/00882		Cap detent		1
36	920/00883		O Ring		1
37	920/00884		Spacer		1
38	920/00885		Cover		1
39	920/00886		Screw cap		2
40	920/00887		Valve poppet		1
41	920/00888		Spring		1
42	920/00630		Circlip		1
43	920/00889		Retainer		1
44	920/00890		Spring		1
45	920/00891		Retainer		1
46	920/00892		Cap spring		1
47	920/00893		Screw adjusting		1
48	920/00894		Plate cover		1
49	920/00895		Circlip		1
50	920/00896		Cover rubber		1



9802/2550 E2-6-1 VALVE, COMPONENTS 3 SPOOL

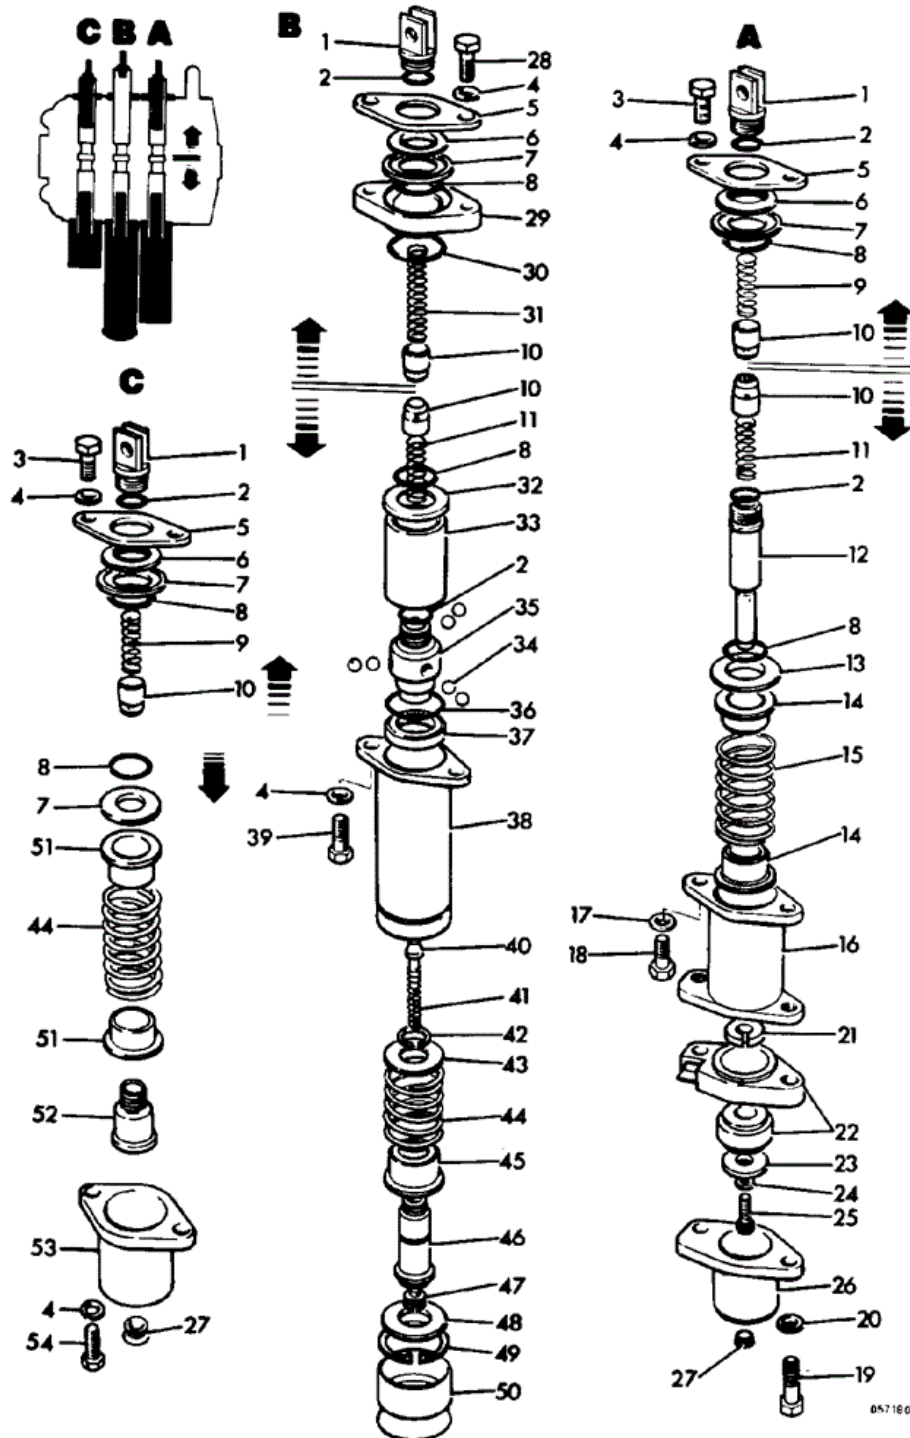

057186


Item	Part #	Change No	Description	Usage Code	QTY
1	920/00859		Pivot female spool end		2
2	2401/0203		O Ring		5
3	920/00474		Screw cap		4

4	920/00157		Washer		10
5	920/00860		Retainer wiper		3
6	920/00861		Seal wiper		3
7	920/00862		Retainer		3
8	920/00863		Seal ring		4
9	920/00864		Spring		1
10	920/00875		Plunger		4
11	920/10025		Spring		2
12	920/00865		Shaft		1
13	920/00866		Retainer seal		1
14	920/00867		Retainer spring		2
15	920/00868		Spring		1
16	920/00869		Cover		1
17	920/00157		Washer		2
18	1305/1606		Bolt		2
19	920/00811		Screw cap		2
20	920/00157		Washer		2
21	920/00870		Washer retaining		1
22	920/01268		Coil assembly valve		1
23	920/00872		Armature		1
24	920/00873	Superseded	Washer		1
24	920/00912		Washer		1
25	920/00136		Screw cap		1
26	920/00874		Cover		1
27	920/00758		Plug		1
28	920/00446		Screw cap		2
29	920/00876		Flange extension		1
30	2401/0216		O Ring		1
31	920/00878		Spring		1
32	920/00879		Retainer seal		1
33	920/00880		Sleeve detent		1
34	920/00881		Ball		6
35	920/00882		Cap detent		1
36	920/00883		O Ring		1
37	920/00884		Spacer		1
38	920/00885		Cover		1
39	920/00886	Superseded	Screw cap		2
39	1305/1605		Bolt		2
40	920/00887		Valve poppet		1
41	920/00888		Spring		1
42	920/00630		Circlip		1
43	920/00889		Retainer		1
44	920/00890		Spring		1
45	920/00891		Retainer		1
46	920/00892		Cap spring		1
47	920/00893		Screw adjusting		1
48	920/00894		Plate cover		1
49	920/00895		Circlip		1
50	920/00896		Cover rubber		1
51	920/01006		Retainer		2
52	920/01007		Cap spring		1

53	920/01008		Cover		1
54	920/00810	Superseded	Screw cap		2
54	1305/1605		Bolt		2



9802/2550 E3-1-1 RAM, BUCKET

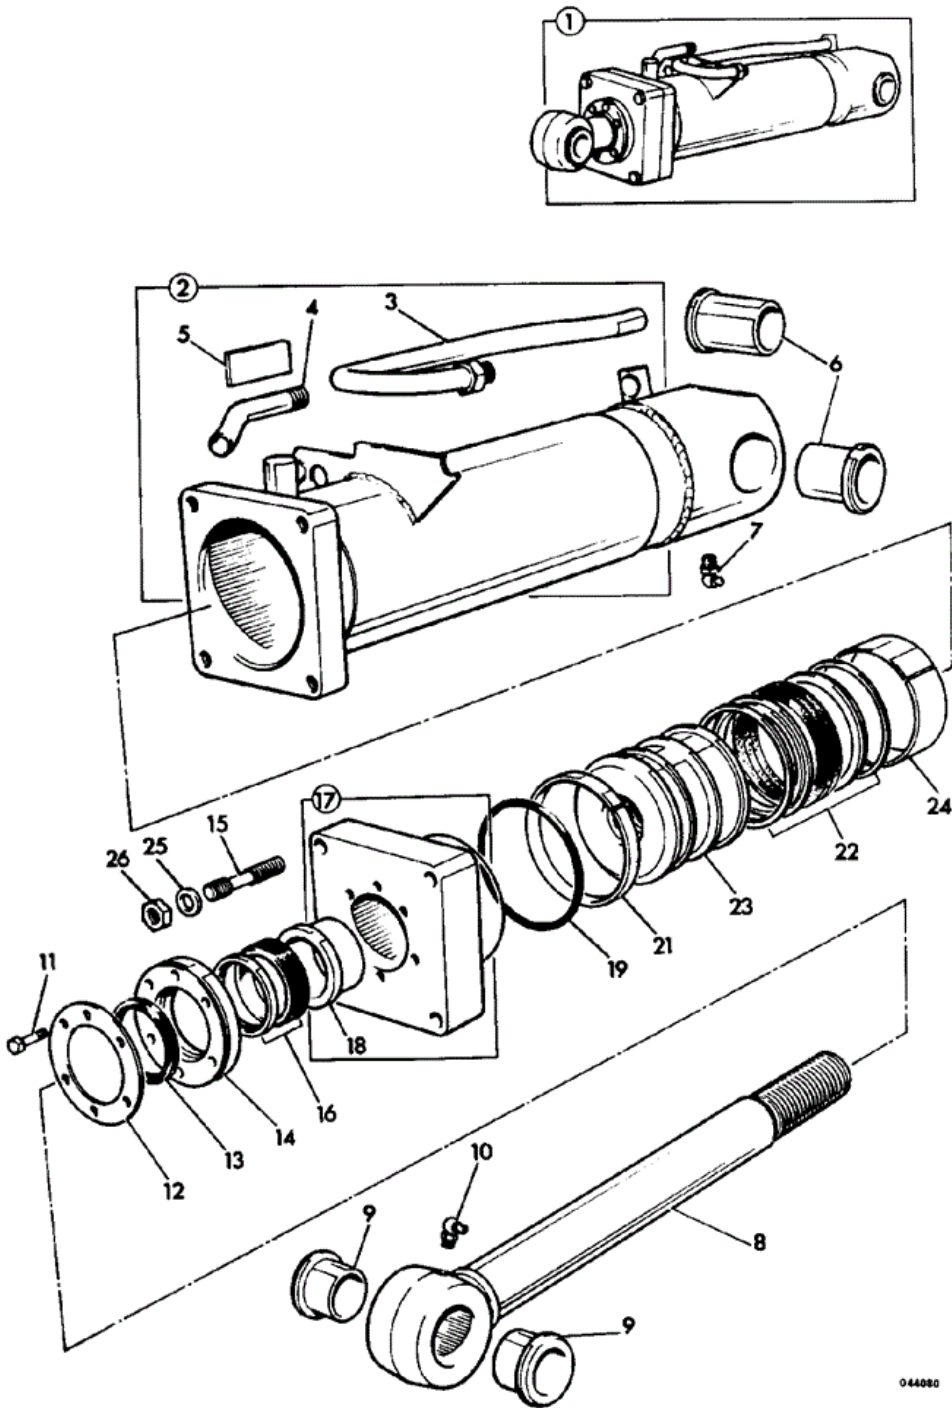


Item	Part #	Change No	Description	Usage Code	QTY
1	570/03400		Ram	P/Ex	1
1	570/03100		Ram With Check Valve		1

2	:570/02600		Cylinder assembly	1
2	:570/03000		Cylinder assembly <i>With Check Valve</i>	1
3	::570/02900		Pipe piston side	1
3	::666/00166		Pipe piston side <i>With Check Valve</i>	1
4	::666/00162		Pipe rod side	1
4	::666/00168		Pipe rod side <i>With Check Valve</i>	1
5	::570/01901		Plate mounting	1
6	:808/00107		Bush	2
7	:1450/1001		Nipple grease 90deg. angle	1
8	:570/03600		Rod piston	1
9	:808/00105		Bush	2
10	:1450/1001		Nipple grease 90deg. angle	1
11	:1305/1908		Bolt	6
12	:568/15508		Retainer	1
13	:2411/8231		Seal wiper	1
14	:568/15515		Housing	1
15	:826/00831		Bolt	4
16	:2411/5111		Seal	1
17	:570/02500		Bearing gland assembly	1
18	::N.S.P.		None serviced part	1
19	:2401/0415		O Ring	1
21	:570/02203		Ring wear	1
22	:2411/7222		Seal	1
23	:570/03401		Head piston	1
24	:570/03402		Ring wear	1
25	:823/00098		Washer safety	4
26	:1340/0903		Nut	4



9802/2550 E3-2-1 RAM, LIFT STANDARD

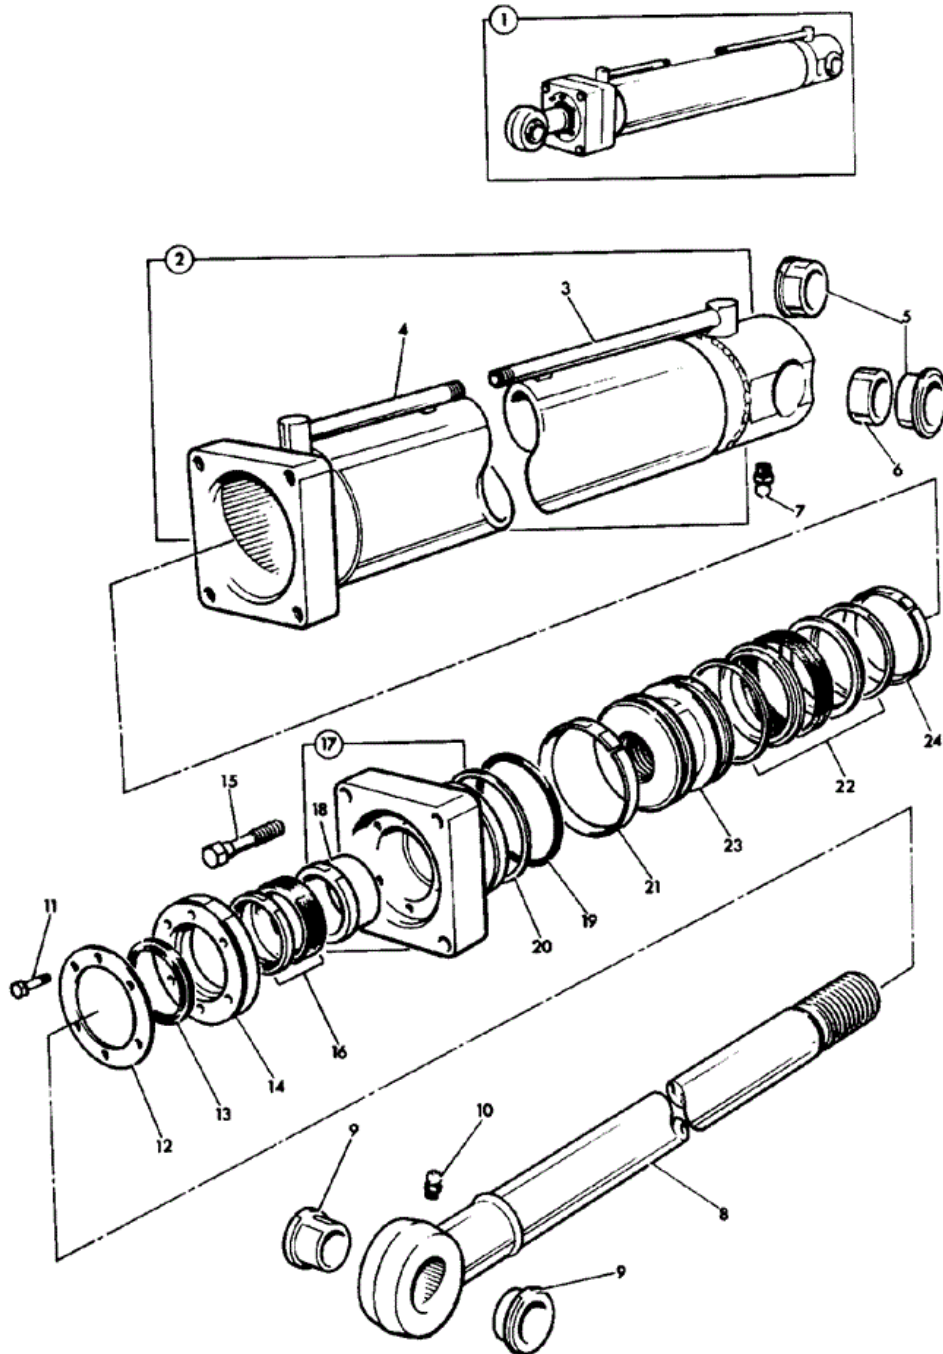


044090

Item	Part #	Change No	Description	Usage Code	QTY
1	568/17900		Ram	P/Ex	2
2	:568/18100		Cylinder assembly		1
3	::663/00464		Pipe piston side		1

4	::663/00465		Pipe rod side		1
5	:808/00126		Liner bearing		2
6	:830/00096		Spacer		1
7	:1450/0001		Nipple Grease, Straight 1/8 BSP		1
8	:568/17800	Superseded	Rod piston		1
8	:568/20200		Rod piston		1
9	:808/00115		Bush		2
10	:1450/0001		Nipple Grease, Straight 1/8 BSP		1
11	:1305/1908		Bolt		6
12	:568/15508		Retainer		1
13	:2411/8231		Seal wiper		1
14	:568/15515		Housing		1
15	:1305/3932		Bolt		4
16	:2411/5111		Seal		1
17	:568/18000		Bearing gland assembly		1
18	::N.S.P.		None serviced part		1
19	:2401/0409		O Ring		1
20	:568/15510		Ring back-up		2
21	:568/15513		Ring bearing		1
22	:2411/7218		Seal		1
23	:568/17702		Head piston		1
24	:568/15513		Ring bearing		1



9802/2550 E3-3-1 RAM, LIFT WITH CHECKS

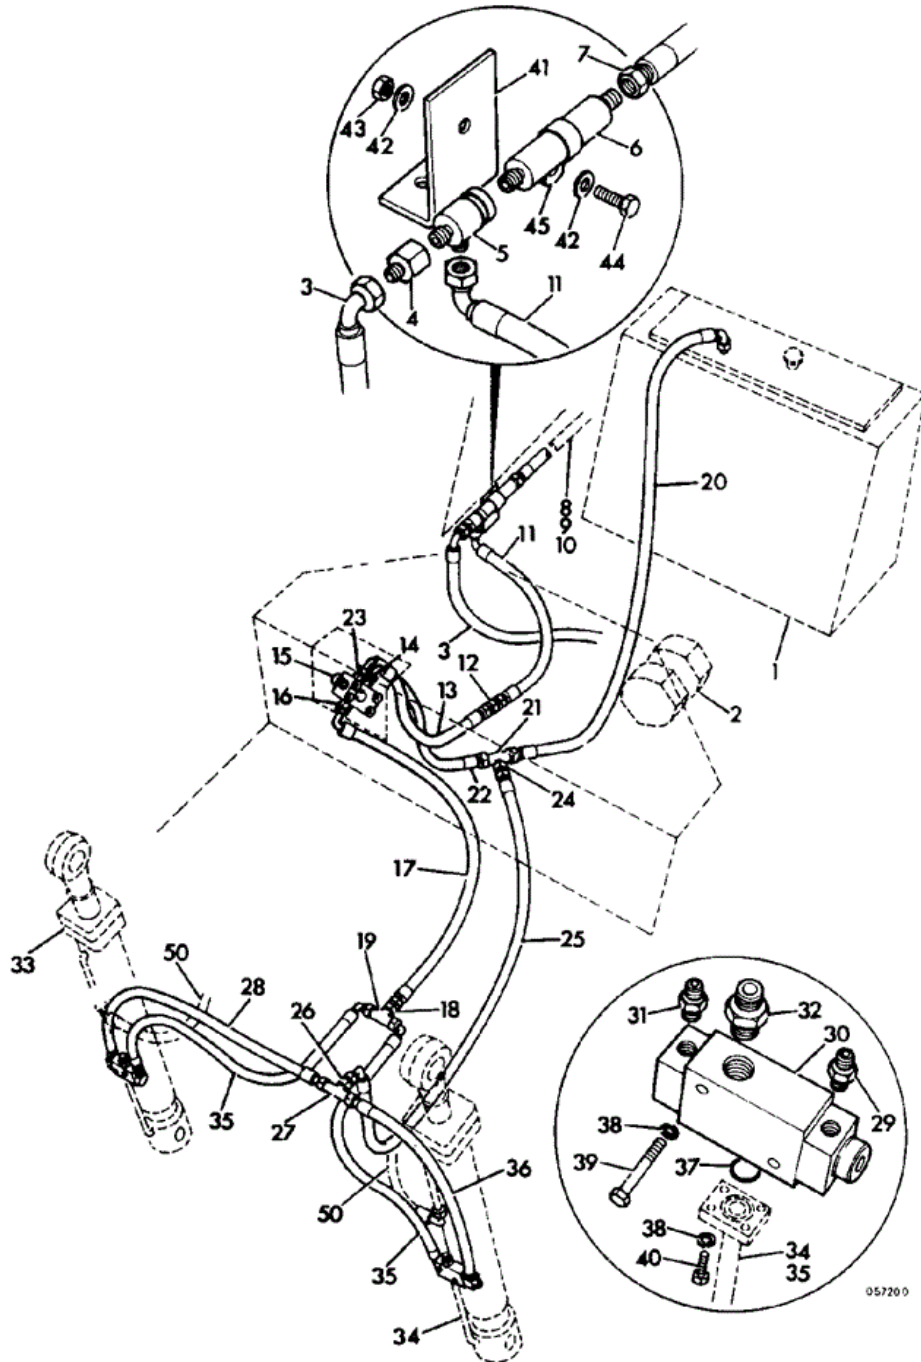


Item	Part #	Change No	Description	Usage Code	QTY
1	568/20300		Ram		2
2	:568/20400		Cylinder assembly		1
3	::562/42200		Pipe piston side		1

4	::633/00519		Pipe feed rod side		1
5	::568/20402		Bracket		1
6	:808/00126		Liner bearing		2
7	:830/00096		Spacer		1
8	:1450/0001		Nipple Grease, Straight 1/8 BSP		1
9	:568/17800	Superseded	Rod piston		1
9	:568/20200		Rod piston		1
10	:808/00126		Liner bearing		2
11	:1450/0001		Nipple Grease, Straight 1/8 BSP		1
12	:1305/1908		Bolt		6
13	:568/15508		Retainer		1
14	:2411/8231		Seal wiper		1
15	:568/15515		Housing		1
16	:1305/3932		Bolt		4
17	:2411/5111		Seal		1
18	:568/18000		Bearing gland assembly		1
19	::N.S.P.		None serviced part		1
20	:2401/0409		O Ring		1
21	:568/15510		Ring back-up		2
22	:568/15513		Ring bearing		1
23	:2411/7218		Seal		1
24	:568/17702		Head piston		1
25	:568/15513		Ring bearing		1
26	:1403/0001		Washer Aluminium		1



9802/2550 E3-4-1 VALVE, CHECK SAFETY MECHANISM

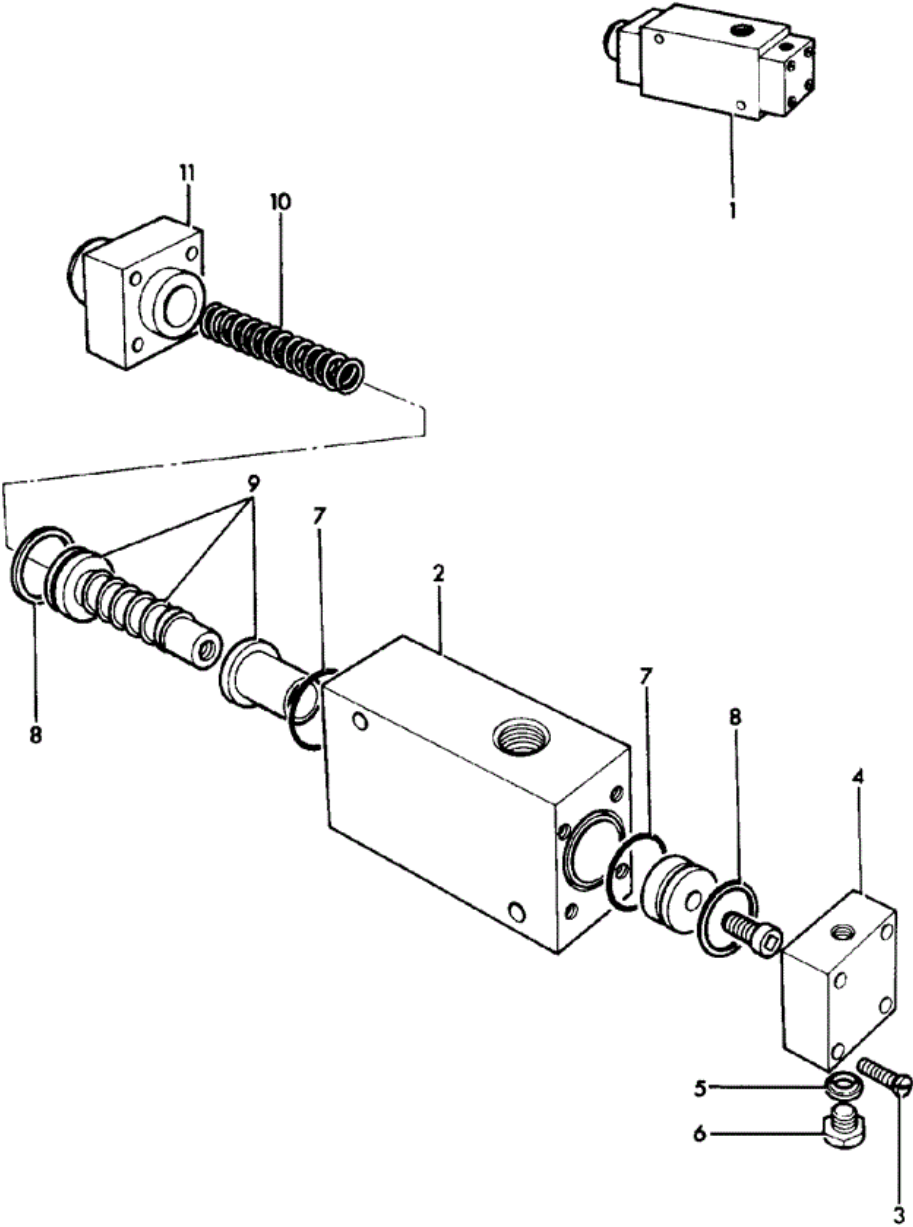

057210

Item	Part #	Change No	Description	Usage Code	QTY
1	25/901500		Valve check		2
2	25/901506		Body		1
3	25/901510		Screw cap		8

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com