




9802/2665 E1-1-1 CIRCUIT LOADER END Z BAR

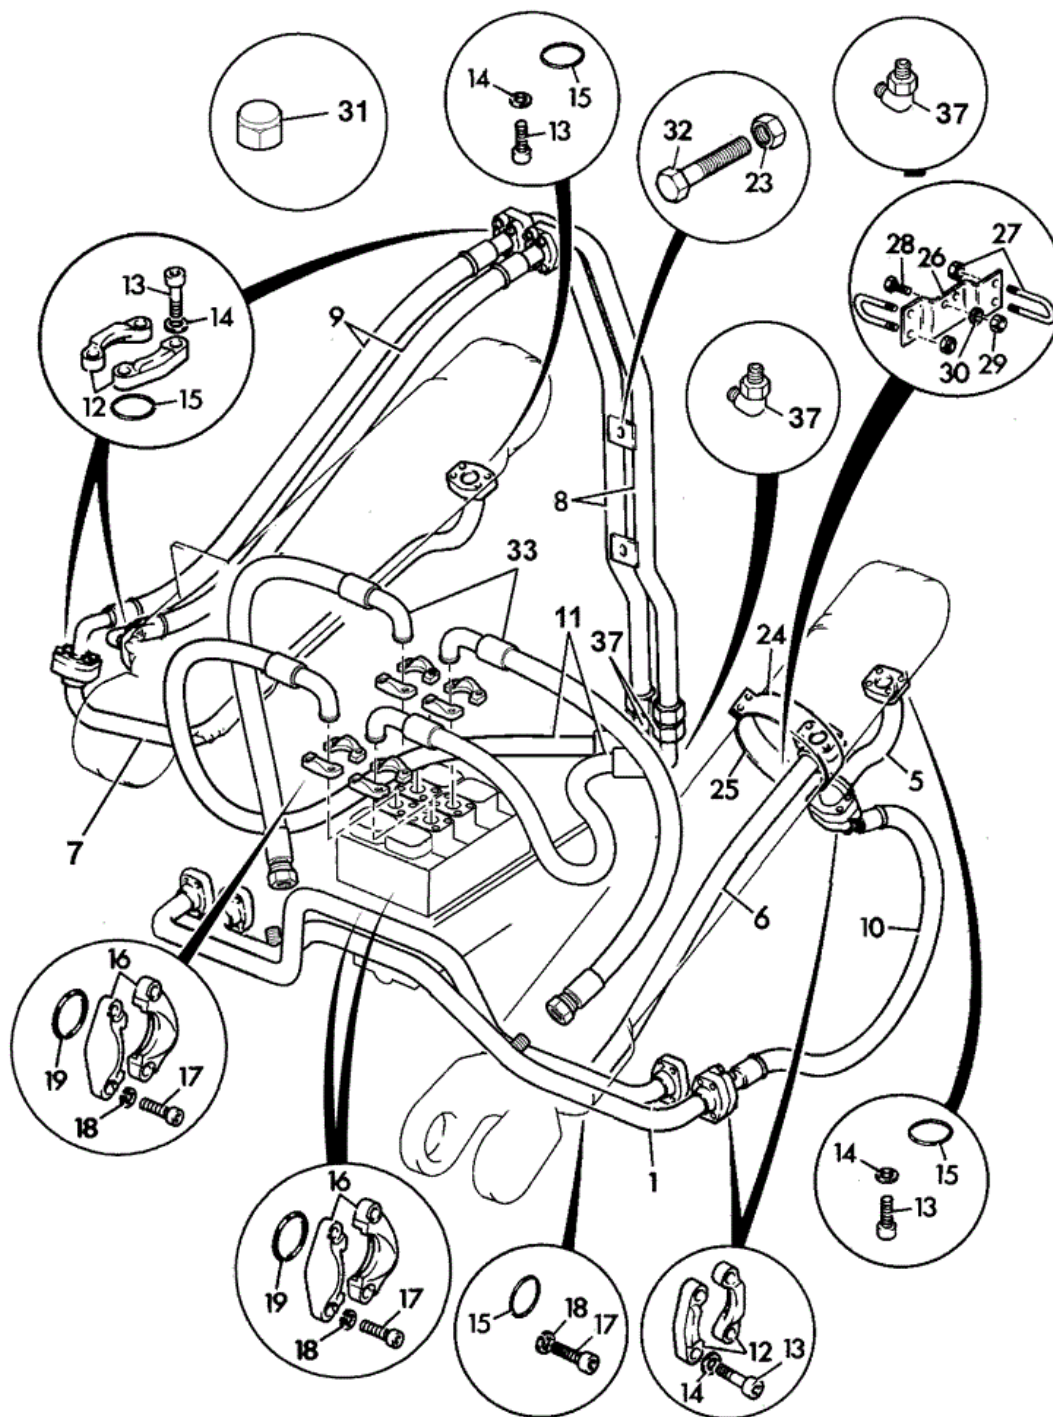


375341

Item	Part #	Change No	Description	Usage Code	QTY
1	335/03245		Pipe assembly		1
1	813/00369		Seal		2
5	268/40069		Pipe lift ram head		1

5	828/00417	O Ring 1"SAE	1
6	651/20049	Pipe lift ram rod	1
6	828/00417	O Ring 1"SAE	1
7	830/10436	Pipe tilt ram rod	1
7	828/00417	O Ring 1"SAE	1
7	830/11357	Pipe tilt ram <i>Sales Special 4484</i>	1
8	268/40072	Pipe shovel to chassis	1
9	616/23100	Hose ram to pipe 1" x 1330mm	2
9	:813/00368	Seal face	4
9	970/60475	Hose shovel ram <i>Sales Special 4484</i>	2
10	616/22400	Hose 1" x 1210mm	4
10	:828/00417	O Ring 1"SAE	8
11	616/80124	Hose	2
12	210/92901	Clamp Flange	24
13	826/01657	Capscrew M12 x 45Lg	60
14	1425/0009Z	Washer Spring M12	60
15	828/00417	O Ring 1"SAE	7
16	264/01001	Clamp	4
17	1391/3409Z	Capscrew M10 x 35mm	32
18	1425/0008Z	Spring Washer	32
19	828/00417	O Ring 1"SAE	2
20	821/00055	Clamp Pipe top <i>May not be fitted</i>	2
21	1315/3420Z	Bolt (M10 X 100)	2
22	1370/0303Z	Nut lock M10	2
23	1420/0008Z	Washer (M10)	6
24	265/01501	Band mounting 2/3	2
25	265/01502	Band mounting 1/3	2
26	265/01503	Bracket mounting	2
27	259/00207	Clamp U	4
28	1315/0307Z	Setscrew M8 X 25	8
29	1370/0203Z	Nut Nut M8	8
30	1420/0007Z	Washer (M8)	16
31	816/00193	Cap blanking 1"BSP steel	2
32	1315/0405Z	Setscrew M10 x 20 mm	2
33	616/80127	Hose	2
37	816/00018	Adapter 90 Degree	2



9802/2665 E1-2-1 CIRCUIT LOADER END AUXILIARY-Z BAR

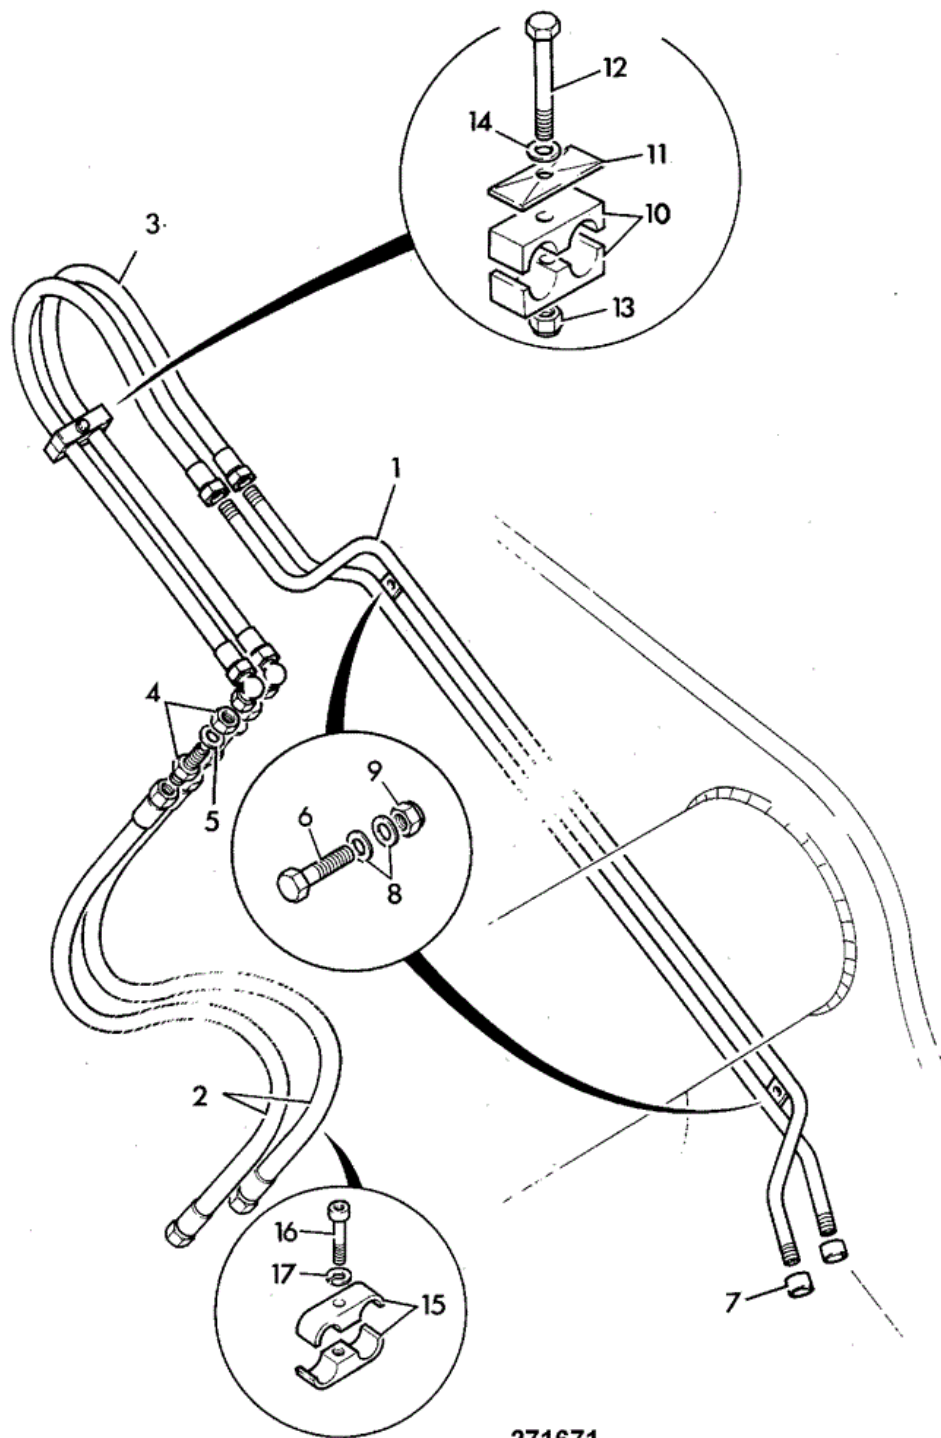


271671

Item	Part #	Change No	Description	Usage Code	QTY
1	268/10070	Superseded	Pipe auxiliary motor spool		1
1	335/08589		Pipe auxiliary		1
2	209/72200		Hose 3/4"BSP 500mm		2

2	:2301/0015		O Ring 3/4"BSP		2
2	:813/00368		Seal face		2
3	615/80025		Hose 3/4"BSP x 1190mm		2
4	816/10159		Adapter bulkhead 3/4"BSP x 3/4"BSP		2
5	1411/0010Z		Washer		2
6	1315/3418D		Bolt M10 x 80		2
7	816/00196		Cap Blanking Steel 3/4"BSP		2
8	1420/0008D		Washer (M10)		4
9	1370/0303D		Nut Self Lock M10		2
10	821/00442		Clamp		2
11	821/00443		Plate Cover		3
12	1315/3321Z		Bolt M8x110		1
13	1370/0203Z		Nut Nut M8		1
14	1420/0007Z		Washer (M8)		1
15	264/01001		Clamp		4
16	1391/3409Z		Capscrew M10 x 35mm		8
17	1425/0008Z		Spring Washer		8



9802/2665 E1-4-1 HOSE AND PIPEWORK LOADER VALVE

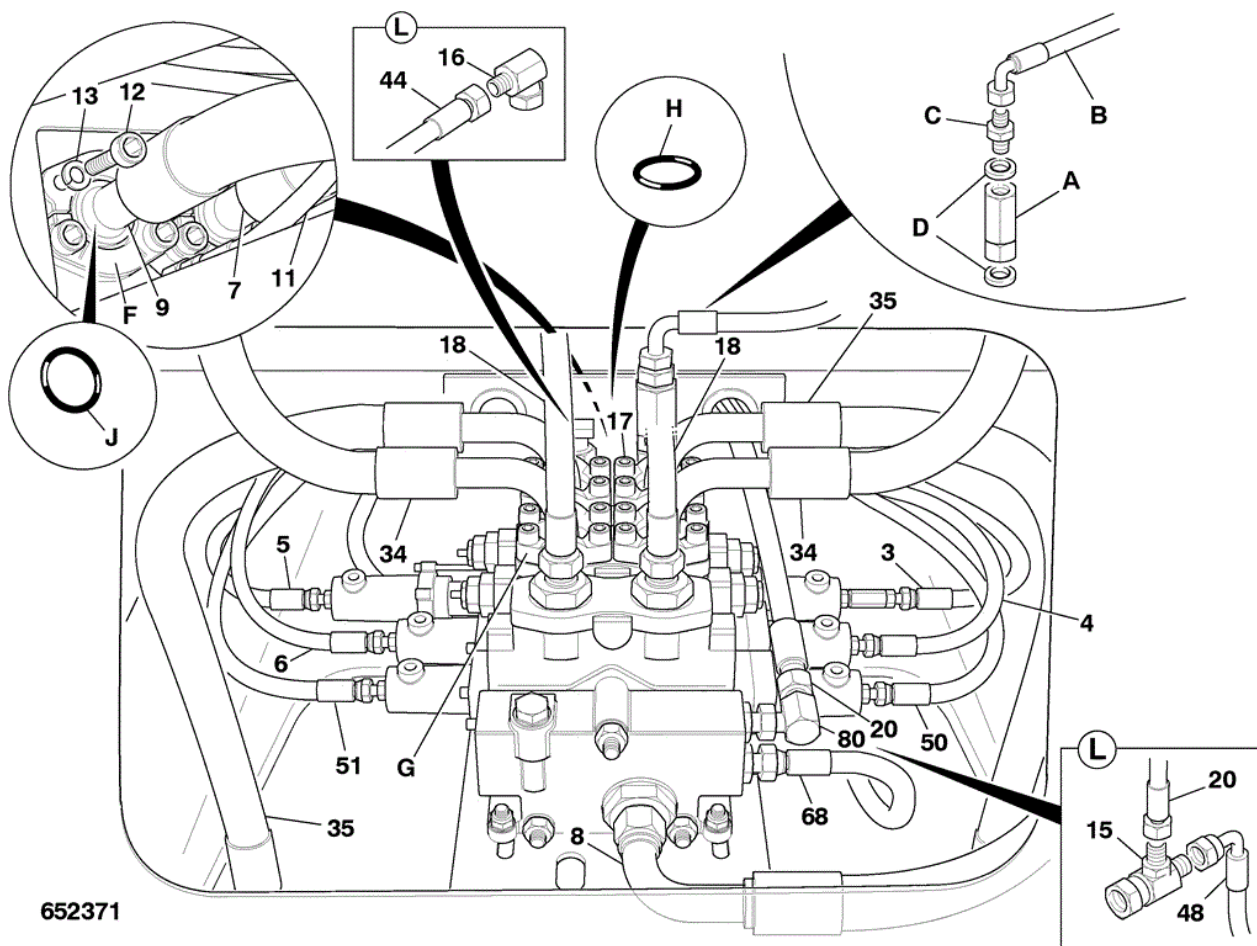

652371


Item	Part #	Change No	Description	Usage Code	QTY
A	25/905500		Valve check		1
B	613/31800		Hose 1/2"BSP x 2850mm lg.		1
C	1604/0004		Adaptor Male		1
D	1406/0018		Washer Bonded (1/2" BSP)		2
F	264/12501		Clamp split flange		4
G	264/01001		Clamp		8
H	828/00417		O Ring 1"SAE		4
J	828/00418		O Ring 1 1/4"SAE		2
L	****		'See Remark' <i>Load Suspension components</i>		1
1	****		'See Remark' <i>LOADER VALVE</i>		1
3	265/00542		Hose servo <i>ID label 1</i>		1
4	265/00543		Hose servo <i>ID label 2</i>		1
5	265/00544		Hose servo <i>ID label 3</i>		1
6	265/00545		Hose servo		1

			<i>ID label 4</i>		
7	616/80058		Hose		1
8	616/80057		Hose		1
9	616/80056		Hose feed		1
11	269/30222		Hose assembly LS		1
12	1391/3509D		Capscrew M12x35mm		8
13	1425/0009Z		Washer Spring M12 <i>If fitted</i> <i>See Note 1</i>		8
15	816/50031		Adapter Tee <i>Load suspension</i>		1
16	816/00018		Adapter 90 Degree <i>Load Suspension</i>		1
17	1391/3409D		Capscrew M10x35mm		16
18	209/72200		Hose 3/4"BSP 500mm		2
20	269/40962		Hose "SLS"		1
34	616/80127		Hose		2
35	616/80124		Hose		2
44	616/80063		Hose 810mm Lg split flange / 1"BSP <i>Load suspension</i>		1
48	611/30000		Hose 1/4"BSP 1550mm long <i>Load Suspension</i>		1
50	265/00546		Hose servo		1
51	265/00547		Hose servo		1
68	611/03900		Hose		2
80	816/00464		Adapter elbow - male/female		1

Note 1: Item 12 reduced in length. Spring washer not required with shorter capscrew



9802/2665 E1-5-1 HOSE AND PIPEWORK STEER VALVE

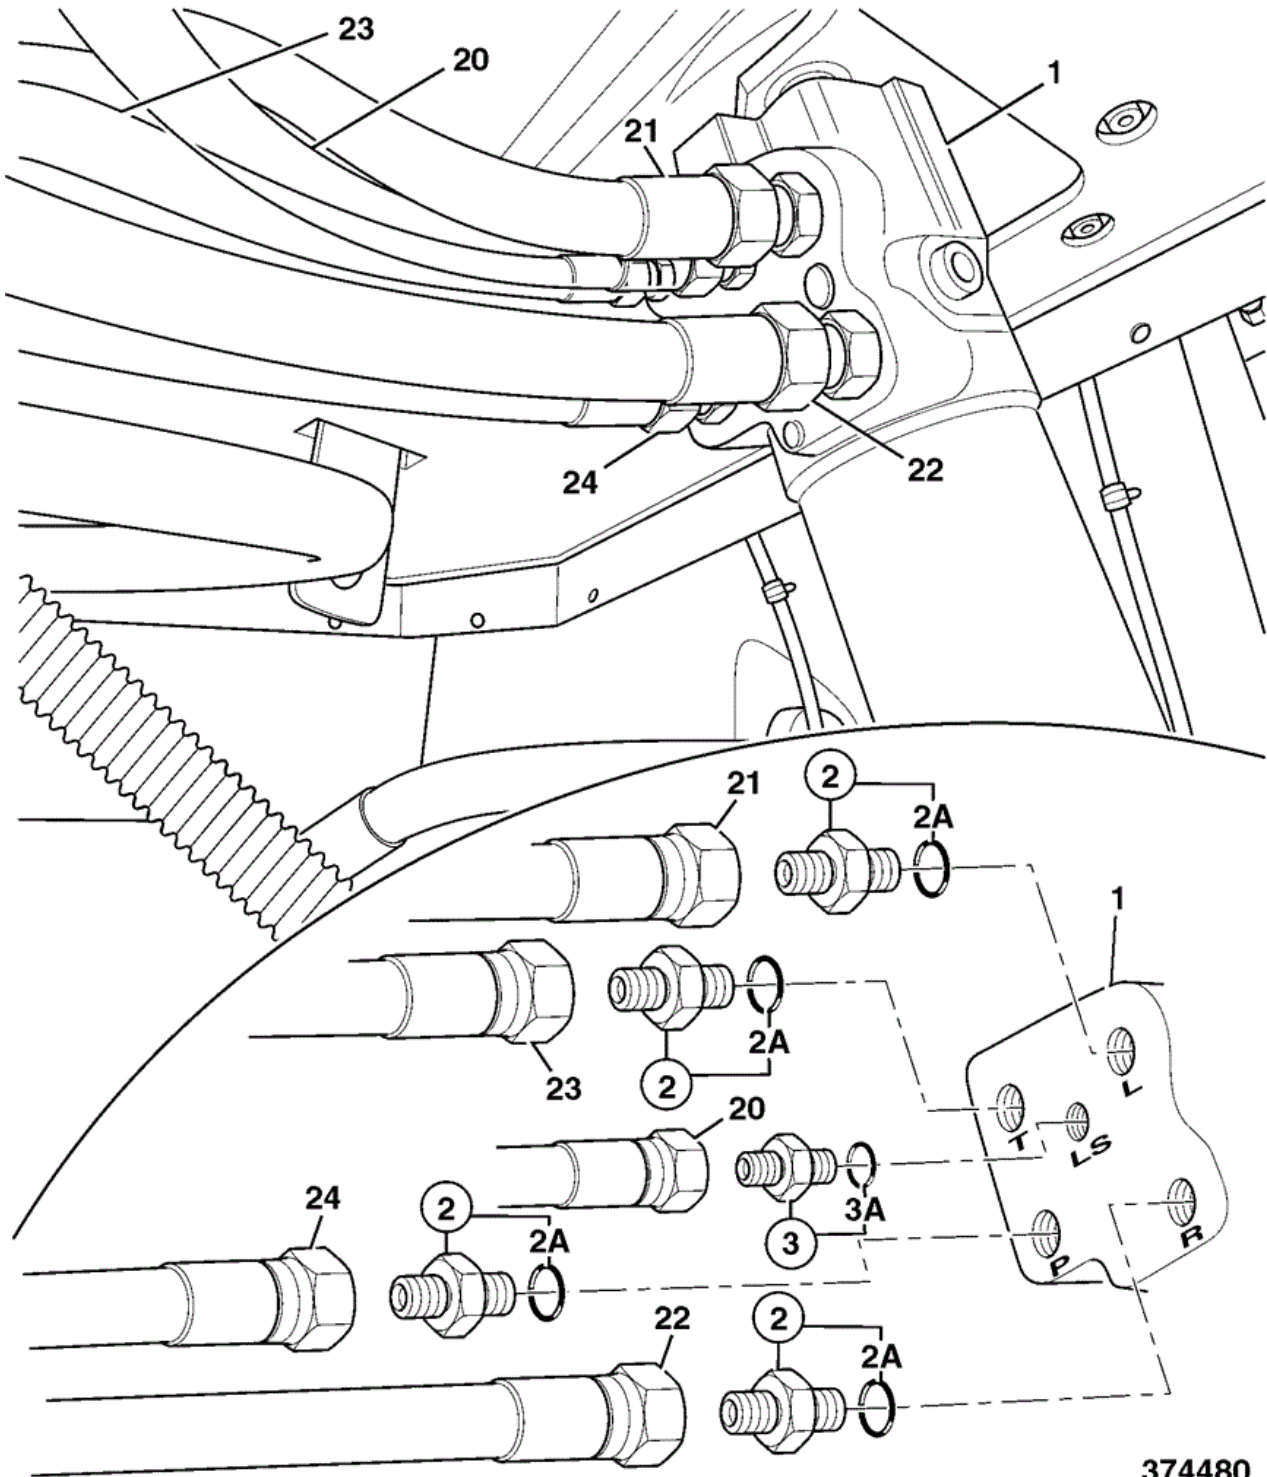

374480

Item	Part #	Change No	Description	Usage Code	QTY
1	35/903000		Valve steer <i>Number on Data plate 233-4037-002</i> <i>See Note 1</i>		1

1	35/910065	Valve steer 5 turns <i>Number on Data plate, 233-4040-002</i> <i>See Note 2</i>	1
1A	35/910071	Kit seal <i>Seal kit suitable for both valves</i>	1
2	1620/0005	Adapter 3/4"UNF o-ring boss 1/2"BSP male	4
2A	:2401/0506	O Ring	1
3	1620/0001	Adapter	1
3A	:2401/0503	O Ring	1
5	35/910071	Kit seal	1
20	269/40962	Hose "SLS"	1
21	613/07400	Hose 1/2"BSP x 830mm <i>L port</i>	1
22	613/07400	Hose 1/2"BSP x 830mm <i>R port</i>	1
23	633/30700	Hose	1
24	613/05900	Hose <i>P port</i>	1

Note 1: 35/903000 is 3.5 turns of the steering wheel for full articulation from left to right.


Note 2: 35/910065 is 5 turns of the steering wheel for full articulation from left to right.

Item	Part #	Change No	Description	Usage Code	QTY
A	335/01206		Pipe return		1
1	20/950303		Pump main hydraulic twin		1
2	635/30100		Hose		2

3	834/10313		Hose suction		1
4	933/20007		Adapter suction port		1
5	834/10314		Hose suction		1
6	933/18300		Adapter suction port		1
7	616/80056		Hose feed		1
8	616/80057		Hose		1
9	269/30222		Hose assembly LS		1
10	1620/0001		Adapter		3
10A	:2401/0503		O Ring		1
11	1620/0009		Adaptor		2
11A	:2401/0507		O Ring		1
12	816/00464		Adapter elbow - male/female		1
14	828/00351		Ring oil		1
15	611/26500		Hose 1/4"BSP x 650mm		1
20	1425/0008Z		Spring Washer		8
21	611/20800		Hose 1/4BSPx400		1
27	264/01001		Clamp		1
28	828/00417		O Ring 1"SAE		4
40	2401/0219		O Ring		1
46	933/17900		Flange adapter		2
47	1391/3413		Capscrew		8
49	1745/0001		Plug 7/16"UNF O ring boss		1
49A	:2401/0503		O Ring		1
53	611/27500		Hose 1/4"BSP x 955mm		2
70	826/10562		Screw <i>To secure pump</i>		2
71	823/00352		Washer		2



9802/2665 E1-7-1 HOSE AND PIPEWORK CHARGE PUMP

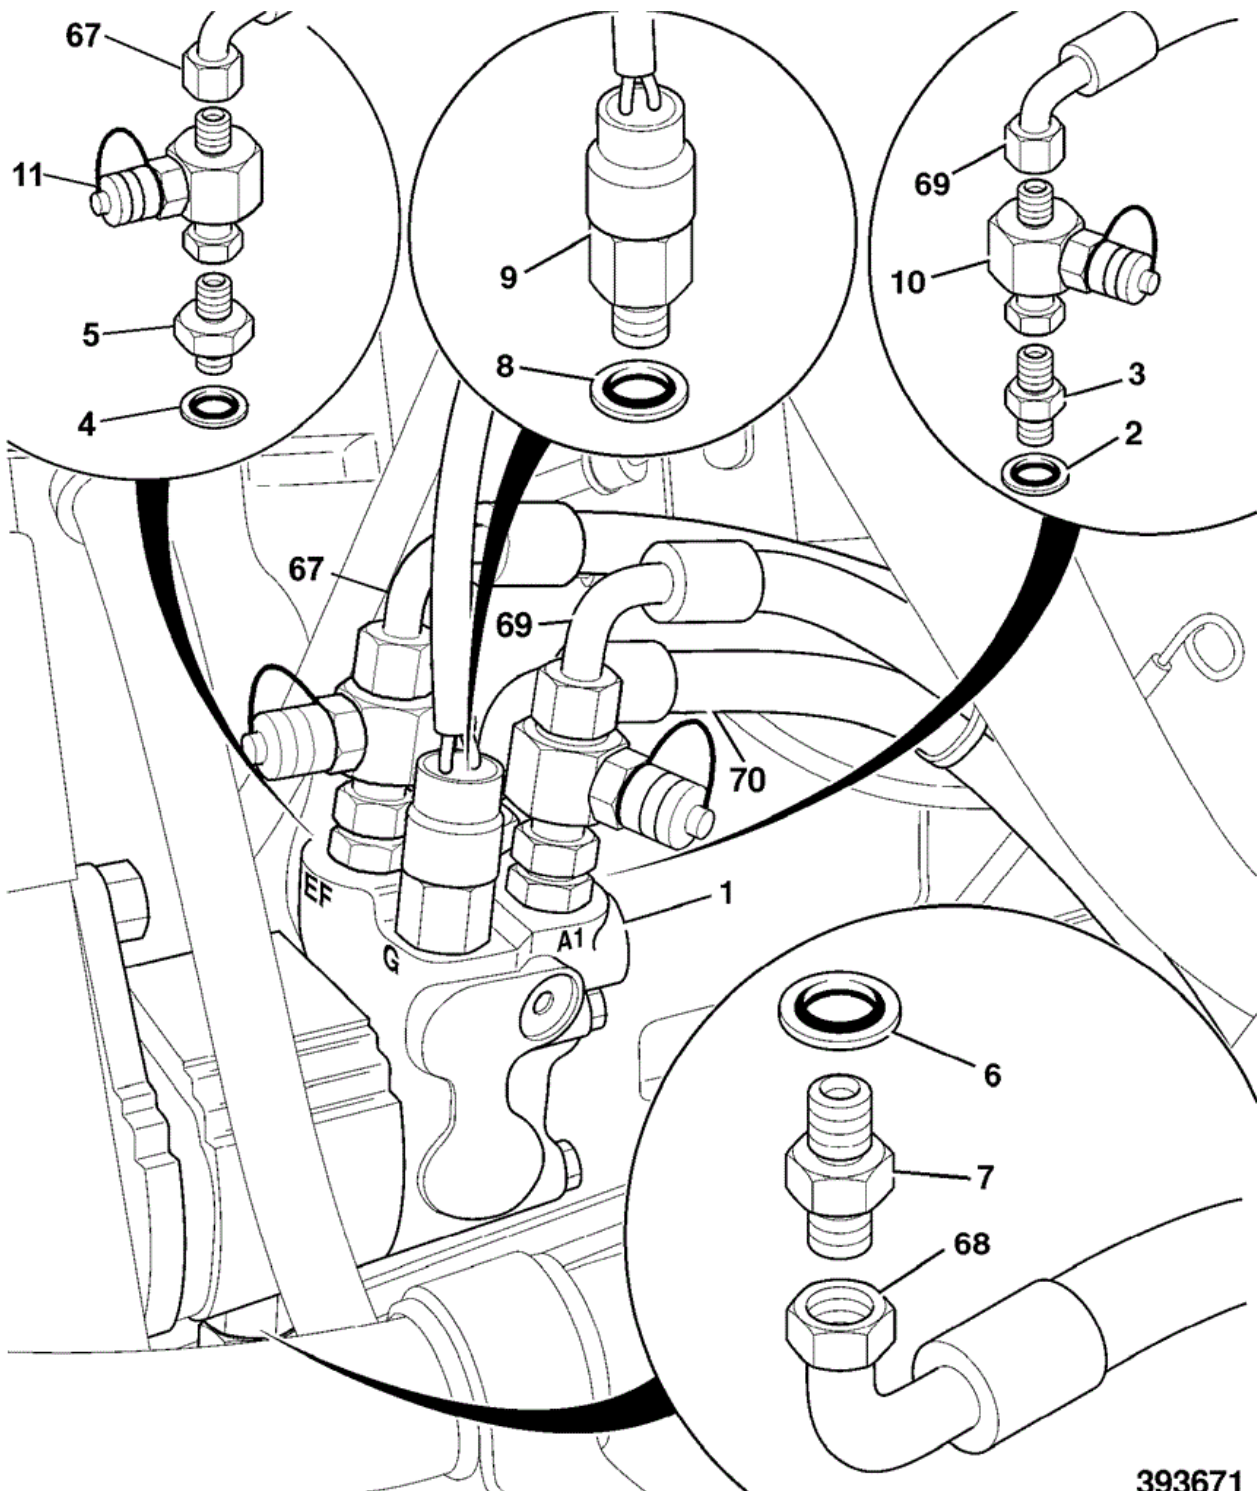


393671

Item	Part #	Change No	Description	Usage Code	QTY
1	20/925362		Pump charge		1
1	02/910873		Gasket <i>See U1-6-2</i>		1

2	1406/0015		Washer Bonded 3/8"		2
3	1604/0003		Adapter Male/Male		2
4	1406/0018		Washer Bonded (1/2" BSP)		1
5	1606/0007		Adapter		1
6	1406/0021		Washer Bonded		1
7	1606/0012		Adaptor		1
8	1406/0011		Washer Bonded (1/4")		1
9	701/80239		Switch low brake pressure		1
10	816/55038		Adapter tee pressure test		1
11	816/55040		Adapter test		1
67	613/80065		Hose <i>Hose, to fan motor</i>		1
68	637/80052		Hose		1
69	612/30600		Hose 3/8"BSP x 1210mm		1
70	612/22400		Hose 3/8"BSP x 1575mm		1



9802/2665 E1-7-2 HOSE AND PIPEWORK CHARGE PUMP

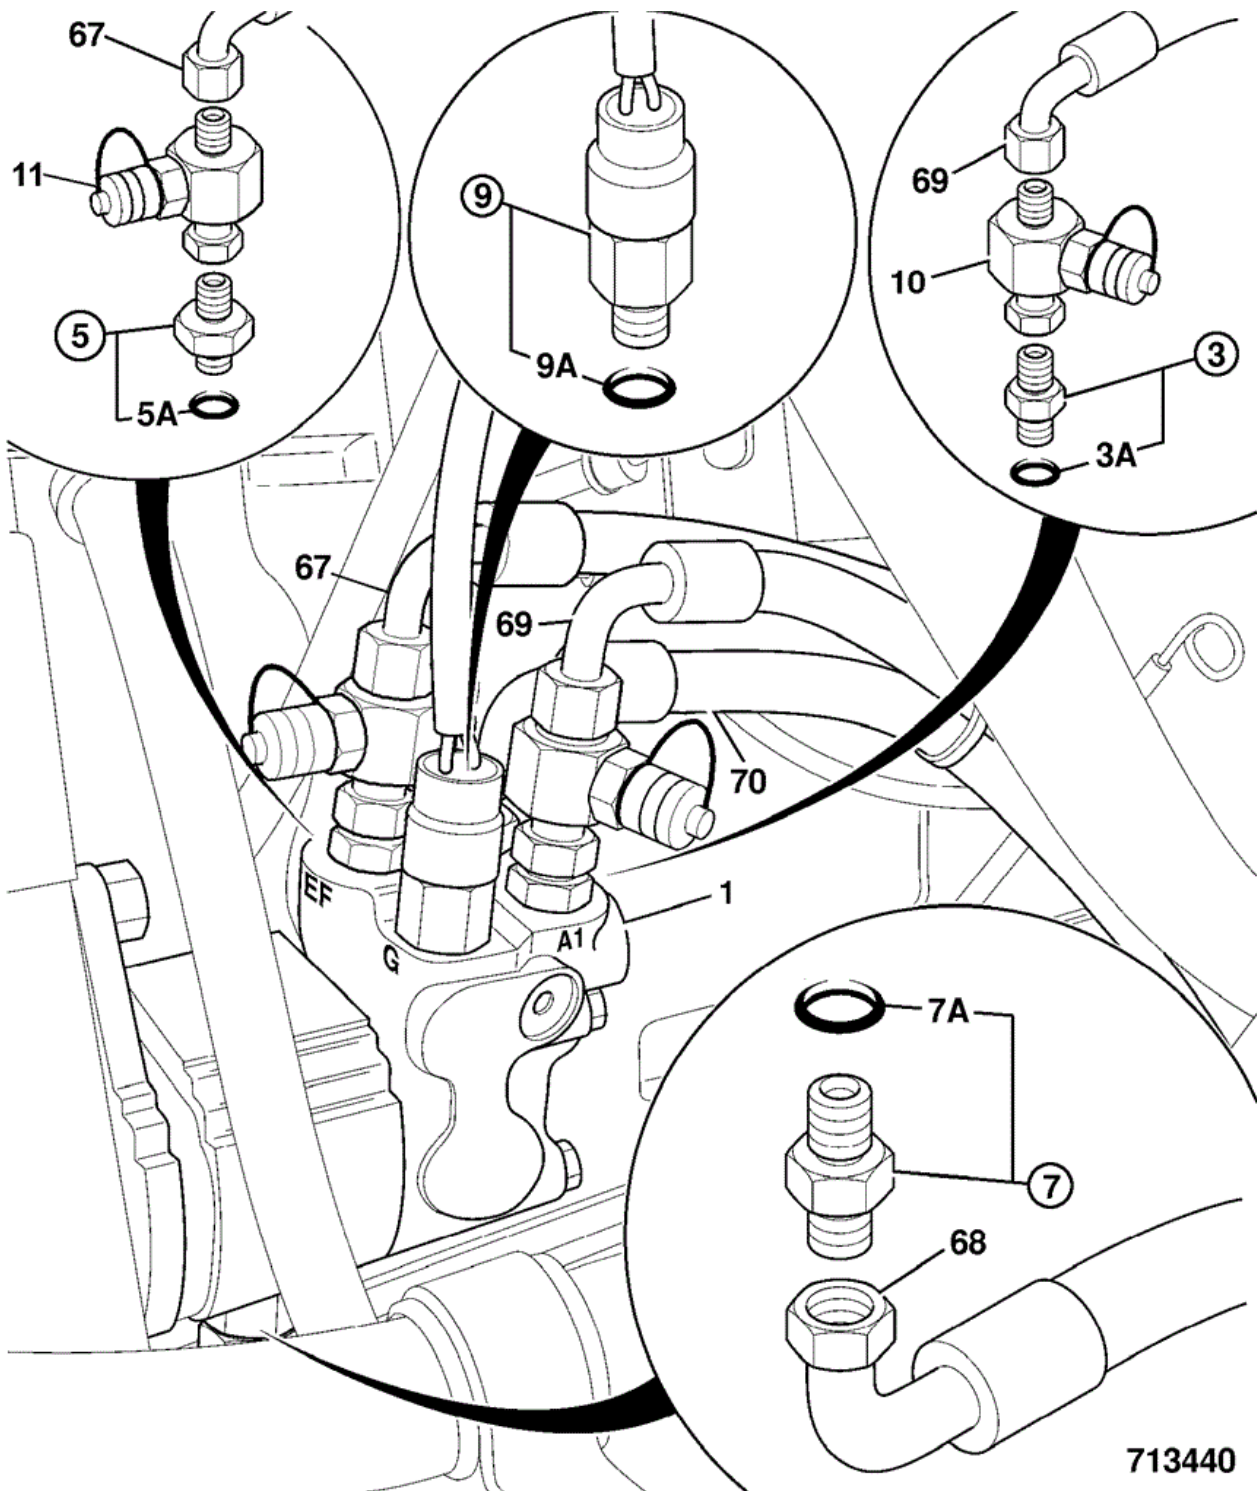


713440

Item	Part #	Change No	Description	Usage Code	QTY
1	20/925469		Pump charge 17cc <i>See E2-3-2 for details</i>		1
3	1620/0004		Adapter 3/4		2

3A	:2401/0505		O Ring		1
5	1620/0006		Adapter 39.5mm		1
5A	:2401/0507		O Ring		1
7	1606/0012		Adaptor		1
9	701/80456		Switch pressure, 120 bar		1
9A	:2401/0505		O Ring		1
10	816/55038		Adapter tee pressure test		1
11	816/55040		Adapter test		1
11	816/90757		Adapter test point stainless steel <i>Sales special 6383</i>		1
67	613/80065		Hose <i>Hose, to fan motor</i>		1
68	637/80052		Hose		1
69	612/30600		Hose 3/8"BSP x 1210mm		1
70	612/22400		Hose 3/8"BSP x 1575mm		1

JCB 9802/2665 E1-8-1 HOSE AND PIPEWORK EMERGENCY STEER

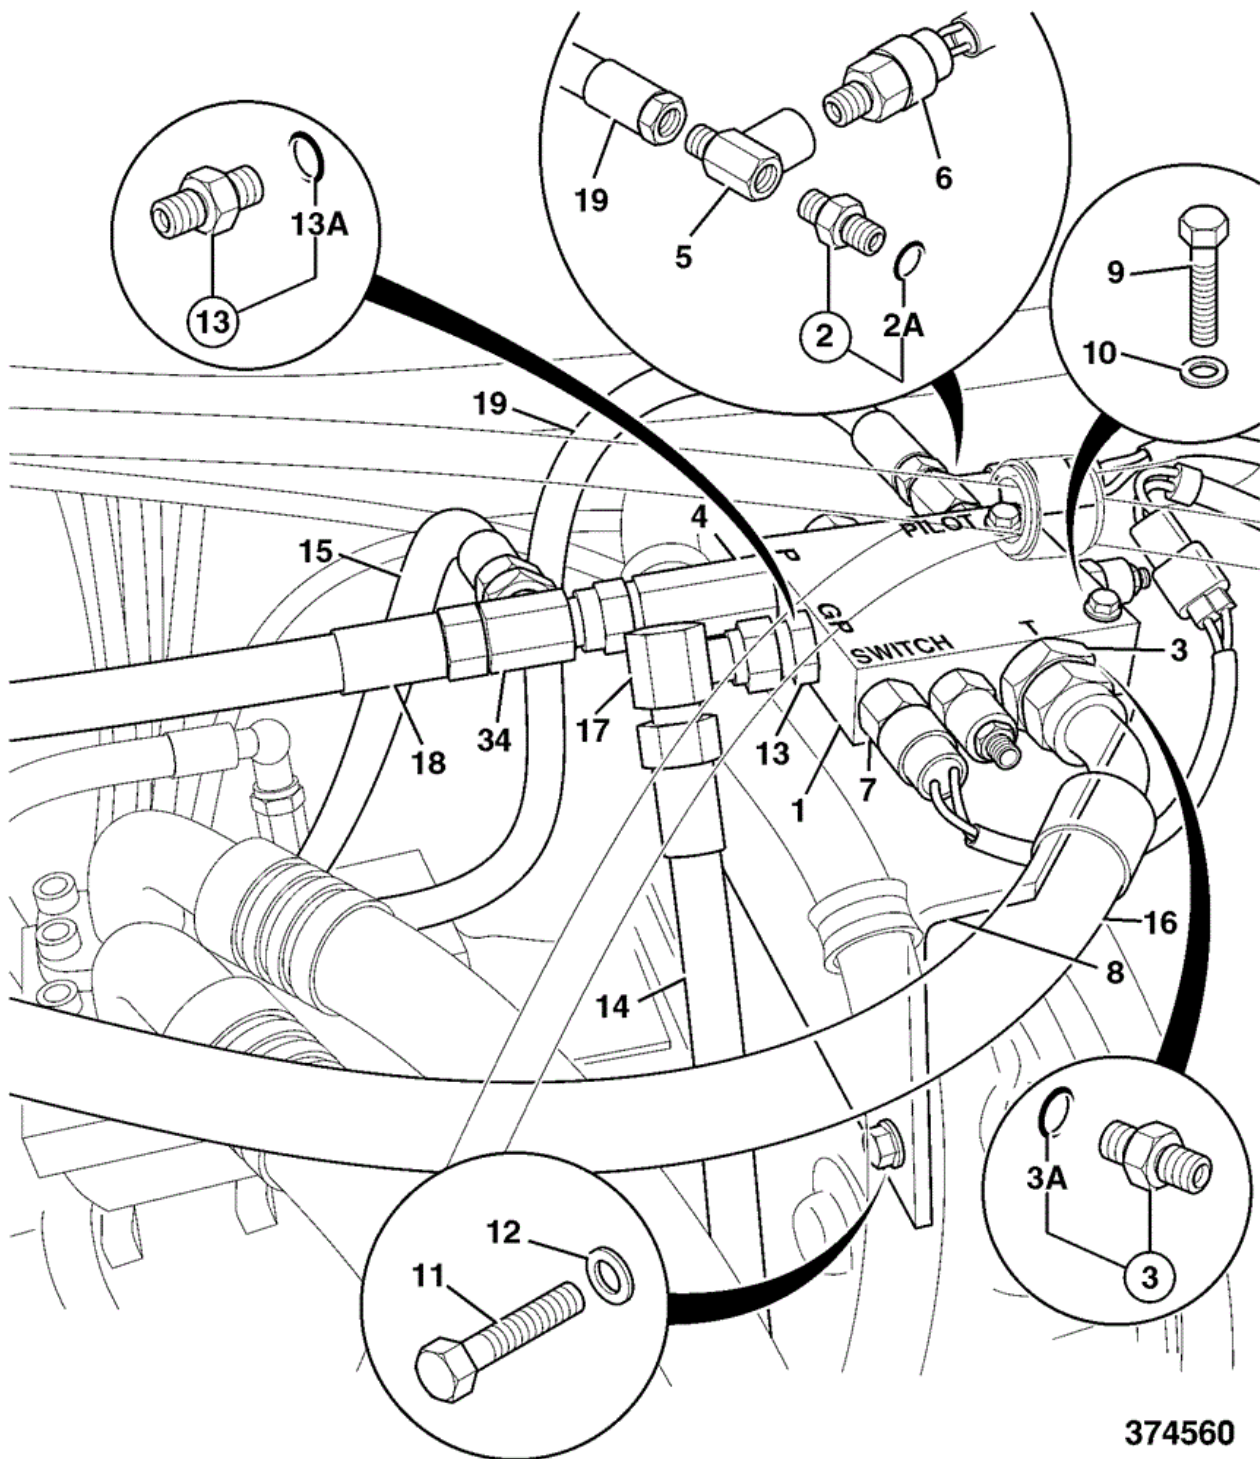


374560

Item	Part #	Change No	Description	Usage Code	QTY
1	928/60118		Valve emergency steer		1

2	1620/0002	Adapter	1
2A	:2401/0506	O Ring	1
3	1620/0009	Adaptor	1
3A	:2401/0507	O Ring	1
4	816/17073	Adapter	1
4A	:2401/0507	O Ring	1
5	816/13138	Adapter tee M12 x 1/4"x1/4"BSP	1
6	701/74300	Switch pressure	1
7	701/74400	Switch pressure 150mm lead	1
8	331/14611	Bracket steer valve mounting	1
9	1315/3311Z	Bolt (M8 X 45)	2
10	1420/0007Z	Washer (M8)	2
11	1315/0508Z	Setscrew M12 X 30	2
12	1420/0009Z	Washer (M12)	2
13	1620/0006	Adapter 39.5mm	1
13A	:2401/0507	O Ring	1
14	613/20800	Hose	1
15	613/31800	Hose 1/2"BSP x 2850mm lg.	1
16	635/80033	Hose	1
17	816/40016	Adapter ,90 Deg.	1
18	613/05900	Hose	1
19	611/26500	Hose 1/4"BSP x 650mm	1
34	816/50005	Adapter Tee	1


9802/2665 E1-8-2 HOSE AND PIPEWORK EMERGENCY STEER

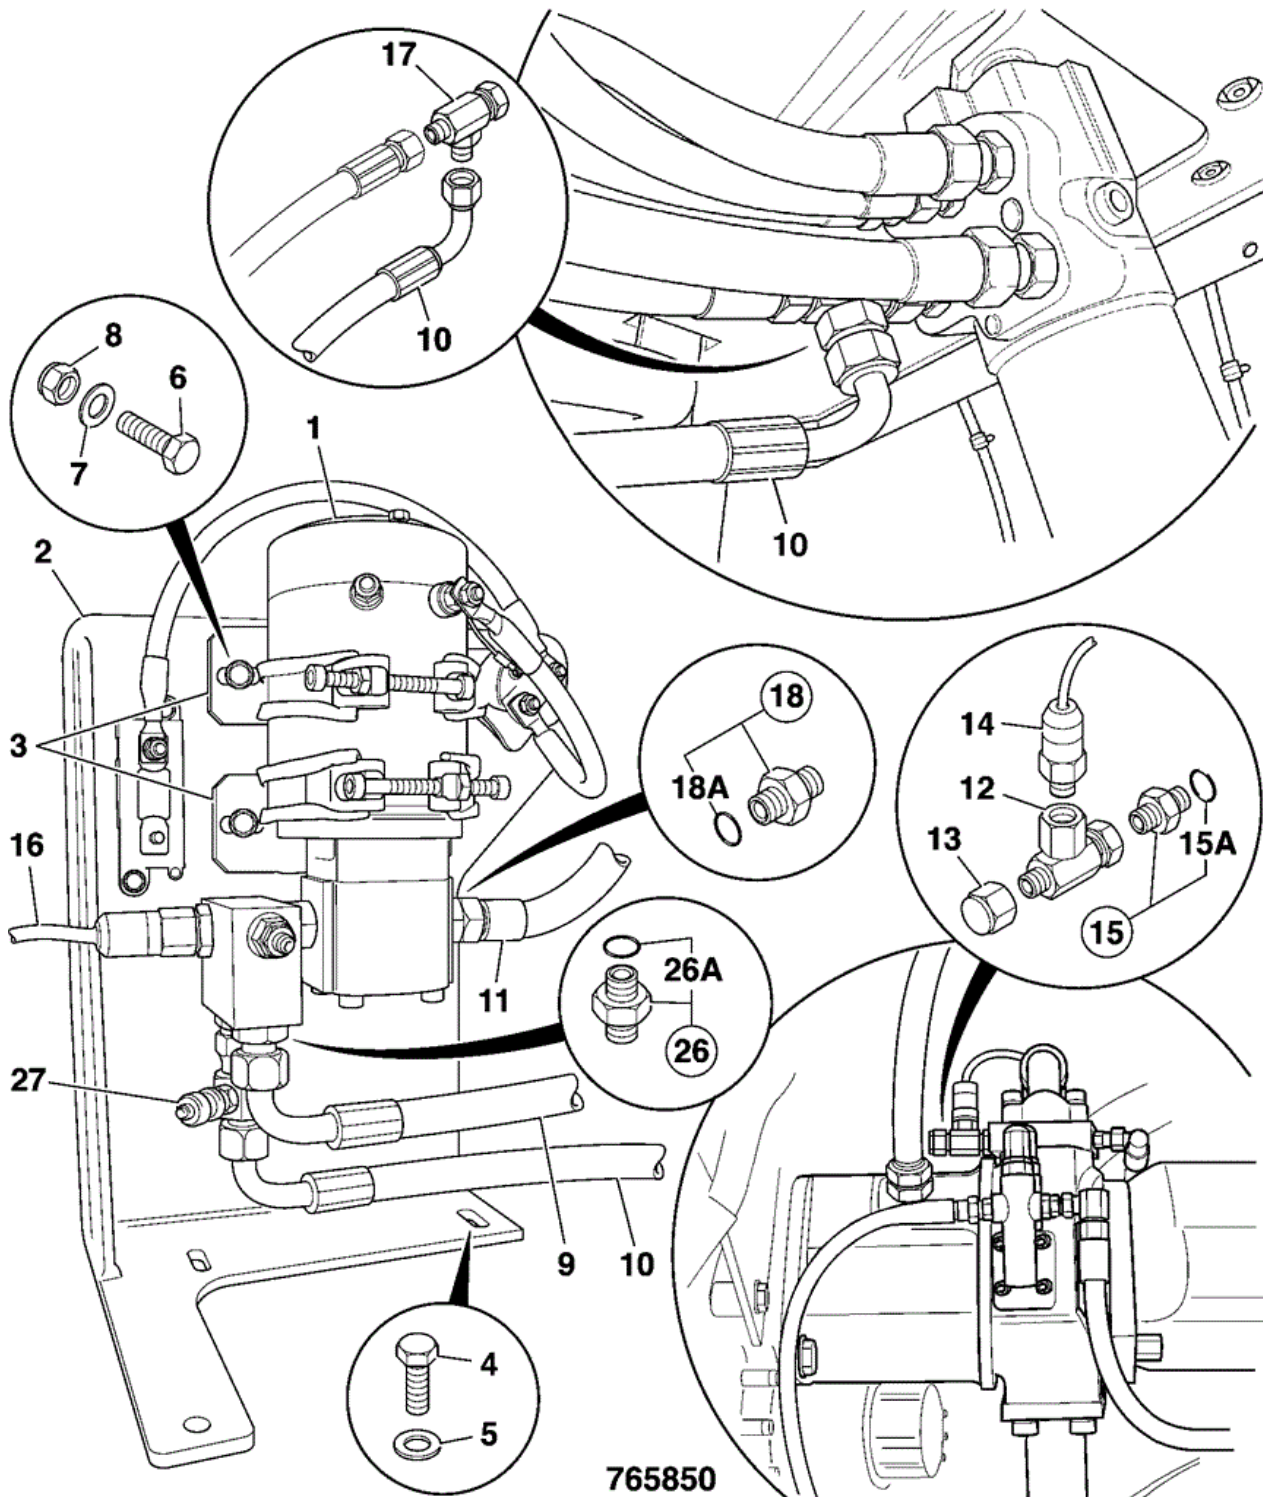

Item	Part #	Change No	Description	Usage Code	QTY
1	20/925509	Superseded	Pump emergency steer		1

1	332/S1392		Pump emergency steer no thermal cut-out		1
2	335/06346		Plate mounting		1
3	331/38636		Clamp		2
4	1315/0507D		Setscrew M12 x 25 mm		2
5	1420/0009D		Washer (M12)		2
6	1315/0305D		Setscrew M8 x 20mm		5
7	1420/0007D		Washer (M8)		12
8	1370/0203D		Nut Lock M8		6
9	613/80122		Hose 1/2bsp, 1200mm		1
10	613/80169		Hose 2050mm		1
11	613/71006		Hose		1
12	816/13138		Adapter tee M12 x 1/4"x1/4"BSP		1
13	816/00294		Plug Blanking		1
14	701/80305		Switch pressure		1
15	1620/0001		Adapter		1
15A	:2401/0503		O Ring		1
16	701/74400		Switch pressure 150mm lead		1
17	816/50005		Adapter Tee		1
18	1620/0006		Adapter 39.5mm		1
18A	:2401/0507		O Ring		1
19	821/00180		Clamp Top		1
20	821/00181		Clamp Base		1
21	821/00182		Insert clamp		1
22	821/00300		Plate clamp		1
23	821/00285		Clamp 21.3mm/21.3mm holes 37mm high		1
24	265/02460		Bracket hose support		1
25	1315/3314D		Bolt M8 x 60mm		1
26	1620/0006		Adapter 39.5mm		2
26A	:2401/0507		O Ring		1
27	816/55046		Adapter 'Tee' c/w test point		1
28	1315/0407D		Setscrew M10 x 25		1
29	1370/0303D		Nut Self Lock M10		1
30	1420/0008D		Washer (M10)		1

JCB 9802/2665 E1-9-1 HOSE AND PIPEWORK SERVO CONTROLLER LOADER

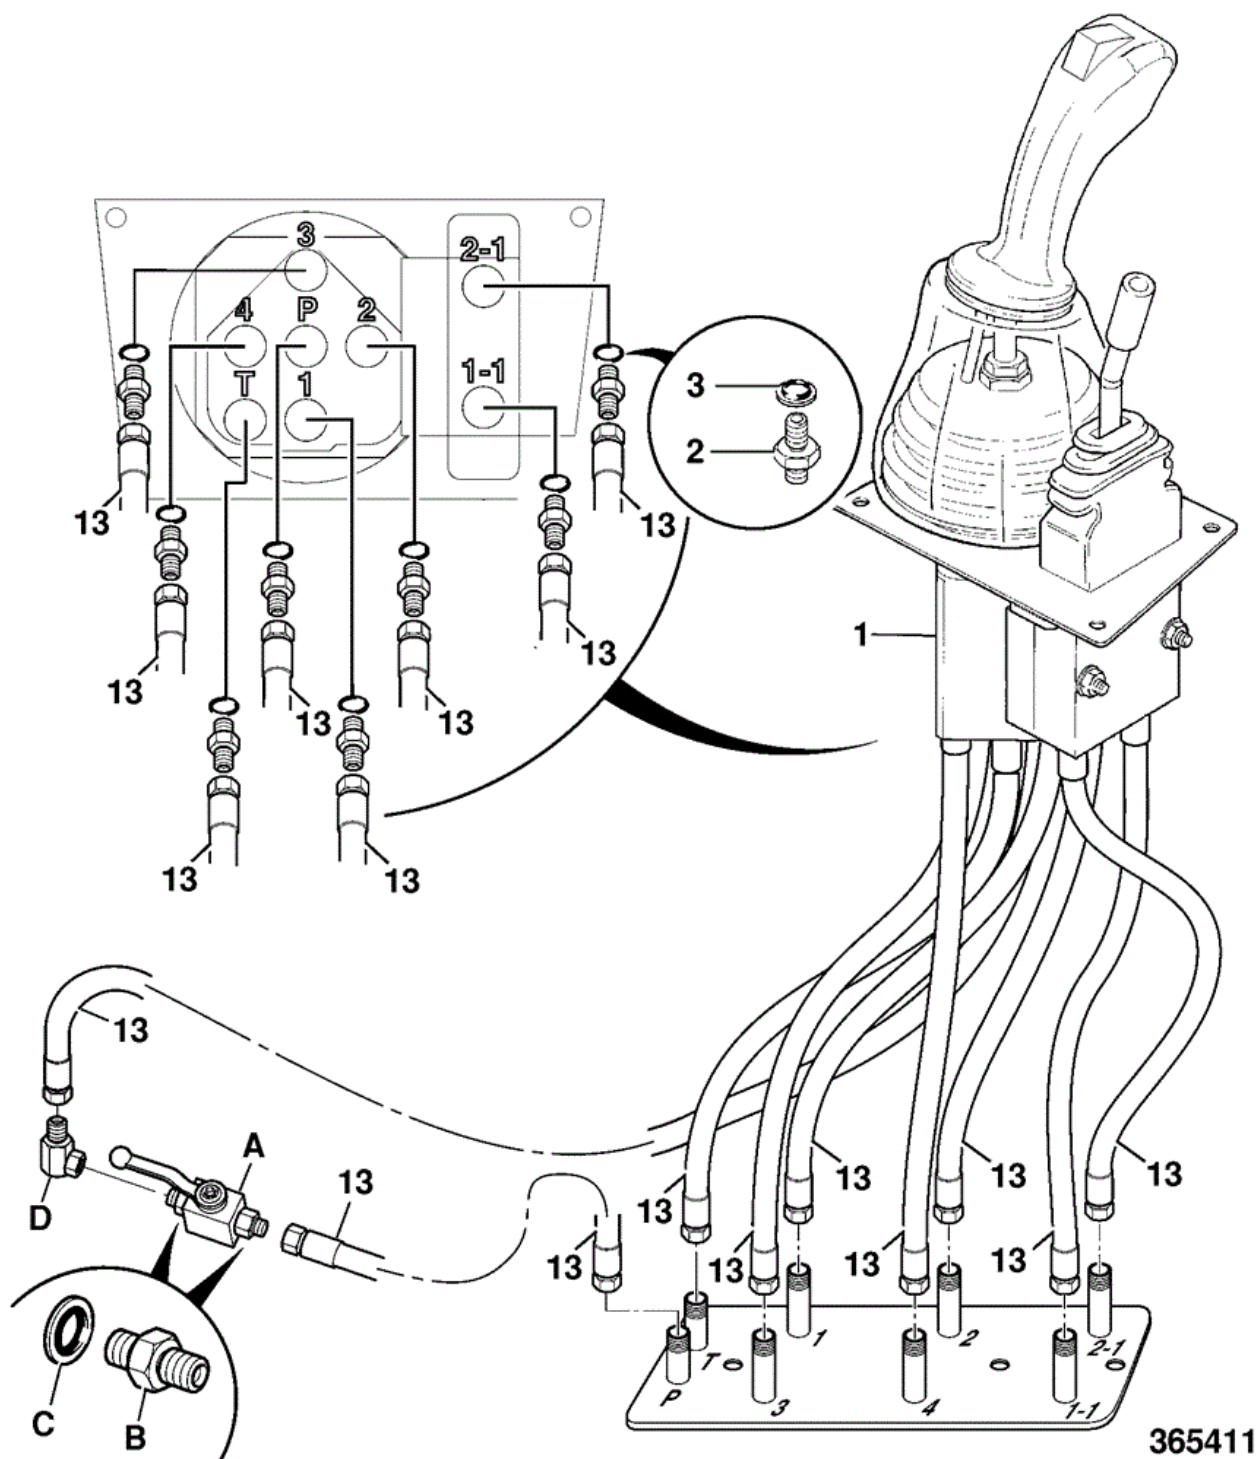

Item	Part #	Change No	Description	Usage Code	QTY
A	25/961900		Valve ball		1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com