


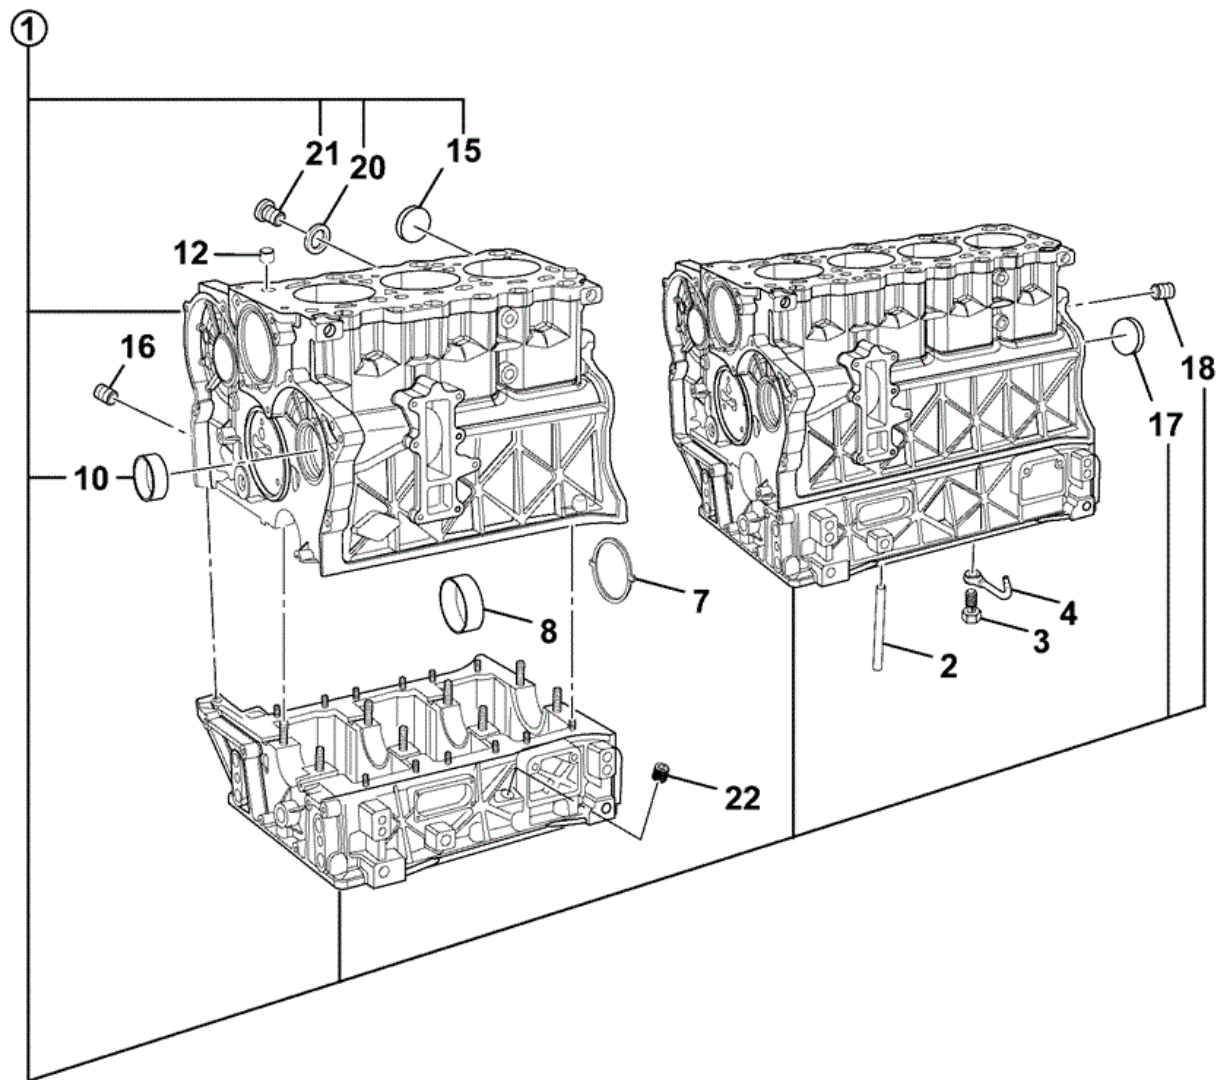

9822/0645 V120-1-1 CYLINDER BLOCK




13-11300

Item	Part #	Change No	Description	Usage Code	QTY
1	333/H5016		Block cylinder <i>Includes items 10,15,16,20,21</i>		1
10	:333/C0296		Bush Camshaft		1

15	:02/961045		Plug 30mm		4
16	:02/960001		Plug 6mm		2
20	:02/961189		Gasket Copper		1
21	:02/961190		Plug M16 x 15		1
2	333/H5017		Pipe blow by		2
3	333/H5018		Adapter piston oil spray		4
4	333/H5019		Nozzle piston oil spray		4
7	333/H5020		Washer thrust std		1
8	333/H5021		Bearing main std		5
12	333/C0316		Sleeve sleeve		2
17	333/C0317		Plug dia 50mm		1
18	333/H5022		Plug m14		1

JCB

9822/0645 V120-2-1 CYLINDER BLOCK REAR OIL SEAL

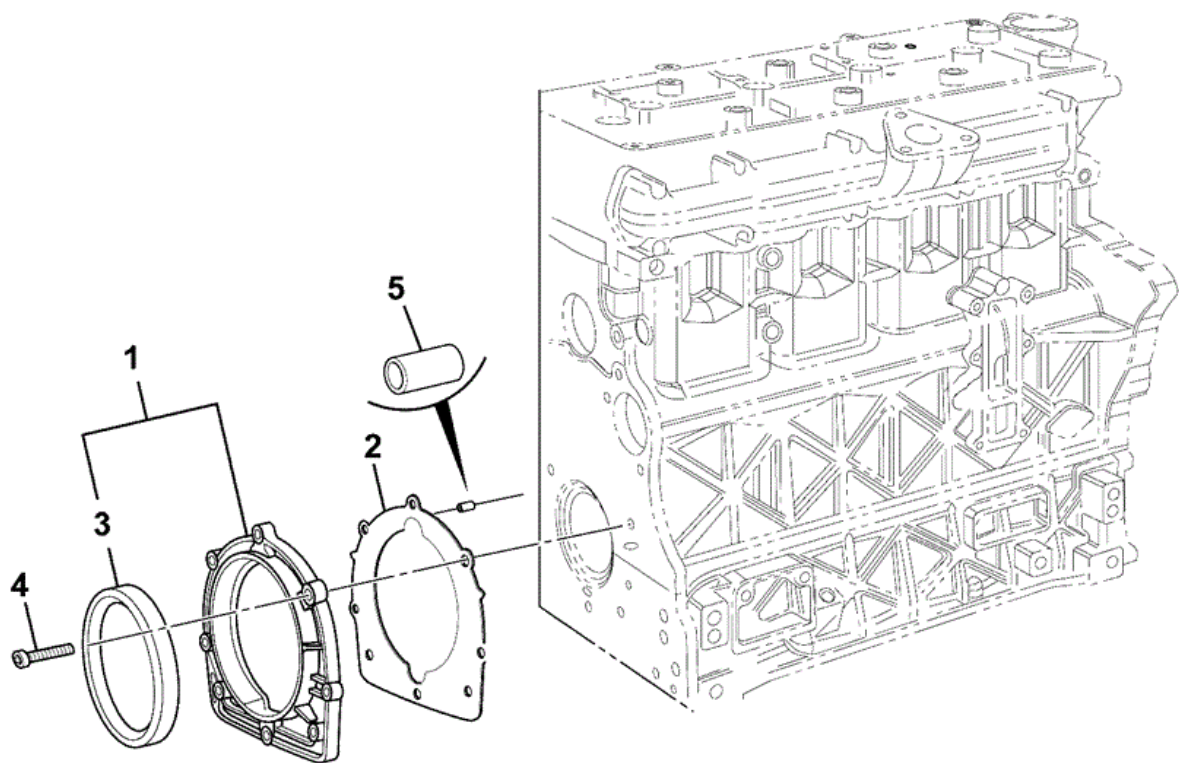


13-11000

Item	Part #	Change No	Description	Usage Code	QTY
1	333/H5176		Seal oil assy <i>Includes items 2 and 3</i>		1
3	:333/H5180		Seal oil		1

2	:333/H5179		Gasket oil seal		1
4	02/960223		Screw M6 x 22		8
5	333/H5183		Sleeve		2

JCB

9822/0645 V130-1-1 CRANKSHAFT

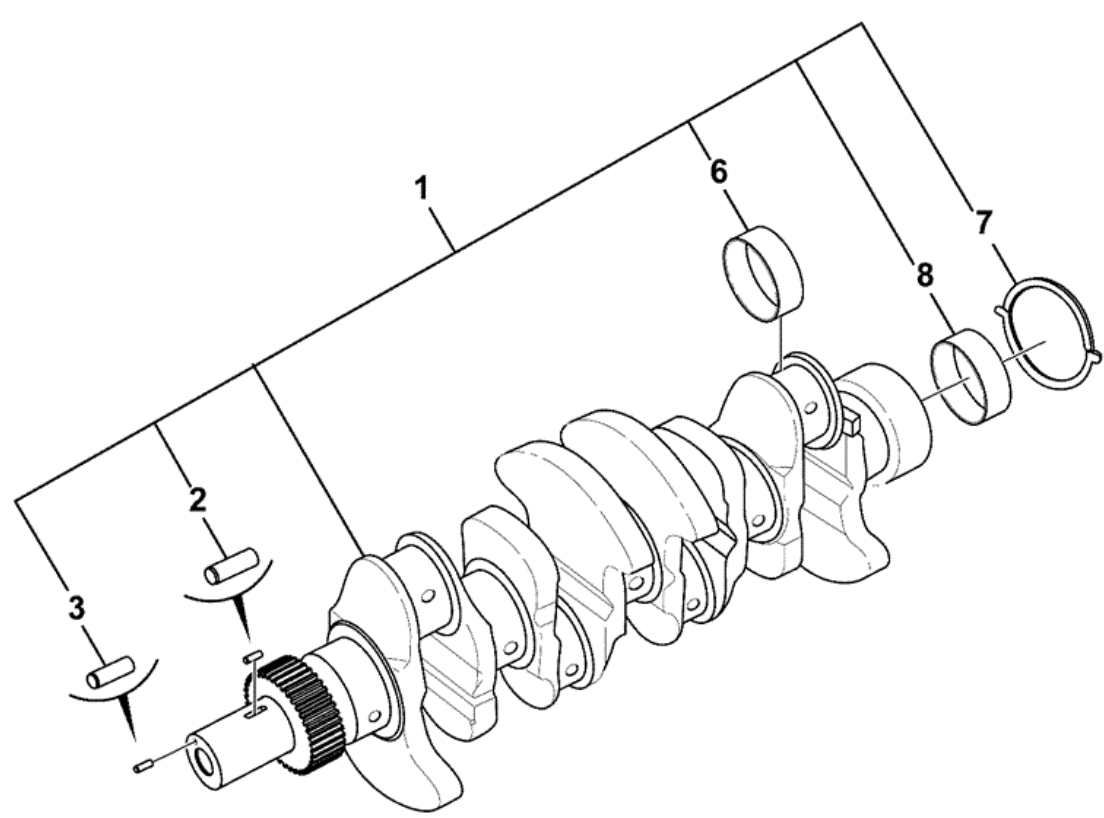


13-11200

Item	Part #	Change No	Description	Usage Code	QTY
1	333/H4957		Crankshaft assembly <i>Includes items 2,3,6,7,8</i>		1
2	:332/H9930		Key		1

3	:333/C1412		Pin		1
6	****		None serviced part <i>See conrod page</i>		1
7	****		None serviced part		1
8	****		None serviced part <i>See crankcase page</i>		1



9822/0645 V150-1-1 CAMSHAFT

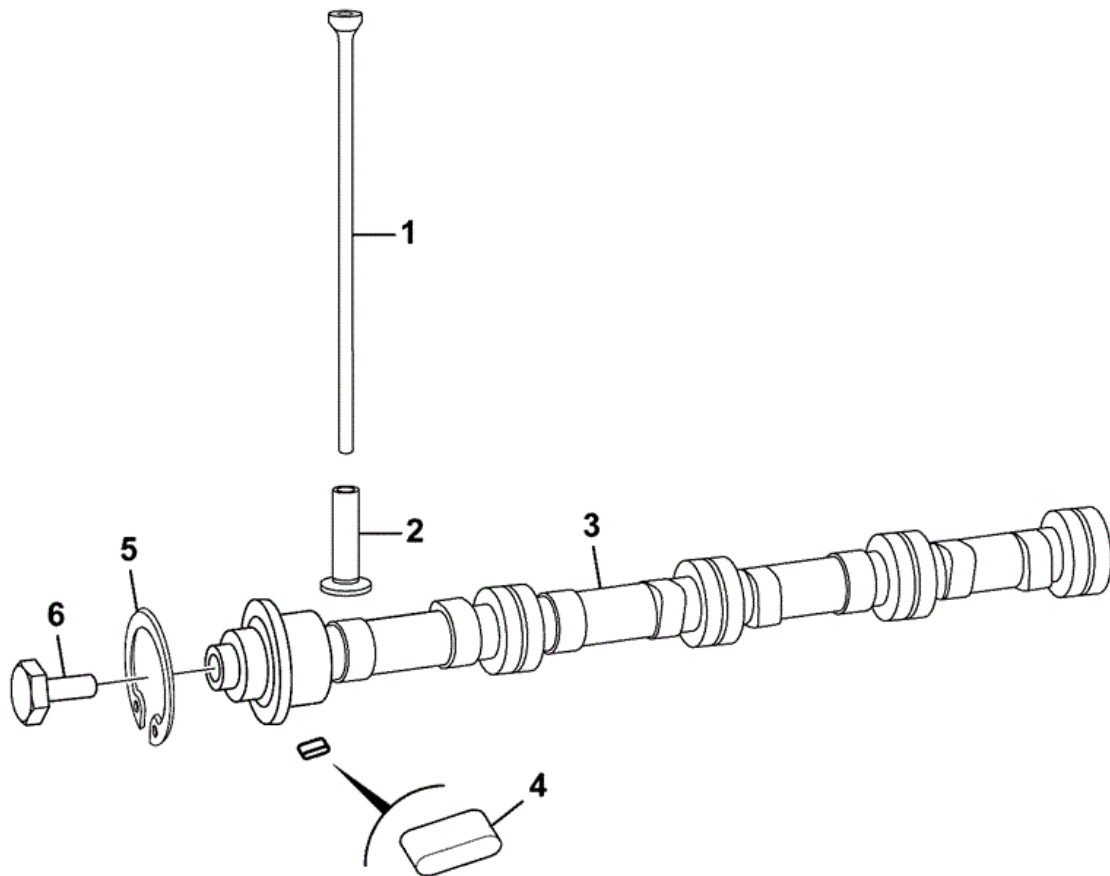


13-11180

Item	Part #	Change No	Description	Usage Code	QTY
1	333/H5294		Rod		8
2	333/H5295		Tappet		8
3	333/H5296		Camshaft		1

4	333/H5298		Key		1
5	333/H5299		Circlip		1
6	333/C0556		Bolt camshaft		1



9822/0645 V160-1-1 TIMING CASE AND OIL PUMP

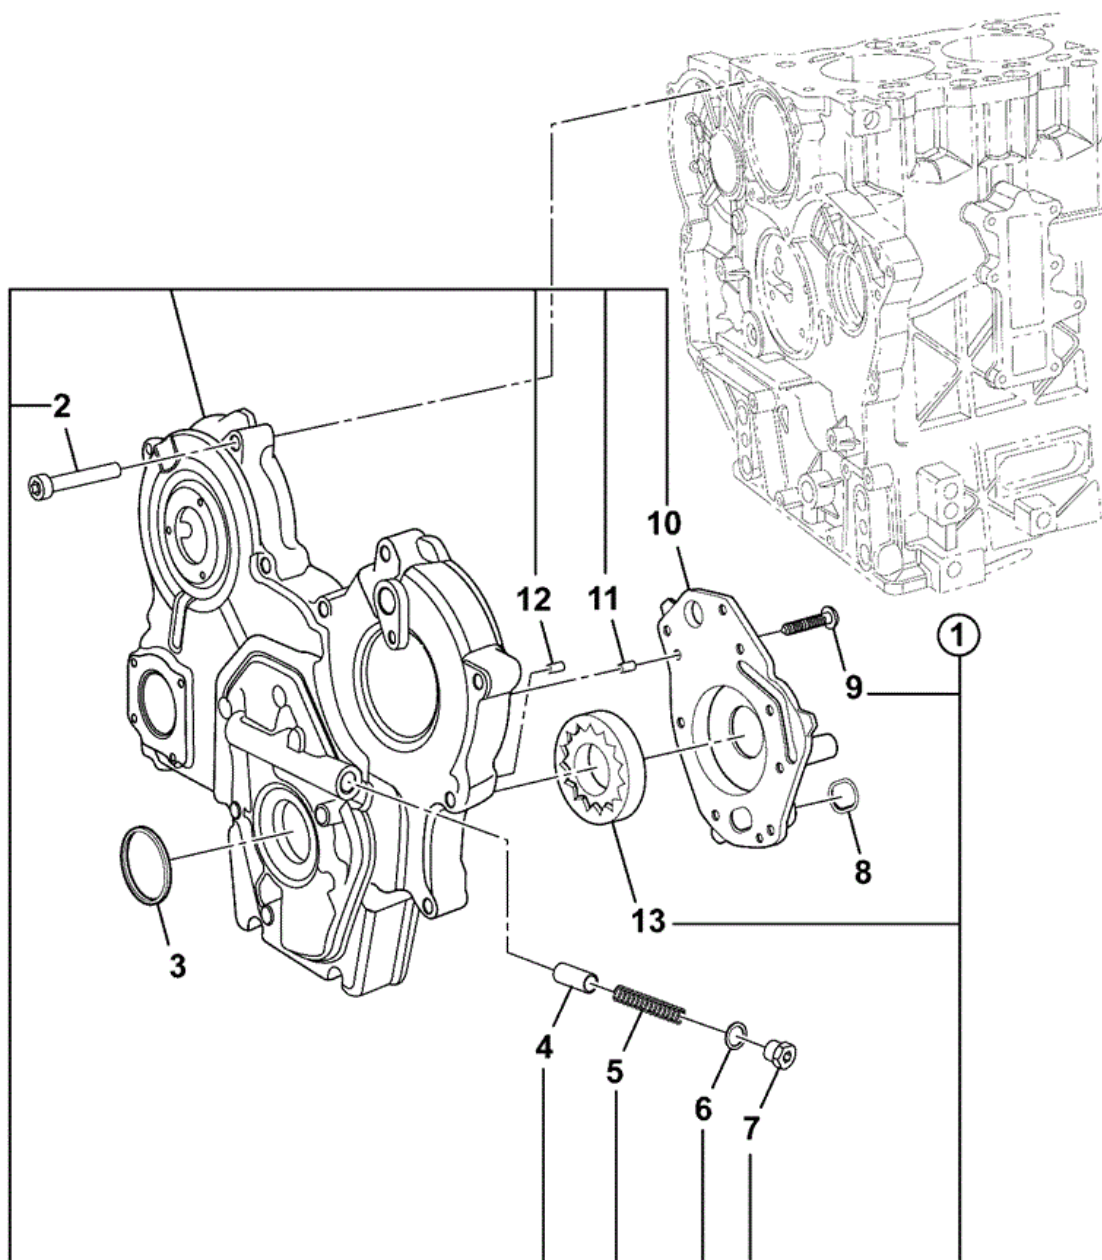


13-11360

Item	Part #	Change No	Description	Usage Code	QTY
1	333/H5197		Case timing assy <i>Includes items 4,5,6,7,9,10,11,13</i>		1
4	:333/H5199		Sleeve oil by-pass		1

5	:333/H5201		Spring oil by-pass		1
6	:02/961189		Gasket Copper		1
7	:333/H5202		Plug oil by-pass		1
9	:333/H5203		Screw m6x20		8
10	****		None serviced part		1
11	:333/H5204		Spring		2
13	:333/H5207		Rotor assy oil pump		1
2	02/961261		Screw M8 x 45		15
3	333/H5198		Seal oil		1
8	02/961070		O Ring .		1
12	333/H5205		Pin		2



9822/0645 V160-10-1 TIMING CASE TIMING GEARS

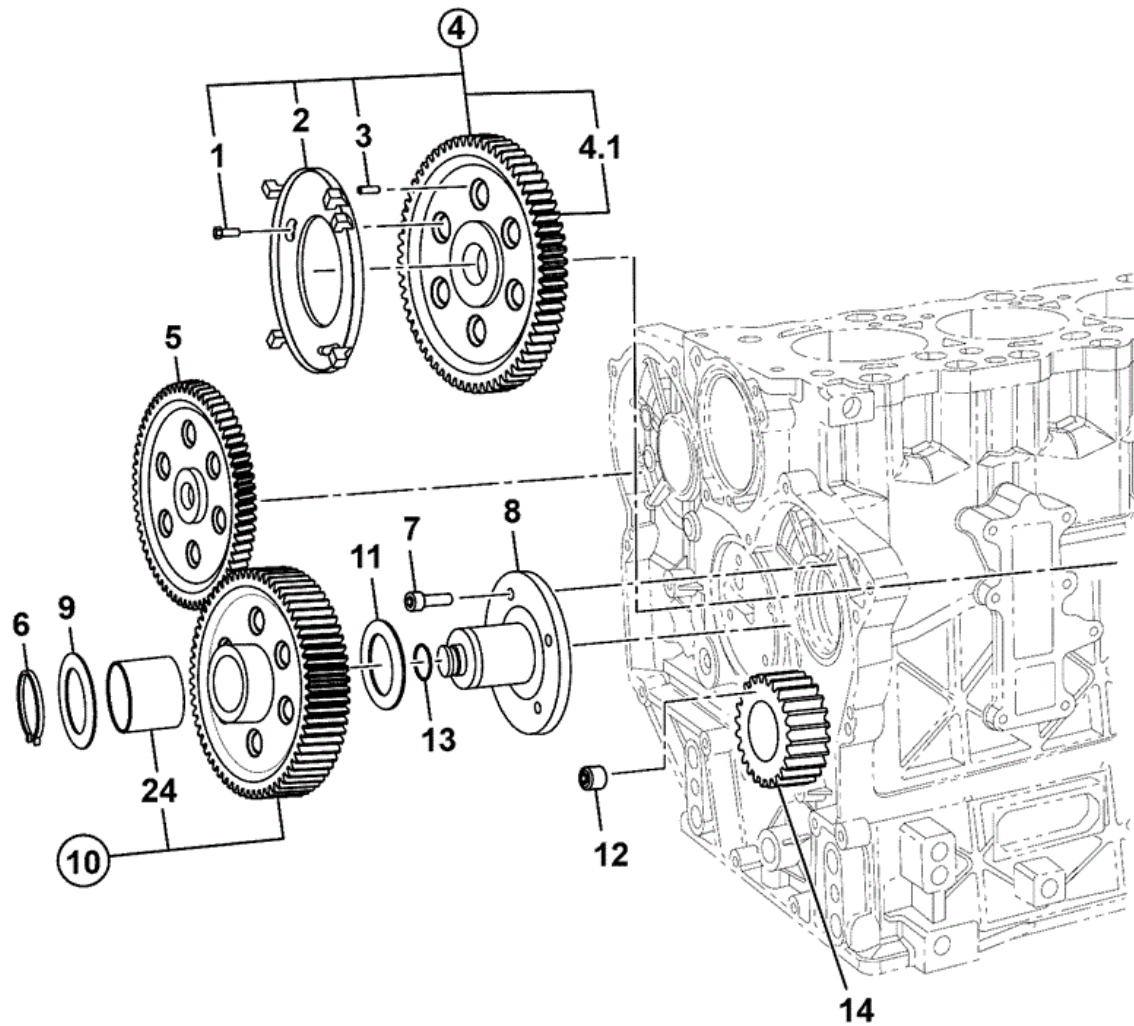


13-11210

Item	Part #	Change No	Description	Usage Code	QTY
1	334/D5854		Screw cap m5x10 <i>Includes items 1,2,3,4.1</i>		3
2	333/H5381		Wheel camshaft timing		1

3	333/H5382		Pin		1
4.1	:335/H9727		Gear		1
5	335/H9728		Gear		1
6	333/H5389		Circlip		1
7	02/960193		Screw M8 x 20		4
8	333/H5391		Shaft intermediate gear		1
9	333/H5393		Ring shoulder		1
10	335/H9729		Gear <i>Includes item 24</i>		1
11	333/C0931		Washer thrust		1
12	333/H5022		Plug m14		1
13	333/C0925		O Ring		1
14	335/H9730		Gear		1
24	333/C0932		Bush gear		1



9822/0645 V170-1-1 PTO COVER

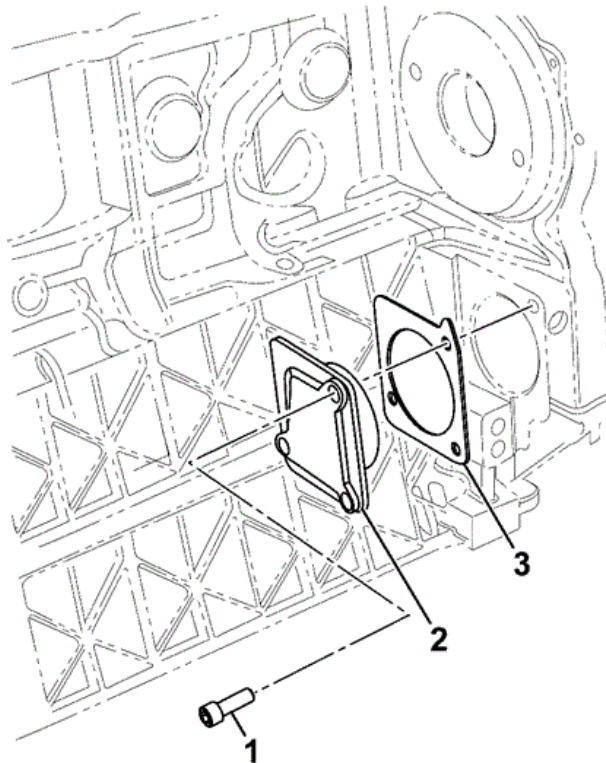


13-11150

Item	Part #	Change No	Description	Usage Code	QTY
1	333/H5820		Bolt		3
2	333/H5822		Cover		1
3	333/H5823		Gasket		1

JCB

9822/0645 V180-1-1 FLYWHEEL

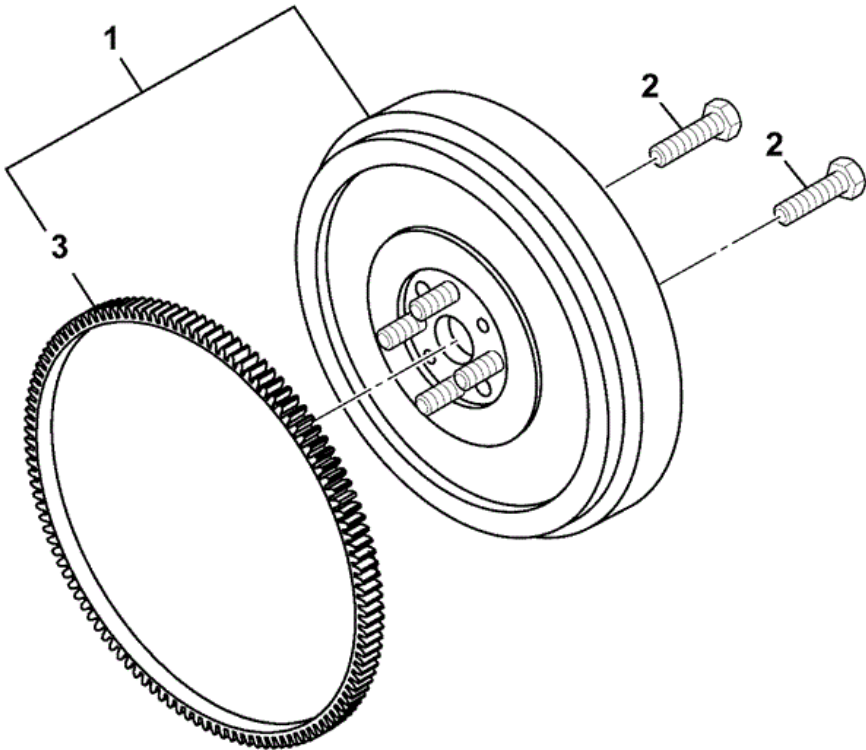


13-11030

Item	Part #	Change No	Description	Usage Code	QTY
1	333/H4992		Flywheel assembly <i>Includes item 3</i>		1
3	:333/H8249		Gear ring		1

2	333/C0276		Bolt		6
---	-----------	--	------	--	---



9822/0645 V210-5-1 CYLINDER HEAD ASSEMBLY

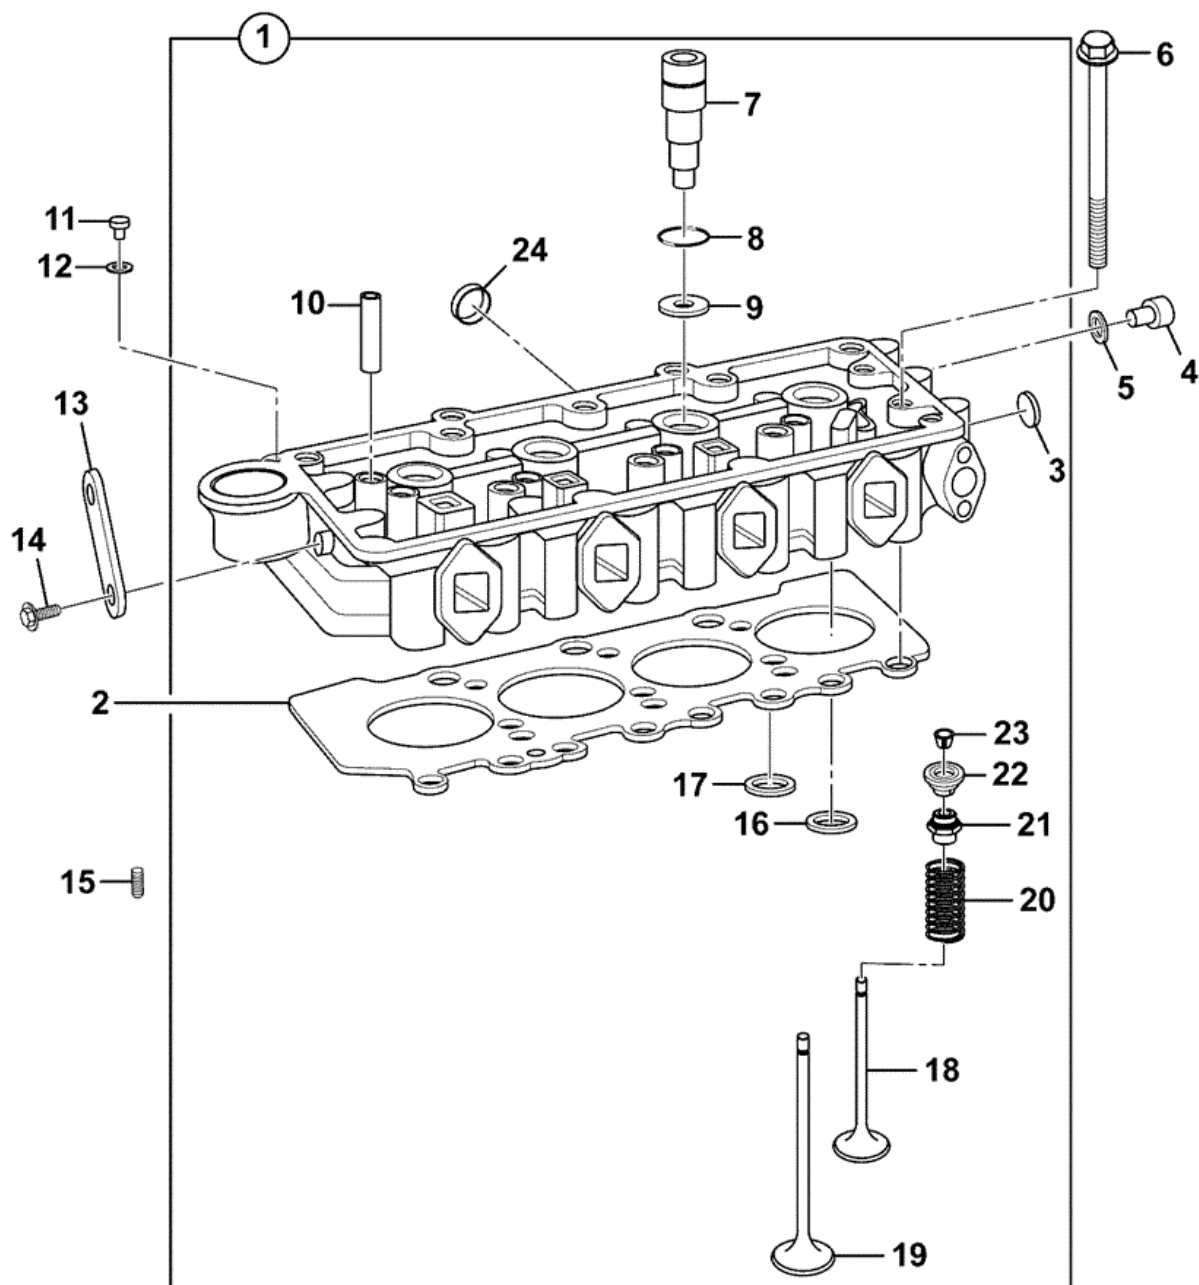

13-11390

Item	Part #	Change No	Description	Usage Code	QTY
2	333/H9813		Gasket cylinder head		1
2	333/H9814		Gasket cylinder head		1
2	333/H9815		Gasket cylinder head		1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com