




9802/5620 B1-1-1 MAINFRAME

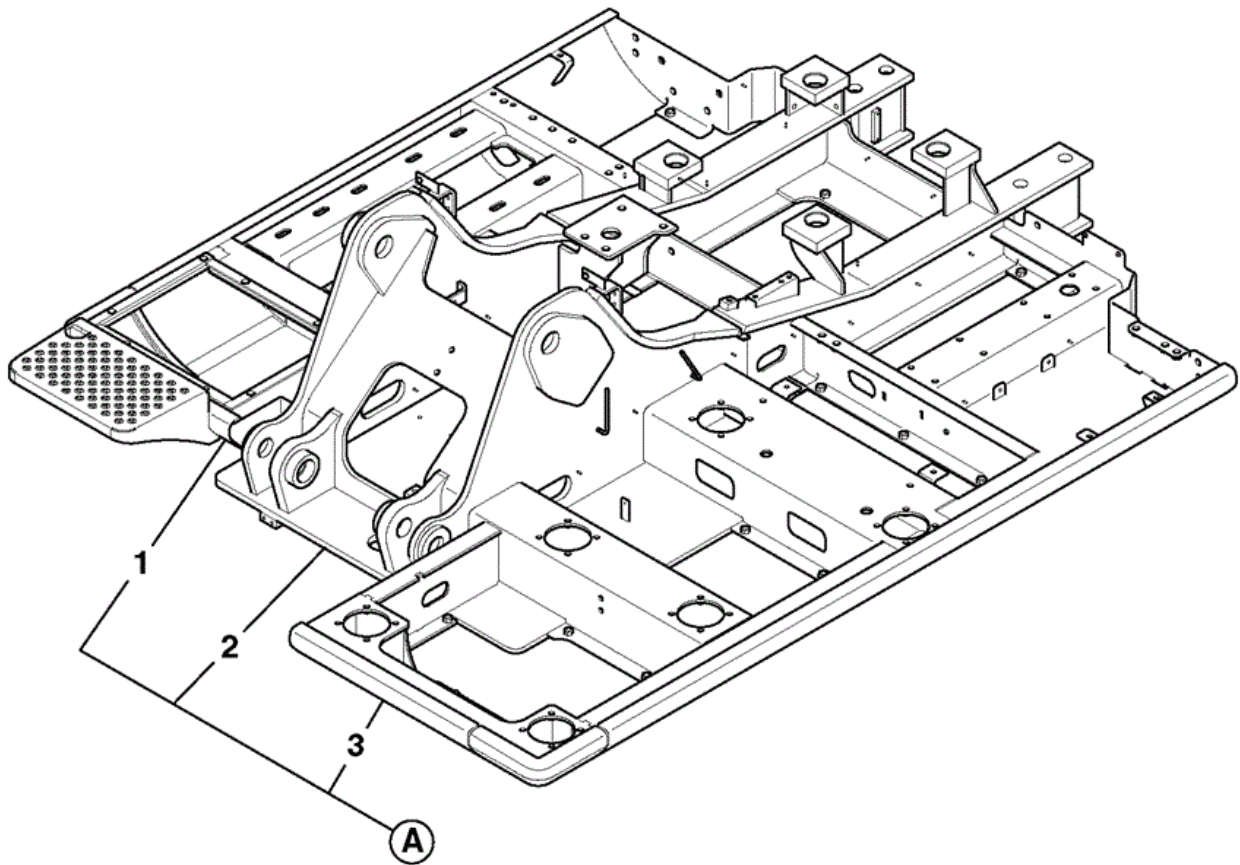


721880

Item	Part #	Change No	Description	Usage Code	QTY
A	335/04589		Mainframe WA		1
1	:331/45713		Platform right hand		1
1-1	::335/05171		Step lower		1

1-2	::331/27058		Plate skirt pressing		1
2	****		None serviced part		1
3	:331/29390		Platform left hand WA		1
3-1	::331/26607		Plate skirt pressing		1



9802/5620 B1-2-1 COVERS LOWER MAINFRAME

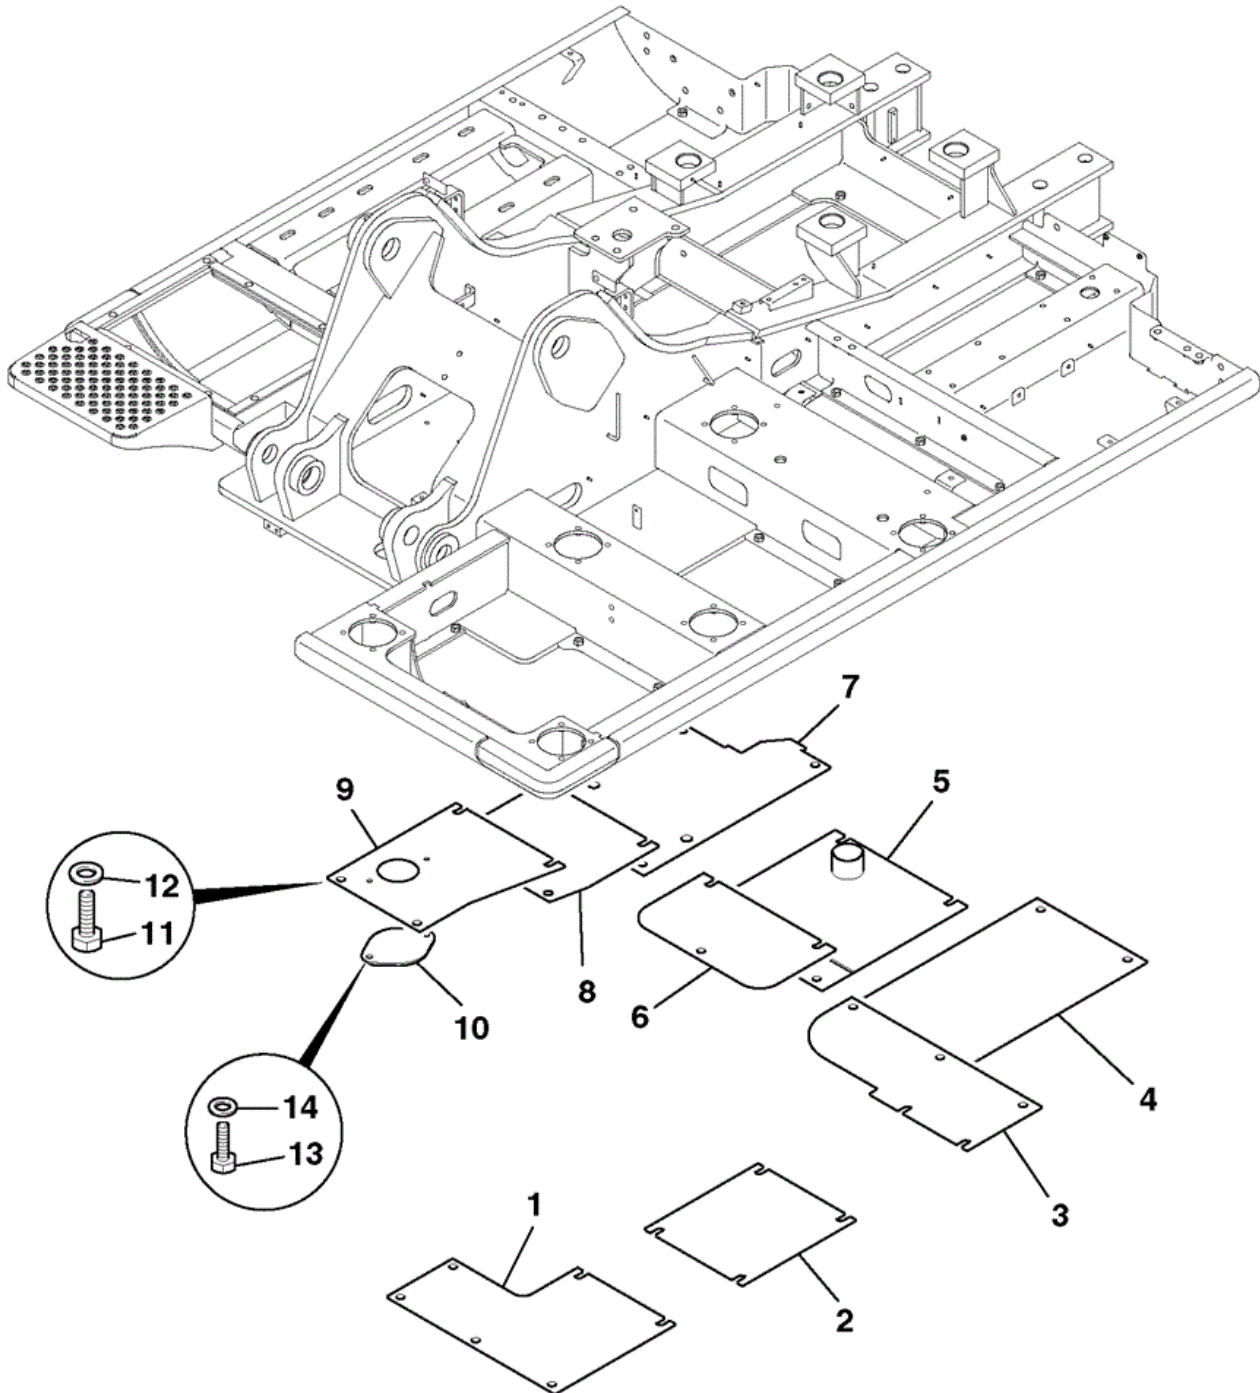


721890

Item	Part #	Change No	Description	Usage Code	QTY
1	331/40751		Cover under		1
2	331/32198		Cover under		1
3	331/32199		Cover under		1

4	331/32200		Cover under		1
5	331/52538		Cover under		1
6	331/32201		Cover under		1
7	331/32206		Cover under		1
8	331/32205		Cover under		1
9	331/32204		Cover under		1
10	331/31978		Cover under access panel		1
11	1321/0509D		Screw		30
12	JHP0049		Washer		30
13	1316/0405D		Screw M10 x 20		2
14	1420/0008D		Washer (M10)		2



9802/5620 B1-3-1 TANK, HYDRAULIC

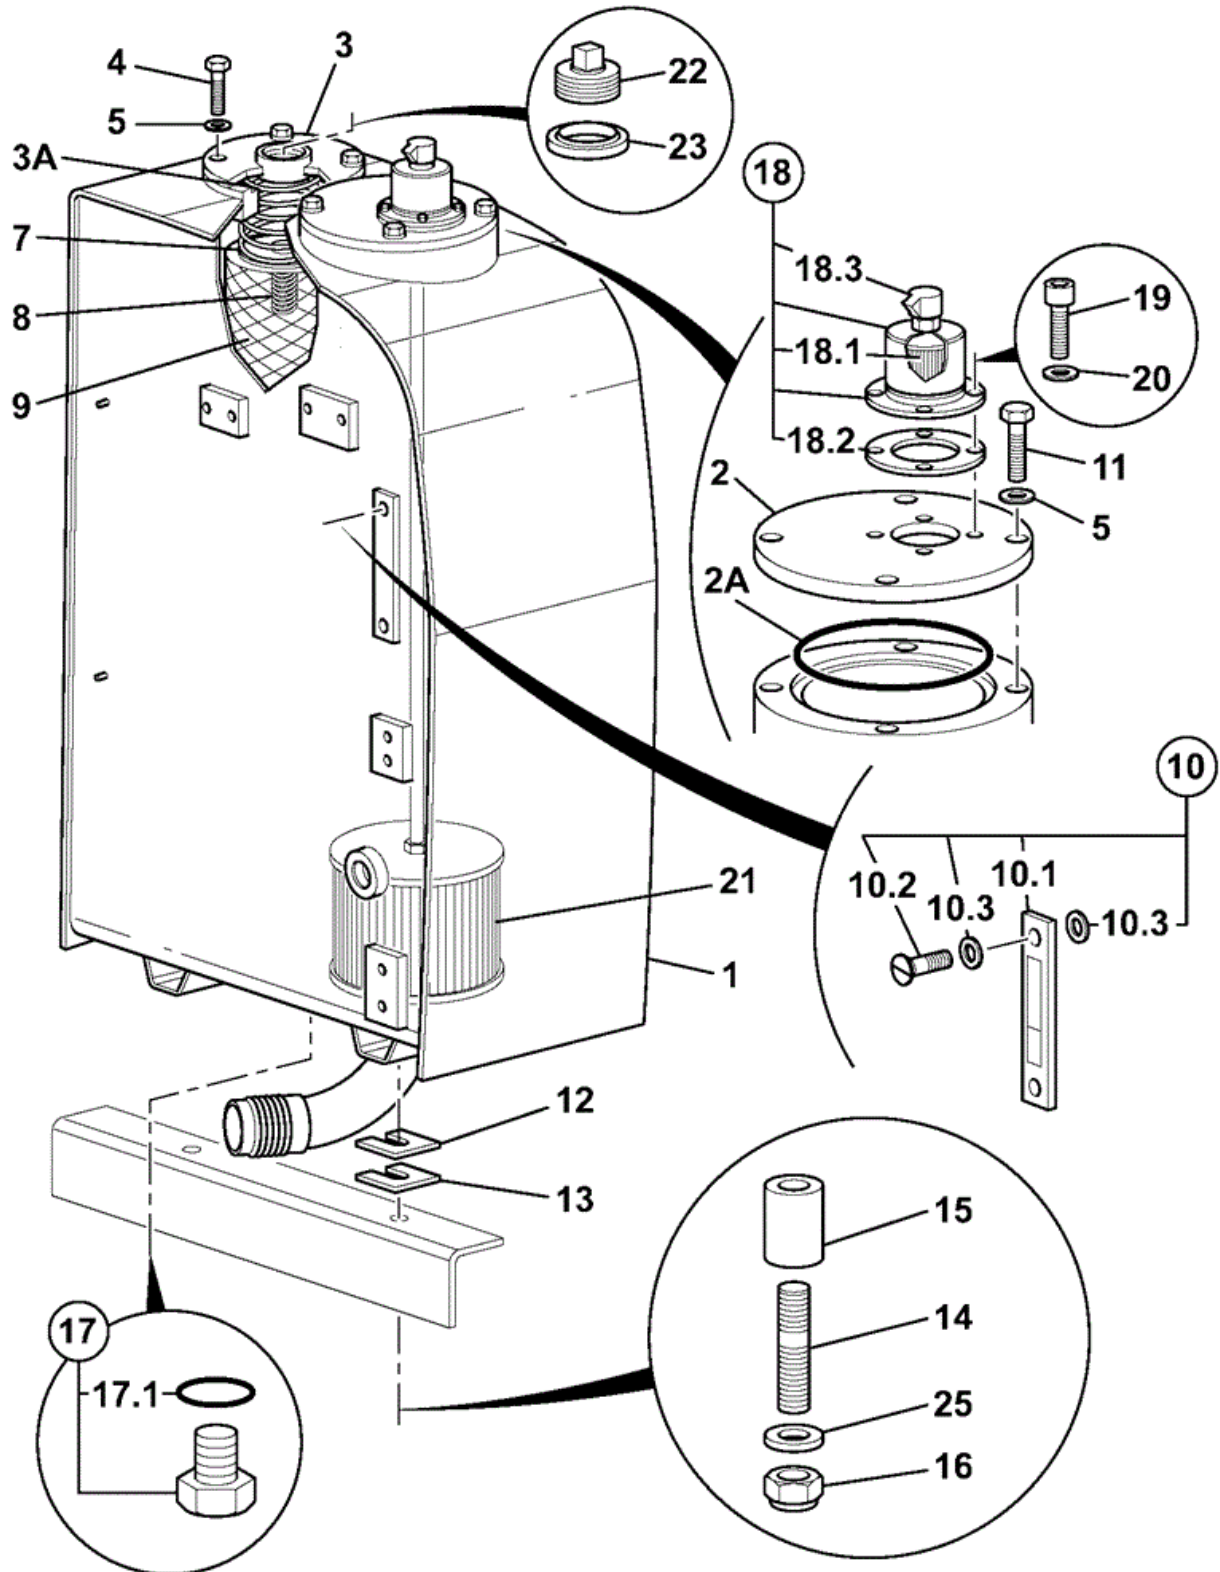


Item	Part #	Change No	Description	Usage Code	QTY
1	215/12878	<28-MAY-05	Tank hydraulic, ABI JS130, JS160 AUTO		1
2	KNJ1822		Cover sump		1
2A	CSP0161		O Ring <i>For item 2</i>		1
3	JNJ0326		Cover sump tank		1
3A	BLA2717		O Ring <i>For item 3</i>		1
4	1316/0405D		Screw M10 x 20 <i>For item 3</i>		4
5	JHP0046		Washer M10 <i>For items 4 & 11</i>		8
7	KNJ1601		Spring compression <i>For return filter</i>		1
8	KRJ1600		Valve filter relief		1
9	KRJ1599	To 14/11/2013	Element filter return <i>For Machine With Plexus Filter</i>		1
Item	333/K8611	From 15/11/2013	Filter Return, 10 Micron <i>For Machine Without Plexus Filter</i>		1
9	32/925185		Filter Return 100 Hours Flushing <i>Only fitted for flushing. Max 100 hours only.</i>		1
10	JHH0119		Gauge <i>C/W banjo bolts & seals</i>		1
10-1	****		None serviced part		1
10-2	:KHJ0815		Bolt		2
10-3	:KHJ0816		Seal washer		4
11	1316/0408D		Setscrew <i>For item 2</i>		4
12	KHH0040		Plate Shim T=0.03"		4
13	KHH0137		Shim plate		4
14	826/11113		Stud threaded M16x93 <i>Into Hyd Tank base</i>		2
14A	1316/3716D		Bolt M16 x 70mm		2
15	JSJ0042		Spacer <i>For item 14</i>		4
16	1371/0603Z		Nut Lock (M16 G12). <i>For item 14</i>		4
17	BRJ1286		Plug <i>Hyd Tank drain</i>		1
17-1	:UBJ0158		O Ring <i>For item 17</i>		1
18	KRJ3460		Breather air <i>Fit to item 2</i>		1
18-1	:KRJ3461		Element Tank Breather <i>For item 18</i>		1
18-2	:KRJ3463		Packing <i>For item 18</i>		1
18-3	:KHJ0992		Nut <i>For item 18</i>		1
19	1391/3203Z		Capscrew <i>Secures item 18</i>		4
20	1420/0006Z		Washer (M6) <i>For item 19</i>		4
21	32/925359		Strainer assembly <i>Inside tank</i>		1
22	JHH0082		Plug <i>For item 3</i>		1

23	1406/0029		Washer Dowty <i>For item 22</i>		1
24	817/19960		Decal WARNING hydraulic tank vent <i>Venting instructions</i>		1



9802/5620 B1-4-1 TANK, DIESEL FUEL

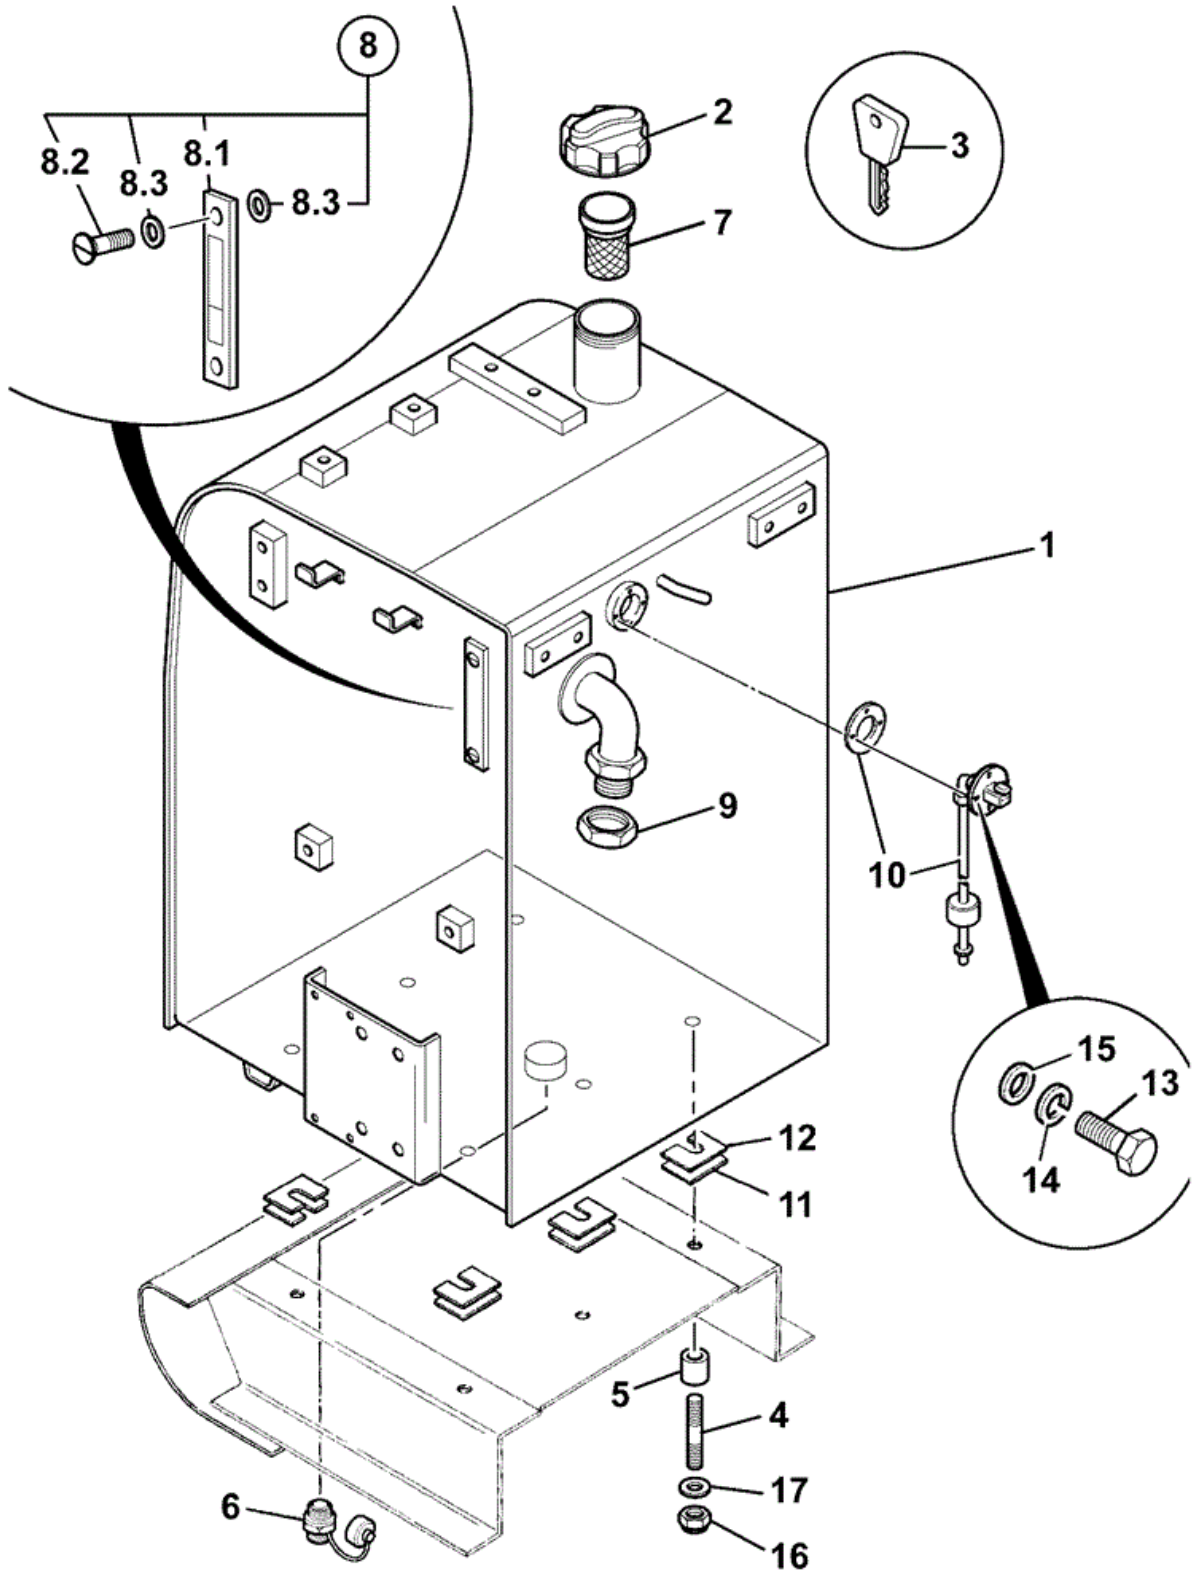


406010

Item	Part #	Change No	Description	Usage Code	QTY
1	215/12147		Tank fuel ABI		1
2	:331/31152		Cap filler with lock		1
3	::701/45501		Key Door/Ignition		1
4	826/11113		Stud threaded M16x93 <i>Secures tank</i>		6
5	JSJ0042		Spacer <i>For item 4</i>		6
6	32/925428		Plug Drain Valve, M20 <i>Fit to tank bottom</i>		1
7	JRH0083		Strainer fuel filter <i>Fit in filler neck</i>		1
8	JHH0120		Gauge diesel fuel level <i>Fit to tank</i>		1
8-1	****		None serviced part		1
8-2	****		None serviced part		1
8-3	****		None serviced part		4
9	816/90205		Cap blanking 1" BSP female <i>For stub pipe</i>		1
10	716/30142		Sender fuel level with gasket <i>Fit into tank</i>		1
11	KHH0040		Plate Shim T=0.03" <i>For item 4</i>		2
12	KHH0137		Shim plate <i>For item 4</i>		2
13	1316/0301Z		Screw <i>Secures fuel sensor</i>		4
14	1420/0005Z		Washer (M5) <i>For item 13</i>		4
15	JHC0001		Sealant liquid packing, Gasket		0
16	1371/0603Z		Nut Lock (M16 G12).		6
17	JHP0043		Washer M16 <i>For item 16</i>		6



9802/5620 B1-5-1 FRAME SUPPORT

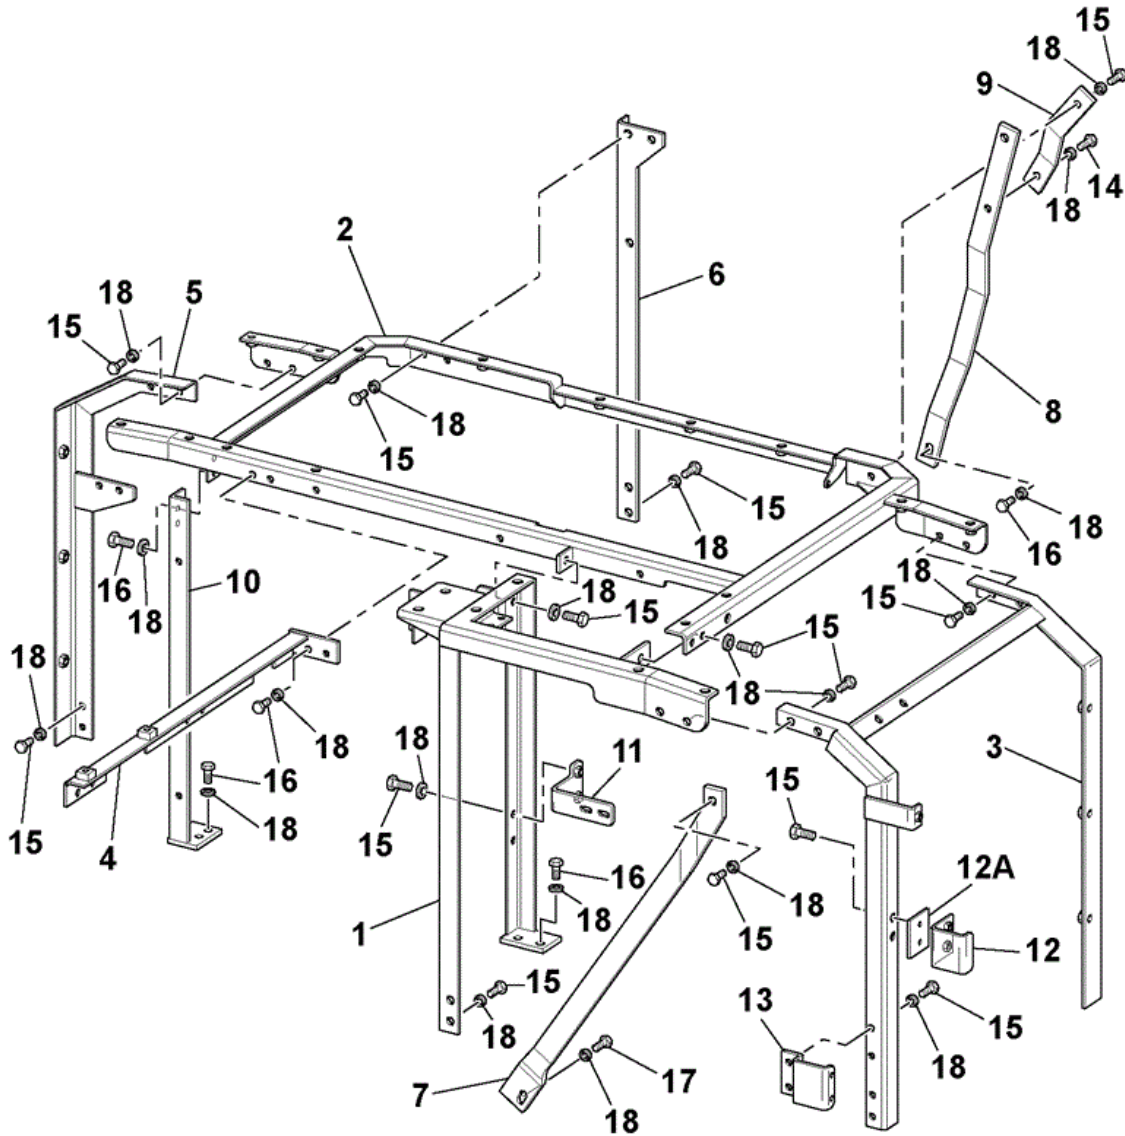


722340

Item	Part #	Change No	Description	Usage Code	QTY
1	335/07553		Frame Bodywork, cab rear		1
2	335/07552		Frame Bodywork, top centre		1
3	335/05187		Frame Bodywork,door support LH		1

4	331/34065		Frame Bodywork,upper tank		1
5	331/32577		Pillar Door mounting LH		1
6	331/33762		Frame Housing		1
7	331/41820		Stay radiator, front		1
8	331/34629		Stay Radiator,rear		1
9	331/34601		Bracket Radiator		1
10	331/34078		Frame Bodywork,tank side		1
11	331/39468		Bracket U bolt		1
12	331/35105		Bracket Door catch		1
12A	331/20637		Spacer <i>Use with item 12</i>		1
13	331/35115		Bracket Dovetail mounting		1
14	1316/0507D		Setscrew M12 x 25 grade 10.9		1
15	1316/0508D		Screw M12 X 30		30
16	1316/0509D		Screw M12x35 long		9
17	1316/0511D		Bolt M12 x 45		1
18	1411/0005D		Washer		41



9802/5620 B1-5-5 ENGINE COVERS

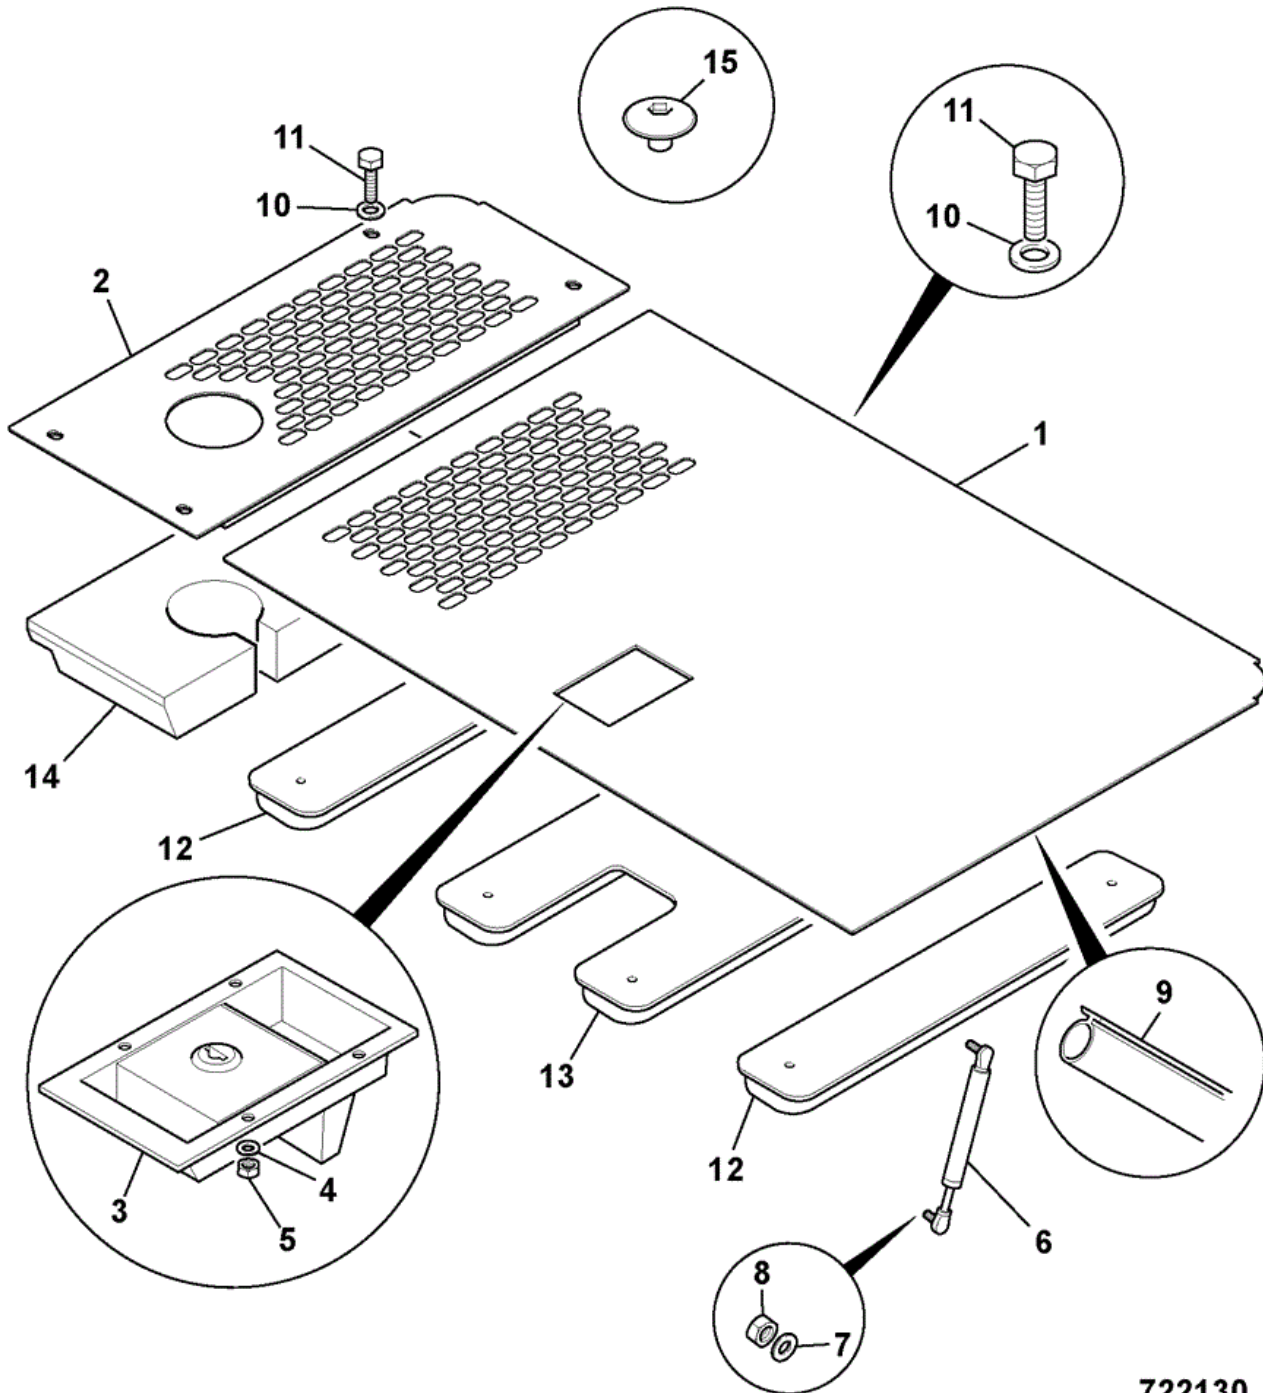


722130

Item	Part #	Change No	Description	Usage Code	QTY
1	335/05741	<M	Bonnet engine		1
1	335/07593	<M1179044	Bonnet engine		1
1	335/08718		Bonnet engine		1

2	335/05742	<M	Cover Engine fixed	1
2	331/44614		Cover engine fixed	1
3	826/11089		Latch paddle bonnet	1
4	1420/0005D		Washer (M5)	4
5	1370/0003Z		Lock Nut M5	4
6	331/34453		Strut gas bonnet	1
7	1420/0007D		Washer (M8)	2
8	1370/0201D		Nut Plain M8	2
9	904/20274		Seal <i>2.5m long</i>	1
10	1420/0009D		Washer (M12)	7
11	1316/0508D		Screw M12 X 30	7
12	331/42080	<M1179044	Panel soundproofing bonnet	2
13	331/42081	<M	Panel soundproofing bonnet	1
13	331/44191		Panel soundproofing	1
14	331/41897		Seal foam, bonnet	1
15	826/01308	<M1179044	Button Fastener	8
15	826/01308		Button Fastener	4



9802/5620 B1-5-10 DOORS, COWLING AND MOUNTINGS

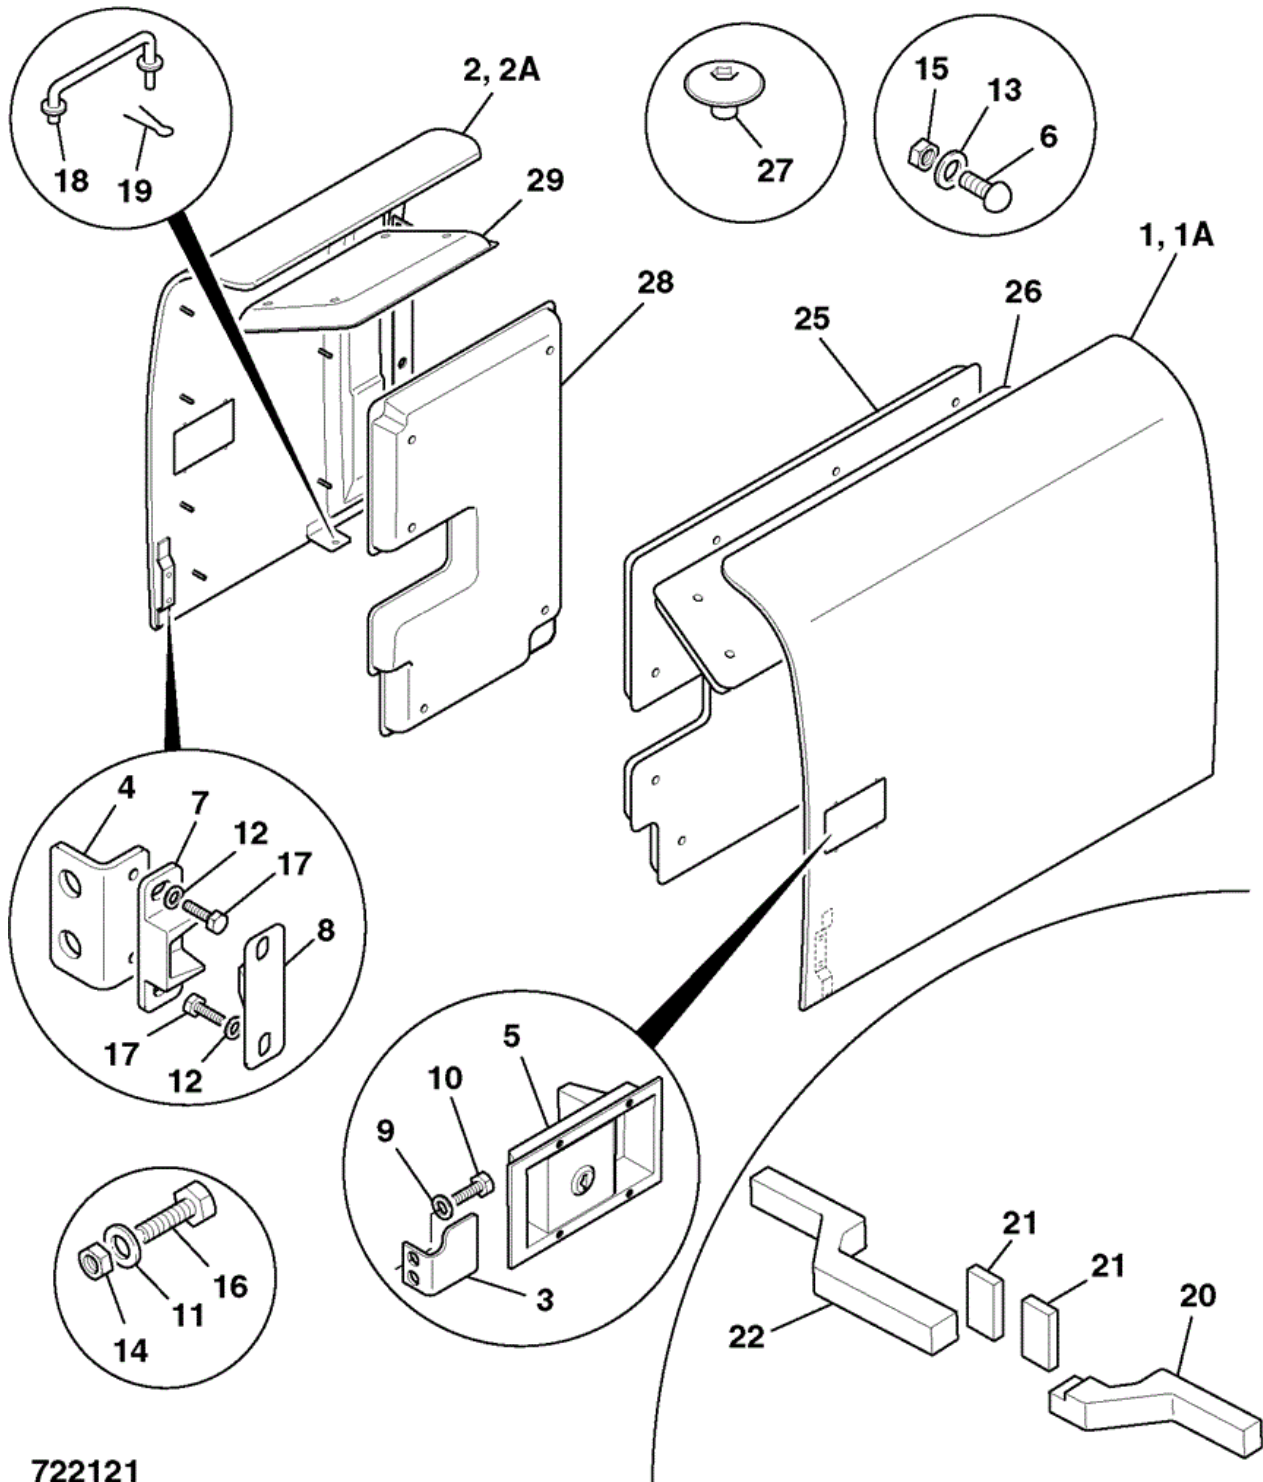


722121

Item	Part #	Change No	Description	Usage Code	QTY
1	215/11256	<M1179044	Door Assembly LH behind cab		1
1	335/08844		Door Assembly LH behind cab		1
1A	KRN1497		Hinge		2

2	215/11257	<M1179044	Door Assembly RH pump bay		1
2	335/08845		Door assembly RH pump bay		1
2A	KRN1497		Hinge		2
3	331/34370		Bracket Door Latch		1
4	331/34382		Bracket door buffer		1
5	826/11027		Latch Paddle		2
6	KHN1395		Stop Rubber		2
7	KRN0363		Bracket		2
8	KRN0364		Stop		2
9	1420/0009Z		Washer (M12)		6
10	1316/0508Z		Screw M12 x 30mm		6
11	1420/0008Z		Washer (M10)		4
12	1420/0006Z		Washer (M6)		8
13	1420/0005Z		Washer (M5)		8
14	1370/0301Z		Nut Plain, M10		2
15	1370/0001Z		Nut (M5)		8
16	1316/0405Z		Screw M10 X 20		4
17	1316/0203Z		Screw		8
18	KRN1482		Stay		2
19	KRJ1588		Pin		2
20	331/40104		Seal Foam		1
21	331/40494		Panel Soundproofing		1
22	331/40099		Seal Foam		1
25	331/42076		Panel soundproofing LH		1
26	331/42077	<M1179044	Panel soundproofing top LH		1
27	826/01308	<M1179044	Button Fastener		27
27	826/01308		Button Fastener		17
28	331/42078		Panel soundproofing RH		1
29	331/42079	<M1179044	Panel soundproofing top RH		1



9802/5620 B1-5-15 TREAD PLATES

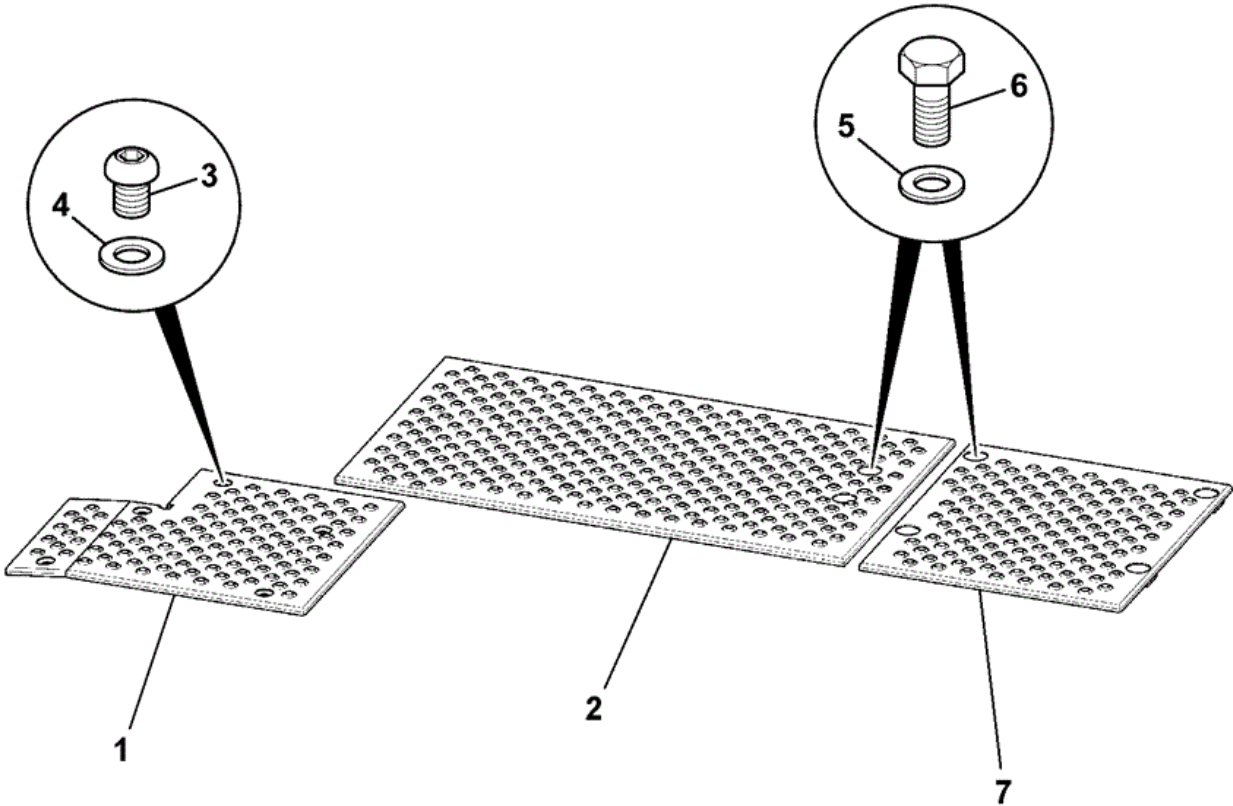


735600

Item	Part #	Change No	Description	Usage Code	QTY
1	335/05914		Plate Tread <i>Tank</i>		1
2	335/07084		Plate Tread		1

			<i>Centre</i>		
3	331/35440		Screw button head		5
4	1420/0008Z		Washer (M10)		5
5	1420/0009Z		Washer (M12)		6
6	1316/0507Z		Screw		6
7	335/07113		Plate Tread <i>Cab rear</i>		1



9802/5620 B1-5-20 GRILLES ENGINE COWLING

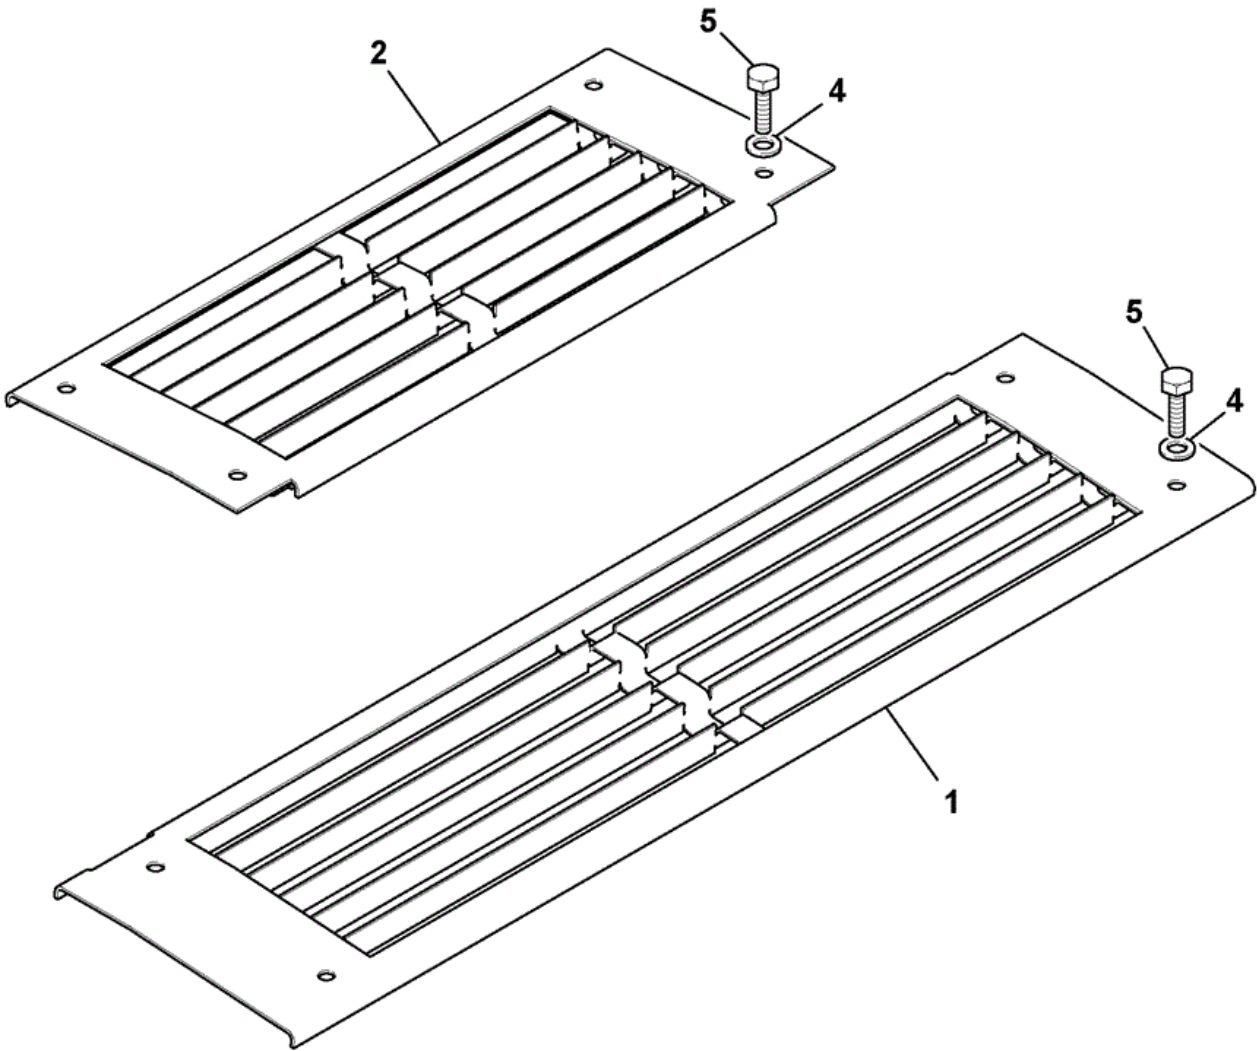


722080

Item	Part #	Change No	Description	Usage Code	QTY
1	335/07494		Grille left hand		1
2	335/07495		Grille right hand		1
			Washer (M12)		

4	1420/0009Z		<i>For item 5</i>		8
5	1316/0508Z		Screw M12 x 30mm <i>Secures items 1 & 2</i>		8



9802/5620 B1-5-30 COWLINGS, TOOLBOX & HANDRAIL

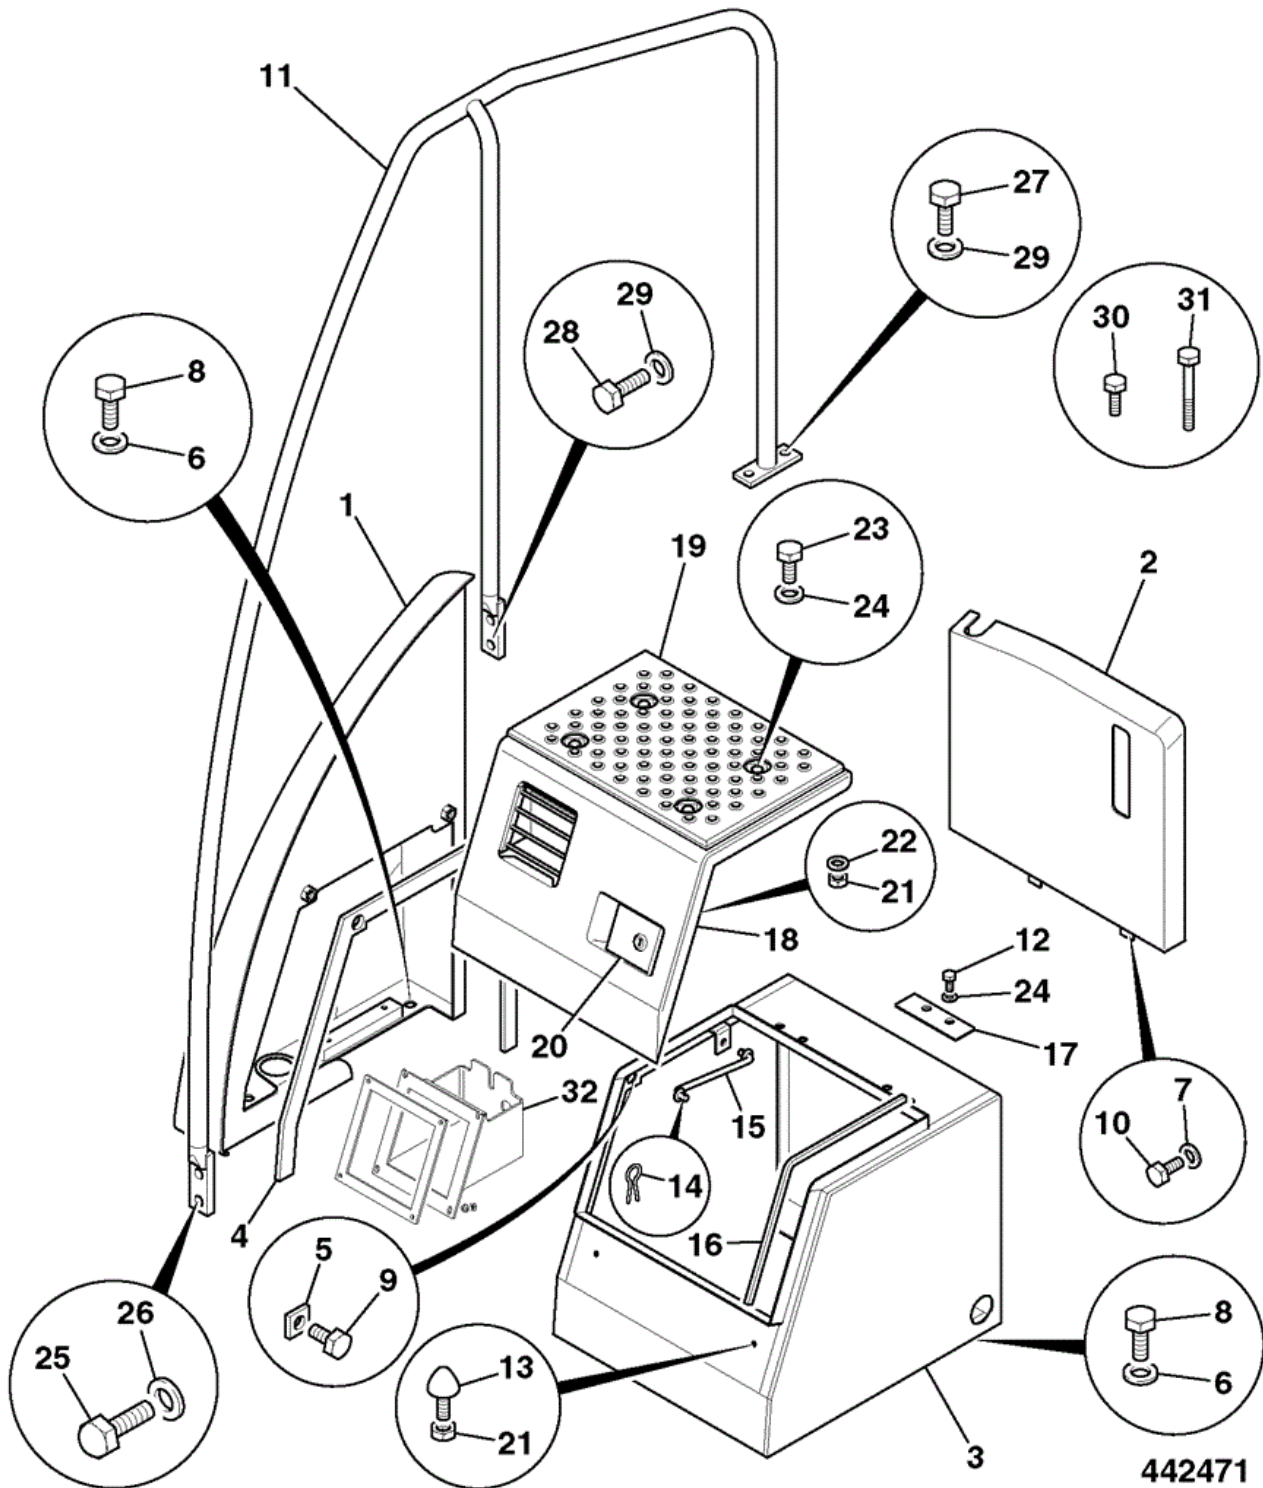

Item	Part #	Change No	Description	Usage Code	QTY
1	335/08133		Box tool side		1
2	335/12628		Cover Tank		1
3	335/07155		Box tool base		1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.
You can download the most
perfect and complete manual in
the world immediately.

Our support email:
ebooklibonline@outlook.com