




9822/0325 J110-5-1 UNDERCARRIAGE LOWER FRAME
STANDARD JS130LC

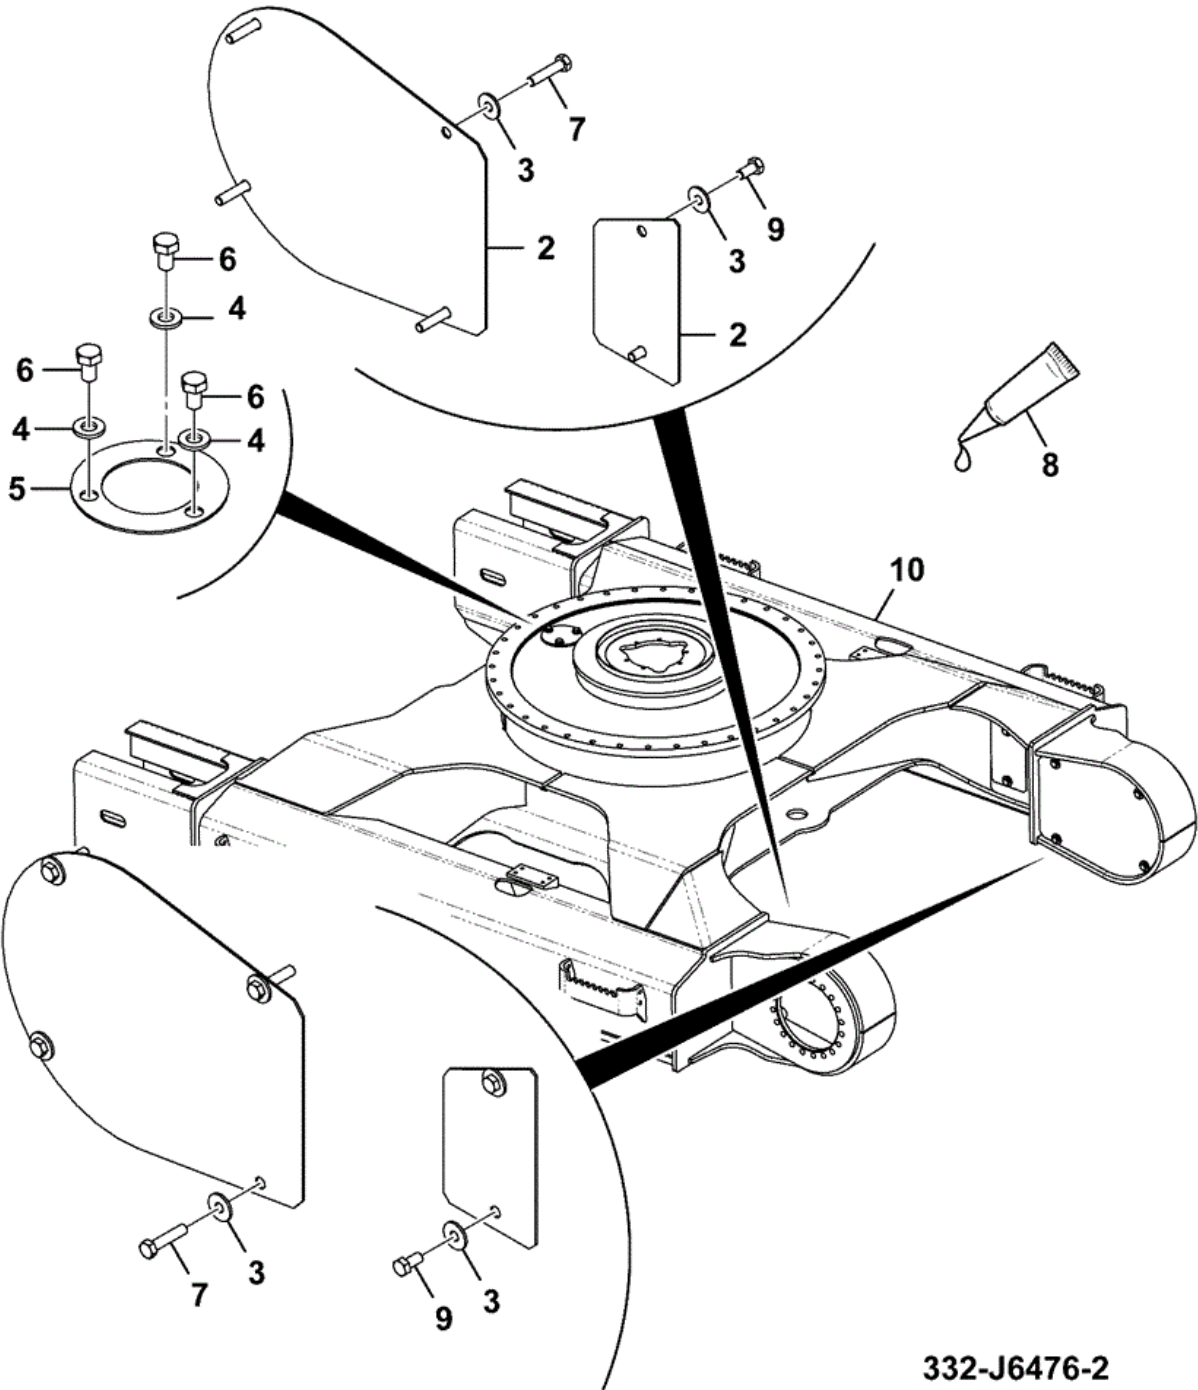


332-J6476-2

Item	Part #	Change No	Description	Usage Code	QTY
2	****		Covers lower frame assembly		1

3	JHP0049		Washer		12
4	JHP0042		Washer M12		3
5	KRB0682		Packing Cork		1
6	1316/0505D		Bolt M12 x 20mm		3
7	1316/3513D		Bolt		8
8	4101/0500		Fluid Locking Loctite 262		0
9	1316/0507D		Setscrew M12 x 25 grade 10.9		4
10	332/K2944		Undercarriage WA--JS130L Standard		1



9822/0325 J110-10-1 UNDERCARRIAGE ROTATING CENTER
JOINT ASSEMBLY

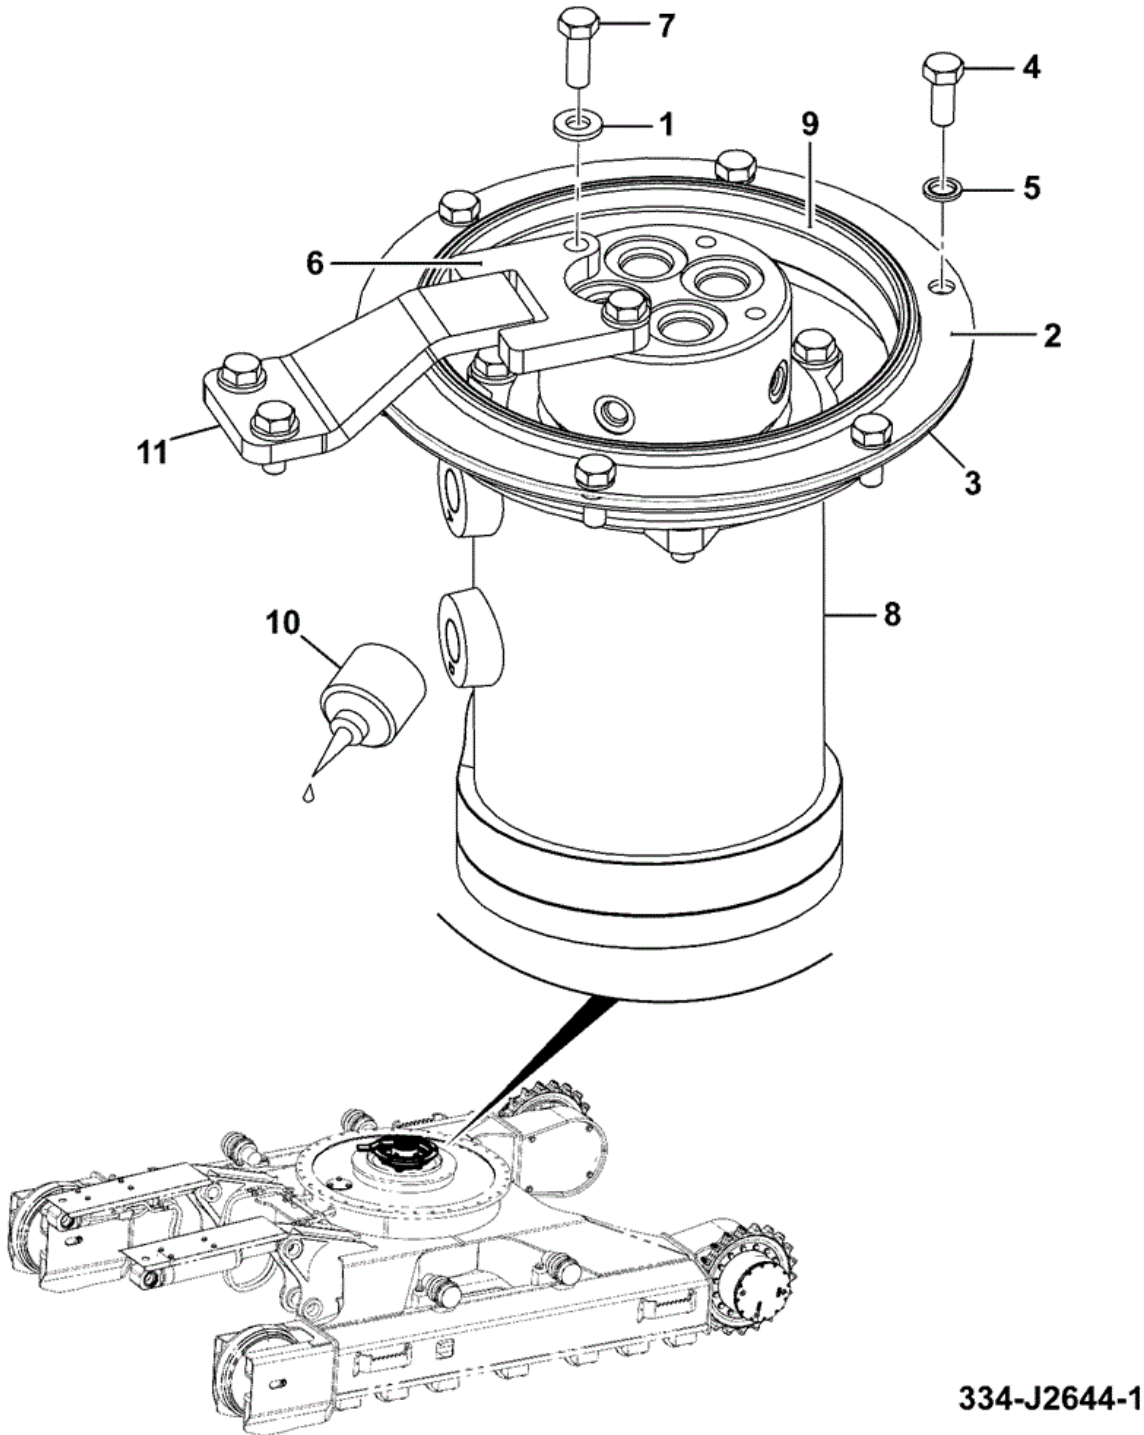


334-J2644-1

Item	Part #	Change No	Description	Usage Code	QTY
1	JHP0042		Washer M12		7

2	KRA0999		Retainer Seal		1
3	KRA1000		Packing Rubber		1
4	1316/0508D		Screw M12 X 30		11
5	1406/0011		Washer Bonded (1/4")		6
6	334/J3148		Bracket Stop, Rotory Joint		1
7	1316/0509D		Screw M12x35 long		2
8	45/920115		Coupling rotary		1
9	904/20126		Ring Seal		1
10	****		Fluid Locking		0
11	334/J3112		Bracket Restraint, Rotory Joint		1



9822/0325 J110-15-1 UNDERCARRIAGE ASSEMBLY CENTRE
JOINT, TRACK DOZER

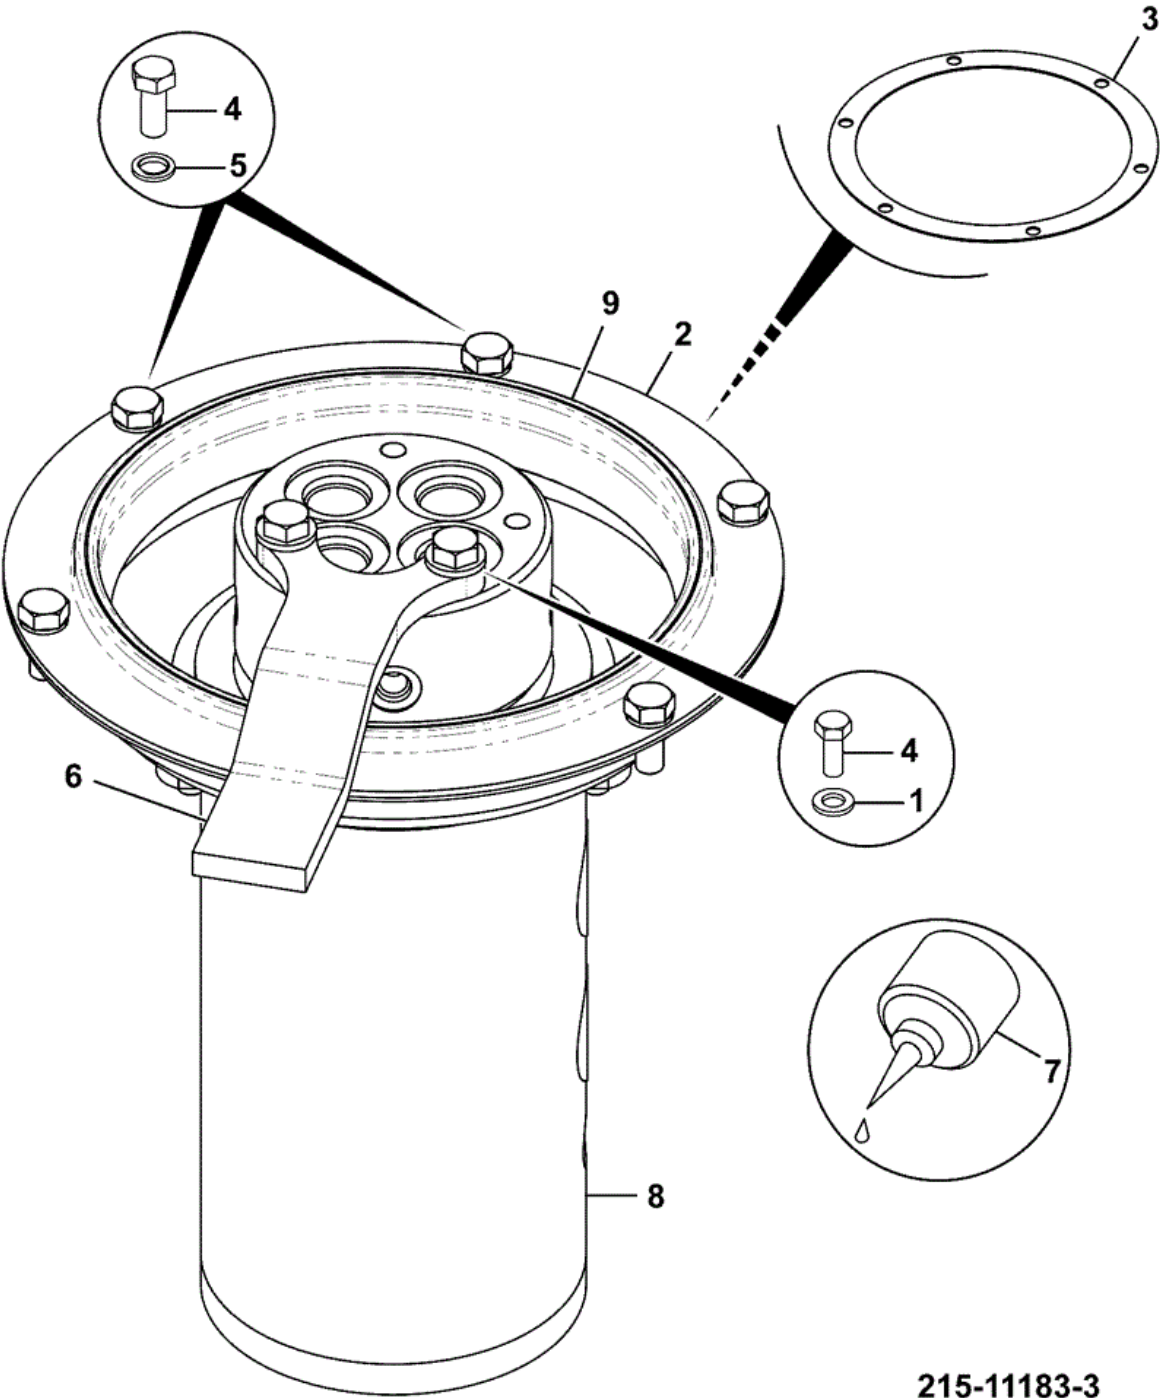


215-11183-3

Item	Part #	Change No	Description	Usage Code	QTY
1	JHP0042		Washer M12		5

2	KRA0999		Retainer Seal		1
3	KRA1000		Packing Rubber		1
4	1316/0508D		Screw M12 X 30		11
5	1406/0011		Washer Bonded (1/4")		6
6	331/14076		Bracket stop		1
7	4101/0500		Fluid Locking Loctite 262		1
8	45/920062		Coupling Rotary 8 Port		1
9	904/20126		Ring Seal		1



9822/0325 J110-30-1 UNDERCARRIAGE ASSEMBLY CENTRE JOINT, STANDARD

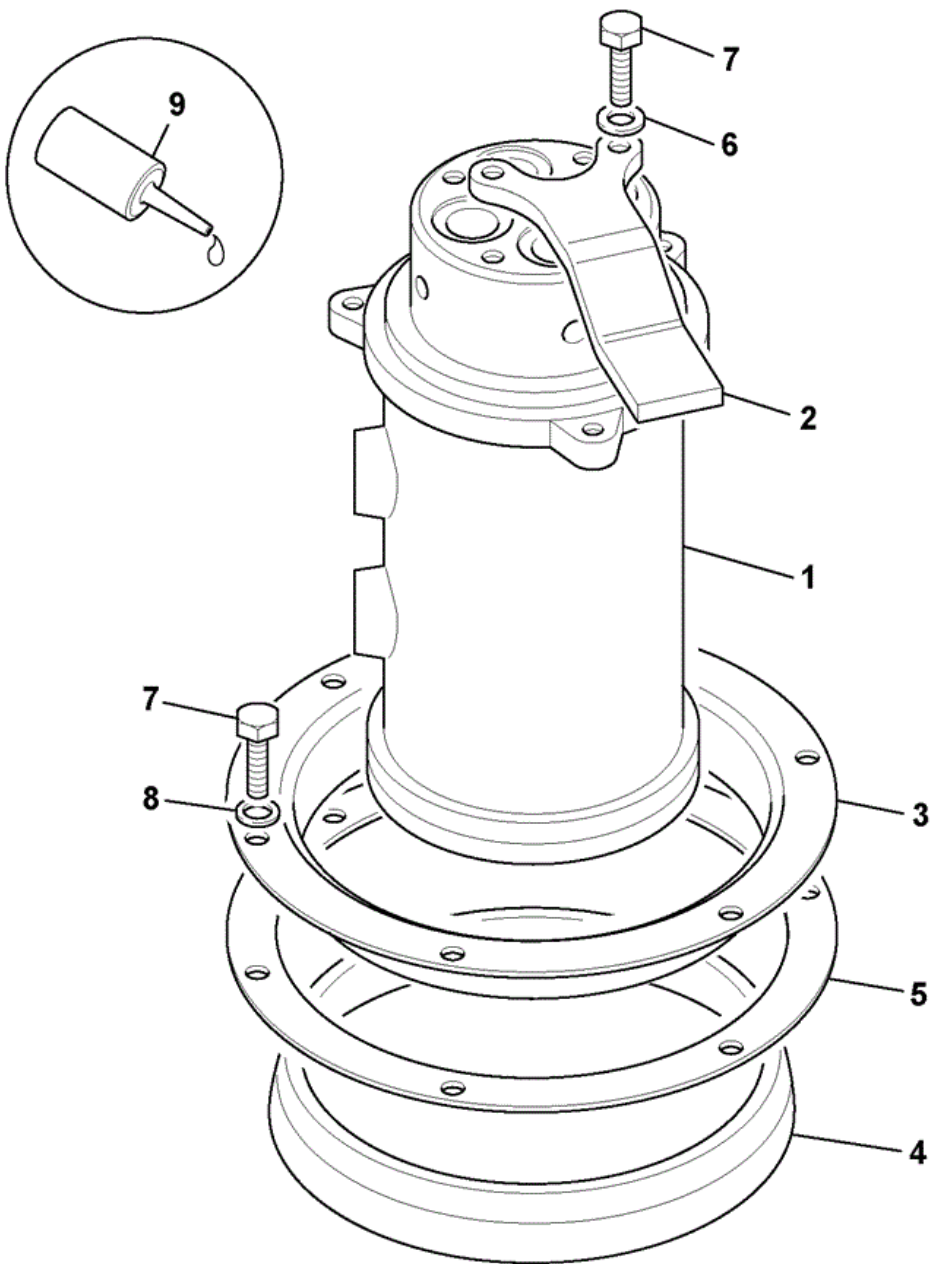


940300

Item	Part #	Change No	Description	Usage Code	QTY
1	45/920115		Coupling rotary		1

2	331/14076		Bracket stop		1
3	KRA0999		Retainer Seal		1
4	904/20126		Ring Seal		1
5	KRA1000		Packing Rubber		1
6	JHP0042		Washer M12		5
7	1316/0508D		Screw M12 X 30		11
8	1406/0011		Washer Bonded (1/4")		6
9	4101/0500		Fluid Locking Loctite 262		0



9822/0325 J110-50-1 UNDERCARRIAGE LOWER FRAME DOZER

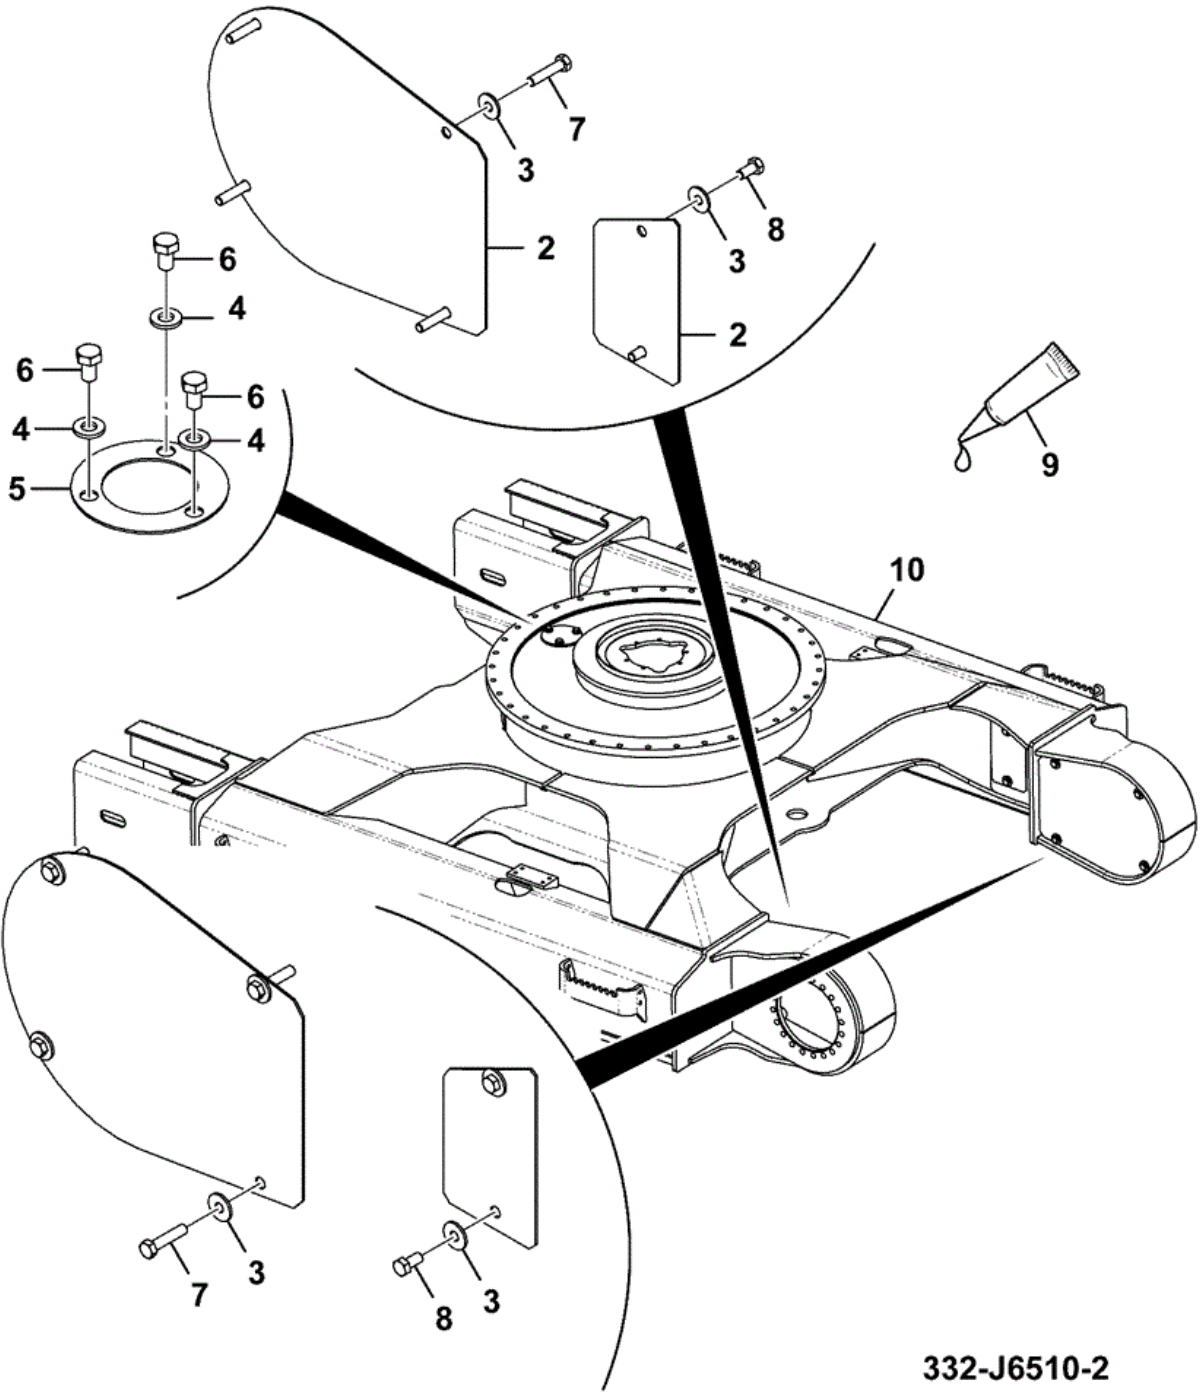


332-J6510-2

Item	Part #	Change No	Description	Usage Code	QTY
2	****		Covers lower frame assembly		1

3	JHP0049		Washer		12
4	JHP0042		Washer M12		3
5	KRB0682		Packing Cork		1
6	1316/0505D		Bolt M12 x 20mm		3
7	1316/3513D		Bolt		8
8	1316/0507D		Setscrew M12 x 25 grade 10.9		4
9	4101/0500		Fluid Locking Loctite 262		0
10	332/K2942		Undercarriage WA-JS130 Dozer		1



9822/0325 J120-10-1 RECOIL AND IDLER ASSEMBLY FRONT

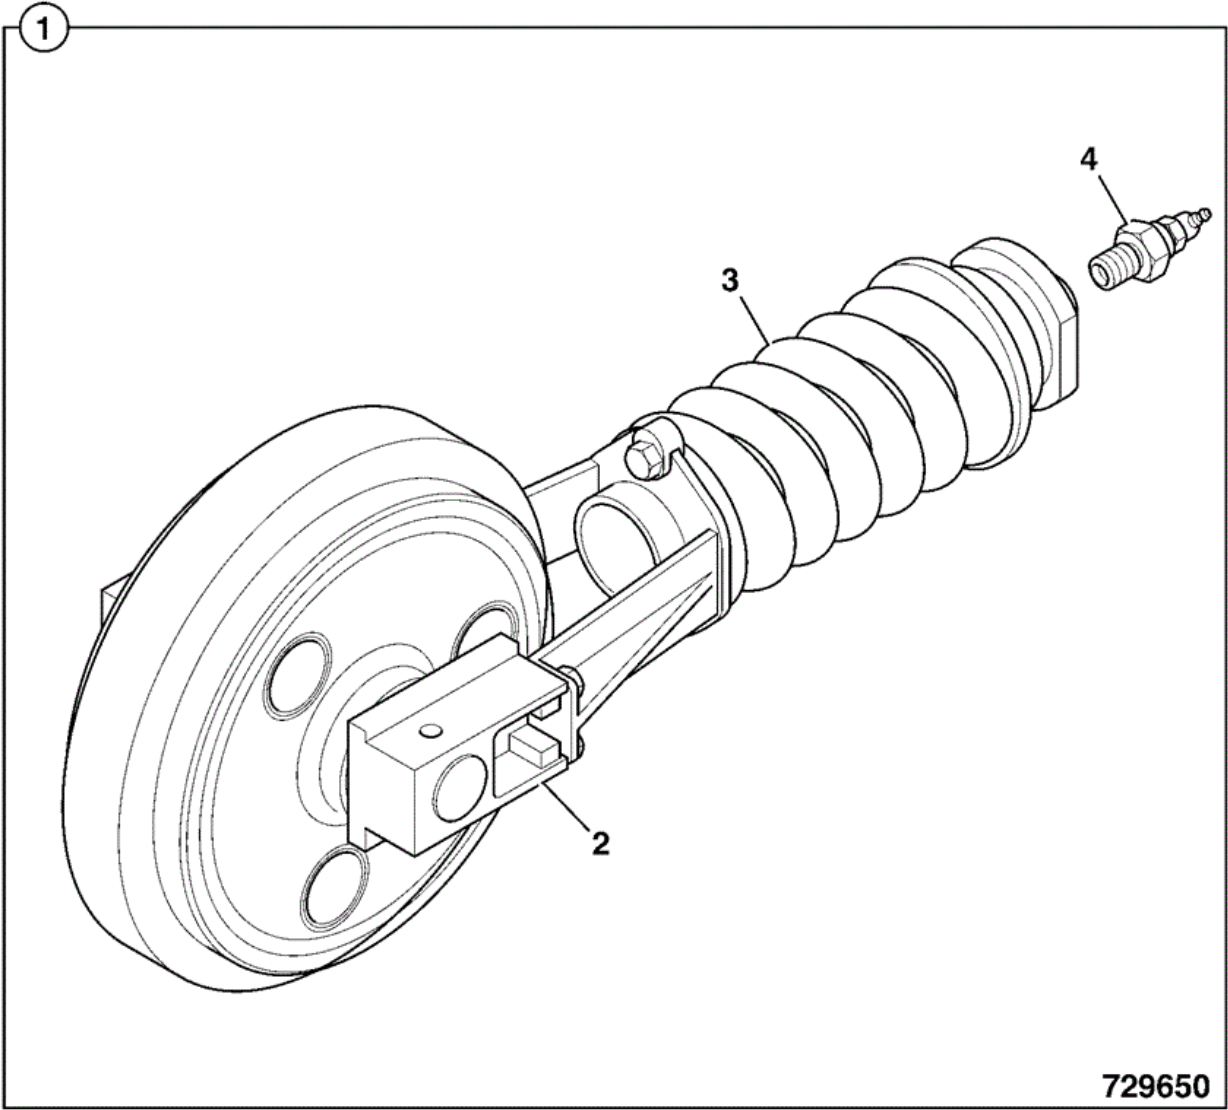


Item	Part #	Change No	Description	Usage Code	QTY
1	331/57970		Spring recoil & tensioner c/w idler assembly		2

2	:332/F3460		Wheel Idler and Yoke		1
3	:50/100192		Spring recoil assembly		1
4	:331/38160		Valve grease		1



9822/0325 J120-15-1 RECOIL AND IDLER ASSEMBLY
FRONT

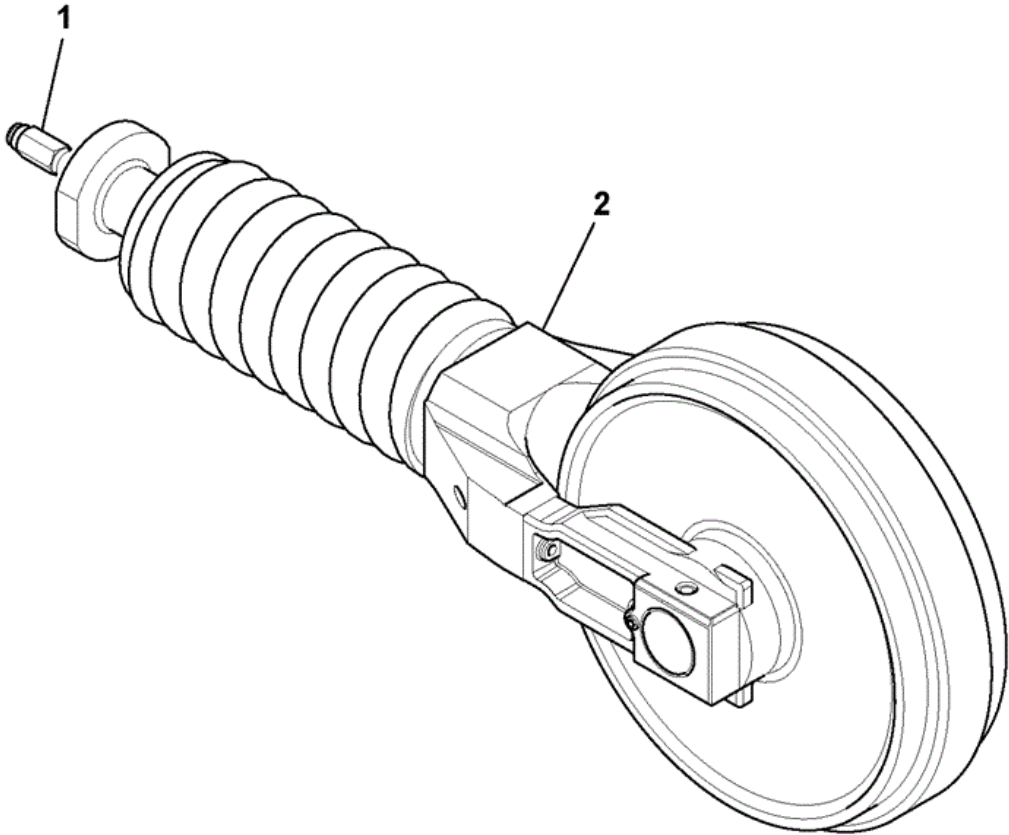

940330

Item	Part #	Change No	Description	Usage Code	QTY
1	50/100222		Nipple bleed		2

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.
You can download the most
perfect and complete manual in
the world immediately.

Our support email:
ebooklibonline@outlook.com