




9822/0495 J110-15-2 UNDERCARRIAGE FRONT DOZER

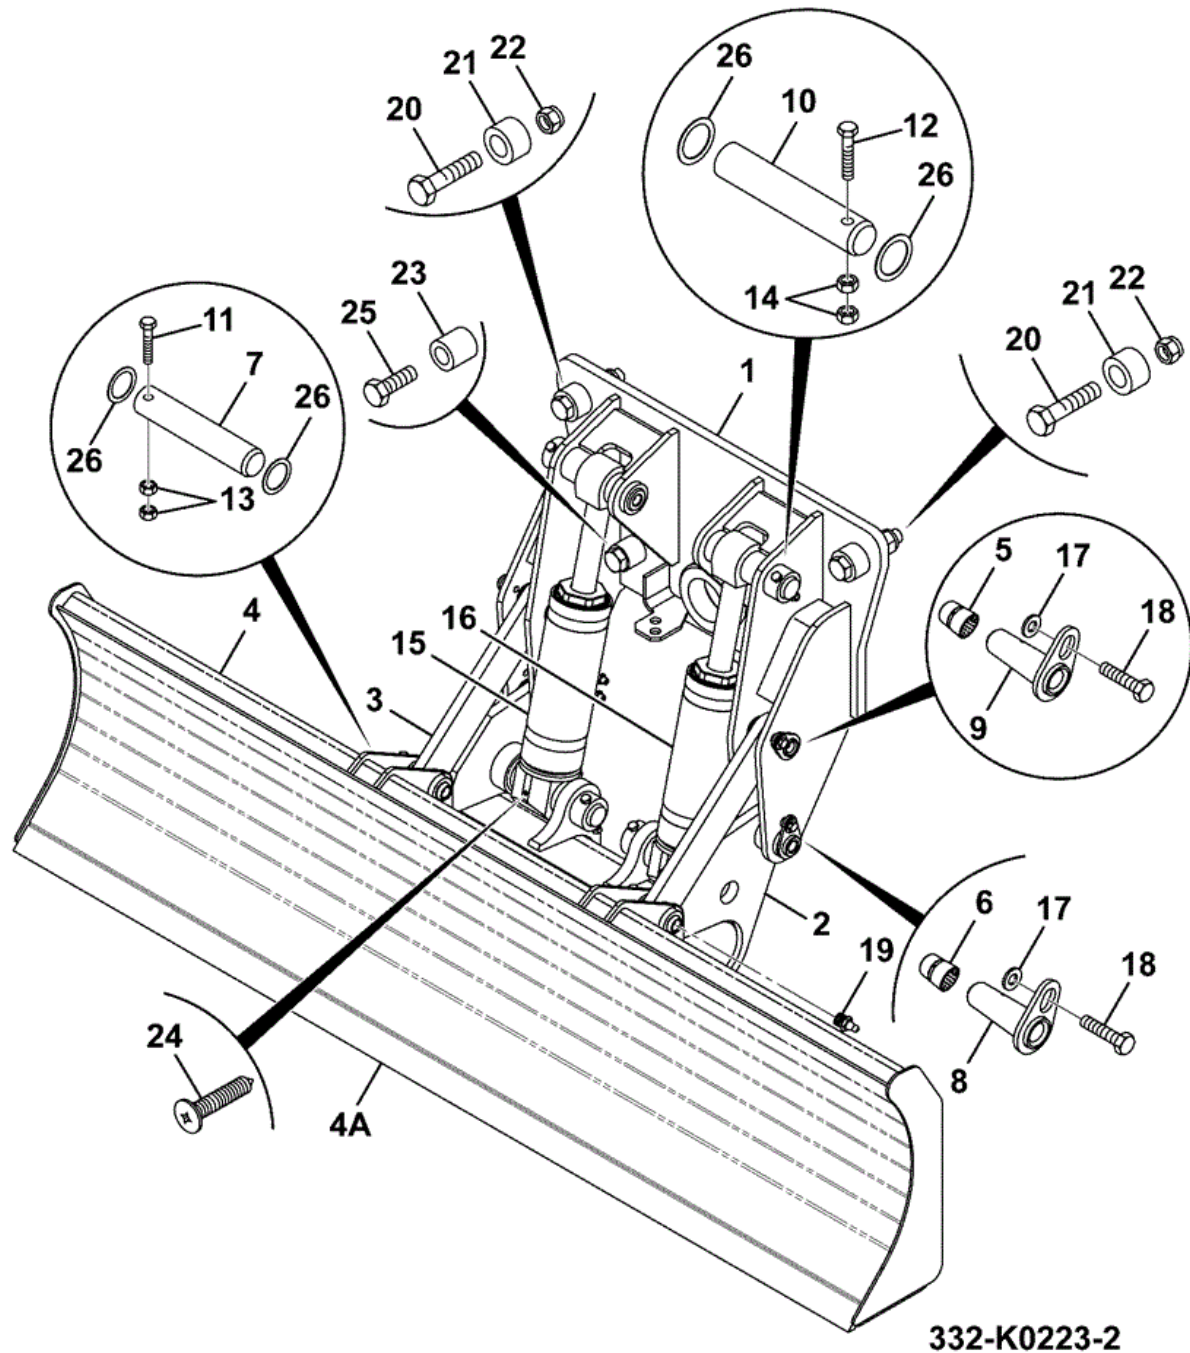


Item	Part #	Change No	Description	Usage Code	QTY
1	333/J8837		Mounting Frame		1
2	335/04279		Link lower dozer blade, wheeled		1
3	335/04276		Link upper dozer blade, wheeled		2

4	332/K0206		Blade dozer		1
5	831/10296		Bearing		6
6	831/10002		Bush		2
7	JLV1596		Pin pivot		4
8	332/K6746		Pin pivot		2
9	332/K6753		Pin pivot		2
10	JLV1627		Pin pivot		4
11	1316/3416D		Bolt		4
12	1316/3520D		Bolt		4
13	1371/0301D		Nut High Strength		8
14	1371/0401D		Nut M12		8
15	561/60228		Ram Dozer LH		1
16	561/60227		Ram Dozer RH		1
17	332/K6190		Spacer		4
18	1316/0508D		Screw M12 X 30		4
19	1450/0001		Nipple Grease, Straight 1/8 BSP		12
20	1316/4126D		Bolt M30 X 3 X 160		2
21	331/14841		Bush tube bushing		2
22	1371/1003D		Nut		4
23	829/30460		Spacer extension tube		2
24	816/80027		Plug		2
25	1316/4130D		Bolt M30 x 200mm		2
26	823/10228		Shim 1.5mm		0



9822/0495 J110-20-1 UNDERCARRIAGE DOZER ASSEMBLY

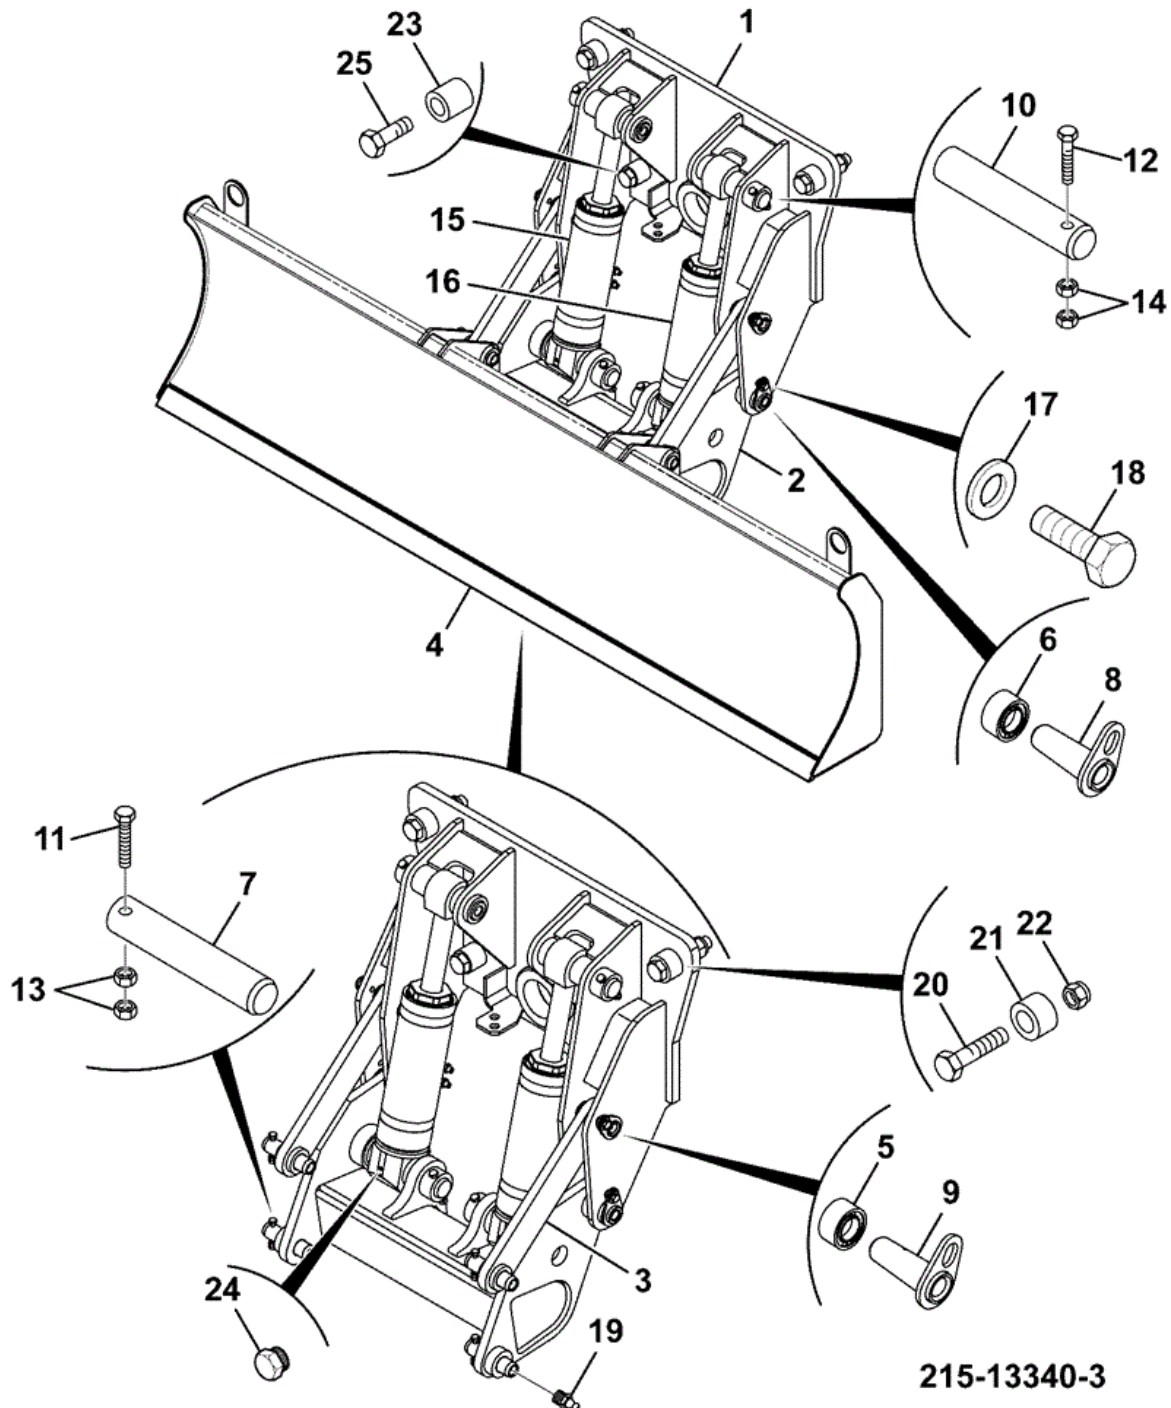


Item	Part #	Change No	Description	Usage Code	QTY
1	335/04291		Bracket dozer mounting		1
2	335/04279		Link lower dozer blade, wheeled		1
3	335/04276		Link upper dozer blade, wheeled		2

4	335/11317		Blade dozer		1
5	831/10296		Bearing		6
6	831/10002		Bush		2
7	JLV1596		Pin pivot		4
8	332/J2784		Pivot Pin		2
9	332/J2789		Pivot Pin		2
10	JLV1627		Pin pivot		4
11	1316/3416D		Bolt		4
12	1316/3520D		Bolt		4
13	1371/0301D		Nut High Strength		8
14	1371/0401D		Nut M12		8
15	561/60227		Ram Dozer RH		1
16	561/60228		Ram Dozer LH		1
17	1420/0009D		Washer (M12)		8
18	1316/0508D		Screw M12 X 30		4
19	1450/0001		Nipple Grease, Straight 1/8 BSP		12
20	1316/4126		Bolt		2
21	331/14841		Bush tube bushing		2
22	1371/1003Z		Nut locking		4
23	829/30460		Spacer extension tube		2
24	816/80027		Plug		2
25	1316/4130		Bolt M30 x 200lg		2



9822/0495 J110-25-1 UNDERCARRIAGE ROTARY COUPLING TRAILER ELECTRICS, 12 WAY

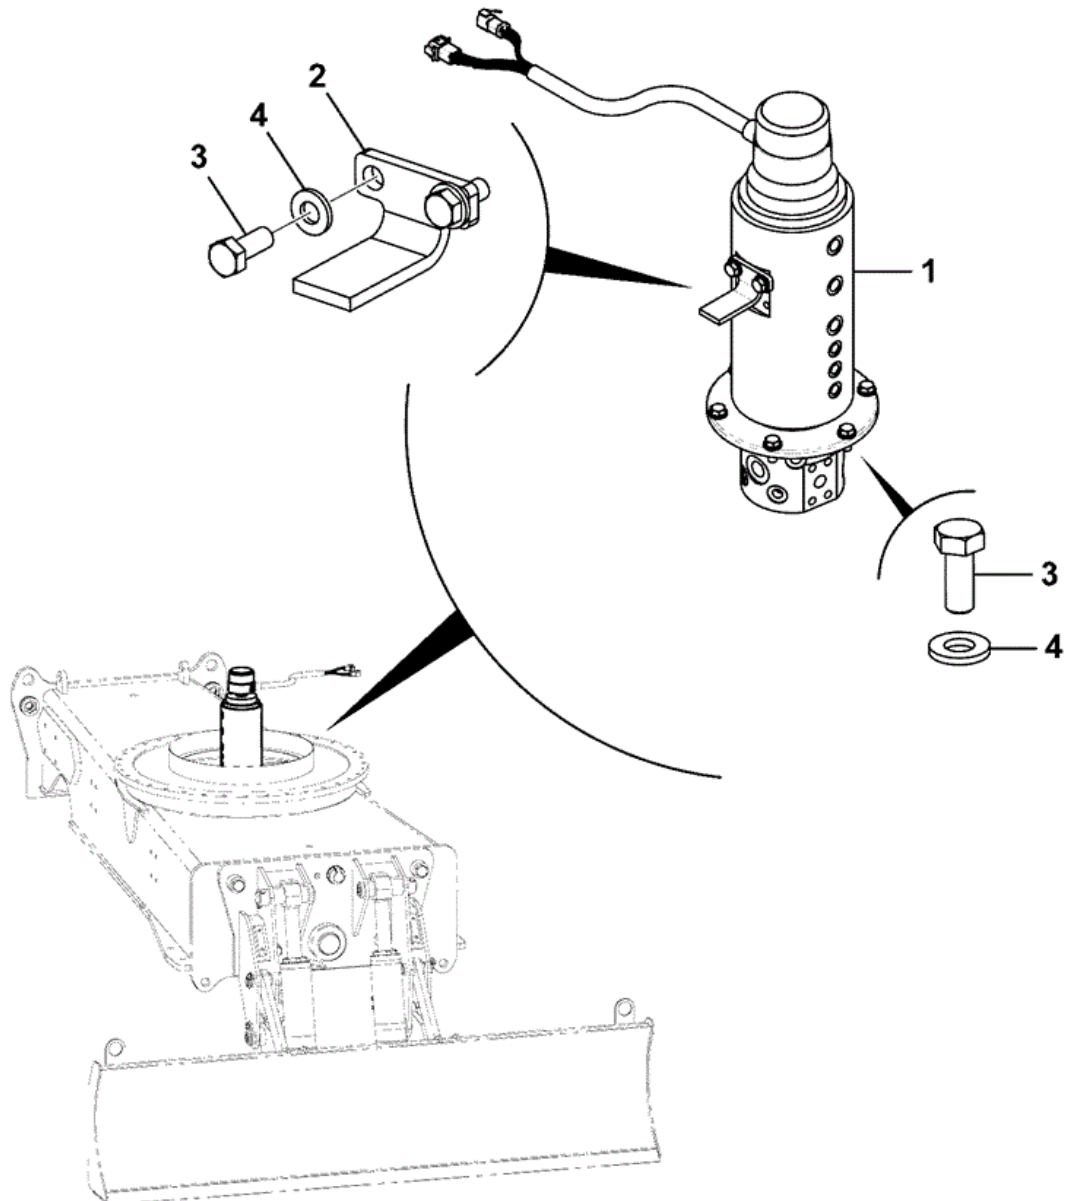


333-J9806-1

Item	Part #	Change No	Description	Usage Code	QTY
1	333/J8032		Coupling rotary 12 way electrics)		1

2	332/K4648		Bracket anti rotation		1
3	1316/0508D		Screw M12 X 30		8
4	JHP0042		Washer M12		8



9822/0495 J110-30-1 UNDERCARRIAGE ROTARY COUPLING 7 WAY

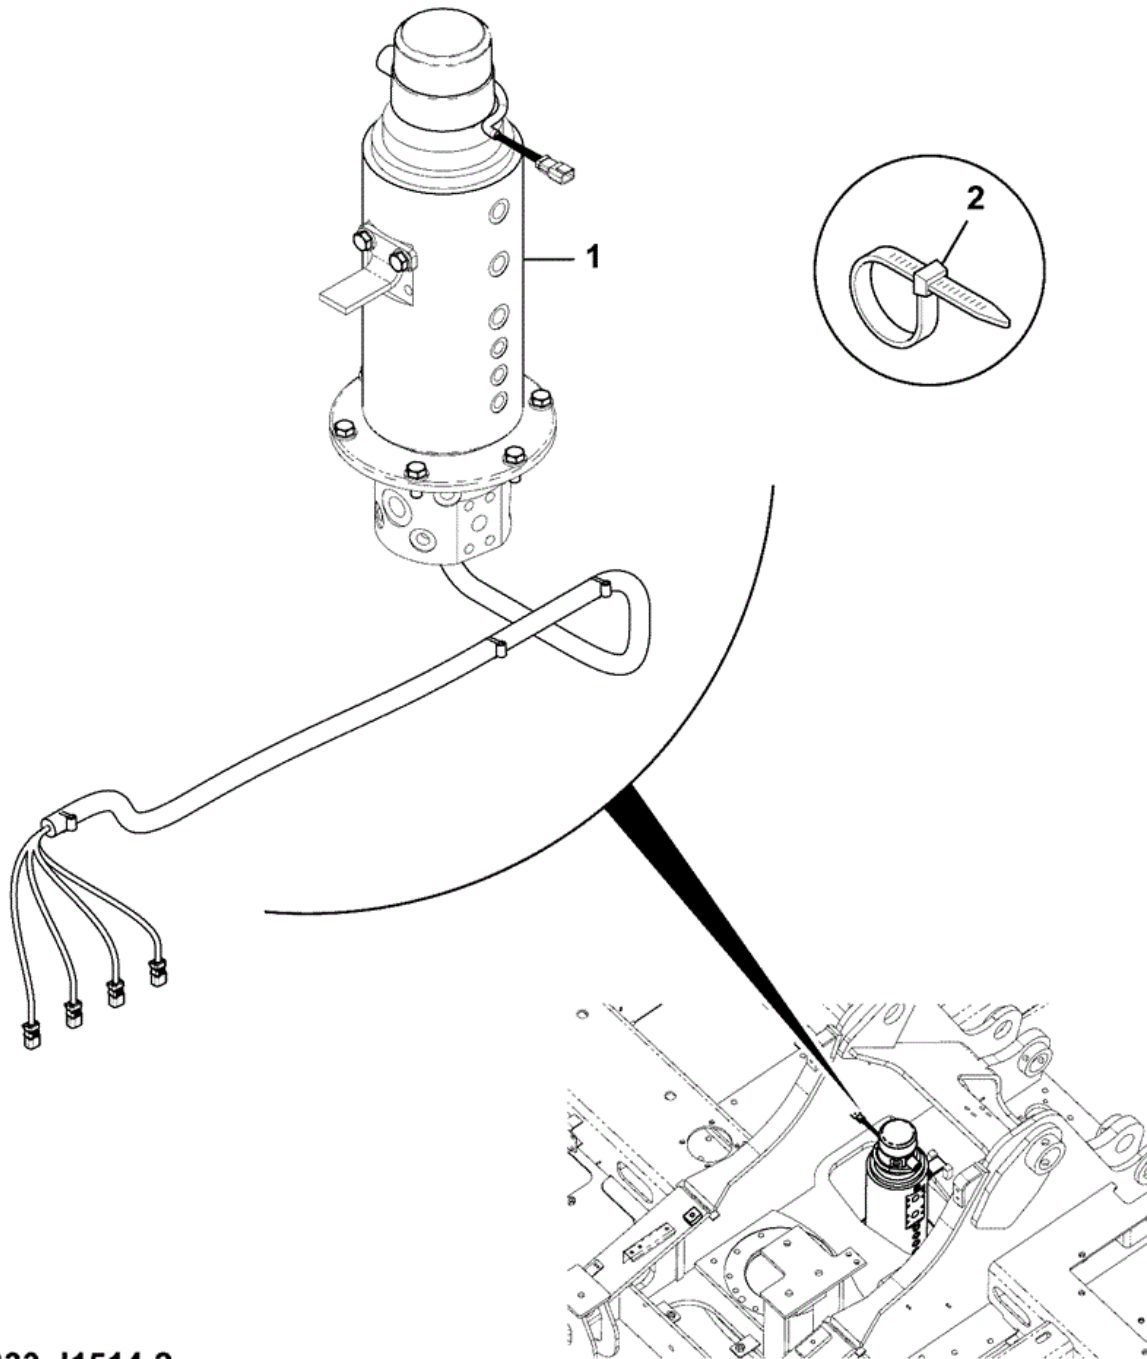


333-J1514-2

Item	Part #	Change No	Description	Usage Code	QTY
1	****		Coupling Rotary, 7W Assembly		1

2	826/01347	Tie Cable 160mm	7
---	-----------	-----------------	---



9822/0495 J110-35-1 UNDERCARRIAGE ROTARY COUPLING TRAILER ELECTRICS, NO REAR EQUIPMENT, 12 WAY ELECTRICS

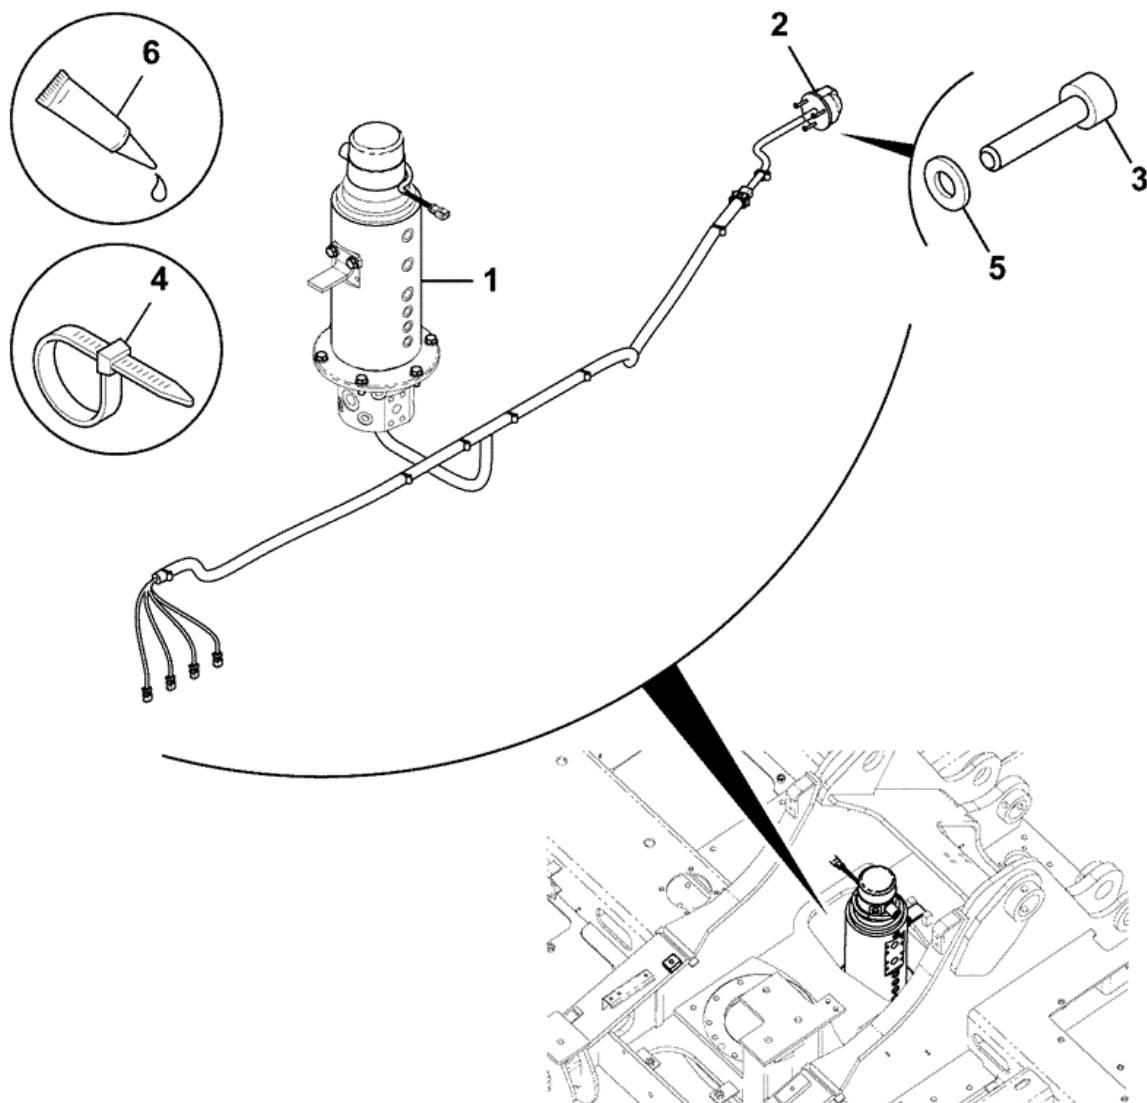


333-J1350-2

Item	Part #	Change No	Description	Usage Code	QTY
1	****		Coupling Rotary, 12W, Assembly		1

2	333/K6390		Socket Harness, Trailer		1
3	1391/3109D		Capscrew		3
4	826/01347		Tie Cable 160mm		7
5	1420/0005D		Washer (M5)		3
6	4003/0700		Lubricant Petroleum Jelly		0

JCB 9822/0495 J110-40-1 UNDERCARRIAGE ROTARY COUPLING TRAILER ELECTRICS, REAR DOZER, 12-WAY ELECTRICS

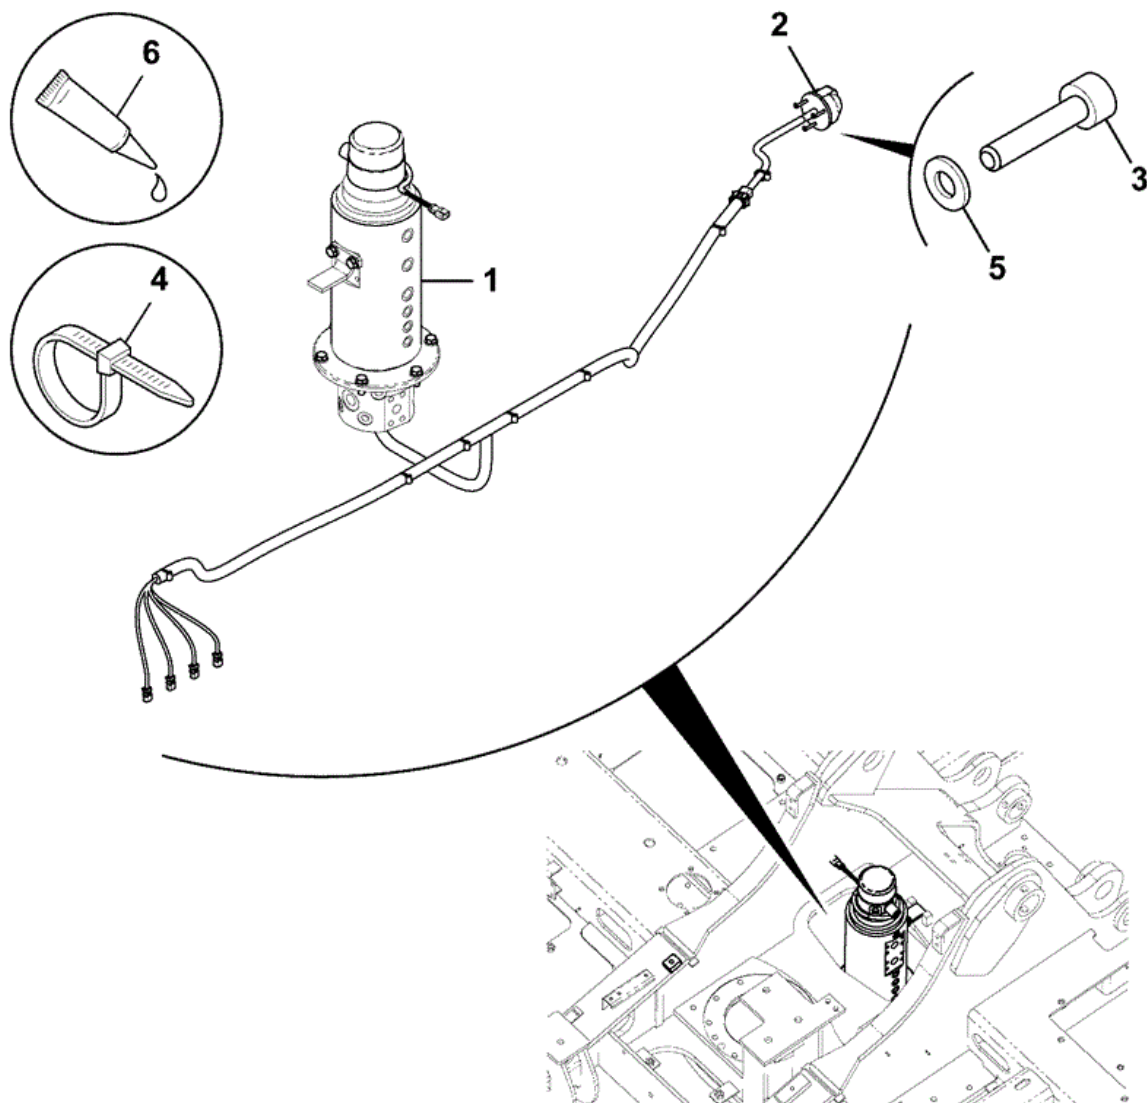


333-J1350-2

Item	Part #	Change No	Description	Usage Code	QTY
1	****		Coupling Rotary, 12W, Assembly		1

2	333/K6390		Socket Harness, Trailer		1
3	1391/3109D		Capscrew		3
4	826/01347		Tie Cable 160mm		7
5	1420/0005D		Washer (M5)		3
6	4003/0700		Lubricant Petroleum Jelly		0



9822/0495 J110-45-1 UNDERCARRIAGE ROTARY COUPLING TRAILER ELECTRICS, REAR STABILISER, 12 WAY ELECTRICS

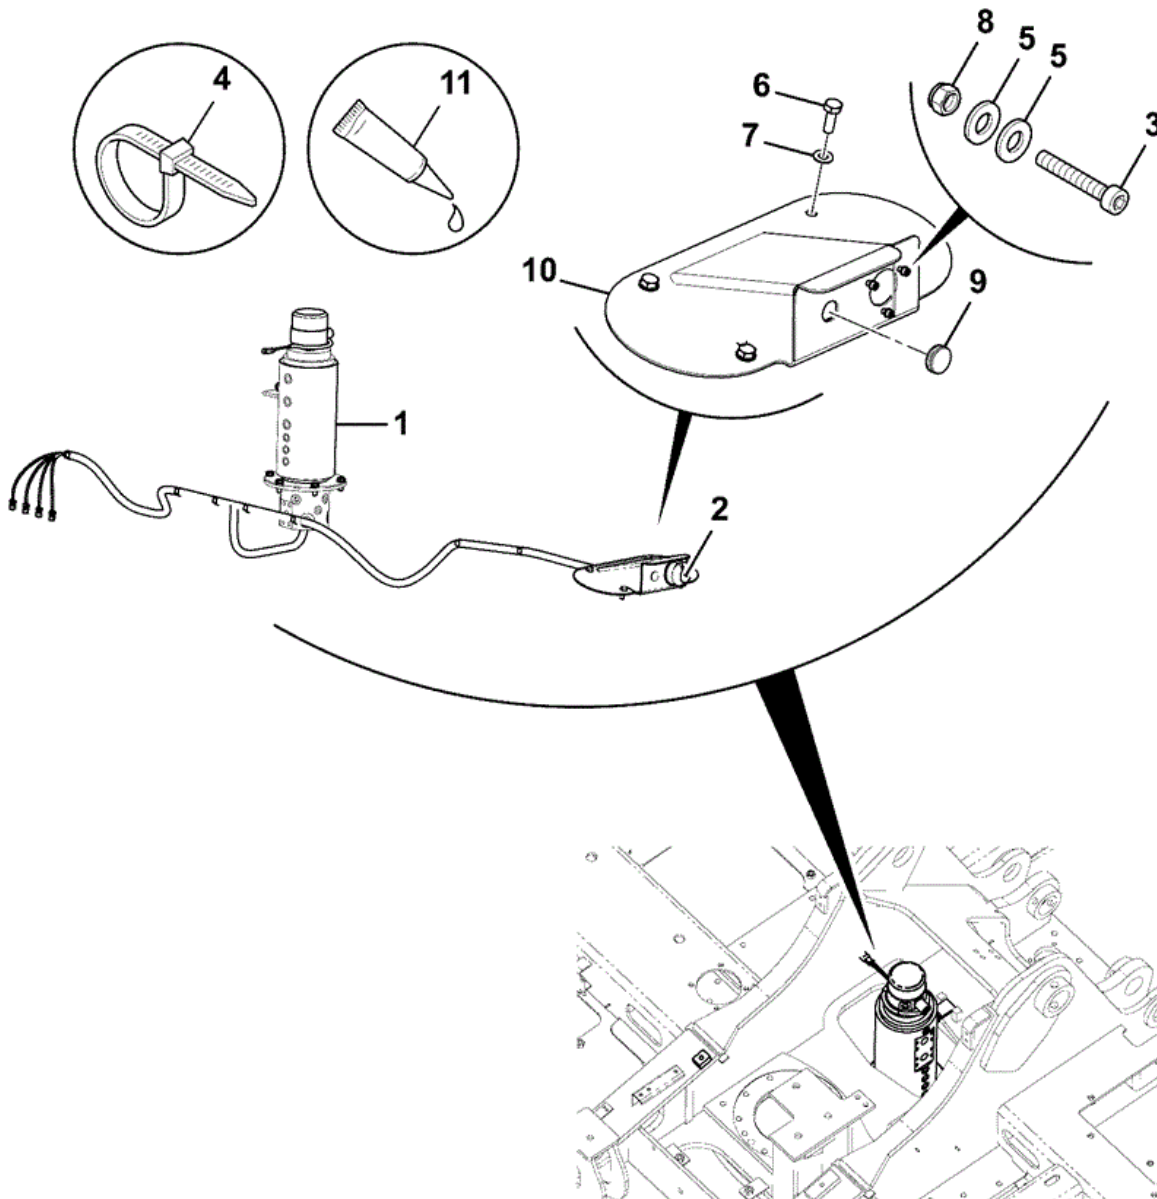


333-J1503-2

Item	Part #	Change No	Description	Usage Code	QTY
1	****		Coupling Rotary, 12W, Assembly		1

2	333/K6390		Socket Harness, Trailer		1
3	1391/3109D		Capscrew		3
4	826/01347		Tie Cable 160mm		7
5	1420/0005D		Washer (M5)		6
6	1316/0408D		Setscrew		4
7	1420/0008D		Washer (M10)		4
8	1370/0003D		Nut Lock M5		3
9	2410/1110		Grommet Blind, 11.9mm x 3.5 mm		1
10	335/C2841		Cover Stabs Counterweight Electrics		1
11	4003/0700		Lubricant Petroleum Jelly		0



9822/0495 J110-50-1 UNDERCARRIAGE ROTARY COUPLING 7 WAY

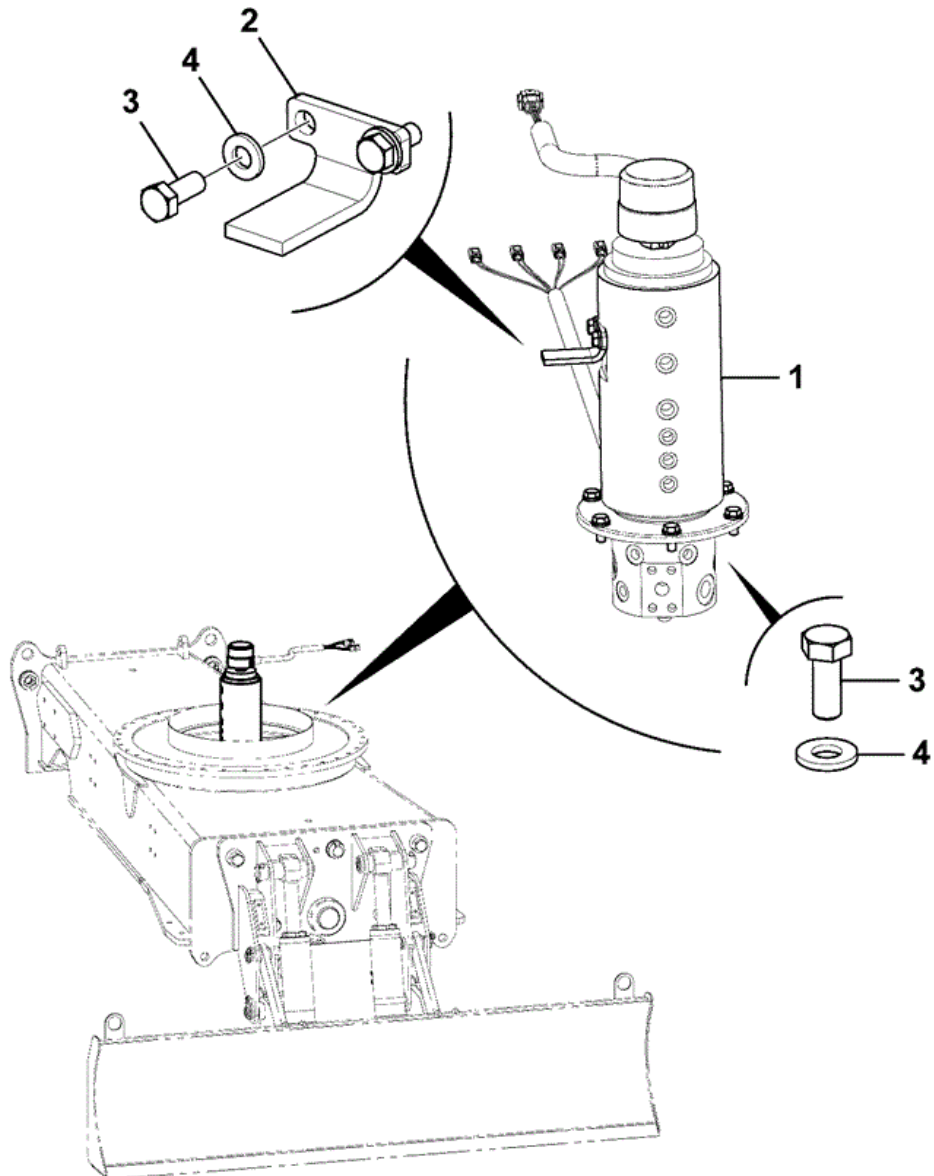


333-J1243-2

Item	Part #	Change No	Description	Usage Code	QTY
1	333/K6731		Coupling Rotary, 7W		1

2	332/K4648		Bracket anti rotation		1
3	1316/0508D		Screw M12 X 30		8
4	JHP0042		Washer M12		8



9822/0495 J110-55-1 UNDERCARRIAGE ROTARY COUPLING 12 WAY

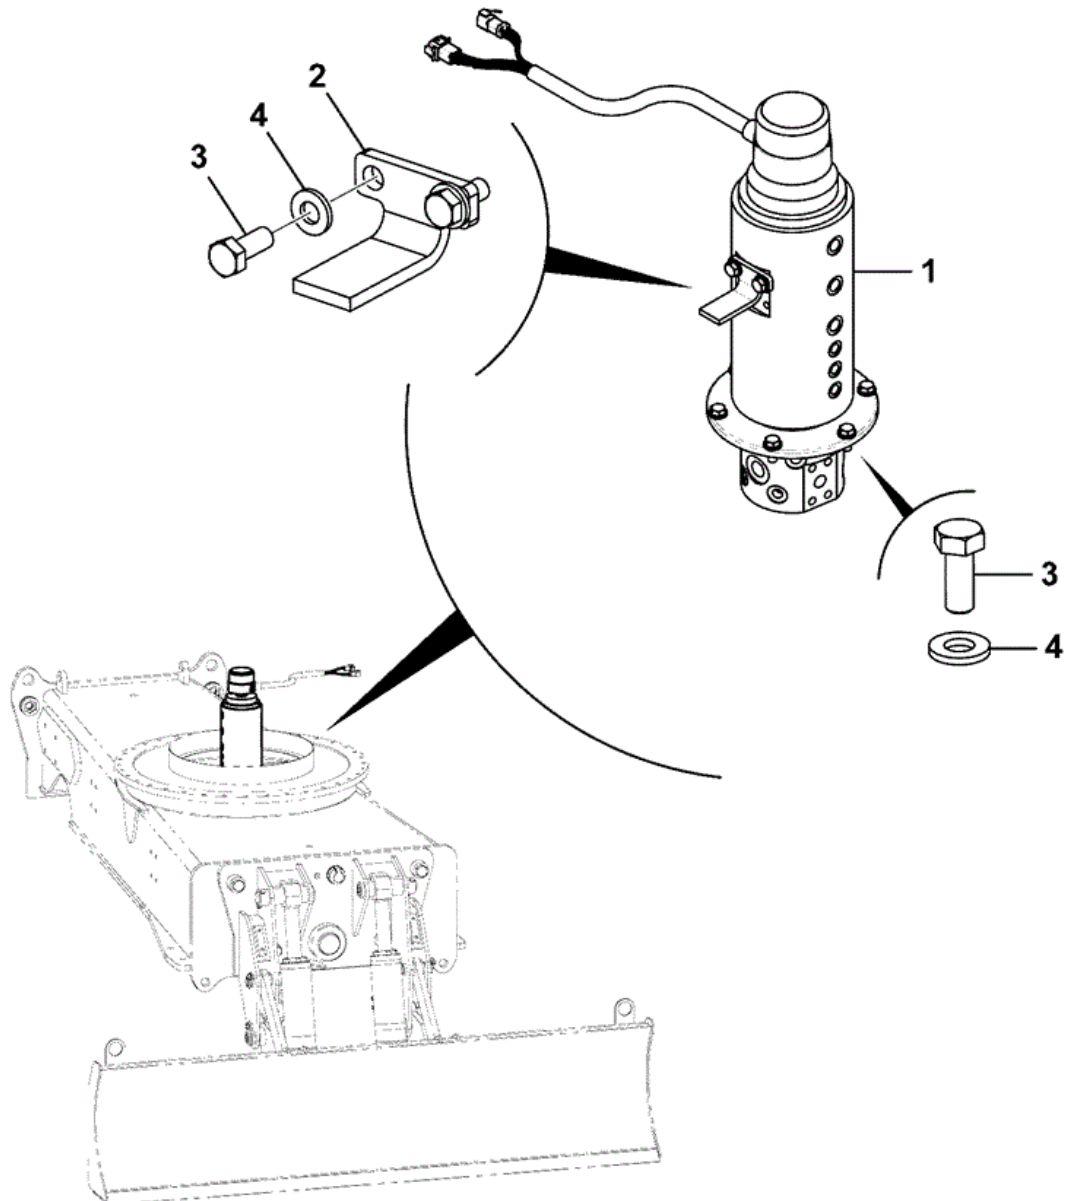


333-J9806-1

Item	Part #	Change No	Description	Usage Code	QTY
1	333/K6732		Coupling Rotary, 12W		1

2	332/K4648		Bracket anti rotation		1
3	1316/0508D		Screw M12 X 30		8
4	JHP0042		Washer M12		8


JCB 9822/0495 J110-60-1 UNDERCARRIAGE ROTARY COUPLING ASSEMBLY

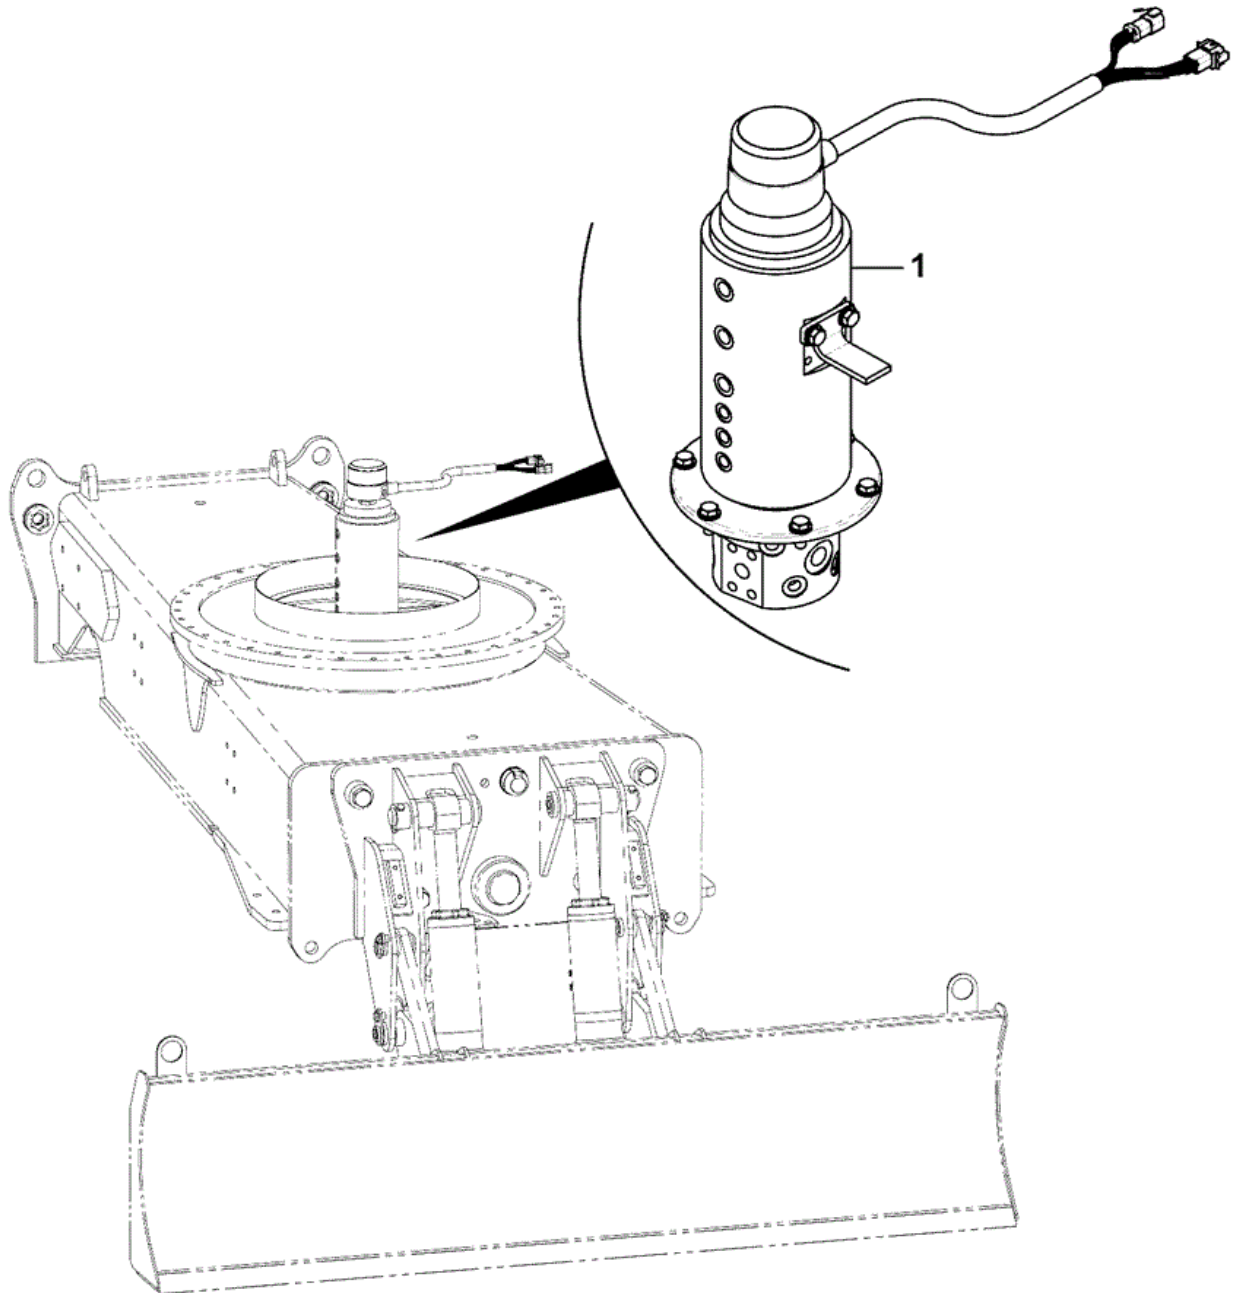

333-J1516-1

Item	Part #	Change No	Description	Usage Code	QTY
1	****		Coupling Rotary Assembly, 0W		1

9822/0495 J110-65-1 UNDERCARRIAGE ROTARY COUPLING ASSEMBLY

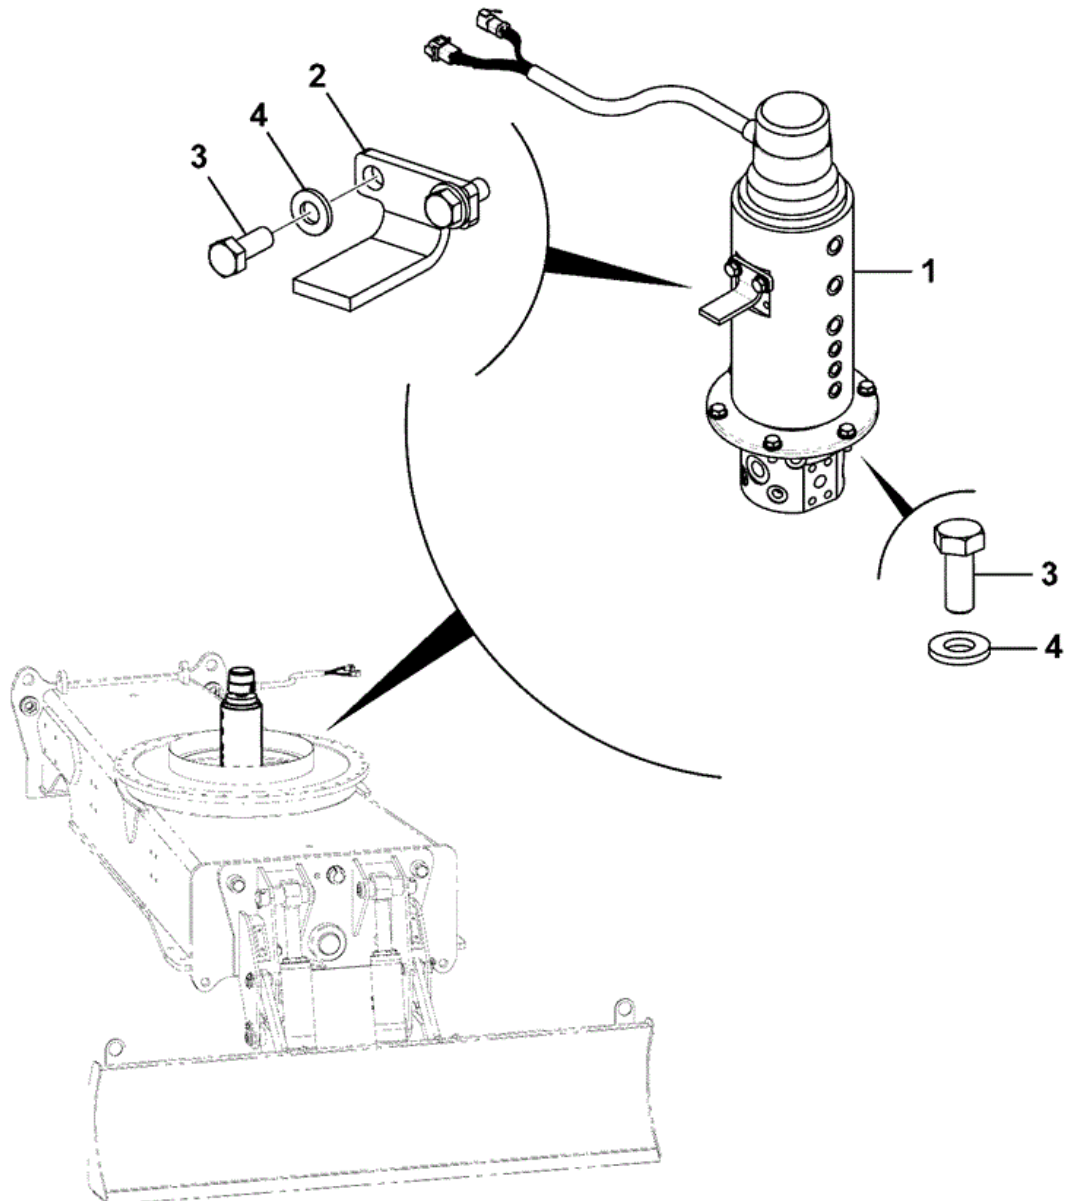

333-J9806-1

Item	Part #	Change No	Description	Usage Code	QTY
1	333/K6730		Coupling Rotary		1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com