





9822/0365 F430-1-1 SLEW/SWING MOTOR INSTALLATION EQUIPMENT

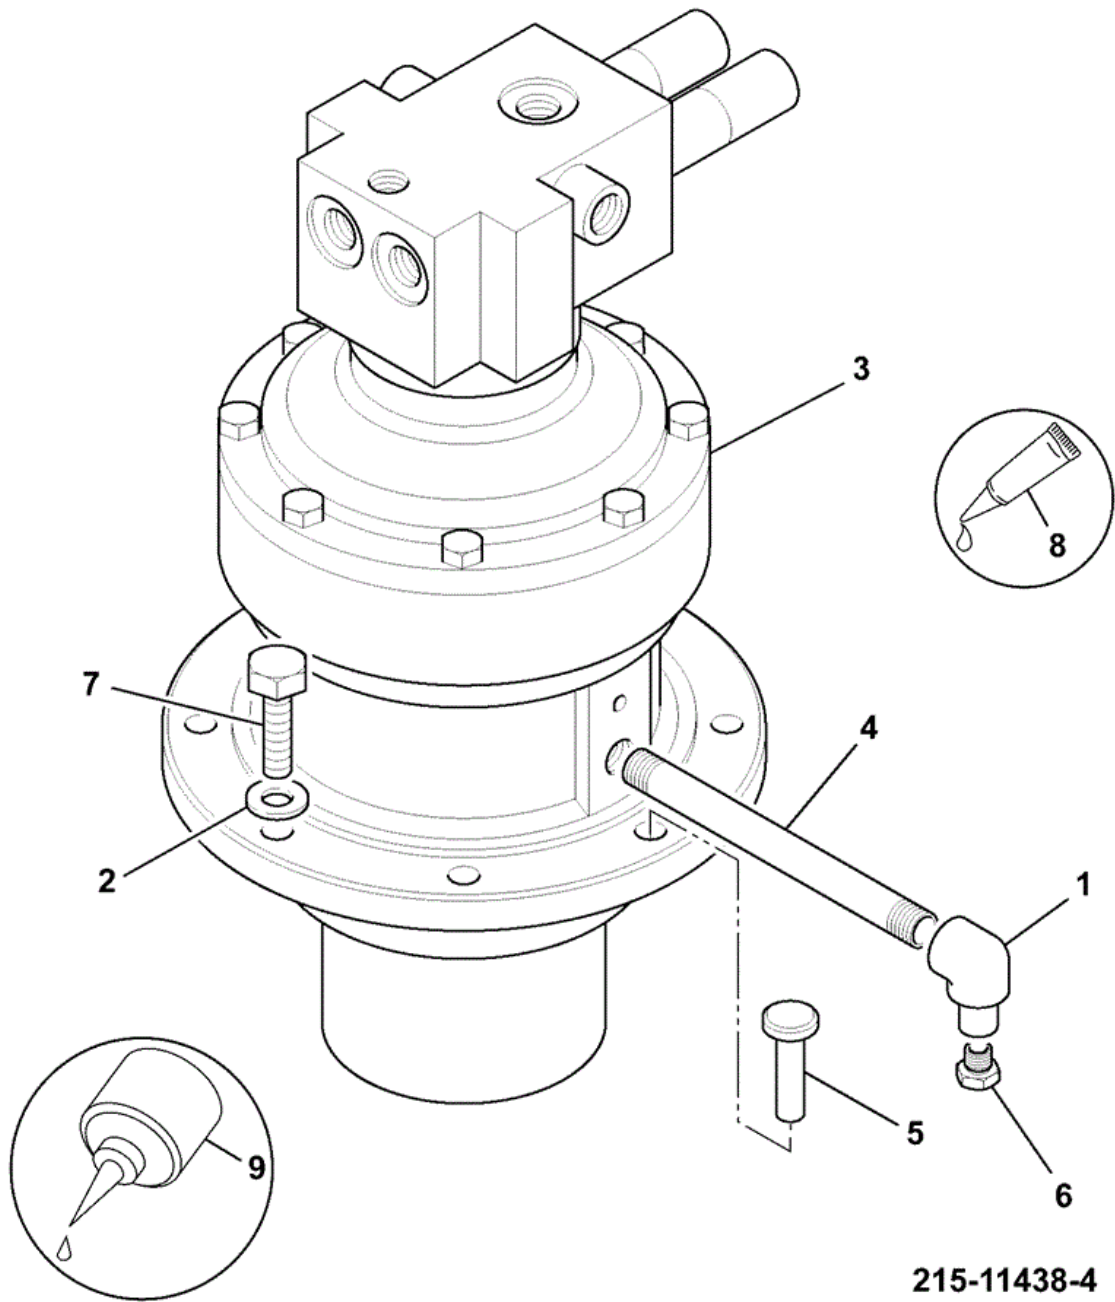

Item	Part #	Change No	Description	Usage Code	QTY
1	C4E3606		Adapter elbow		1

2	JHP0044		Washer		11
3	20/925738		Motor gearbox swing JS160/180/190 AUTO		1
4	KNC0052		Pipe		1
5	KRC0105		Pin headed		1
6	UBJ0373		Plug		1
7	1316/3817D		Bolt		11
8	4102/1203		Sealant		0
9	4101/0500		Fluid Locking Loctite 262		0

JCB 9822/0365 F430-2-1 SLEW/SWING MOTOR INSTALLATION COMPONENTS EQUIPMENT

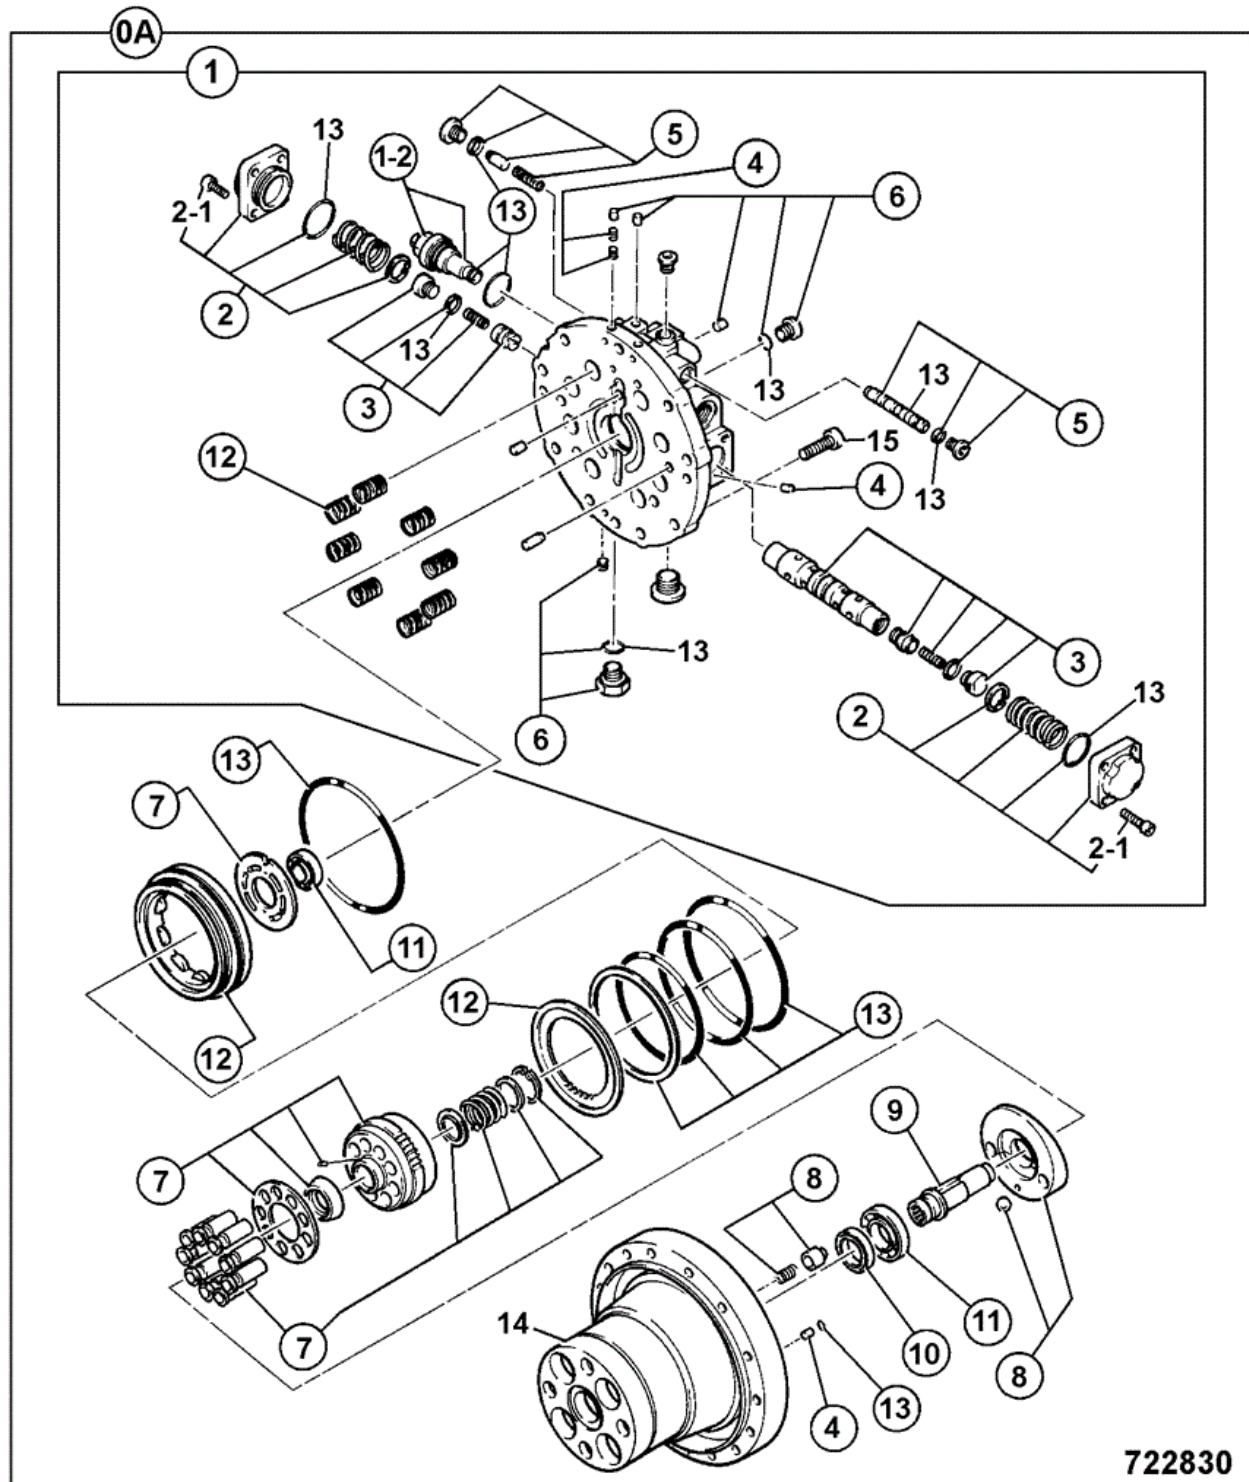

Item	Part #	Change No	Description	Usage Code	QTY
A	333/E2705		Motor hydraulic		1


1	:05/909533		Kit base plate assembly	1
1-2	::05/909511		Kit relief valve assembly	2
2	:05/909506		Kit counter balance assembly	1
2-1	::05/909534		Screw	8
3	:05/909507		Kit plunger assembly	1
4	:05/909508		Kit orifice assembly	1
5	:05/909509		Kit spool second speed	1
6	:05/903886		Kit-plug	1
7	:05/909512		Kit cylinder block assembly	1
8	:05/909513		Kit swash plate	1
9	:05/909514		Kit motor shaft assembly	1
10	:05/909515		Seal ring	1
11	:05/909516		Kit bearings	1
12	:05/909517		Kit brake assembly	1
13	:998/10391		Kit seal	1
14	****		None serviced part	1
15	:6004/3610		Capscrew	9

1	:05/903884	Shaft pinion 15 teeth	1
2	:05/903870	Spacer	1
3	:05/903871	Ring	1
4	:05/903872	Bearing	1
5	:05/903877	Housing	1
6	:05/903876	Seal ring	1
7	:05/903875	Bearing	1
8	:05/903874	Nut	1
9	:05/903904	Gear Reduction assembly 1st planet	1
10	:05/903861	O Ring	2
11	:05/903879	Ring toothed	1
12	:05/903887	Gear	1
13	:05/903888	Cover	1
14	:05/903889	O Ring	1
15	:05/903890	Gear Reduction assembly 2nd planet	1
16	:05/903891	Gear Sun	1
17	:05/903892	Circlip	1
18	:05/903883	Screw	16
19	:20/925574	Motor hydraulic <i>For components see E2-7-1</i>	1
20	:05/903894	Plug	1
21	:05/903895	Hose	1
22	:05/903896	Pipe Extension	1
23	:05/903897	Plug breather	1
24	:05/903898	Dipstick & tube assembly	1
25	:05/903893	Screw	15



LINE

9822/0365 F480-1-1 CIRCUIT SLEW/SWING GREASING

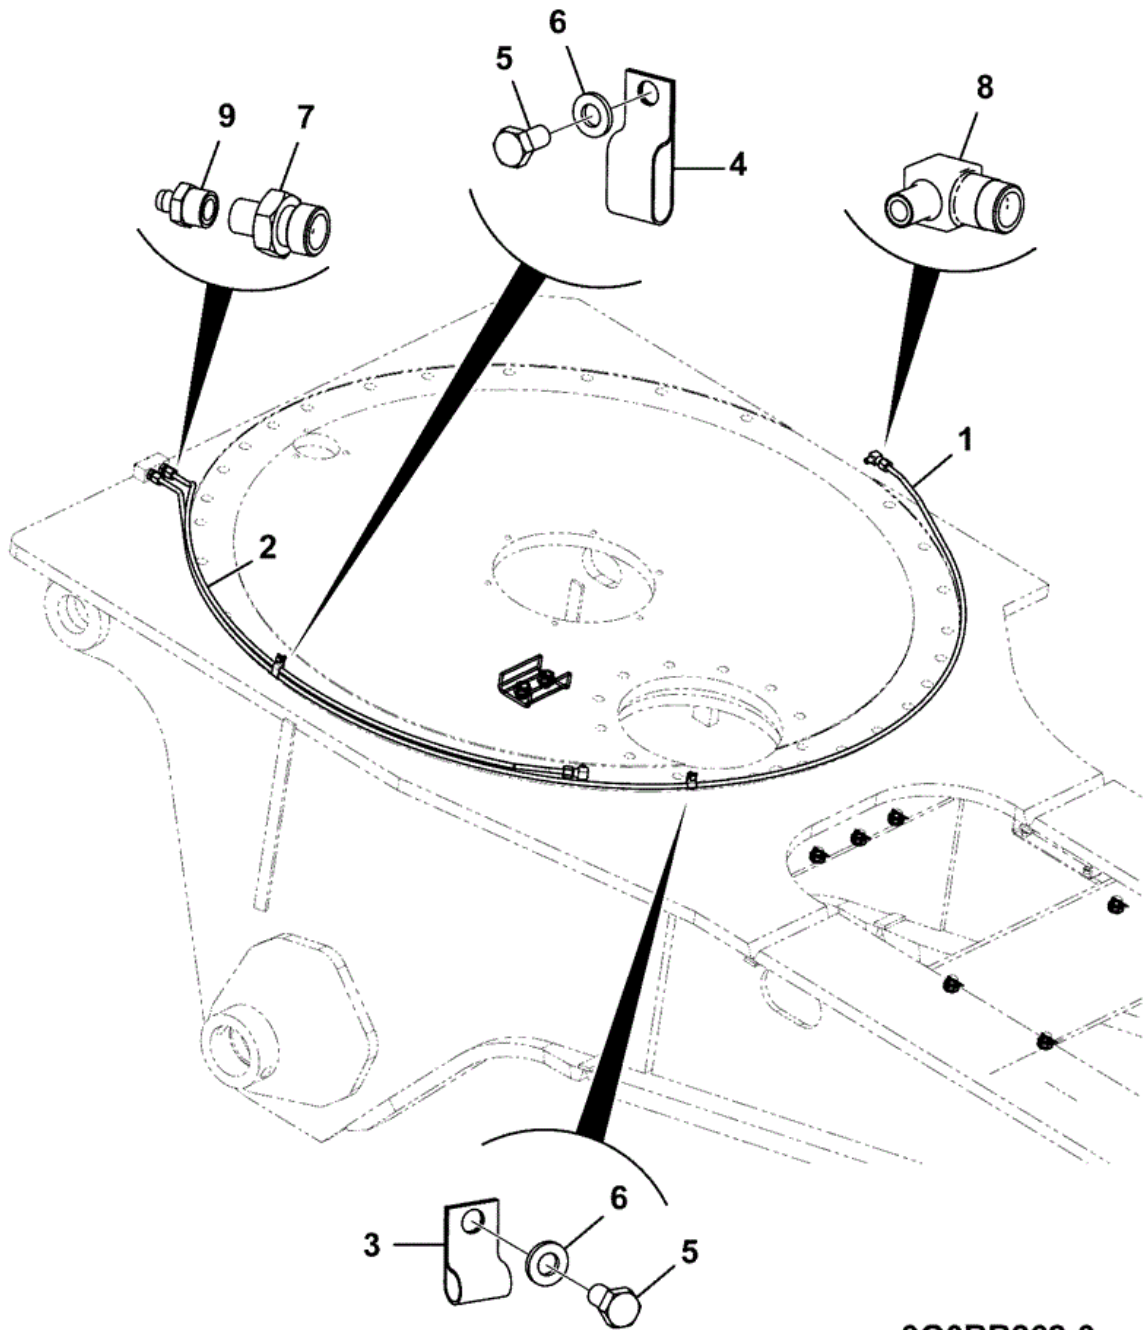

9G0RB262-3


Item	Part #	Change No	Description	Usage Code	QTY
1	KRB0696		Pipe assembly grease line		1

2	KRB0697		Pipe assembly grease line	1
3	333/J2461		Clamp Zinc plated	1
4	333/J2458		Clamp Zinc plated	1
5	1316/0201D		Screw	2
6	1420/0006D		Washer (M6)	2
7	KMJ0964		Connector	2
8	KMJ0985		Adapter elbow	2
9	JHP0037		Nipple Grease Straight	2



9822/0365 F490-1-1 OTHER SLEW/SWING PARTS

TURNTABLE BEARING

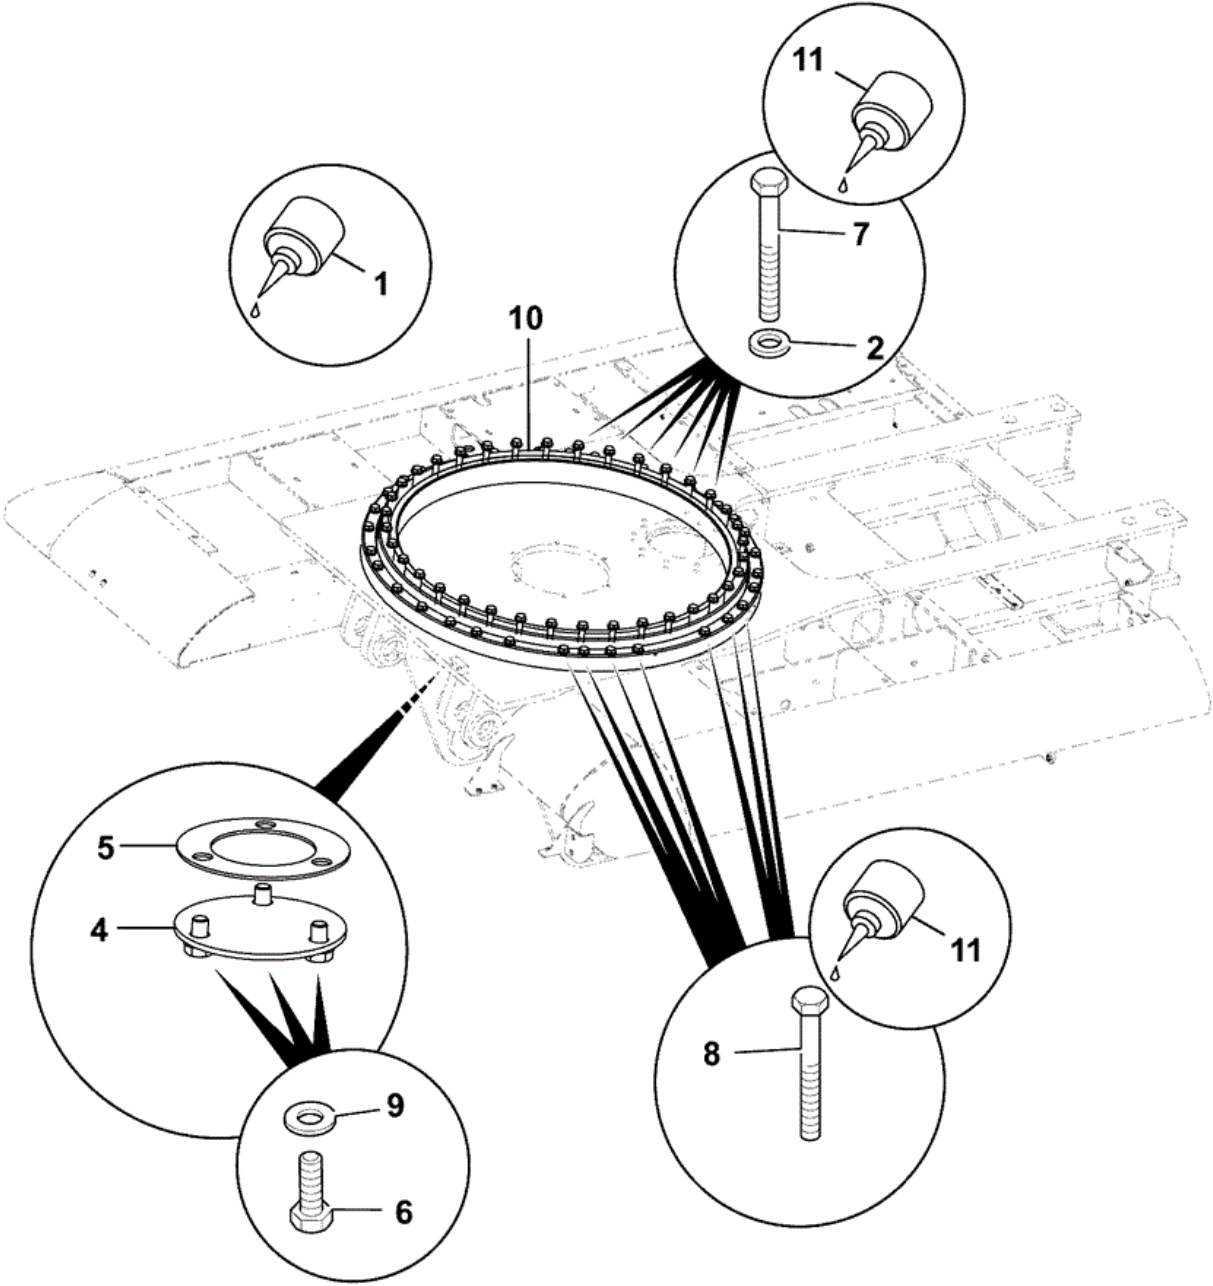


9G0LB019-5

Item	Part #	Change No	Description	Usage Code	QTY
1	JHC0001		Sealant liquid packing, Gasket		1

2	JHP0044		Washer		36
4	KRB0681		Plate Cover		1
5	KRB0682		Packing Cork		1
6	1316/0507D		Setscrew M12 x 25 grade 10.9		3
7	1316/3815D		Bolt M20 X 65		36
8	1316/3819D		Bolt M20X90 Grade10.9		31
9	1425/0009D		Washer M12 spring		3
10	331/12091		Ring swing		1
11	4101/0500		Fluid Locking Loctite 262		1

JCB 9822/0365 J1-9-10 COVER LOWER, UNDERCARRIAGE
JS190NLC

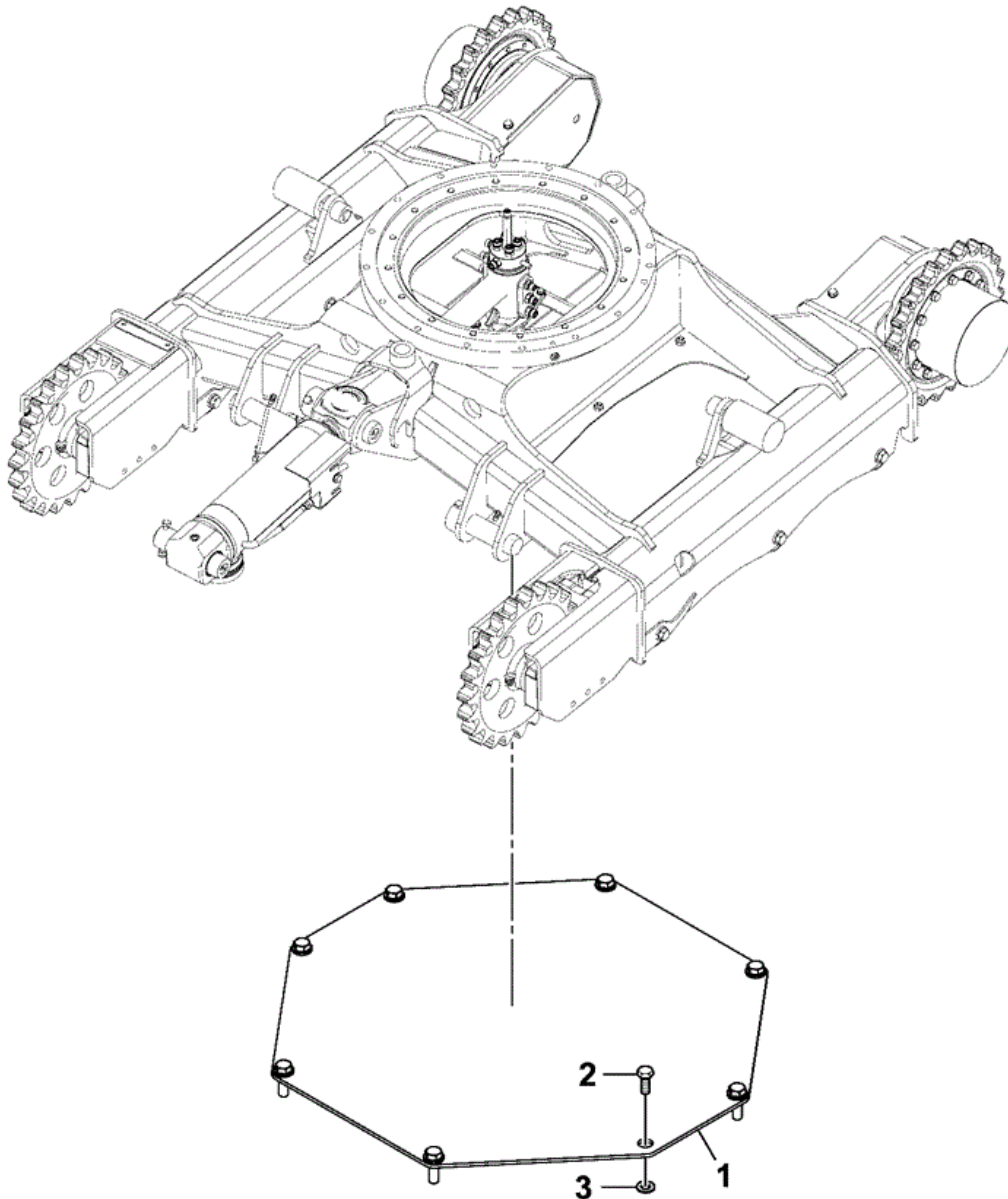

9G0RA309-3

Item	Part #	Change No	Description	Usage Code	QTY
1	KRA1118	to 31/12/2011	Cover under		2

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com