




9802/4750 B1-2-1 REAR CHASSIS INCL. HYDRAULIC TANK

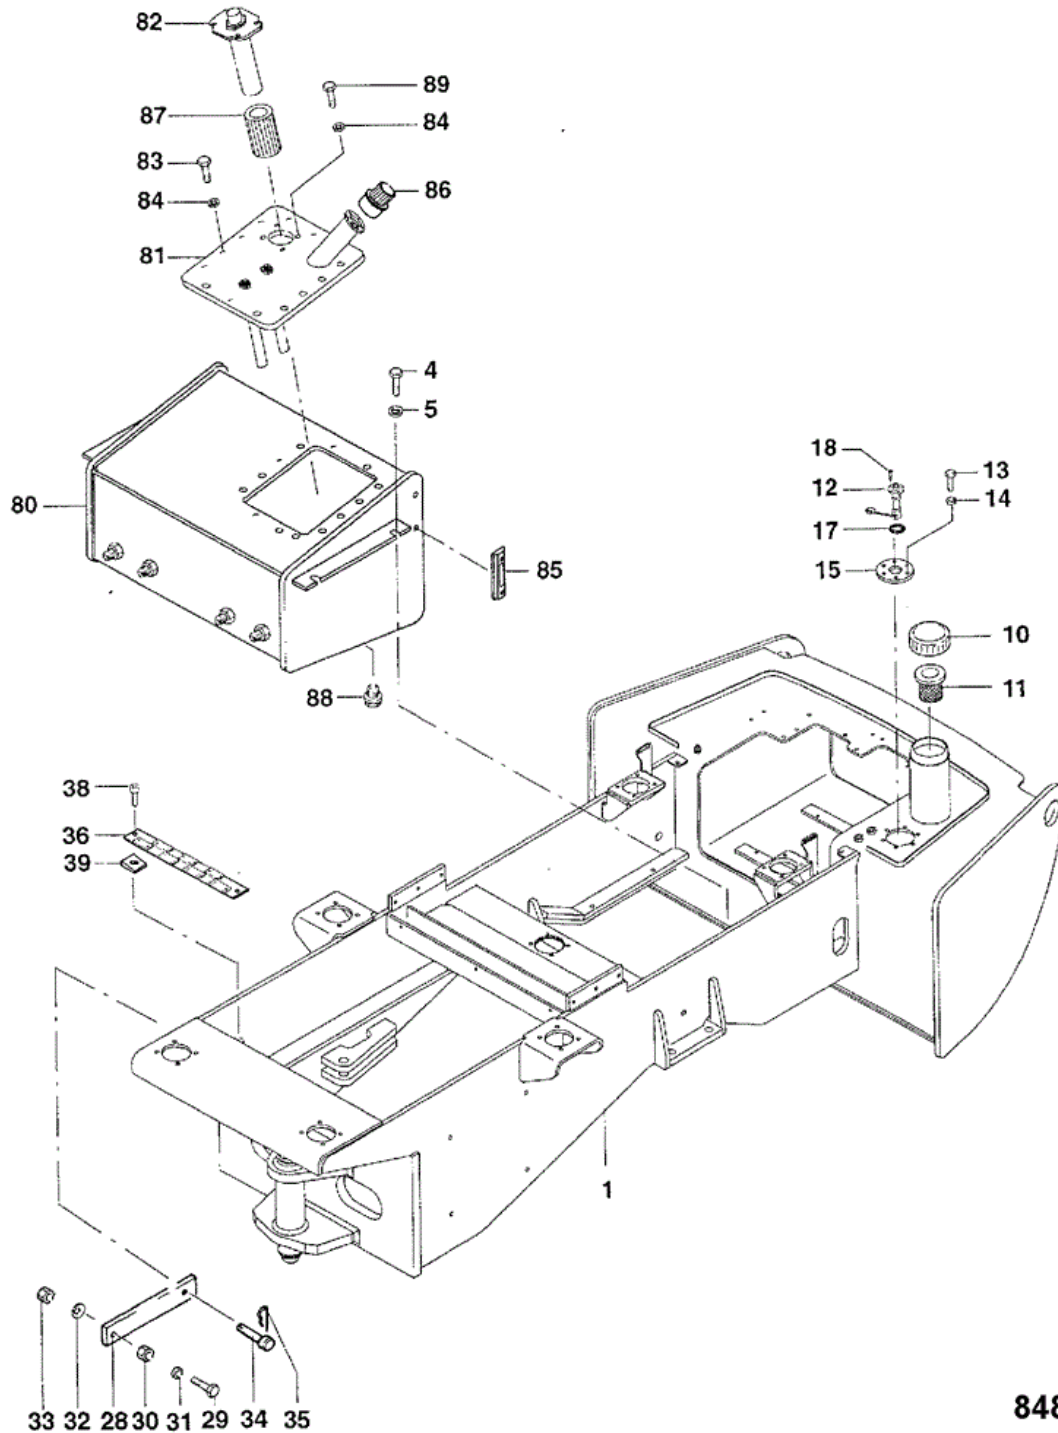


848030

Item	Part #	Change No	Description	Usage Code	QTY
1	7222/12100		Frame		1
1A	2782/01025		Strip chassis seal 6M		1

4	2021/12050	Superseded	Screw Hex M12x50		4
4	1315/0512Z		Setscrew M12 x 50mm		4
5	2201/00012	Superseded	Washer M12		4
5	1420/0009Z		Washer (M12)		4
10	6730/08351		Cap fuel filler		1
11	4029/15040	Superseded	Strainer 120mm		1
11	4029/15041	>1801990	Strainer 250mm		1
12	8427/00010		Sender fuel level		1
13	2021/08025	Superseded	Screw Hexagon M8x25		6
13	1315/0307Z		Setscrew M8 X 25		6
14	2113/00708		Washer Spring - M8		6
15	7222/12161		Cover		1
16	4029/15040		Strainer 120mm		1
17	8427/00011		Gasket		1
18	2025/05016		Capscrew M5x16		5
28	7221/11002		Strap		1
29	2021/20070		Screw		1
30	2110/00024		Nut		1
31	2201/00020	Superseded	Washer M20		1
31	1420/0012Z		Washer M20		1
32	2806/00540		Washer		1
33	2118/32000		Nut M20		1
34	2445/20700		Pin		1
35	2940/02340		Pin Spring Retaining		1
36	7221/10380		Bar fixing		1
38	2027/12100		Screw		2
39	2201/00014		Washer		2
80	7221/10310		Tank Hydraulic Oil		1
81	7221/10320		Cover		1
82	7211/10330		Pipe intake		1
83	2021/08025		Screw Hexagon M8x25		14
84	2113/00708		Washer Spring - M8		18
85	2612/00032		Glass Sight Oil Indicator		1
86	2611/00160	Superseded	Filter Including Cap (Cap & Filter)		1
86	2611/00170		Cap Filter		1
87	2611/00230		Element filter		1
88	2506/20112		Plug		1
89	2021/08020	Superseded	Screw Hexagon M8x20		4
89	1315/0305Z		Setscrew M8 x 20		4
90	1391/3105		Screw		6
91	1420/0005		Washer 'P'		6



9802/4750 B1-3-1 DOOR

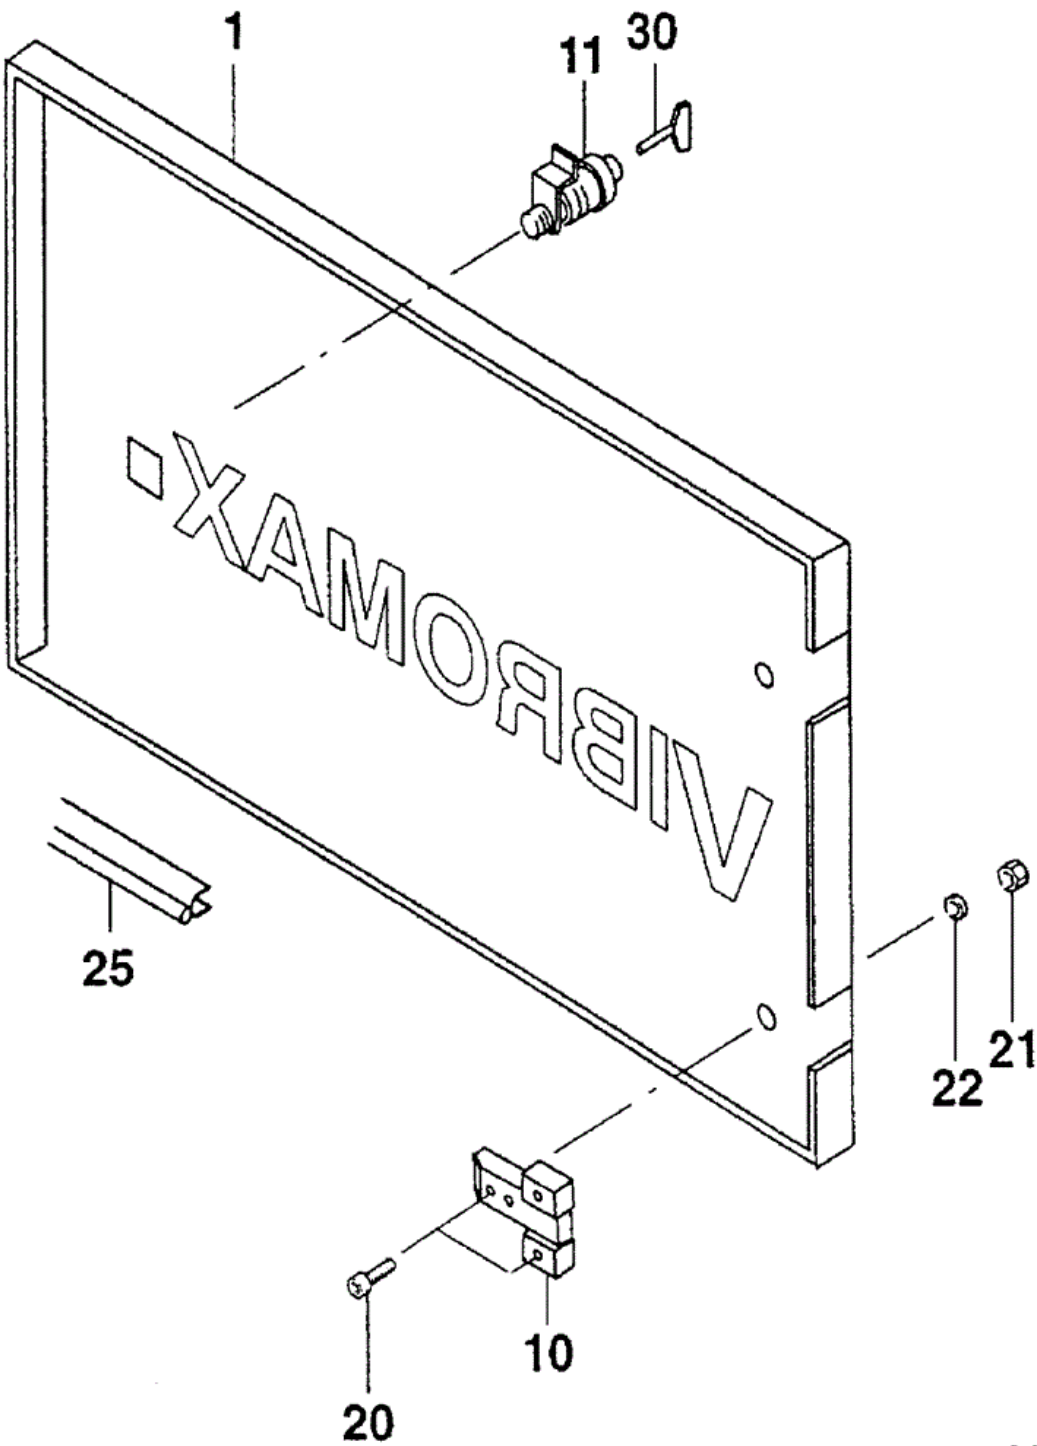


844680

Item	Part #	Change No	Description	Usage Code	QTY
1	7211/12181		Plate Flap Rear		1
10	7225/59003		Hinge		2
11	2748/00014		Lock mechanism		1

20	2027/08020		Capscrew M8x20		8
21	2114/00508		Nut HUTMUTTER (M8-6)		4
22	2201/00008		Washer M8		4
25	2782/01026		Strip		0
30	3789/81163		Key Ignition & Side Flap & Door		1

 9802/4750 B1-4-1 STEPS < s/n TBA

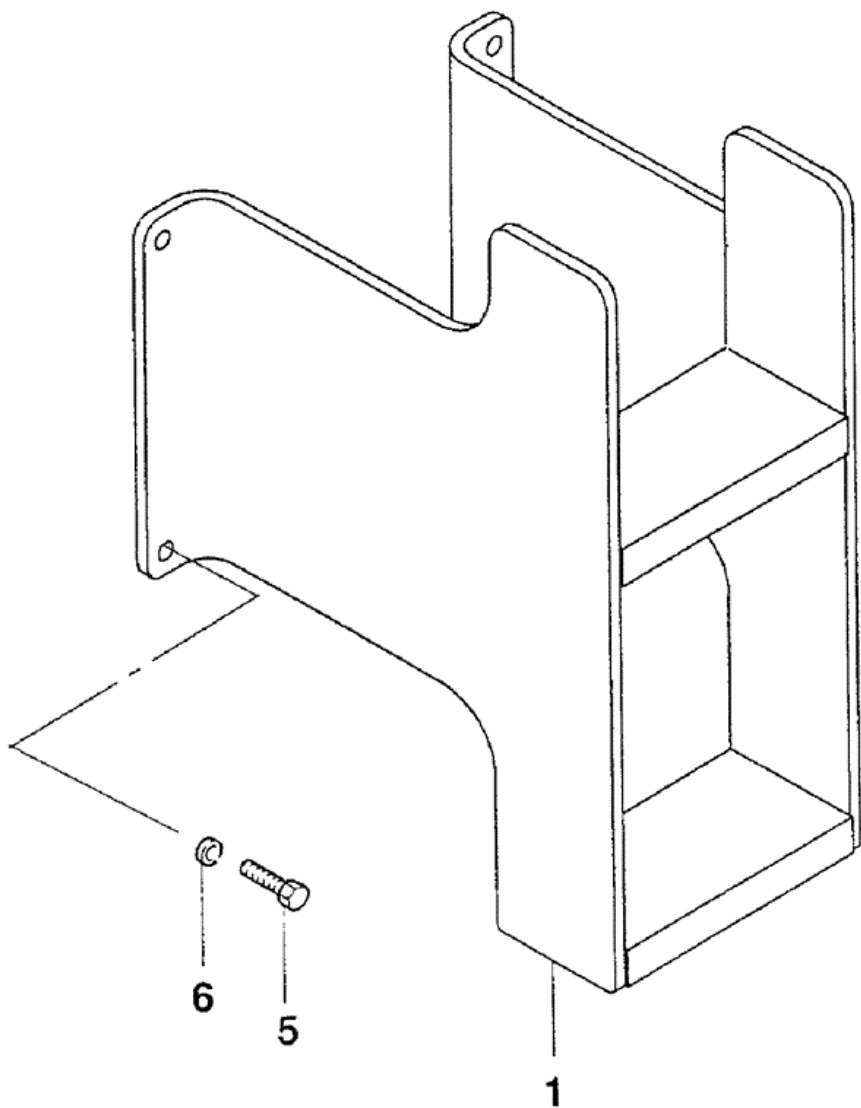


849070

Item	Part #	Change No	Description	Usage Code	QTY
1	7222/41310		Step		1
5	2021/12030		Screw		4
6	2201/00012	Superseded	Washer M12		4

6	1420/0009Z		Washer (M12)		4
---	------------	--	--------------	--	---



9802/4750 B1-4-2 STEPS > s/n TBA

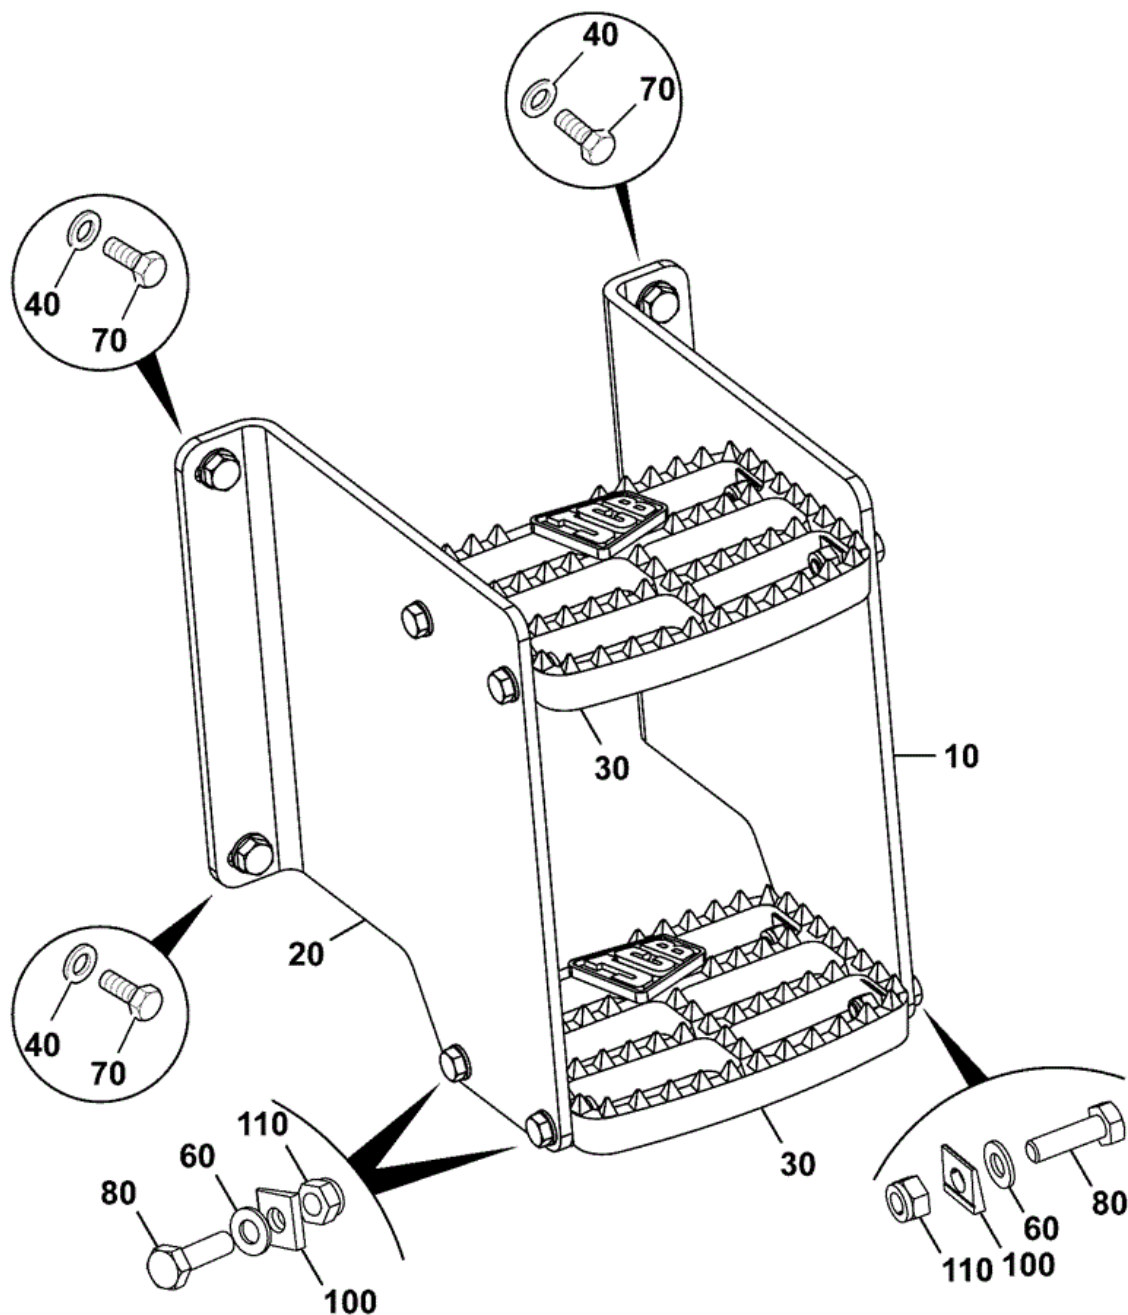


332-N0207-1

Item	Part #	Change No	Description	Usage Code	QTY
00	332/N0207		STEPS Complete		1
10	332/N0206		Step Right Hand		1
20	332/N0203		Step Left Hand		1

30	589/10221		Step		2
40	1420/0009Z		Washer (M12)		4
60	1420/0008Z		Washer (M10)		8
70	1315/0508Z		Setscrew M12 X 30		4
80	1315/0409Z		Setscrew M10 x 35		8
100	332/N0226		Washer Square		8
110	1370/0303Z		Nut lock M10		8



9802/4750 B1-5-1 ENGINE COVER

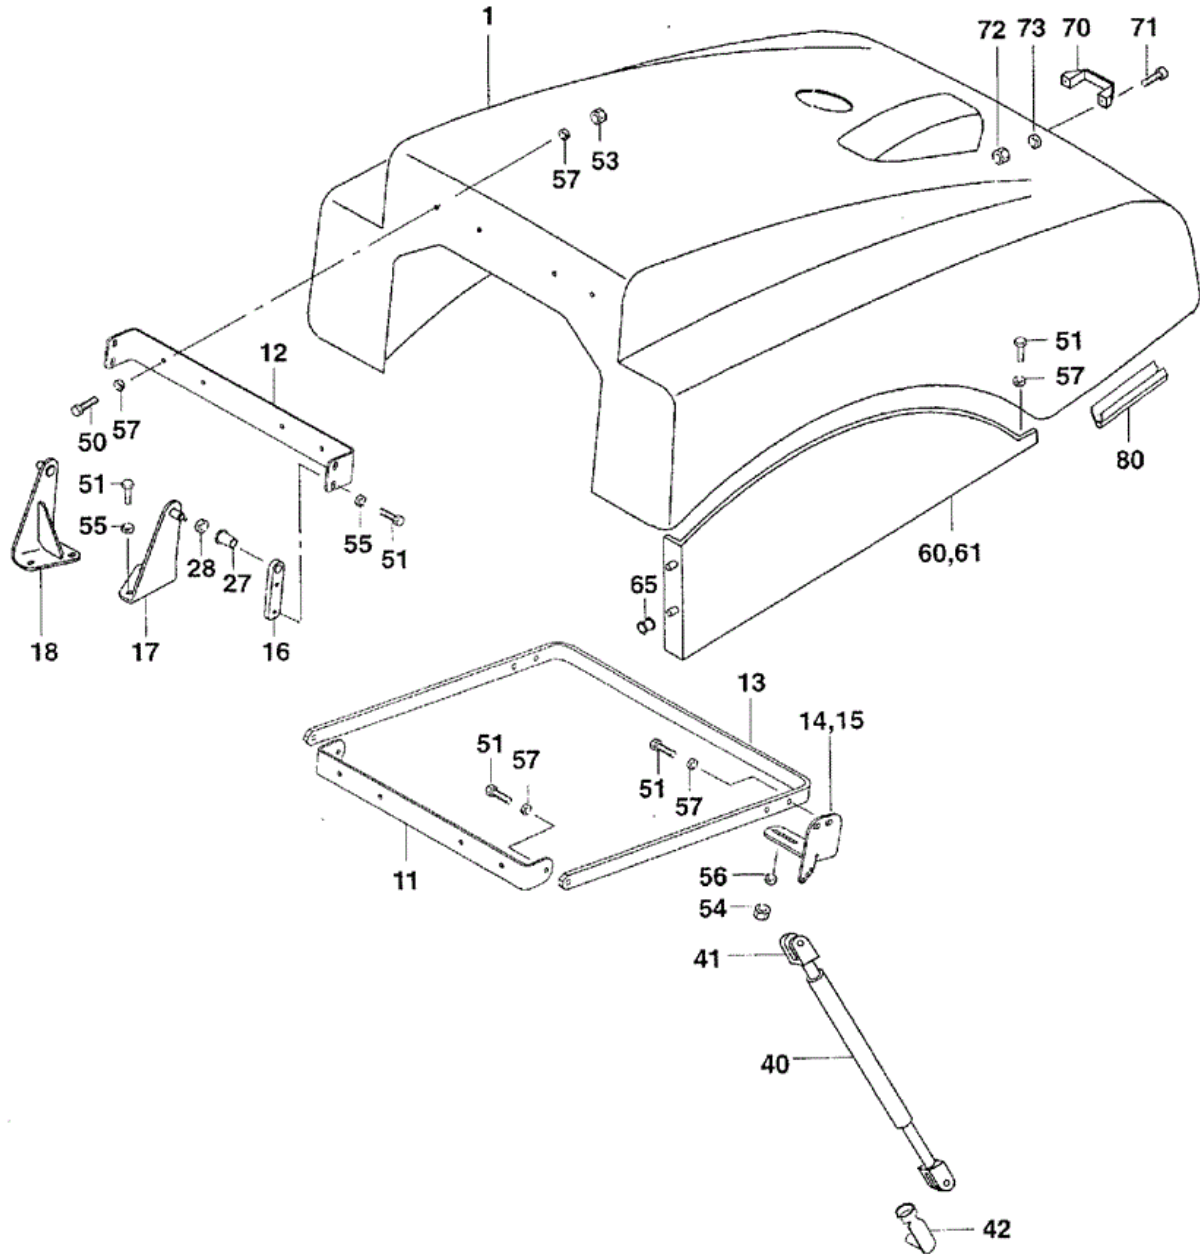


848040

Item	Part #	Change No	Description	Usage Code	QTY
1	7222/53100		Bonnet engine		1
11	7211/53211		Bracket		1
12	7211/53212		Bracket		1

13	7211/53213		Bracket bow		1
14	7211/53214		Lever left hand		1
15	7211/53215		Lever right hand		1
16	7211/53216		Hinge		2
17	7211/53217		Bracket jack left hand		1
18	7211/53218		Bracket jack right hand		1
27	2113/01203		Sleeve		2
28	2201/00020	Superseded	Washer M20		2
28	1420/0012Z		Washer M20		2
40	7211/53540		Spring		2
41	2241/00832		Clevis		4
42	2241/00833		Pin		4
50	2021/10045		Screw M10 x 45mm		4
51	2021/10025		Screw Hexagon M10x25		16
53	2118/31000		Nut M10		4
54	2118/30800		Nut M8		4
55	2200/00010		Washer		8
57	2201/00010		Washer M10		16
60	7211/53250		Plate left hand		1
61	7211/53255		Plate right hand		1
65	8352/02012		Grommet		4
70	7130/10361		Handle		1
71	2027/08025		Capscrew M8x25		2
72	2118/30800		Nut M8		2
73	2201/00008	Superseded	Washer M8		2
73	1420/0007Z		Washer (M8)		2
80	2782/01025		Strip chassis seal <i>5000mm long</i>		1



9802/4750 B1-7-1 ENGINE COVER LOCKING MECHANISM

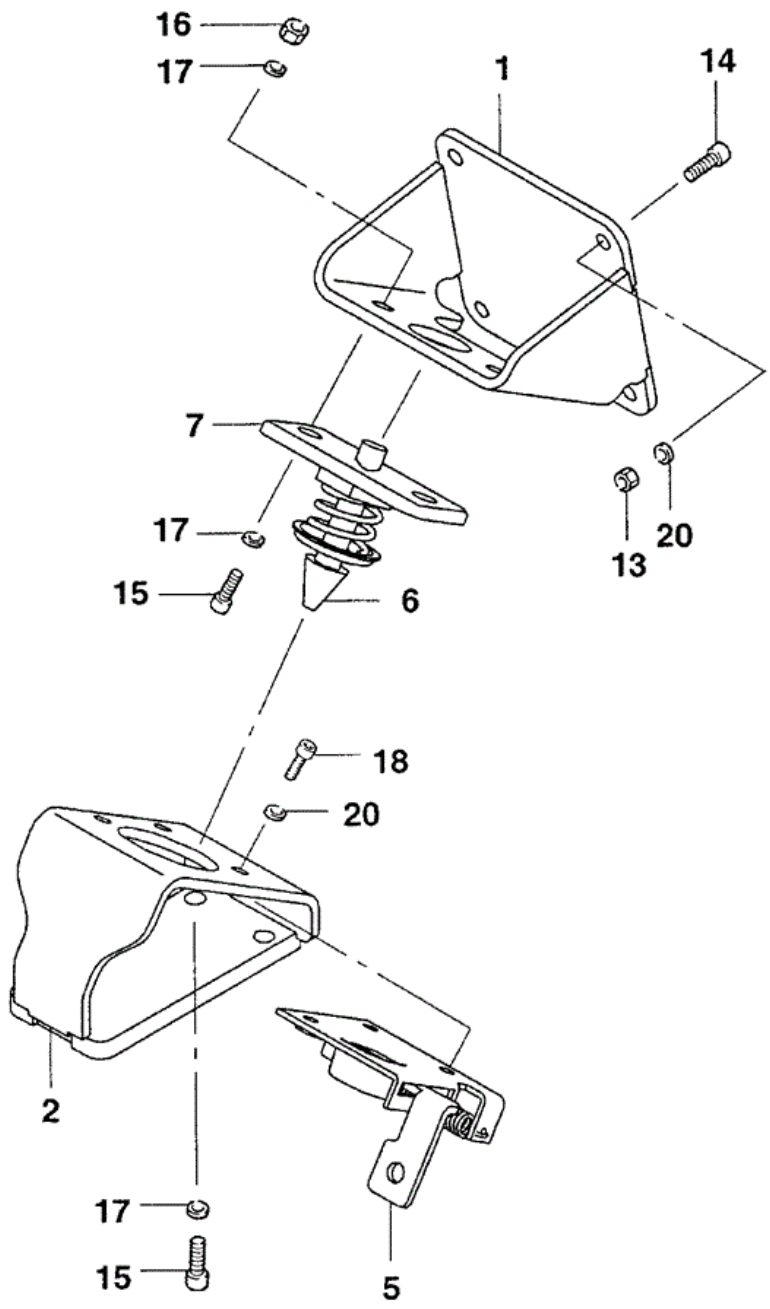


844720

Item	Part #	Change No	Description	Usage Code	QTY
1	7222/53310		Bracket Upper Section		1
2	7222/53320		Bracket Lower Section		1
5	7222/53305		Lock Mechanism Lower Section		1

6	7222/53306		Lock Mechanism Upper Section		1
7	7222/53308		Plate		1
13	2118/30600		Nut M6		4
14	2099/06025		Screw M6x25		4
15	2025/08025		Capscrew M8x25		5
16	2118/30800		Nut M8		2
17	2201/00008		Washer M8		7
18	2027/06010		Capscrew M6x10		3
20	2201/00006		Washer M6		7



9802/4750 B1-8-1 CENTRE PIVOT

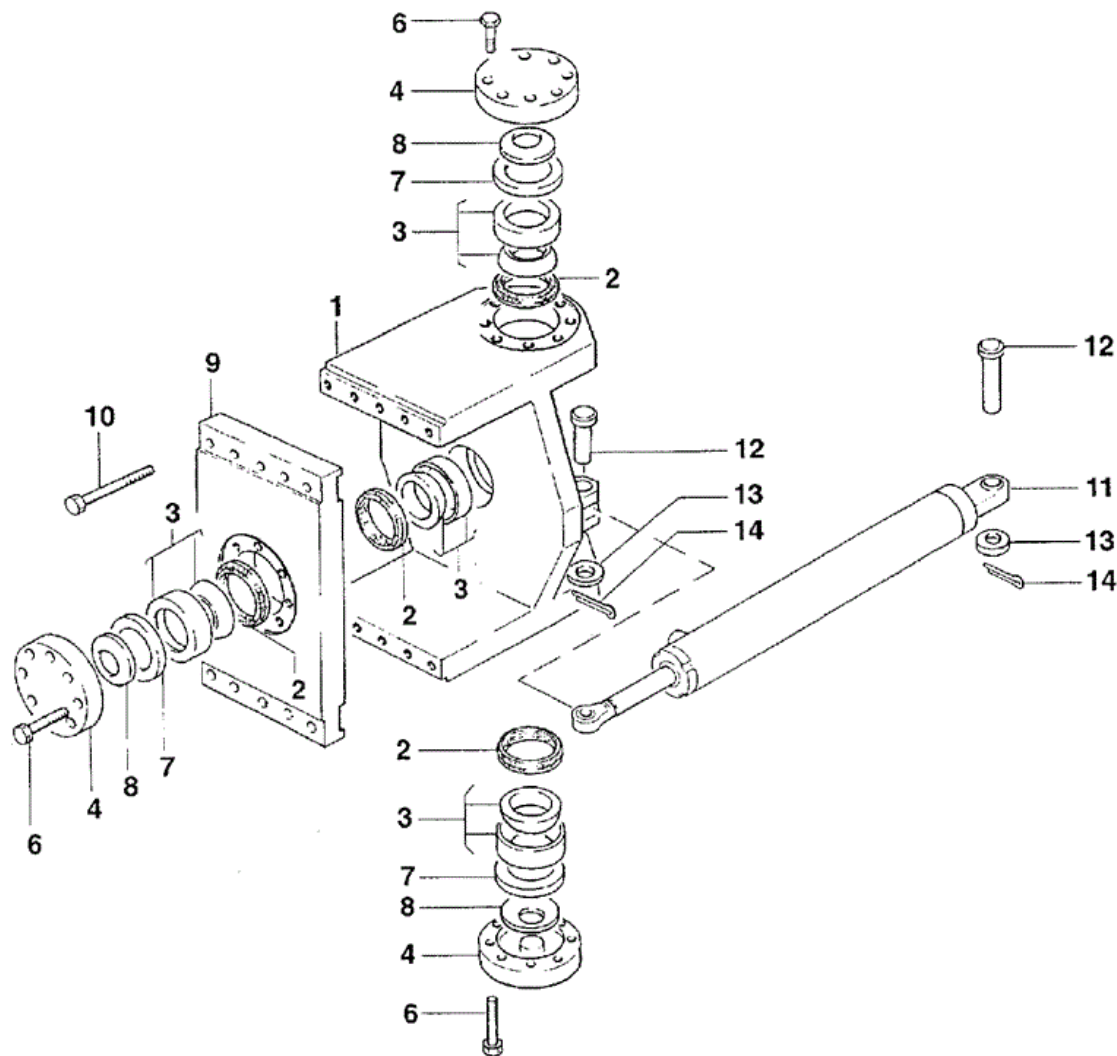

849250


Item	Part #	Change No	Description	Usage Code	QTY
1	7210/12110		Joint		1
2	4054/15009		Gasket		4
3	2242/23045		Bearing		4

4	7210/12122		Bearing		3
6	2021/12050	Superseded	Screw Hex M12x50	A	24
6	1315/0512Z		Setscrew M12 x 50mm	B	24
7	7210/12123		Ring		3
8	2806/00071		Washer		3
9	7210/12124		Plate		1
10	2020/16060	Superseded	Screw	A	10
10	1315/3714Z		Bolt M16 x 60	B	10
11	7225/19120	Superseded	Ram steering <i>For ram components see E4-1-1</i> <i>See Note 1</i>	A	2
11	332/N4002		Ram steering	B	2
12	2441/02580		Pin		4
13	2201/01025		Washer		4
14	2300/05040	Superseded	Pin split	A	4
14	2103/1111		Pin Split	B	4

Note 1: Part number stamped on ram body



9802/4750 B1-8-2 . CENTRAL PIVOT

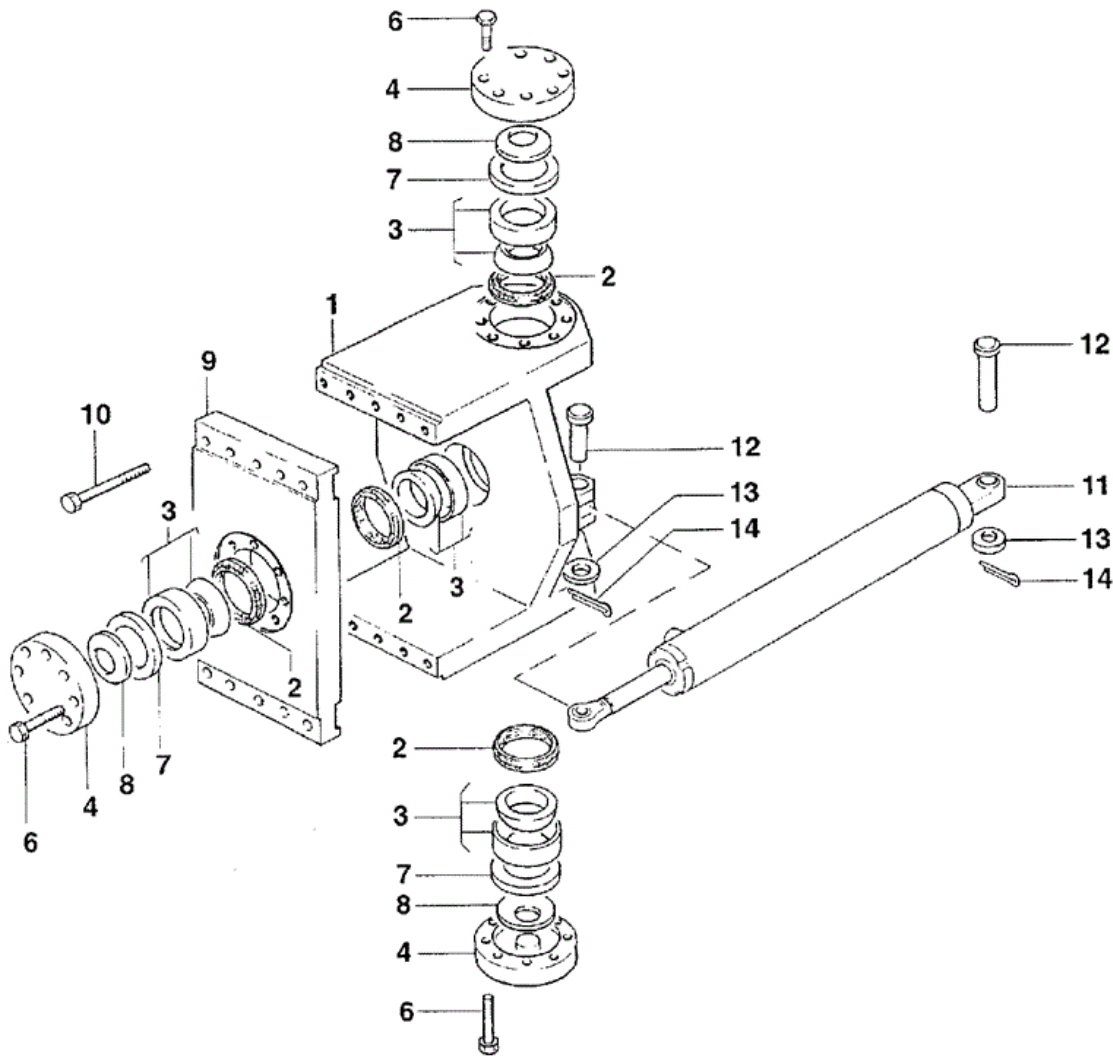


849250

Item	Part #	Change No	Description	Usage Code	QTY
1	7210/12110		Joint		1
2	4054/15009		Gasket		4
3	2242/23045		Bearing		4

4	7210/12122		Bearing		3
6	1315/0512Z		Setscrew M12 x 50mm		24
7	7210/12123		Ring		3
8	2806/00071		Washer		3
9	7210/12124		Plate		1
10	1315/3714Z		Bolt M16 x 60		10
11	332/N4002		Ram steering <i>See E4-1-2 for service parts</i>		2
12	2441/02580		Pin		4
13	2201/01025		Washer		4
14	2103/1111		Pin Split		4



9802/4750 B1-9-1 GUARD, REAR

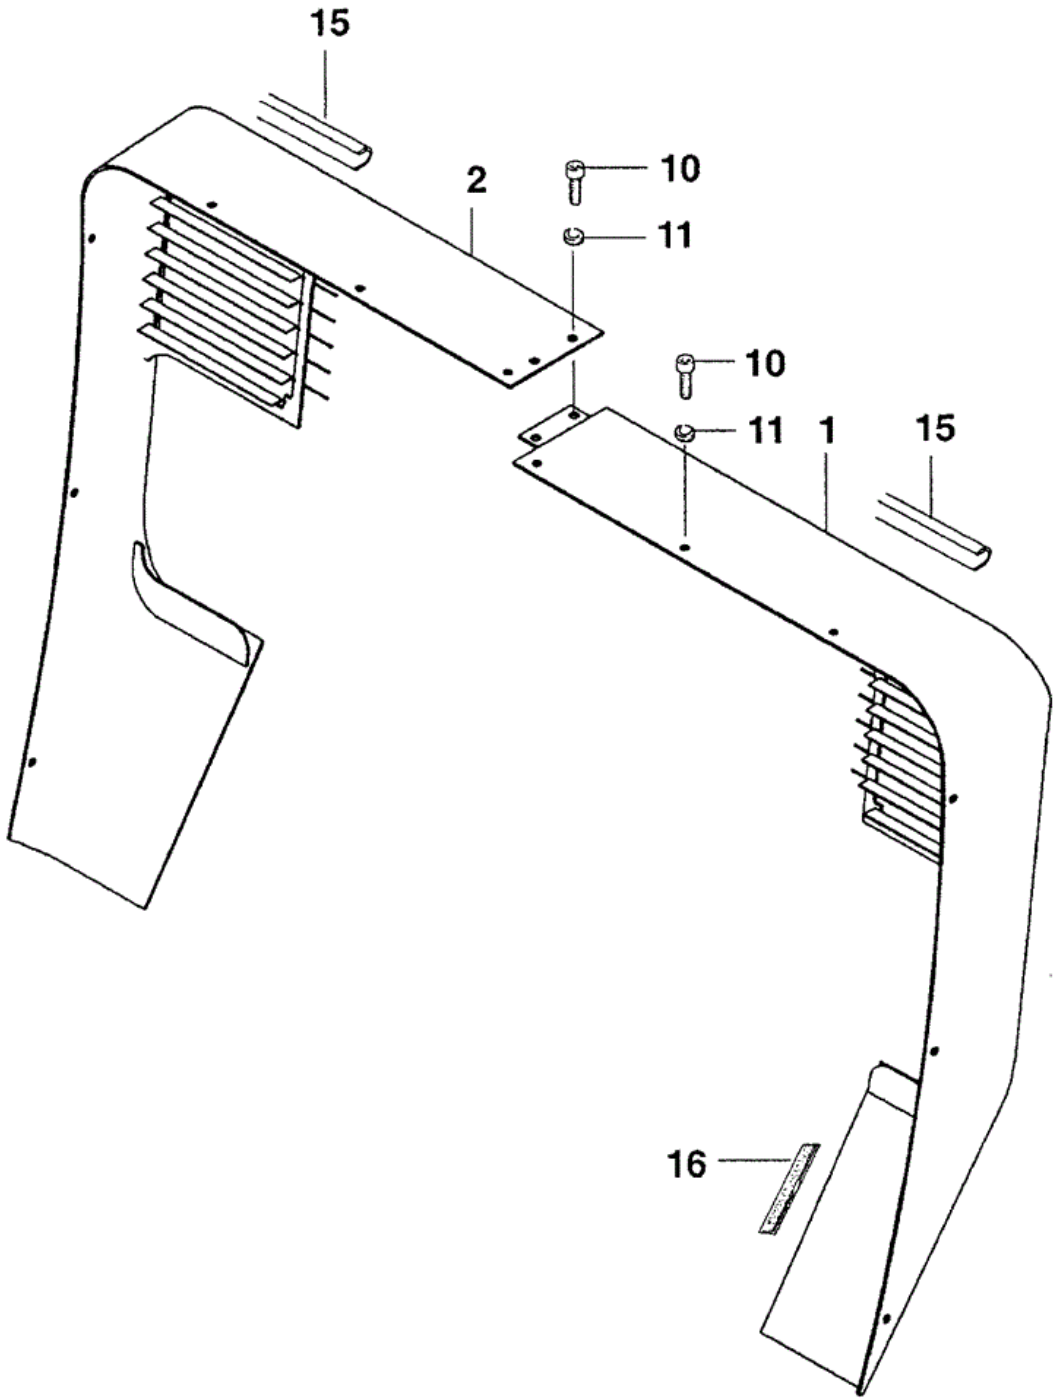

844840

Item	Part #	Change No	Description	Usage Code	QTY
1	7211/51510		Cover left hand side		1
2	7211/51520		Cover right hand side		1
10	2025/08020		Screw		14

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com