


CLAAS

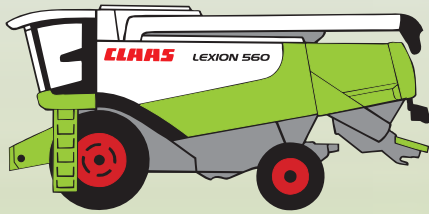

LEXION 560-510

Repair manual

SERVICE & PARTS

Contents

1 General Information

1.1 General	27
1.1.1 Introduction	27
1.2 Safety rules	28
1.2.1 Important notice	28
1.2.2 Identification of warning and danger signs	28
1.2.3 General safety and accident prevention regulations	29
1.2.4 Leaving the machine	30
1.2.5 Grain tank	30
1.2.6 Combine harvester chopper unit	30
1.2.7 Adjustment and maintenance work	30
1.2.8 Air conditioner	31
1.2.9 Pressure accumulator	31
1.2.10 First-aid measures	31
1.2.11 Battery isolating switch	32
1.2.12 Applying the feed rake conveyor safety lock	32
1.2.13 Removing the feed rake conveyor safety lock	32
1.2.14 Danger of injury due to escaping hydraulic liquid	33
1.3 General repair instructions	33
1.3.1 Reason of damage	33
1.3.2 Spare parts	33
1.3.3 Diesel engine	34
1.3.4 Gearboxes	34
1.3.5 Alternator	34
1.3.6 Tensioning the steel roller chains	34
1.3.7 Taper ring fasteners	34
1.3.8 Self-locking bolts with micro-encapsulated adhesive	35
1.3.9 Liquid locking compound	36
1.3.10 Lock collar bearings	36
1.3.11 Adapter sleeve bearing	36
1.3.12 Ferrule fittings on hydraulic lines	37
1.3.13 Progressive ring fittings on hydraulic lines	38
1.3.14 Taper fittings on hydraulic lines	39
1.3.15 Hydraulic hoses	39
1.3.16 Welding Work	41
1.3.17 Some advice for speedy and correct repair work:	42
1.4 Torque settings	43
1.4.1 Tightening torques for metric regular threads	43
1.4.2 Tightening torques for metric fine threads	44
1.4.3 Tightening torques for hydraulic screw fittings with ferrule according to DIN 3861	45
1.4.4 Tightening torques for hydraulic screw fittings and air conditioner fittings with a sealing cone and O-ring DIN 3865	45
1.4.5 Tightening torques of brake line screw fittings	46
1.4.6 Tightening torques for wheel bolts	47
1.5 Specifications	48
1.5.1 Lubricants	48

2 Operator's platform

2.1 Steering	49
2.1.1 Removing the steering column	49
2.1.2 Disassembling the steering column	54
2.1.3 Steering column, exploded view	56
2.1.4 Assembling the steering column	57
2.1.5 Installing the steering column	59
2.1.6 Removing the steering unit	63
2.1.7 Installing the steering unit	65
2.1.8 Checking and adjusting the steering unit	66
2.2 Special tool for steering	67
2.2.1 Disassembling the steering column	67
2.2.2 Creating a vacuum in the hydraulic tank	67
2.2.3 Checking and adjusting the steering unit	68
2.3 Brakes	69
2.3.1 Removing the parking brake rope	69
2.3.2 Installing the parking brake rope	70
2.3.3 Removing the foot brake master cylinder	71
2.3.4 Installing the foot brake master cylinder	72

3 Feed rake conveyor

3.1 Feed rake conveyor	73
3.1.1 Removing the feed rake conveyor	73
3.1.2 Installing the feed rake conveyor	75
3.1.3 Removing the feed rake conveyor suction blower	76
3.1.4 Disassembling the feed rake conveyor suction blower	77
3.1.5 Feed rake conveyor suction blower, exploded view	80
3.1.6 Assembling the feed rake conveyor suction blower	82
3.1.7 Installing the feed rake conveyor suction blower	84
3.1.8 Removing the wooden ledges	85
3.1.9 Installing the wooden ledges	87
3.1.10 Removing the intermediate floor	89
3.1.11 Installing the intermediate floor	91
3.1.12 Removing the runners	94
3.1.13 Installing the runners	95
3.1.14 Replacing the feeder chains	95
3.1.15 Removing the top shaft	98
3.1.16 Top shaft, exploded view (LEXION 560-540)	102
3.1.17 Top shaft, exploded view (LEXION 530-510)	104
3.1.18 Installing the top shaft	105
3.1.19 Removing the deflection roller	111
3.1.20 Disassembling the deflection roller	113
3.1.21 Deflection roller, exploded view (LEXION 560-540)	114
3.1.22 Deflection roller, exploded view (LEXION 530-510)	115
3.1.23 Assembling the deflection roller	115
3.1.24 Installing the deflection roller	116
3.1.25 Removing the intermediate drive shaft	118
3.1.26 Intermediate drive shaft, exploded view	121

3.1.27	Installing the intermediate drive shaft	121
3.1.28	Replacing the antislip strips (without dust extraction)	124
3.1.29	Replacing the antislip strips (with dust extraction)	125
3.2	Feed rake conveyor special tool	126
3.2.1	Removing the top shaft	126
3.2.2	Removing the top shaft	127
3.2.3	Installing the top shaft	128
3.2.4	Disassembling the deflection roller	129
3.2.5	Assembling the deflection roller	130
3.2.6	Removing the intermediate drive shaft	131
3.2.7	Removing the intermediate drive shaft	132
3.3	Reverser drive	133
3.3.1	Removing the reverser drive	133
3.3.2	Disassembling the reverser drive	135
3.3.3	Reverser drive, exploded view	137
3.3.4	Assembling the reverser drive	138
3.3.5	Installing the reverser drive	139
3.4	Reverser drive special tool	141
3.4.1	Assembling the reverser drive	141

4 Threshing mechanism

4.1	Threshing concave	142
4.1.1	Removing the stone trap	142
4.1.2	Installing the stone trap	142
4.1.3	Removing the preconcave	143
4.1.4	Preconcave, exploded view, normal version	147
4.1.5	Installing the preconcave	149
4.1.6	Removing the main concave	151
4.1.7	Main concave, exploded view, normal version	155
4.1.8	Installing the main concave	156
4.1.9	Basic concave setting	159
4.2	Accelerator drum	167
4.2.1	Removing the right accelerator drum bearing	167
4.2.2	Disassembling the right accelerator drum bearing	168
4.2.3	Right accelerator drum bearing, exploded view	169
4.2.4	Assembling the right accelerator drum bearing	170
4.2.5	Installing the right accelerator drum bearing	171
4.2.6	Removing the left accelerator drum bearing	172
4.2.7	Disassembling the left accelerator drum bearing	174
4.2.8	Left accelerator drum bearing, exploded view	174
4.2.9	Assembling the left accelerator drum bearing	175
4.2.10	Installing the left accelerator drum bearing	176
4.2.11	Removing the accelerator drum	178
4.2.12	Installing the accelerator drum	180
4.3	Special tools for accelerator drum	181
4.3.1	Removing the right accelerator drum bearing	181
4.3.2	Assembling the right accelerator drum bearing	181
4.3.3	Installing the right accelerator drum bearing	182

4.3.4	Removing the left accelerator drum bearing	182
4.3.5	Disassembling the left accelerator drum bearing	183
4.3.6	Assembling the left accelerator drum bearing	184
4.3.7	Installing the left accelerator drum bearing	185
4.4	Threshing drum	186
4.4.1	Removing the right threshing drum bearing	186
4.4.2	Disassembling the right threshing drum bearing	188
4.4.3	Right threshing drum bearing, exploded view	188
4.4.4	Assembling the right threshing drum bearing	189
4.4.5	Installing the right threshing drum bearing	190
4.4.6	Removing the left threshing drum bearing	192
4.4.7	Disassembling the left threshing drum bearing	194
4.4.8	Left threshing drum bearing, exploded view	194
4.4.9	Assembling the left threshing drum bearing	195
4.4.10	Installing the left threshing drum bearing	196
4.4.11	Removing the threshing drum	197
4.4.12	Replacing the beater bars	199
4.4.13	Replacing the threshing drum shaft	200
4.4.14	Threshing drum, exploded view	203
4.4.15	Installing the threshing drum	203
4.5	Special tools for threshing drum	206
4.5.1	Removing the right threshing drum bearing	206
4.5.2	Assembling the right threshing drum bearing	207
4.5.3	Removing the left threshing drum bearing	208
4.5.4	Assembling the left threshing drum bearing	209
4.5.5	Installing the left threshing drum bearing	210
4.5.6	Replacing the threshing drum shaft	211
4.6	Impeller	212
4.6.1	Removing the right impeller bearing	212
4.6.2	Installing the right impeller bearing	213
4.6.3	Removing the left impeller bearing	214
4.6.4	Installing the left impeller bearing	215
4.6.5	Removing the impeller	216
4.6.6	Disassembling the impeller	217
4.6.7	Impeller, exploded view	220
4.6.8	Assembling the impeller	221
4.6.9	Installing the impeller	222
4.7	Special tools for impeller	224
4.7.1	Removing the right impeller bearing	224
4.7.2	Installing the right impeller bearing	225
4.7.3	Removing the left impeller bearing	226
4.7.4	Installing the left impeller bearing	227
4.7.5	Disassembling the impeller	228
4.7.6	Disassembling the impeller	229
4.7.7	Disassembling the impeller	229
4.7.8	Assembling the impeller	230

5 Separation

5.1 Straw walker	231
5.1.1 Removing the straw walker racks	231
5.1.2 Installing the straw walker racks	233
5.1.3 Removing the front straw walker crankshaft	235
5.1.4 Installing the front straw walker crankshaft	236
5.1.5 Removing the rear straw walker crankshaft	238
5.1.6 Installing the rear straw walker crankshaft	240
5.1.7 Disassembling the straw walker crankshafts	242
5.1.8 Straw walker bearing, exploded view	243
5.1.9 Assembling straw walker crankshafts	244
5.2 Special tools for straw walkers	247
5.2.1 Disassembling the straw walker crankshafts	247
5.2.2 Assembling straw walker crankshafts	247
5.3 Finger roller	248
5.3.1 Removing the right bearing plate	248
5.3.2 Finger roller control, exploded view	250
5.3.3 Installing the right bearing plate	253
5.3.4 Removing the finger roller drive flange	255
5.3.5 Installing the finger roller drive flange	256
5.3.6 Removing the left bearing plate	258
5.3.7 Installing the left bearing plate	259
5.3.8 Removing the left flange	260
5.3.9 Installing the left flange	261
5.3.10 Removing the finger roller fingers	262
5.3.11 Installing the finger roller fingers	263
5.3.12 Removing the control shafts	265
5.3.13 Installing the control shafts	267
5.3.14 Removing the finger roller	269
5.3.15 Installing the finger roller	274
5.4 Special tools for finger roller	276
5.4.1 Removing the right bearing plate	276
5.4.2 Removing the finger roller drive flange	277
5.4.3 Installing the finger roller drive flange	278
5.4.4 Removing the left flange	279
5.4.5 Installing the left flange	280

6 Cleaning unit

6.1 Feed pan	281
6.1.1 Removing the feed pan	281
6.1.2 Installing the feed pan	282
6.2 Under-walker return floor	284
6.2.1 Removing the under-walker return floor	284
6.2.2 Under-walker return floor, exploded view	286
6.2.3 Installing the under-walker return floor	287
6.2.4 Removing the front rocker arm	289
6.2.5 Front rocker arm, exploded view	289
6.2.6 Installing the front rocker arm	290

6.3 Sieve pan	291
6.3.1 Removing the upper sieves	291
6.3.2 Installing the upper sieves	293
6.3.3 Removing the lower sieves	294
6.3.4 Installing the lower sieves	295
6.3.5 Basic sieves adjustment with electric sieve adjustment	297
6.3.6 Removing the sieve frame	297
6.3.7 Sieve frame, exploded view	301
6.3.8 Installing the sieve frame	302
6.3.9 Removing the sieve pan	305
6.3.10 Sieve pan, exploded view	308
6.3.11 Installing the sieve pan	309
6.4 Special tools for sieve pan	311
6.4.1 Basic sieves adjustment with electric sieve adjustment	311
6.4.2 Removing the sieve pan	311
6.5 Preparation floor	312
6.5.1 Removing the preparation floor	312
6.5.2 Preparation floor, exploded view	316
6.5.3 Installing the preparation floor	317
6.6 Sieve frame linkage	322
6.6.1 Removing the 3-D sieve pan control system	322
6.6.2 3-D sieve pan control system, exploded view	323
6.6.3 Installing the 3-D sieve pan control system	325
6.6.4 Adjusting the 3-D sieve pan control system	327
6.7 Special tool for sieve frame linkage	330
6.7.1 Adjusting the 3-D sieve pan control system	330
6.8 Rocker arm drive	331
6.8.1 Removing the rocker arm drive	331
6.8.2 Rocker arm drive, exploded view	334
6.8.3 Installing the rocker arm drive	336
6.8.4 Removing the rocker arm drive shaft	339
6.8.5 Installing the rocker arm drive shaft	341
6.9 Cleaning fan	343
6.9.1 Removing the bearing on the side of the cleaning fan (LEXION 560-520), (up to serial number ...)	343
6.9.2 Bearing on the side of the cleaning fan, exploded view (LEXION 560-520), (up to serial number ...)	345
6.9.3 Installing the bearing on the side of the cleaning fan (LEXION 560-520), (up to serial number ...)	345
6.9.4 Removing the cleaning fan centre bearing (LEXION 560-520), (up to serial number ...)	347
6.9.5 Cleaning fan centre bearing, exploded view (LEXION 560-520), (up to serial number ...)	347
6.9.6 Installing the cleaning fan centre bearing (LEXION 560-520), (up to serial number ...)	348
6.9.7 Removing the fan shaft (LEXION 560-520), (up to serial number ...)	349
6.9.8 Installing the fan shaft (LEXION 560-520), (up to serial number ...)	351

6.9.9	Removing the fan rotors (LEXION 560-520), (up to serial number ...)	352
6.9.10	Installing the fan rotors (LEXION 560-520), (up to serial number ...)	353
6.9.11	Removing the bearing on the side of the cleaning fan (LEXION 560-520), (from serial number ...)	354
6.9.12	Bearing on the side of the cleaning fan, exploded view (LEXION 560-520), (from serial number ...)	355
6.9.13	Installing the bearing on the side of the cleaning fan (LEXION 560-520), (from serial number ...)	356
6.9.14	Removing the fan shaft (LEXION 560-520), (from serial number ...)	358
6.9.15	Installing the fan shaft (LEXION 560-520), (from serial number ...)	359
6.9.16	Removing the fan rotors (LEXION 560-520), (from serial number ...)	360
6.9.17	Installing the fan rotors (LEXION 560-520), (from serial number ...)	361
6.9.18	Removing the bearing on the side of the cleaning fan (LEXION 510)	361
6.9.19	Bearing on the side of the cleaning fan, exploded view (LEXION 510)	363
6.9.20	Installing the bearing on the side of the cleaning fan (LEXION 510)	363
6.9.21	Removing the fan shaft (LEXION 510)	365
6.9.22	Installing the fan shaft (LEXION 510)	367
6.9.23	Removing the wind blades (LEXION 510)	369
6.9.24	Installing the wind blades (LEXION 510)	369
6.10	Cleaning fan special tool	370
6.10.1	Installing the bearing on the side of the cleaning fan	370
6.10.2	Removing the fan shaft (LEXION 560-520), (up to serial number ...)	370
6.10.3	Removing the bearing on the side of the cleaning fan (LEXION 560-520), (from serial number ...)	371

7 Grain delivery

7.1	Returns elevator	373
7.1.1	Removing the returns elevator chain	373
7.1.2	Installing the returns elevator chain	375
7.1.3	Removing the top returns auger	376
7.1.4	Installing the top returns auger	378
7.1.5	Removing the returns elevator	380
7.1.6	Disassembling the returns elevator	381
7.1.7	Assembling the returns elevator	383
7.1.8	Installing the returns elevator	384
7.1.9	Removing the bottom returns auger	386
7.1.10	Installing the bottom returns auger	388
7.1.11	Removing the returns elevator boot	390
7.1.12	Installing the returns elevator boot	392
7.2	Grain elevator	394
7.2.1	Removing the grain elevator chain	394
7.2.2	Installing the grain elevator chain	396
7.2.3	Removing the grain elevator head	397

7.2.4	Disassembling the grain elevator head	399
7.2.5	Assembling the grain elevator top	400
7.2.6	Installing the grain elevator top	401
7.2.7	Removing the grain elevator shaft	403
7.2.8	Installing the grain elevator shaft	406
7.2.9	Removing the grain elevator boot	408
7.2.10	Installing the grain elevator boot	409
7.2.11	Removing the grain auger	411
7.2.12	Installing the grain auger	413
7.2.13	Removing the grain tank filler auger with angle drive	415
7.2.14	Disassembling the grain tank filler auger with angle drive	418
7.2.15	Grain tank filler auger with angle drive, exploded view	421
7.2.16	Assembling the grain tank filler auger with angle drive	423
7.2.17	Installing the grain tank filler auger with angle drive	426
7.3	Special tool for grain elevator	429
7.3.1	Disassembling the grain elevator top	429
7.4	Grain tank unloading	430
7.4.1	Removing the horizontal grain tank unloading auger	430
7.4.2	Horizontal grain tank unloading auger, exploded view	433
7.4.3	Installing the horizontal grain tank unloading auger	434
7.4.4	Removing the vertical grain tank unloading auger	436
7.4.5	Installing the vertical grain tank unloading auger	436
7.4.6	Removing the grain tank unloading tube auger	437
7.4.7	Installing the grain tank unloading tube auger	438
7.4.8	Removing the grain tank unloading tube	439
7.4.9	Installing the grain tank unloading tube	440
7.4.10	Removing the tube elbow	442
7.4.11	Installing the tube elbow	443
7.4.12	Removing the vertical unloading auger tube	444
7.4.13	Installing the vertical unloading auger tube	446
8	Straw discharge	
8.1	Rigid straw chopper	448
8.1.1	Removing the right straw chopper bearing	448
8.1.2	Right straw chopper bearing assembly, exploded view	450
8.1.3	Installing the right straw chopper bearing	450
8.1.4	Removing the left straw chopper bearing	451
8.1.5	Left straw chopper bearing assembly, exploded view	453
8.1.6	Installing the left straw chopper bearing	453
8.1.7	Removing the cutting cylinder	454
8.1.8	Cutting cylinder, exploded view	455
8.1.9	Pre-assembling the cutting cylinder	456
8.1.10	Installing the cutting cylinder	457
8.2	Special tool for rigid straw chopper	458
8.2.1	Removing the right straw chopper bearing	458
8.2.2	Installing the right straw chopper bearing	459
8.2.3	Removing the left straw chopper bearing	460
8.2.4	Installing the left straw chopper bearing	461

9 Drives

9.1 Drive belts / drive chains	462
9.1.1 Drive diagram, left side	462
9.1.2 Drive system diagram, right side	464
9.1.3 Removing belt (R1)	465
9.1.4 Installing belt (R1)	465
9.1.5 Adjusting belt (R1)	466
9.1.6 Removing belt (R2)	467
9.1.7 Installing belt (R2)	468
9.1.8 Adjusting belt (R2)	469
9.1.9 Removing belt (R3)	470
9.1.10 Installing belt (R3)	471
9.1.11 Adjusting belt (R3)	472
9.1.12 Removing belt (R4)	473
9.1.13 Installing belt (R4)	474
9.1.14 Adjusting belt (R4)	475
9.1.15 Removing belt (R5)	476
9.1.16 Installing belt (R5)	477
9.1.17 Adjusting belt (R5)	478
9.1.18 Removing belt (R6)	479
9.1.19 Installing belt (R6)	479
9.1.20 Adjusting belt (R6)	480
9.1.21 Removing belt (R7)	481
9.1.22 Installing belt (R7)	483
9.1.23 Adjusting belt (R7)	485
9.1.24 Removing belt (R8)	486
9.1.25 Installing belt (R8)	487
9.1.26 Adjusting belt (R8)	487
9.1.27 Removing belt (R9)	488
9.1.28 Installing belt (R9)	490
9.1.29 Adjusting belt (R9)	492
9.1.30 Removing belt (R10)	493
9.1.31 Installing belt (R10)	494
9.1.32 Adjusting belt (R10)	496
9.1.33 Removing chain (K11)	497
9.1.34 Installing chain (K11)	498
9.1.35 Adjusting chain (K11)	498
9.1.36 Removing belt (R12)	499
9.1.37 Installing belt (R12)	500
9.1.38 Adjusting belt (R12)	501
9.1.39 Removing belt (R13)	502
9.1.40 Installing belt (R13)	503
9.1.41 Adjusting belt (R13/R14)	503
9.1.42 Removing belt (R14)	505
9.1.43 Installing belt (R14)	506
9.1.44 Removing belt (R17)	507
9.1.45 Installing belt (R17)	508

9.1.46	Adjusting belt (R17)	509
9.1.47	Removing belt (R18)	510
9.1.48	Installing belt (R18)	511
9.1.49	Adjusting belt (R18)	511
9.1.50	Removing belt (R19)	512
9.1.51	Installing belt (R19)	513
9.1.52	Adjusting belt (R19)	513
9.1.53	Removing belt (R20)	514
9.1.54	Installing belt (R20)	515
9.1.55	Adjusting belt (R20)	518
9.1.56	Removing belt (R22)	519
9.1.57	Installing belt (R22)	519
9.1.58	Adjusting belt (R22)	520
9.1.59	Removing belt (R45)	521
9.1.60	Installing belt (R45)	522
9.1.61	Adjusting belt (R45)	523
9.1.62	Removing belt (R46)	524
9.1.63	Installing belt (R46)	524
9.1.64	Adjusting belt (R46)	525
9.1.65	Removing belt (R48)	526
9.1.66	Installing belt (R48)	527
9.1.67	Adjusting belt (R48)	527
9.1.68	Removing belt (R51)	528
9.1.69	Installing belt (R51)	529
9.1.70	Adjusting belt (R51)	529
9.1.71	Removing belt (R52)	530
9.1.72	Installing belt (R52)	531
9.1.73	Adjusting belt (R52)	532
9.1.74	Removing belt (R53)	533
9.1.75	Installing belt (R53)	534
9.1.76	Adjusting belt (R53)	535
9.1.77	Removing belt (R54)	536
9.1.78	Installing belt (R54)	537
9.1.79	Adjusting belt (R54)	537
9.1.80	Removing chain (K55)	538
9.1.81	Installing chain (K55)	539
9.1.82	Adjusting chain (K55)	539
9.1.83	Removing chain (K56)	540
9.1.84	Installing chain (K56)	541
9.1.85	Adjusting chain (K56)	542
9.1.86	Removing belt (R57)	542
9.1.87	Installing belt (R57)	543
9.1.88	Adjusting belt (R57)	544
9.1.89	Removing belt (R58) (CAT engines C9, 3126B)	545
9.1.90	Installing belt (R58) (CAT engines C9, 3126B)	545
9.1.91	Adjusting belt (R58) (CAT engines C9, C10, 3126B, C13)	546
9.1.92	Removing belt (R58) (CAT engines C10, C13)	547

9.1.93	Installing belt (R58) (CAT engines C10, C13)	548
9.1.94	Removing belt (R59)	549
9.1.95	Installing belt (R59)	549
9.1.96	Adjusting belt (R59)	550
9.2	Special tool for drive belts / drive chains	551
9.2.1	Removing belts (R4), (R52)	551
9.3	Accelerator drum drive	552
9.3.1	Removing the engine output pulley of belt (R54)	552
9.3.2	Engine output pulley of belt (R54), exploded view	553
9.3.3	Installing the engine output pulley of belt (R54)	553
9.3.4	Removing the jockey pulley of belt (R54)	554
9.3.5	Jockey pulley of belt (R54), exploded view	555
9.3.6	Installing the jockey pulley of belt (R54)	556
9.4	Threshing mechanism drive	557
9.4.1	Removing the main intermediate drive shaft	557
9.4.2	Installing the main intermediate drive shaft	559
9.4.3	Removing the driven pulley of belt (R9)	560
9.4.4	Installing the driven pulley of belt (R9)	562
9.4.5	Removing the jockey pulley of belt (R9)	564
9.4.6	Jockey pulley of belt (R9), exploded view	564
9.4.7	Installing the jockey pulley of belt (R9)	565
9.4.8	Removing the guide roller of belt (R9)	566
9.4.9	Guide roller of belt (R9), exploded view	566
9.4.10	Installing the guide roller of belt (R9)	567
9.5	Special tool for threshing mechanism drive	568
9.5.1	Removing the main intermediate drive shaft	568
9.5.2	Installing the main intermediate drive shaft	569
9.5.3	Removing the driven pulley of belt (R9)	570
9.5.4	Installing the driven pulley of belt (R9)	571
9.6	Impeller drive	572
9.6.1	Removing the drive pulley of belt (R5)	572
9.6.2	Drive pulley of belt (R5), exploded view	573
9.6.3	Installing the drive pulley of belt (R5)	573
9.6.4	Removing the driven pulley of belt (R5)	575
9.6.5	Driven pulley of belt (R5), exploded view	576
9.6.6	Installing the driven pulley of belt (R5)	576
9.6.7	Removing the jockey pulley of belt (R5)	578
9.6.8	Jockey pulley of belt (R5), exploded view	578
9.6.9	Installing the jockey pulley of belt (R5)	579
9.7	Special tool for impeller drive	580
9.7.1	Removing the driven pulley of belt (R5)	580
9.7.2	Installing the driven pulley of belt (R5)	581
9.8	Threshing drum drive	582
9.8.1	Removing the threshing drum variable-speed drive (hydraulic)	582
9.8.2	Disassembling the threshing drum variable-speed drive (hydraulic)	584
9.8.3	Threshing drum variable-speed drive (hydraulic), exploded view	586
9.8.4	Assembling the threshing drum variable-speed drive (hydraulic)	588
9.8.5	Installing the threshing drum variable-speed drive (hydraulic)	590

9.8.6	Removing the threshing drum variable-speed drive (spring-loaded)	592
9.8.7	Disassembling the threshing drum variable-speed drive (spring-loaded)	593
9.8.8	Threshing drum variable-speed drive (spring-loaded), exploded view	597
9.8.9	Assembling the threshing drum variable-speed drive (spring-loaded)	599
9.8.10	Installing the threshing drum variable-speed drive (spring-loaded)	604
9.8.11	Removing the threshing drum variable-speed intermediate drive	605
9.8.12	Disassembling the threshing drum variable-speed intermediate drive	606
9.8.13	Threshing drum variable-speed intermediate drive, exploded view	608
9.8.14	Assembling the threshing drum variable-speed intermediate drive	609
9.8.15	Installing the threshing drum variable-speed drive intermediate drive	610
9.8.16	Removing the driven pulley of belt (R53), without threshing drum reduction gearbox	611
9.8.17	Installing the driven pulley of belt (R53) (without threshing drum reduction gearbox)	612
9.8.18	Removing the driven pulley of belt (R53) (with threshing drum reduction gearbox)	612
9.8.19	Installing the driven pulley of belt (R53) (with threshing drum reduction gearbox)	613
9.8.20	Removing the jockey pulley of belt (R53)	614
9.8.21	Jockey pulley of belt (R53), exploded view	614
9.8.22	Installing the jockey pulley of belt (R53)	615
9.8.23	Removing the threshing drum reduction gearbox	615
9.8.24	Disassembling the threshing drum reduction gearbox	617
9.8.25	Threshing drum reduction gearbox, exploded view	620
9.8.26	Assembling the threshing drum reduction gearbox	622
9.8.27	Installing the threshing drum reduction gearbox	626
9.9	Special tools for threshing drum drive	628
9.9.1	Removing the threshing drum variable-speed drive (hydraulic)	628
9.9.2	Installing the threshing drum variable-speed drive (hydraulic)	629
9.9.3	Removing the threshing drum variable-speed drive (spring-loaded)	630
9.9.4	Disassembling the threshing drum variable-speed drive (spring-loaded)	631
9.9.5	Assembling the threshing drum variable-speed drive (spring-loaded)	632
9.9.6	Installing the threshing drum variable-speed drive (spring-loaded)	633
9.9.7	Removing the threshing drum reduction gearbox	634
9.9.8	Assembling the threshing drum reduction gearbox	635
9.9.9	Assembling the threshing drum reduction gearbox	636
9.9.10	Installing the threshing drum reduction gearbox	637
9.9.11	Installing the threshing drum reduction gearbox / filling in oil	637
9.10	Front attachment drive	638
9.10.1	Removing the fixed caliper of front attachment brake (383)	638
9.10.2	Installing the fixed caliper of front attachment brake (383)	638
9.10.3	Removing the front attachment brake disc	639
9.10.4	Installing the front attachment brake disc	640
9.10.5	Removing the rotary coupling of front attachment clutch (441)	641
9.10.6	Disassembling the rotary coupling of front attachment clutch (441)	642
9.10.7	Assembling the rotary coupling of front attachment clutch (441)	643
9.10.8	Installing the rotary coupling of front attachment clutch (441)	645
9.10.9	Removing the front attachment clutch with hydraulic cylinder (352)	645
9.10.10	Disassembling the front attachment clutch with hydraulic cylinder (352)	647
9.10.11	Front attachment clutch with hydraulic cylinder (352), exploded view	649
9.10.12	Assembling the front attachment clutch with hydraulic cylinder (352)	651

9.10.13	Installing the front attachment coupling with hydraulic cylinder (352)	653
9.10.14	Removing the jockey pulley of belt (R7)	655
9.10.15	Jockey pulley of belt (R7), exploded view	656
9.10.16	Installing the jockey pulley of belt (R7)	656
9.10.17	Removing the drive pulley of belt (R2)	657
9.10.18	Disassembling the drive pulley of belt (R2)	659
9.10.19	Drive pulley of belt (R2), exploded view	660
9.10.20	Assembling the drive pulley of belt (R2)	661
9.10.21	Installing the drive pulley of belt (R2)	663
9.10.22	Removing the jockey pulley of belt (R2) or (R3)	664
9.10.23	Jockey pulley of belt (R2) or (R3), exploded view	665
9.10.24	Installing the jockey pulley of belt (R2) or (R3)	666
9.10.25	Removing the front attachment variable-speed drive (hydraulic)	667
9.10.26	Disassembling the front attachment variable-speed drive (hydraulic)	669
9.10.27	Front attachment variable-speed drive (hydraulic), exploded view	671
9.10.28	Assembling the front attachment variable-speed drive (hydraulic)	673
9.10.29	Installing the front attachment variable-speed drive (hydraulic)	676
9.10.30	Removing the front attachment variable-speed drive (spring-loaded)	677
9.10.31	Disassembling the front attachment variable-speed drive (spring-loaded)	679
9.10.32	Front attachment variable-speed drive (spring-loaded), exploded view	682
9.10.33	Assembling the front attachment variable-speed drive (spring-loaded)	684
9.10.34	Installing the front attachment variable-speed drive (spring-loaded)	689
9.10.35	Removing the front attachment variable-speed intermediate drive	690
9.10.36	Disassembling the front attachment variable-speed intermediate drive	691
9.10.37	Front attachment variable-speed intermediate drive, exploded view	693
9.10.38	Assembling the front attachment variable-speed intermediate drive	694
9.10.39	Installing the front attachment variable-speed intermediate drive	696
9.10.40	Removing the driven pulley of belt (R1), (R2) or (R3)	696
9.10.41	Installing the driven pulley of belt (R1), (R2) or (R3)	697
9.10.42	Removing the V-belt pulley of belt (R2) or (R3) (upper feed rake conveyor shaft)	698
9.10.43	Installing the V-belt pulley of belt (R2) or (R3) (upper feed rake conveyor shaft)	698
9.10.44	Removing the feed rake conveyor slip clutch	699
9.10.45	Installing the feed rake conveyor slip clutch	700
9.10.46	Removing the feed rake conveyor slip clutch linings	700
9.10.47	Feed rake conveyor slip clutch, exploded view	701
9.10.48	Installing the feed rake conveyor slip clutch linings	701
9.10.49	Removing the guide roller of belt (R2) or (R3)	703
9.10.50	Guide roller of belt (R2) or (R3), exploded view	704
9.10.51	Installing the guide roller of belt (R2) or (R3)	704
9.10.52	Removing the guide roller of belt (R3)	705
9.10.53	Guide roller of belt (R3), exploded view	706
9.10.54	Installing the guide roller of belt (R3)	707
9.11	Special tools for front attachment drive	708
9.11.1	Disassembling the rotary coupling of front attachment clutch (441)	708
9.11.2	Removing the front attachment clutch with hydraulic cylinder (352)	709
9.11.3	Removing / installing the front attachment clutch with hydraulic cylinder (352)	710
9.11.4	Assembling the front attachment clutch with hydraulic cylinder (352)	711

Buy Now



Our support email:

ebooklibonline@outlook.com