 


**REPAIR  
MANUAL**

***CLAAS***

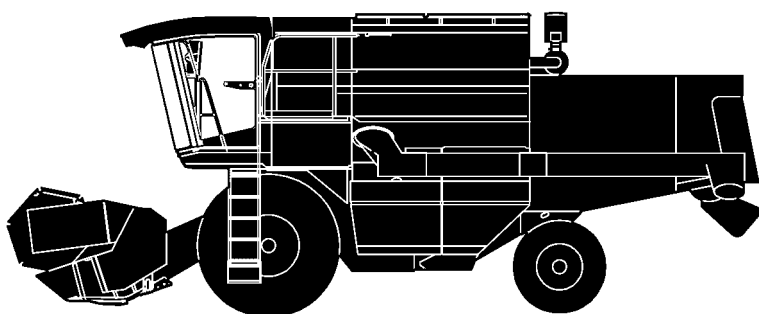

**CLAAS**  
**DOMINATOR 108 VX**  
**DOMINATOR 98 VX**  
**DOMINATOR 88 VX**

**CONTENTS**

Contents .....	0.1.1	Important information on installing parts in the compressor-type air conditioner .....	2.3.2
<b>1. General information</b>		Air conditioner – filling up refrigerant .....	2.3.3
General information .....	1.1.1	Checking / filling up refrigerant oil at the air conditioning compressor .....	2.3.4
Introduction .....	1.1.1	Topping up refrigerant oil .....	2.3.5
Introduction to the CLAAS-REPAIR MANUAL .....	1.1.2	Removing the condenser .....	2.3.5
Key to symbols .....	1.1.3	Installing the condenser .....	2.3.6
Safety rules .....	1.2.1	Removing the air conditioning compressor .....	2.3.7
Important .....	1.2.1	Installing the air conditioning compressor .....	2.3.9
Identification of warning and danger signs .....	1.2.2	Removing the electro-magnetic clutch of the air conditioning compressor .....	2.3.10
Correct use of the machine .....	1.2.2	Air conditioning compressor Sanden Sd 5h 14, exploded view .....	2.3.14
General safety and accident prevention regulations .....	1.2.2	Installing the electro-magnetic clutch of the air conditioning compressor .....	2.3.15
Leaving the machine .....	1.2.3	Air conditioning compressor – removing the cylinder head / cylinder head gasket .....	2.3.17
Compressor-type air conditioner .....	1.2.3	Air conditioning compressor – installing the cylinder head / cylinder head gasket .....	2.3.18
Service .....	1.2.3	Air conditioning compressor – removing the shaft seal .....	2.3.19
Basic rule .....	1.2.3	Air conditioning compressor – installing the shaft seal .....	2.3.21
Hydraulic accumulators .....	1.2.3	Removing the expansion valve .....	2.3.22
General information for repair .....	1.3.1	Air conditioner (cab side), exploded view .....	2.3.24
Cause of trouble .....	1.3.1	Installing the expansion valve .....	2.3.25
Spare parts .....	1.3.1	Removing the thermostat .....	2.3.25
Engine .....	1.3.1	Installing the thermostat .....	2.3.27
Transmission .....	1.3.1	Removing the evaporator .....	2.3.28
Three-phase alternator .....	1.3.1	Installing the evaporator .....	2.3.31
Correct tension of steel roller chains .....	1.3.1	Removing the filter drier .....	2.3.34
Taper ring fasteners (locking cones) .....	1.3.1	Filter drier, exploded view .....	2.3.35
Self-locking bolts (with adhesive-filled micro capsules) .....	1.3.2	Installing the filter drier .....	2.3.35
Liquid locking compound .....	1.3.2	Engine – electric system .....	2.4.1
Correct installation of lock collar bearings Correct installation of adapter sleeve bearings .....	1.3.2	Removing the electric starting motor DOMINATOR 98 VX – PERKINS 1006-60TW, DOMINATOR 88 VX .....	2.4.1
Olive (ferrule) fittings on hydraulic lines .....	1.3.3	Installing the electric starting motor DOMINATOR 98 VX – PERKINS 1006-60TW, DOMINATOR 88 VX .....	2.4.2
Progressive tube fittings on hydraulic lines .....	1.3.3	Removing the electric starting motor DOMINATOR 98 VX – MERCEDES OM 366 LA, DOMINATOR 108 VX .....	2.4.2
Taper fitting connections for hydraulic lines .....	1.3.4	Installing the electric starting motor DOMINATOR 98 VX – MERCEDES OM 366 LA, DOMINATOR 108 VX .....	2.4.4
Welding .....	1.3.4	Alternator .....	2.4.5
Some advice for speedy and correct repair .....	1.3.4	Removing the alternator .....	2.4.6
Torque settings .....	1.4.1	Installing the alternator .....	2.4.7
Bolts .....	1.4.1	Steering .....	2.5.1
Hydraulic fittings .....	1.4.2	Visible damage on the Orbitrol steering unit .....	2.5.1
Specifications .....	1.5.1	External leaks .....	2.5.1
Lubricants chart .....	1.5.1	Internal leaks .....	2.5.1
<b>2. Operator's platform</b>			
Hand brake .....	2.1.1		
Removing the hand brake rope .....	2.1.1		
Hand brake, exploded view .....	2.1.4		
Installing the hand brake rope .....	2.1.5		
Foot brake .....	2.2.1		
Bleeding the brake system .....	2.2.1		
Removing the main brake cylinder .....	2.2.3		
Installing the main brake cylinder .....	2.2.3		
Air conditioner .....	2.3.1		
Important information on compressor-type air conditioner .....	2.3.1		

Removing the steering column .....	2.5.2	Removing the right-hand threshing drum bearing .....	3.3.11
Dismantling the steering column .....	2.5.6	Dismantling the right-hand threshing drum bearing .....	3.3.15
Steering, exploded view .....	2.5.7	Right-hand threshing drum bearing, exploded view .....	3.3.15
Assembling the steering column .....	2.5.8	Assembling the right-hand threshing drum bearing .....	3.3.16
Installing the steering column .....	2.5.9	Installing the right-hand threshing drum bearing .....	3.3.17
Bleeding the steering hydraulic system .....	2.5.12	Removing the threshing drum .....	3.3.19
Checking the pressure control valve at the steering valve block .....	2.5.13	Replacing the threshing drum rasp bars .....	3.3.24
Removing the steering unit valve block .....	2.5.15	Replacing the threshing drum shaft .....	3.3.26
Dismantling the steering unit valve block .....	2.5.15	Threshing drum, exploded view .....	3.3.27
Assembling the steering unit valve block .....	2.5.18	Installing the threshing drum .....	3.3.28
Installing the steering unit valve block .....	2.5.20	Impeller .....	3.4.1
Removing the steering unit .....	2.5.20	Removing the left-hand impeller bearing .....	3.4.1
Installing the steering unit .....	2.5.22	Installing the left-hand impeller bearing .....	3.4.2
<b>3. Threshing mechanism</b>		Removing the right-hand impeller bearing .....	3.4.3
Feeder housing .....	3.1.1	Installing the right-hand impeller bearing .....	3.4.4
Removing the feeder housing .....	3.1.1	Removing the impeller .....	3.4.5
Installing the feeder housing .....	3.1.4	Dismantling the impeller .....	3.4.5
Removing the upper feed rake shaft .....	3.1.5	Impeller, exploded view .....	3.4.7
Upper feed rake shaft, exploded view		Assembling the impeller .....	3.4.8
DOMINATOR 108 VX .....	3.1.10	Installing the impeller .....	3.4.9
Upper feed rake shaft, exploded view			
DOMINATOR 98 VX / 88 VX .....	3.1.11	<b>4. Cleaning</b>	
Installing the upper feed rake shaft .....	3.1.12	Under-walker return floor .....	4.1.1
Removing the lower feed rake roller .....	3.1.14	Removing the under-walker return floor	
Dismantling the lower feed rake roller .....	3.1.17	DOMINATOR 88 VX .....	4.1.1
Lower feed rake roller, exploded view .....	3.1.19	Front rocker arm, exploded view .....	4.1.2
Assembling the lower feed rake roller .....	3.1.19	Rear rocker arm, exploded view .....	4.1.2
Installing the lower feed rake roller .....	3.1.20	Installing the under-walker return floor .....	4.1.3
Replacing the feeder chains .....	3.1.22	Straw walker .....	4.2.1
Removing the wooden ledges .....	3.1.24	Removing the straw walker racks .....	4.2.1
Installing the wooden ledges .....	3.1.26	Installing the straw walker racks .....	4.2.3
Removing the intermediate floor .....	3.1.27	Removing the front straw walker shaft .....	4.2.5
Installing the intermediate floor .....	3.1.31	Installing the front straw walker shaft .....	4.2.7
Replacing the slide rails .....	3.1.32	Removing the rear straw walker shaft .....	4.2.8
Removing the intermediate drive shaft .....	3.1.33	Installing the rear straw walker shaft .....	4.2.11
Installing the intermediate drive shaft .....	3.1.36	Dismantling the straw walker shafts (for straw walker shafts with ball bearings) .....	4.2.14
Concave .....	3.2.1	Straw walker bearing, exploded view .....	4.2.15
Removing the stone trap .....	3.2.1	Assembling the straw walker shafts (for straw walker shafts with ball bearings) .....	4.2.15
Installing the stone trap .....	3.2.2	Intensive separation system .....	4.3.1
Removing the concave .....	3.2.3	Removing the front intensive separation system shaft .....	4.3.1
Installing the concave .....	3.2.7	Installing the front intensive separation system shaft .....	4.3.4
Basic setting of concave .....	3.2.9	Removing the rear intensive separation system shaft .....	4.3.6
Threshing drum .....	3.3.1	Installing the rear intensive separation system shaft .....	4.3.8
Removing the left-hand threshing drum bearing .....	3.3.1	Dismantling the intensive separation system shaft .....	4.3.10
Dismantling the left-hand threshing drum bearing .....	3.3.5	Assembling the intensive separation system shaft .....	4.3.11
Left-hand threshing drum bearing, exploded view .....	3.3.6		
Assembling the left-hand threshing drum bearing .....	3.3.6		
Installing the left-hand threshing drum bearing .....	3.3.7		

Removing the intensive separation system control shaft .....	4.3.11	Installing the fan shaft DOMINATOR 108 VX .....	4.8.13
Installing the intensive separation system control shaft .....	4.3.12	Removing the centre cleaning fan bearing DOMINATOR 108 VX .....	4.8.15
Replacing the agitator tines .....	4.3.12	Centre cleaning fan bearing, exploded view .....	4.8.16
Sieve pan .....	4.4.1	Installing the centre cleaning fan bearing DOMINATOR 108 VX .....	4.8.16
Removing the upper sieves With 3-D cleaning system .....	4.4.1	Removing the fan rotors DOMINATOR 108 VX .....	4.8.16
Installing the upper sieves With 3-D cleaning system .....	4.4.1	Installing the fan rotors DOMINATOR 108 VX .....	4.8.17
Removing the upper sieves Without 3-D cleaning system .....	4.4.1	Removing the fan housing DOMINATOR 108 VX .....	4.8.17
Installing the upper sieves Without 3-D cleaning system .....	4.4.1	Installing the fan housing DOMINATOR 108 VX .....	4.8.18
Removing the lower sieves With 3-D cleaning system .....	4.4.2	Removing the wind boards DOMINATOR 108 VX .....	4.8.19
Installing the lower sieves With 3-D cleaning system .....	4.4.2	Installing the wind boards DOMINATOR 108 VX .....	4.8.19
Removing the lower sieves Without 3-D cleaning system .....	4.4.3	Removing the fan shaft DOMINATOR 98 – 88 VX .....	4.8.20
Installing the lower sieves Without 3-D cleaning system .....	4.4.3	Installing the fan shaft DOMINATOR 98 – 88 VX .....	4.8.20
Removing the 3-D cleaning system frame .....	4.4.4	Removing the fan spiders DOMINATOR 98 – 88 VX .....	4.8.21
Cleaning system frame, exploded view .....	4.4.7	Installing the fan spiders DOMINATOR 98 – 88 VX .....	4.8.21
Installing the 3-D cleaning system frame .....	4.4.8	Removing the fan rotor DOMINATOR 98 – 88 VX .....	4.8.22
Removing the sieve pan .....	4.4.13	Installing the fan rotor DOMINATOR 98 – 88 VX .....	4.8.23
Installing the sieve pan .....	4.4.17	Fan blades DOMINATOR 98 – 88 VX .....	4.8.23
Preparation floor .....	4.5.1	Removing the fan housing DOMINATOR 98 – 88 VX .....	4.8.24
Removing the preparation floor .....	4.5.1	Installing the fan housing DOMINATOR 98 – 88 VX .....	4.8.25
Preparation floor, exploded view .....	4.5.5	Removing the wind boards DOMINATOR 98 – 88 VX .....	4.8.26
Installing the preparation floor .....	4.5.6	Installing the wind boards DOMINATOR 98 – 88 VX .....	4.8.26
3-D cleaning system .....	4.6.1		
Removing the 3-D cleaning system .....	4.6.1		
Installing the 3-D cleaning system .....	4.6.1		
3-D sieve pan suspension and cleaning system, exploded view .....	4.6.2		
Adjusting the 3-D cleaning system .....	4.6.4		
Adjusting the pivot arm using the «3-D gauge» .....	4.6.5		
Rocker arm drive .....	4.7.1		
Removing the rocker arm drive .....	4.7.1		
Rocker arm drive, exploded view .....	4.7.5		
Installing the rocker arm drive .....	4.7.7		
Cleaning fan .....	4.8.1		
Removing the bearings to the right-hand and left-hand side of cleaning fan .....	4.8.1		
Self-aligning ball bearing, exploded view .....	4.8.4		
Installing the bearings to the right-hand and left-hand side of cleaning fan .....	4.8.4		
Removing the fan blast reduction DOMINATOR 108 VX .....	4.8.6		
Fan blast reduction, exploded view DOMINATOR 108 VX .....	4.8.8		
Installing the fan blast reduction DOMINATOR 108 VX .....	4.8.9		
Removing the fan shaft DOMINATOR 108 VX .....	4.8.11		
		<b>5. Grain delivery</b>	
		Returns elevator .....	5.1.1
		Removing the returns elevator chain .....	5.1.1
		Installing the returns elevator chain .....	5.1.3
		Removing the upper returns auger .....	5.1.3
		Installing the upper returns auger .....	5.1.6
		Removing the returns elevator .....	5.1.7
		Dismantling the returns elevator .....	5.1.10
		Assembling the returns elevator .....	5.1.12
		Installing the returns elevator .....	5.1.13
		Removing the lower returns auger .....	5.1.15
		Installing the lower returns auger .....	5.1.19
		Grain elevator .....	5.2.1
		Removing the grain elevator chain DOMINATOR 98 VX – 88 VX .....	5.2.1

Installing the grain elevator chain DOMINATOR 98 VX – 88 VX .....	5.2.3	Chaff spreader .....	5.4.1
Removing the grain elevator chain DOMINATOR 108 VX .....	5.2.3	Removing the chaff spreader flange housing .....	5.4.1
Installing the grain elevator chain DOMINATOR 108 VX .....	5.2.5	Dismantling the chaff spreader flange housing .....	5.4.2
Removing the grain elevator top DOMINATOR 98 VX – 88 VX .....	5.2.6	Assembling the chaff spreader flange housing .....	5.4.3
Removing the grain elevator top DOMINATOR 108 VX .....	5.2.7	Installing the chaff spreader flange housing .....	5.4.5
Dismantling the grain elevator top .....	5.2.7	Removing the chaff spreader drive shaft .....	5.4.6
Grain elevator top, exploded view .....	5.2.11	Dismantling the chaff spreader drive shaft .....	5.4.7
Assembling the grain elevator top .....	5.2.12	Chaff spreader, exploded view .....	5.4.8
Installing the grain elevator top DOMINATOR 98 VX – 88 VX .....	5.2.15	Assembling the chaff spreader drive shaft .....	5.4.10
Installing the grain elevator top DOMINATOR 108 VX .....	5.2.15	Installing the chaff spreader drive shaft .....	5.4.10
Removing the grain elevator shaft DOMINATOR 108 VX .....	5.2.16	<b>6. Grain delivery</b>	
Installing the grain elevator shaft DOMINATOR 108 VX .....	5.2.19	Straw spreader .....	6.1.1
Removing the grain elevator boot DOMINATOR 98 VX – 88 VX .....	5.2.20	Removing the straw spreader .....	6.1.1
Installing the grain elevator boot DOMINATOR 98 VX – 88 VX .....	5.2.23	Dismantling the straw spreader .....	6.1.2
Removing the grain elevator boot DOMINATOR 108 VX .....	5.2.23	Straw spreader, exploded view .....	6.1.5
Installing the grain elevator boot DOMINATOR 108 VX .....	5.2.25	Assembling the straw spreader .....	6.1.7
Removing the grain auger .....	5.2.26	Installing the straw spreader .....	6.1.9
Installing the grain auger .....	5.2.29	Straw chopper .....	6.2.1
Removing the grain tank filler auger DOMINATOR 98 VX – 88 VX .....	5.2.31	Removing the right-hand straw chopper bearing .....	6.2.1
Removing the grain tank filler auger DOMINATOR 108 VX .....	5.2.32	Removing the left-hand straw chopper bearing .....	6.2.3
Dismantling the angle drive for grain tank filler auger DOMINATOR 108 VX – 88 VX .....	5.2.34	Dismantling the left-hand / right-hand straw chopper bearing .....	6.2.5
Grain tank filler auger, exploded view .....	5.2.36	Assembling the left-hand / right-hand straw chopper bearing .....	6.2.5
Assembling the angle drive for grain tank filler auger DOMINATOR 108 VX – 88 VX .....	5.2.37	Installing the right-hand straw chopper bearing .....	6.2.6
Installing the grain tank filler auger DOMINATOR 98 VX – 88 VX .....	5.2.39	Installing the left-hand straw chopper bearing .....	6.2.8
Installing the grain tank filler auger DOMINATOR 108 VX .....	5.2.40	Removing the cutting cylinder .....	6.2.10
Grain tank unloading .....	5.3.1	Cutting cylinder, exploded view .....	6.2.12
Removing the grain tank unloading auger .....	5.3.1	Pre-assembling the cutting cylinder .....	6.2.13
Installing the grain tank unloading auger .....	5.3.4	Installing the cutting cylinder .....	6.2.14
Removing the grain tank unloading tube auger .....	5.3.5	<b>7. Drives</b>	
Installing the grain tank unloading tube auger .....	5.3.7	Drive belts .....	7.1.1
Removing the grain tank unloading tube .....	5.3.7	General instructions .....	7.1.1
Installing the grain tank unloading tube .....	5.3.9	Drive diagram, left-hand side .....	7.1.2
Removing the lateral augers DOMINATOR 108 VX .....	5.3.10	Drive diagram, right-hand side .....	7.1.3
Installing the lateral augers DOMINATOR 108 VX .....	5.3.12	Drive belts on left-hand side .....	7.2.1
		Removing the cutterbar drive belt (1) .....	7.2.1
		Installing and adjusting the cutterbar drive belt (1) .....	7.2.3
		Removing the compressor drive belt (2) .....	7.2.4
		Installing and adjusting the compressor drive belt (2) .....	7.2.4
		Removing the hydrostatic ground drive belt (3) .....	7.2.5
		Installing and adjusting the hydrostatic ground drive belt (3) .....	7.2.7
		Removing the drive belt (4) for the working hydraulics pump .....	7.2.9

Installing and adjusting the drive belt (4) for the working hydraulics pump .....	7.2.9	Removing the threshing drum speed control belt (25) (excluding intermediate drive) .....	7.3.13
Removing the threshing mechanism drive belt (5) .....	7.2.10	Installing and tensioning the threshing drum speed control belt (25) (excluding intermediate drive) .....	7.3.14
Installing and adjusting the threshing mechanism drive belt (5) .....	7.2.12	Removing the radiator chaff screen drive belt (26) .....	7.3.15
Removing the grain tank discharge drive belt (6) .....	7.2.13	Installing the radiator chaff screen drive belt (26) .....	7.3.15
Installing and adjusting the grain tank discharge drive belt (6) .....	7.2.15	Removing the radiator chaff screen intermediate drive belt (27) .....	7.3.16
Removing the sieve pan / fan intermediate drive belt (7) .....	7.2.16	Installing and adjusting the radiator chaff screen intermediate drive belt (27) .....	7.3.16
Installing and adjusting the sieve pan / fan intermediate drive belt (7) .....	7.2.16	Removing the grain elevator top drive chain (30) DOMINATOR 108 VX .....	7.3.17
Removing the fan drive belt (8) .....	7.2.17	Installing the grain elevator top drive chain (30) DOMINATOR 108 VX .....	7.3.17
Installing the fan drive belt (8) .....	7.2.18	Removing the grain elevator top drive chain (30) DOMINATOR 98 VX / 88 VX .....	7.3.18
Removing the sieve pan intermediate drive belt (9) .....	7.2.19	Installing the grain elevator top drive chain (30) DOMINATOR 98 VX / 88 VX .....	7.3.19
Installing and adjusting the sieve pan intermediate drive belt (9) .....	7.2.19	Removing the grain tank unloading intermediate drive chain (31) .....	7.3.19
Removing the sieve pan drive belt (10) .....	7.2.20	Installing and adjusting the grain tank unloading intermediate drive chain (31) .....	7.3.19
Installing and adjusting the sieve pan drive belt (10) .....	7.2.21	Removing the grain tank unloading intermediate drive chain (32) DOMINATOR 108 VX .....	7.3.20
Removing the straw walker drive belt (11) .....	7.2.21	Installing and adjusting the grain tank unloading intermediate drive chain (32) DOMINATOR 108 VX .....	7.3.20
Installing and adjusting the straw walker drive belt (11) .....	7.2.22	Removing the returns drive chain (33) .....	7.3.21
Removing the intensive separation system drive belt (12) .....	7.2.23	Installing and adjusting the returns drive chain (33) .....	7.3.21
Installing and adjusting intensive separation drive belt (12) .....	7.2.24	Cutterbar drive .....	7.4.1
Removing the lateral auger drive belt (13) DOMINATOR 88 VX .....	7.2.25	Removing the cutterbar clutch .....	7.4.1
Removing the straw spreader drive belt (14) .....	7.2.25	Cutterbar clutch, exploded view .....	7.4.6
Installing and adjusting the straw spreader drive belt (14) .....	7.2.26	Installing the cutterbar clutch .....	7.4.9
Removing the chaff spreader drive belt (15) .....	7.2.26	Removing the front cutterbar drive pulley (DOMINATOR 108 VX) .....	7.4.15
Installing and adjusting the chaff spreader drive belt (15) .....	7.2.27	Installing the front cutterbar drive pulley (DOMINATOR 108 VX) .....	7.4.15
Removing the chaff spreader drive belt (16) .....	7.2.27	Removing the front cutterbar drive pulley (DOMINATOR 98 VX / 88 VX) .....	7.4.15
Installing and adjusting the chaff spreader drive belt (16) .....	7.2.27	Installing the front cutterbar drive pulley (DOMINATOR 98 VX / 88 VX) .....	7.4.16
Drive belts on right-hand side .....	7.3.1	Removing the cutterbar drive deflection pulley .....	7.4.16
Removing the straw chopper drive belt (20) .....	7.3.1	Cutterbar drive deflection pulley, exploded view .....	7.4.16
Installing and adjusting the straw chopper drive belt (20) .....	7.3.2	Installing the cutterbar drive deflection pulley .....	7.4.17
Removing the straw chopper intermediate drive belt (21) .....	7.3.3	Removing the cutterbar drive slip clutch .....	7.4.17
Installing and adjusting the straw chopper intermediate drive belt (21) .....	7.3.3	Dismantling the cutterbar drive slip clutch .....	7.4.17
Removing the suction blower drive belt (22) .....	7.3.4	Cutterbar drive slip clutch, exploded view .....	7.4.19
Installing and adjusting suction blower drive belt (22) .....	7.3.5	Assembling the cutterbar drive slip clutch .....	7.4.19
Removing the threshing drum speed control belt (23) .....	7.3.6	Installing the cutterbar drive slip clutch .....	7.4.21
Installing and adjusting the threshing drum speed control belt (23) .....	7.3.8	Removing the cutterbar drive jockey pulley .....	7.4.22
Removing the threshing drum drive belt (24) .....	7.3.10	Cutterbar drive jockey pulley, exploded view .....	7.4.22
Installing and adjusting the threshing drum drive belt (24) .....	7.3.12	Installing the cutterbar drive jockey pulley .....	7.4.22

Left-hand threshing mechanism drive .....	7.5.1	Removing the intensive separation system drive deflection pulley .....	7.9.1
Removing the threshing mechanism drive pulley .....	7.5.1	Installing the intensive separation system drive deflection pulley .....	7.9.2
Installing the threshing mechanism drive pulley .....	7.5.1	Removing the intensive separation system drive jockey pulley .....	7.9.2
Removing the threshing mechanism drive jockey pulley .....	7.5.1	Installing the intensive separation system drive jockey pulley .....	7.9.2
Threshing mechanism drive jockey pulley, exploded view .....	7.5.2	Straw walker drive, exploded view .....	7.9.3
Installing the threshing mechanism drive jockey pulley .....	7.5.3	Sieve pan drive .....	7.10.1
Right-hand threshing mechanism drive .....	7.6.1	Removing the straw walker / sieve pan intermediate drive jockey pulley .....	7.10.1
Removing the threshing drum variable-speed drive (spring-loaded) .....	7.6.1	Dismantling the straw walker / sieve pan intermediate drive jockey pulley .....	7.10.1
Dismantling the threshing drum variable-speed drive (spring-loaded) .....	7.6.3	Assembling the straw walker / sieve pan intermediate drive jockey pulley .....	7.10.2
Threshing drum variable-speed drive (spring-loaded), exploded view .....	7.6.6	Installing the straw walker / sieve pan intermediate drive jockey pulley .....	7.10.2
Assembling the threshing drum variable-speed drive (spring-loaded) .....	7.6.7	Removing the straw walker / sieve pan intermediate drive V-belt pulley package .....	7.10.3
Installing the threshing drum variable-speed drive (spring-loaded) .....	7.6.11	Dismantling the straw walker / sieve pan intermediate drive V-belt pulley package .....	7.10.3
Removing the threshing drum variable-speed drive (hydraulic) .....	7.6.14	Assembling the straw walker / sieve pan intermediate drive V-belt pulley package .....	7.10.4
Dismantling the threshing drum variable-speed drive (hydraulic) .....	7.6.16	Installing the straw walker / sieve pan intermediate drive V-belt pulley package .....	7.10.5
Threshing drum variable-speed drive (hydraulic), exploded view .....	7.6.18	Removing the sieve pan drive deflection pulley .....	7.10.5
Assembling the threshing drum variable-speed drive (hydraulic) .....	7.6.20	Straw walker / sieve pan intermediate drive, exploded view .....	7.10.6
Installing the threshing drum variable-speed drive (hydraulic) .....	7.6.22	Installing the sieve pan drive deflection pulley .....	7.10.7
Removing the threshing drum drive jockey pulley without threshing drum speed reduction kit (DOMINATOR 108 VX), with threshing drum speed reduction kit (DOMINATOR 108 VX – 88 VX) .....	7.6.24	Removing the sieve pan drive jockey pulley .....	7.10.7
Threshing drum drive jockey pulley, exploded view .....	7.6.24	Sieve pan drive jockey pulley, exploded view .....	7.10.8
Installing the threshing drum drive jockey pulley without threshing drum speed reduction kit (DOMINATOR 108 VX), with threshing drum speed reduction kit (DOMINATOR 108 VX – 88 VX) .....	7.6.24	Installing the sieve pan drive jockey pulley .....	7.10.8
Threshing drum speed reduction kit .....	7.7.1	Fan drive .....	7.11.1
Removing the threshing drum speed reduction kit .....	7.7.1	Removing the fan adjustment (electrical) (Version A) .....	7.11.1
Dismantling the threshing drum speed reduction kit .....	7.7.2	Dismantling the fan adjustment (electrical) (Version A) .....	7.11.2
Threshing drum speed reduction kit, exploded view .....	7.7.7	Fan adjustment (electrical), exploded view (Version A) .....	7.11.3
Assembling the threshing drum speed reduction kit .....	7.7.8	Assembling the fan adjustment (electrical) (Version A) .....	7.11.4
Installing the threshing drum speed reduction kit .....	7.7.14	Installing the fan adjustment (electrical) (Version A) .....	7.11.7
Sieve pan intermediate drive .....	7.8.1	Removing the fan adjustment (electrical) (Version B) .....	7.11.8
Removing the sieve pan / fan intermediate drive jockey pulley .....	7.8.1	Dismantling the fan adjustment (electrical) (Version B) .....	7.11.9
Sieve pan / fan intermediate drive jockey pulley, exploded view .....	7.8.1	Fan adjustment (electrical), exploded view (Version B) .....	7.11.11
Installing the sieve pan / fan intermediate drive jockey pulley .....	7.8.1	Assembling the fan adjustment (electrical) (Version B) .....	7.11.12
Straw walker drive .....	7.9.1	Installing the fan adjustment (electrical) (Version B) .....	7.11.14
Removing the straw walker drive jockey pulley .....	7.9.1		
Installing the straw walker drive jockey pulley .....	7.9.1		

Removing the variable-speed fan drive (electrical) .....	7.11.15	Removing the grain tank unloading drive jockey pulley (DOMINATOR 108 VX) .....	7.13.20
Dismantling the variable-speed fan drive (electrical) .....	7.11.16	Grain tank unloading drive jockey pulley, exploded view (DOMINATOR 108 VX) .....	7.13.20
Variable speed fan drive (electrical), exploded view .....	7.11.18	Installing the grain tank unloading drive jockey pulley (DOMINATOR 108 VX) .....	7.13.20
Assembling the variable-speed fan drive (electrical) .....	7.11.19	Removing the grain tank unloading drive jockey pulley (DOMINATOR 98 VX / 88 VX) .....	7.13.21
Installing the variable-speed fan drive (electrical) .....	7.11.21	Grain tank unloading drive jockey pulley, exploded view (DOMINATOR 98 VX / 88 VX) .....	7.13.21
Aligning the variable speed fan pulleys .....	7.11.25	Installing the grain tank unloading drive jockey pulley (DOMINATOR 98 VX / 88 VX) .....	7.13.21
Removing the variable-speed fan drive (spring-loaded) .....	7.11.26	Removing the grain tank unloading auger safety clutch .....	7.13.22
Dismantling the variable-speed fan drive (spring-loaded) .....	7.11.27	Dismantling the grain tank unloading auger safety clutch .....	7.13.23
Variable-speed fan drive (spring-loaded), exploded view .....	7.11.29	Grain tank unloading auger safety clutch, exploded view .....	7.13.23
Assembling the variable-speed fan drive (spring-loaded) .....	7.11.30	Assembling the grain tank unloading auger safety clutch .....	7.13.24
Installing the variable-speed fan drive (spring-loaded) .....	7.11.32	Installing the grain tank unloading auger safety clutch .....	7.13.24
Chaff spreader drive .....	7.12.1	Removing the lateral auger drive (DOMINATOR 108 VX) .....	7.13.25
Removing the chaff spreader drive bracket .....	7.12.1	Installing the lateral auger drive (DOMINATOR 108 VX) .....	7.13.25
Dismantling the chaff spreader drive bracket .....	7.12.2	Straw chopper drive .....	7.14.1
Assembling the chaff spreader drive bracket .....	7.12.3	Removing the straw chopper intermediate drive jockey pulley .....	7.14.1
Installing the chaff spreader drive bracket .....	7.12.3	Straw chopper intermediate drive jockey pulley, exploded view .....	7.14.1
Removing the chaff spreader drive jockey pulley .....	7.12.4	Installing the straw chopper intermediate drive jockey pulley .....	7.14.1
Dismantling the chaff spreader drive jockey pulley .....	7.12.4	Removing the straw chopper intermediate drive .....	7.14.2
Chaff spreader drive, exploded view .....	7.12.6	Dismantling the straw chopper intermediate drive .....	7.14.3
Assembling the chaff spreader drive jockey pulley .....	7.12.7	Assembling the straw chopper intermediate drive .....	7.14.5
Installing the chaff spreader drive jockey pulley .....	7.12.7	Installing the straw chopper intermediate drive .....	7.14.7
Grain tank unloading drive .....	7.13.1	Removing the straw chopper drive jockey pulley .....	7.14.7
Removing the upper angle drive of grain tank unloading .....	7.13.1	Straw chopper intermediate drive, exploded view .....	7.14.8
Dismantling the upper angle drive of grain tank unloading .....	7.13.2	Installing the straw chopper drive jockey pulley .....	7.14.9
Upper angle drive of grain tank unloading, assembled .....	7.13.3	Straw spreader drive .....	7.15.1
Assembling the upper angle drive of grain tank unloading .....	7.13.4	Removing the straw spreader tensioning device .....	7.15.1
Installing the upper angle drive of grain tank unloading .....	7.13.6	Dismantling the straw spreader tensioning device .....	7.15.1
Removing the lower angle drive of grain tank unloading .....	7.13.7	Straw spreader tensioning device, exploded view .....	7.15.2
Dismantling the lower angle drive of grain tank unloading .....	7.13.8	Assembling the straw spreader tensioning device .....	7.15.3
Lower angle drive of grain tank unloading, assembled .....	7.13.12	Installing the straw spreader tensioning device .....	7.15.3
Assembling the lower angle drive of grain tank unloading .....	7.13.13	Rotary radiator screen drive .....	7.16.1
Installing the lower angle drive of grain tank unloading .....	7.13.15	Removing the rotary radiator screen drive shaft .....	7.16.1
Removing the grain tank intermediate drive shaft .....	7.13.16	Dismantling the rotary radiator screen drive shaft .....	7.16.2
Installing the grain tank intermediate drive shaft .....	7.13.18	Rotary radiator screen drive, exploded view .....	7.16.6
		Assembling the rotary radiator screen drive shaft .....	7.16.7
		Installing the rotary radiator screen drive shaft .....	7.16.9




Rotary radiator screen suction blower .....	7.17.1	Removing the transmission gearbox .....	7.20.20
Removing the rotary radiator screen		Dismantling the gearbox	
suction blower .....	7.17.1	(DOMINATOR 108 VX) .....	7.20.26
Dismantling the rotary radiator screen		Assembling the gearbox	
suction blower .....	7.17.1	DOMINATOR 108 VX .....	7.20.37
Rotary radiator screen suction blower,		Dismantling the gearbox	
exploded view .....	7.17.4	(DOMINATOR 98 / 88 VX) .....	7.20.44
Assembling the rotary radiator screen		Assembling the gearbox	
suction blower .....	7.17.5	(DOMINATOR 98 VX / 88 VX) .....	7.20.57
Installing the rotary radiator screen		Dismantling the differential	
suction blower .....	7.17.7	(DOMINATOR 108 VX – 88 VX) .....	7.20.67
Hydraulic pump drive .....	7.18.1	Differential, exploded view .....	7.20.69
Removing the hydrostatic ground drive		Assembling the differential	
jockey pulley		(DOMINATOR 108 VX – 88 VX) .....	7.20.70
(DOMINATOR 108 VX) .....	7.18.1	Installing the gearbox .....	7.20.73
Hydrostatic ground drive jockey pulley,		Parking brake .....	7.21.1
exploded view		Removing the brake units for the parking brake	
(DOMINATOR 108 VX) .....	7.18.1	with drum brakes	
Installing the hydrostatic ground drive		(DOMINATOR 108 VX / 88 VX) .....	7.21.1
jockey pulley		Installing the brake units for the parking brake	
(DOMINATOR 108 VX) .....	7.18.2	with drum brakes	
Removing the hydrostatic ground drive		(DOMINATOR 108 VX / 88 VX) .....	7.21.3
jockey pulley		Removing the brake units for the parking brake	
(DOMINATOR 98 VX / 88 VX) .....	7.18.3	with disc brakes	
Hydrostatic ground drive jockey pulley,		(DOMINATOR 98 VX) .....	7.21.5
exploded view		Installing the brake units for the parking brake	
(DOMINATOR 98 VX / 88 VX) .....	7.18.4	with disc brakes	
Installing the hydrostatic ground drive		(DOMINATOR 98 VX) .....	7.21.6
jockey pulley		Foot brake .....	7.22.1
(DOMINATOR 98 / 88 VX) .....	7.18.5	Bleeding the brake units .....	7.22.1
Final drives .....	7.19.1	Removing the brake shoes from the foot brake	
Removing the final drives .....	7.19.1	with drum brakes	
Dismantling the final drives		(DOMINATOR 108 VX / 88 VX) .....	7.22.2
DOMINATOR 108 VX .....	7.19.2	Installing the brake shoes from the foot brake	
Final drive, exploded view		with drum brakes	
DOMINATOR 108 VX .....	7.19.11	(DOMINATOR 108 VX / 88 VX) .....	7.22.4
Assembling the final drives		Removing the wheel brake ram	
DOMINATOR 108 VX .....	7.19.13	with drum brakes	
Dismantling the final drives		(DOMINATOR 108 VX / 88 VX) .....	7.22.5
DOMINATOR 98 VX / 88 VX .....	7.19.22	Installing the wheel brake ram	
Assembling the final drives		with drum brakes	
DOMINATOR 98 VX / 88 VX .....	7.19.29	(DOMINATOR 108 VX / 88 VX) .....	7.22.6
Installing the final drives .....	7.19.37	Removing the brake cradle	
Transmission gearbox .....	7.20.1	with disc brakes (DOMINATOR 98 VX) .....	7.22.6
Lowering the transmission gearbox		Installing the brake cradle	
with drum brakes		with disc brakes (DOMINATOR 98 VX) .....	7.22.8
(DOMINATOR 108 VX / 88 VX) .....	7.20.1	Removing the brake pads	
Raising the transmission gearbox		with disc brakes (DOMINATOR 98 VX) .....	7.22.9
with drum brakes		Installing the brake pads	
(DOMINATOR 108 VX / 88 VX) .....	7.20.7	with disc brakes (DOMINATOR 98 VX) .....	7.22.10
Lowering the transmission gearbox		Drive axle .....	7.23.1
with disc brakes		Removing the drive axle .....	7.23.1
(DOMINATOR 98 VX) .....	7.20.12	Installing the drive axle .....	7.23.5
Raising the transmission gearbox		Steering axle .....	7.24.1
with disc brakes		Removing the wheel bearings	
(DOMINATOR 98 VX) .....	7.20.16	(2.05 m steering axle) .....	7.24.1
		Installing the wheel bearings	
		(2.05 m steering axle) .....	7.24.3

Removing the stub axle (2.05 m steering axle) .....	7.24.6	Removing the steering ram (with adjustable steering axle and CLAAS 4-trac axle) .....	9.3.6
Installing the stub axle (2.05 m steering axle) .....	7.24.8	Dismantling the steering ram (with adjustable steering axle and CLAAS 4-trac axle) .....	9.3.7
Removing the wheel bearings (adjustable axle) .....	7.24.10	Steering ram, exploded view (with adjustable steering axle and CLAAS 4-trac axle) .....	9.3.8
Installing the wheel bearings (adjustable steering axle) .....	7.24.12	Assembling the steering ram (with adjustable steering axle and CLAAS 4-trac axle) .....	9.3.9
Removing the stub axle (adjustable steering axle) .....	7.24.14	Installing the steering ram (with adjustable steering axle and CLAAS 4-trac axle) .....	9.3.10
Installing the stub axle (adjustable steering axle) .....	7.24.16	Bleed the steering ram .....	9.3.11
Adjusting the steering axle end stops (2.05 m steering axle, adjustable steering axle) .....	7.24.18	Removing the 3-D sieve box hydraulic ram .....	9.3.12
Adjusting the steering axle end stops (CLAAS 4-trac axle) .....	7.24.19	Dismantling the 3-D sieve box hydraulic ram .....	9.3.13
Wheel track adjustment .....	7.24.20	3-D sieve box hydraulic ram, exploded view .....	9.3.14
Removing the steering axle .....	7.24.22	Assembling the 3-D sieve box hydraulic ram .....	9.3.15
Installing the steering axle .....	7.24.25	Installing the 3-D sieve box hydraulic ram .....	9.3.16
Removing the CLAAS 4-trac axle .....	7.24.27	Removing the 3-D sieve box pendulum .....	9.3.16
Installing the CLAAS 4-trac axle .....	7.24.30	Dismantling the 3-D sieve box pendulum .....	9.3.17
Bleeding the hydraulic motors (CLAAS 4-trac axle) .....	7.24.33	3-D pendulum unit, exploded view .....	9.3.19
Removing the planetary gearbox / hydraulic motor (CLAAS 4-trac axle) .....	7.24.35	Assembling the 3-D pendulum .....	9.3.20
Removing the stub axle housing (CLAAS 4-trac axle) .....	7.24.37	Installing the 3-D sieve box pendulum .....	9.3.20
CLAAS 4-trac system, exploded view .....	7.24.39	Hydraulic ram – low-pressure hydraulics .....	9.4.1
Installing the stub axle housing (CLAAS 4-trac axle) .....	7.24.40	Removing the threshing drum engagement ram .....	9.4.1
Installing planetary gearbox / hydraulic motor (CLAAS 4-trac axle) .....	7.24.41	Dismantling the threshing drum engagement ram .....	9.4.2
		Threshing engagement ram, exploded view .....	9.4.3
<b>8.</b>		Assembling the threshing engagement ram .....	9.4.4
<b>9. Hydraulics</b>		Installing the threshing engagement ram .....	9.4.5
Maintenance .....	9.1.1	Removing the grain tank engagement ram (DOMINATOR 108 VX) .....	9.4.6
Hydraulic system .....	9.1.1	Installing the grain tank engagement ram (DOMINATOR 108 VX) .....	9.4.7
Checking the hydraulic oil level .....	9.1.2	Removing the grain tank engagement ram (DOMINATOR 98 VX / 88 VX) .....	9.4.8
Changing the hydraulic oil .....	9.1.2	Installing the grain tank engagement ram (DOMINATOR 98 VX / 88 VX) .....	9.4.9
Hydraulic pump .....	9.2.1	Dismantling the grain tank engagement ram .....	9.4.10
Removing the double pump with the hydraulic tank .....	9.2.1	Grain tank engagement ram, exploded view .....	9.4.11
Dismantling the double pump and the hydraulic tank .....	9.2.3	Assembling the grain tank engagement ram .....	9.4.12
Double pump and hydraulic tank, exploded view .....	9.2.5	Removing the rotary coupling for the cutterbar engagement .....	9.4.13
Assembling the double pump and hydraulic tank .....	9.2.6	Dismantling the rotary coupling for the cutterbar engagement .....	9.4.13
Installing the double pump and hydraulic tank .....	9.2.8	Assembling the rotary coupling for the cutterbar engagement .....	9.4.16
Check the double pump .....	9.2.9	Installing the rotary coupling for the cutterbar engagement .....	9.4.18
Hydraulic ram – steering hydraulics .....	9.3.1	Removing the cutterbar engagement ram .....	9.4.19
Removing the steering ram (with 2.05 m steering axle) .....	9.3.1	Dismantling the cutterbar engagement ram .....	9.4.20
Dismantling the steering ram (with 2.05 m steering axle) .....	9.3.2	Rotary coupling and hydraulic ram for the cutterbar engagement, exploded view .....	9.4.21
Steering ram, exploded view (with 2.05 m steering axle) .....	9.3.3	Assembling the cutterbar engagement ram .....	9.4.22
Assembling the steering ram (with 2.05 m steering axle) .....	9.3.4	Installing the cutterbar engagement ram .....	9.4.23
Installing the steering axle (with 2.05 m steering axle) .....	9.3.5		

Working hydraulics rams .....	9.5.1	Installing the CLAAS Auto-Contour lock valve .....	9.7.3
Removing the cutterbar rams .....	9.5.1	Removing the working hydraulics pressure relief valve .....	9.7.3
Dismantling the cutterbar rams .....	9.5.2	Dismantling the working hydraulics pressure relief valve .....	9.7.4
Cutterbar ram, exploded view .....	9.5.4	Working hydraulics pressure relief valve, exploded view .....	9.7.5
Assembling the cutterbar rams .....	9.5.5	Assembling the working hydraulics pressure relief valve .....	9.7.6
Installing the cutterbar rams .....	9.5.6	Installing the working hydraulics pressure relief valve .....	9.7.6
Removing the grain tank unloading tube ram .....	9.5.7	Testing and adjusting the working hydraulics pressure relief valve .....	9.7.7
Dismantling the grain tank unloading tube ram .....	9.5.7	Removing the working hydraulics valve block .....	9.7.8
Grain tank unloading tube ram, exploded view .....	9.5.9	Installing the working hydraulics valve block .....	9.7.9
Assembling the grain tank unloading tube ram .....	9.5.10	Removing the 3/3 way control valve for the drum speed adjustment .....	9.7.10
Installing the grain tank unloading tube ram .....	9.5.12	Dismantling the 3/3 way control valve for the drum speed adjustment .....	9.7.10
Removing the CLAAS Auto-Contour hydraulic ram .....	9.5.13	3/3 way control valve for the drum speed adjustment, exploded view .....	9.7.13
Dismantling the CLAAS Auto-Contour hydraulic ram .....	9.5.13	Assembling the 3/3 way control valve for the drum speed adjustment .....	9.7.14
Hydraulic ram for the CLAAS Auto-Contour, exploded view .....	9.5.15	Installing the 3/3 way control valve for the drum speed adjustment .....	9.7.15
Assembling the CLAAS Auto-Contour hydraulic ram .....	9.5.16	Removing the 4/3 way solenoid valve for the reel fore and aft adjustment and the CLAAS Auto-Contour .....	9.7.15
Installing the CLAAS Auto-Contour hydraulic ram .....	9.5.18	4/3 way solenoid valve for the reel fore and aft adjustment and CLAAS Auto-Contour, exploded view .....	9.7.16
Bleeding the CLAAS Auto-Contour hydraulic ram .....	9.5.18	Installing the 4/3 way solenoid valve for the reel fore and aft adjustment and CLAAS Auto-Contour .....	9.7.17
Removing the rotary coupling for the drum variable-speed drive .....	9.5.20	Removing the rear working hydraulics valve block .....	9.7.17
Dismantling the rotary coupling for the drum variable-speed drive .....	9.5.20	Installing the rear working hydraulics valve block .....	9.7.19
Assembling the rotary coupling for the drum variable-speed drive .....	9.5.23	Removing the 3/3 way solenoid valve for the reel raise / lower and cutterbar raise / lower .....	9.7.20
Installing the rotary coupling for the drum variable-speed drive .....	9.5.25	Dismantling the 3/3 way solenoid valve for the reel raise / lower and cutterbar raise / lower .....	9.7.20
Removing the hydraulic ram for the drum variable-speed drive .....	9.5.26	3/3 way solenoid valve for the reel raise / lower and cutterbar raise / lower, exploded view .....	9.7.24
Dismantling the hydraulic ram for the drum variable-speed drive .....	9.5.26	Assembling the 3/3 way solenoid valve for the reel raise / lower and cutterbar raise / lower .....	9.7.25
Hydraulic ram / rotary coupling for the drum variable-speed drive, exploded view .....	9.5.27	Installing the 3/3 way solenoid valve for the reel raise / lower and cutterbar raise / lower .....	9.7.26
Assembling the hydraulic ram for the drum variable-speed drive .....	9.5.28	Removing the 4/3 way solenoid valve for swinging the grain tank unloading tube in and out .....	9.7.26
Installing the hydraulic ram for the drum variable-speed drive .....	9.5.28	4/3 way solenoid valve for swinging the grain tank unloading tube in and out, exploded view .....	9.7.27
Valve combinations – low-pressure hydraulics .....	9.6.1	Installing the 4/3 way solenoid valve for swinging the grain tank unloading tube in and out .....	9.7.28
Removing the 3/2 way low-pressure solenoid valve .....	9.6.1		
Solenoid valve and pressure relief valve for the low-pressure hydraulics, exploded view .....	9.6.4		
Installing the 3/2 way low-pressure solenoid valve .....	9.6.5		
Removing the pressure relief valve for the low-pressure hydraulics .....	9.6.6		
Installing the pressure relief valve for the low-pressure hydraulics .....	9.6.7		
Checking and adjusting the pressure relief valve for the low-pressure hydraulics .....	9.6.8		
Valve combinations – working hydraulics .....	9.7.1		
Removing the grain tank unloading tube lock valve .....	9.7.1		
Grain tank unloading tube lock valve, exploded view .....	9.7.1		
Installing the grain tank unloading tube lock valve .....	9.7.1		
Removing the CLAAS Auto-Contour lock valve .....	9.7.2		
CLAAS Auto-Contour lock valve, exploded view .....	9.7.2		

Removing the flow control valve for the CLAAS Auto-Contour .....	9.7.28	Engine DOMINATOR 88 VX .....	10.4.1
Flow control valve for the CLAAS Auto-Contour, exploded view .....	9.7.29	Removing the engine DOMINATOR 88 VX PERKINS 1006-60 TW .....	10.4.1
Installing the flow control valve for the CLAAS Auto-Contour .....	9.7.29	Installing the engine DOMINATOR 88 VX PERKINS 1006-60 TW .....	10.4.5
Ground hydraulics .....	9.8.1	Engine accessories .....	10.5.1
Removing the hydrostatic pump .....	9.8.1	Removing the rotary screen .....	10.5.1
Installing the hydrostatic pump .....	9.8.4	Rotary screen, exploded view .....	10.5.2
Adjusting the hydrostatic pump .....	9.8.7	Installing the rotary screen .....	10.5.3
Removing the hydrostatic motor .....	9.8.9	Removing the water cooler .....	10.5.4
Installing the hydrostatic motor .....	9.8.11	Cooling system, exploded view .....	10.5.11
Bleeding the hydrostatic system .....	9.8.13	Installing the water cooler .....	10.5.12
Bleeding the CLAAS 4-trac system .....	9.8.14	Removing the fuel tank .....	10.5.16
Measuring the high pressure / charge pressure / purge pressure .....	9.8.15	Fuel tank, exploded view .....	10.5.18
Hydraulic oil cooler .....	9.9.1	Installing the fuel tank .....	10.5.19
Removing the hydraulic oil cooler for the hydrostatic ground drive .....	9.9.1	Bleeding the fuel system .....	10.5.20
Installing the hydraulic oil cooler for the hydrostatic ground drive .....	9.9.2		
<b>10. Engine</b>		<b>11. Index</b>	
Engine P.T.O. ....	10.1.1	Index .....	11.1.1
Removing the engine output shaft .....	10.1.1		
Engine output, exploded view DOMINATOR 108 VX MERCEDES OM 366 LA .....	10.1.9		
Installing the engine output shaft DOMINATOR 108 VX MERCEDES OM 366 LA .....	10.1.10		
Engine output, exploded view DOMINATOR 98 VX MERCEDES OM 366 LA .....	10.1.12		
Installing the engine output shaft DOMINATOR 98 VX MERCEDES OM 366 LA .....	10.1.13		
Engine output, exploded view DOMINATOR 88 VX PERKINS 1006.6 T .....	10.1.15		
Installing the engine output shaft DOMINATOR 88 VX PERKINS 1006.6 T .....	10.1.16		
Installing the engine output pulley DOMINATOR 108 VX / 98 VX / 88 VX .....	10.1.18		
Engine DOMINATOR 108 VX .....	10.2.1		
Removing the engine DOMINATOR 108 VX MERCEDES OM 366 LA .....	10.2.1		
Installing the engine DOMINATOR 108 VX MERCEDES OM 366 LA .....	10.2.5		
Engine DOMINATOR 98 VX .....	10.3.1		
Removing the engine DOMINATOR 98 VX MERCEDES OM 366 LA .....	10.3.1		
Installing the engine DOMINATOR 98 VX MERCEDES OM 366 LA .....	10.3.5		


**HAND BRAKE**

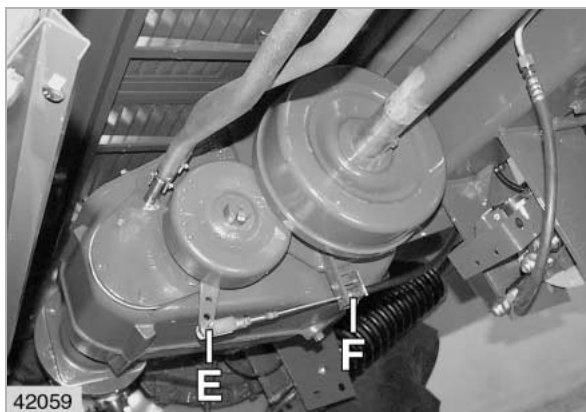

**Removing the hand brake rope**

Secure the machine so it will not roll away.


With the hand brake released, remove cotter pin of pin (E) and remove it.

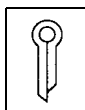

Unscrew Bowden cable retarder (F).

(Fig. 1)

1

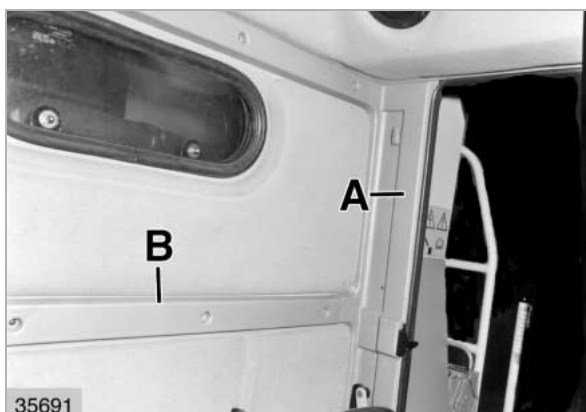


Remove the cab door.

To do this, proceed as follows:

- Pull the driver's seat fully to the front.
- Unscrew the cover (A) on the left-hand side.
- Unscrew the panels (B and C).
- Remove passenger seat. To do this, unscrew cover (D).
- Unscrew cover (L) and remove it.

(Fig. 2, 3)

2

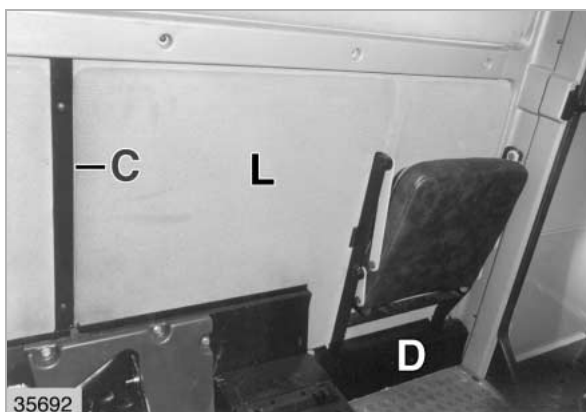

3



4

- Loosen the two locks (V) and rotate by 90°.
- Slightly swing the door (K) to the front and remove.

(Fig. 4)




5

Take out floor tray (M).  
Unscrew lid (N).  
(Fig. 5)




6

Remove insulation (O).  
(Fig. 6)

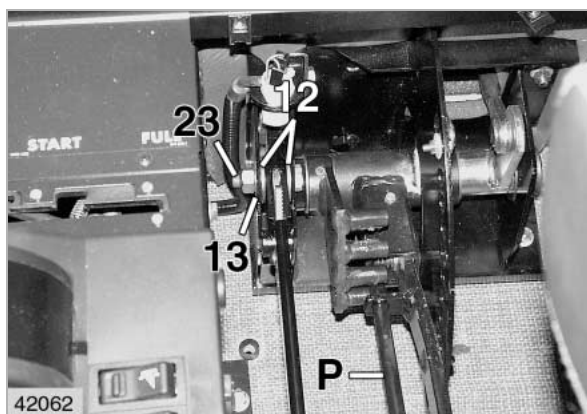

7

Set concave adjusting lever (P) fully to the bottom.  
Unscrew hexagon bolt (23). Watch out for washers (12) and the Belleville spring (13) which may fall out.  
(Fig. 7, 12)

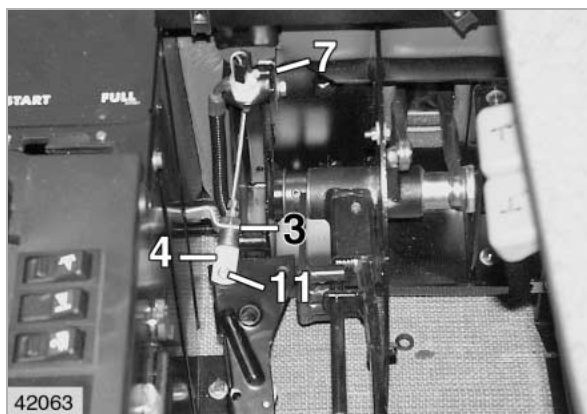

8

Unscrew yoke (4) together with the stop (3).  
Take out wear strip (11).  
Unscrew bracket (7).  
(Fig. 8, 12)

**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)