

**JAGUAR 900 – 830**  
**JAGUAR 900 – 830 Profistar**  
**JAGUAR 900 – 830 Speedstar\***  
(\* with electro-hydraulic ground drive)

## **Repair Manual**

---

**TABLE OF CONTENTS**
**1. General information**

General .....	1.1.1
Introduction .....	1.1.1
Introduction to the CLAAS Repair Manual .....	1.1.2
Picture symbol description .....	1.1.3
Safety rules .....	1.2.1
Important note .....	1.2.1
Identification of warning and danger signs .....	1.2.2
Correct use of the vehicle .....	1.2.2
General safety and accident prevention regulations .....	1.2.2
Leaving the machine .....	1.2.3
Air conditioner .....	1.2.3
Maintenance .....	1.2.3
Basic Rules .....	1.2.3
Pressure accumulator .....	1.2.3
General repair notes .....	1.3.1
Cause of damage .....	1.3.1
Parts .....	1.3.1
The repair will be quick and correct if the following is observed .....	1.3.1
Engine .....	1.3.1
Transmissions .....	1.3.1
Welding work .....	1.3.1
Three phase AC generator .....	1.3.1
Tensioning the steel roller chain .....	1.3.2
Conical ring connectors .....	1.3.2
Self-locking screws (MK-screws) .....	1.3.2
Liquid screw locking material .....	1.3.2
Clamping ring bearings (lock collar bearings) .....	1.3.3
Adapter sleeve bearing fitting .....	1.3.3
Ferrule fittings on hydraulic lines .....	1.3.3
Conical seating fittings on hydraulic/air conditioning lines .....	1.3.4
Hydraulic hoses .....	1.3.5
Tightening torques .....	1.4.1
Tightening torques screws .....	1.4.1
Tightening torques hydraulic fittings .....	1.4.3
Tightening torques brake pipe fittings .....	1.4.4
Tightening torques wheel bolts/wheel nuts .....	1.4.5
Specifications .....	1.5.1
Lubricants chart .....	1.5.1
Hydraulic pressures .....	1.5.3
Engine data .....	1.5.5

**2. Operator's platform**

Cab .....	2.1.1
Removing front frame .....	2.1.1
Fitting the front frame .....	2.1.4
Heating .....	2.2.1
Removing the heating elements .....	2.2.1
Fitting the heating element .....	2.2.3
Removing the regulating valve .....	2.2.5
Fitting the regulating valve .....	2.2.7
Air conditioning .....	2.3.1
Air conditioning unit – filling up the refrigerant .....	2.3.1
Removing the evaporator .....	2.3.2

Air conditioner (cab side) dismantled .....	2.3.4
Fitting the evaporator .....	2.3.5
Removing the expansion valve .....	2.3.6
Fitting the expansion valve .....	2.3.7
Removing the temperature switch .....	2.3.8
Fitting the temperature switch .....	2.3.10
Removing the filter drier .....	2.3.11
Filter drier disassembled .....	2.3.12
Fitting the filter drier .....	2.3.12
Removing the condenser .....	2.3.12
Fitting the condenser .....	2.3.13
Removing the compressor coupling .....	2.3.14
Fitting the coupling compressor .....	2.3.17
Removing the compressor .....	2.3.19
Fitting the compressor .....	2.3.21
Driver's seat .....	2.4.1
Fitting the driver's seat .....	2.4.1
Driver's seat dismantled (Isringhausen, pneumatically adjustable) .....	2.4.2
Driver's seat dismantled (Grammer, pneumatically adjustable) .....	2.4.3
Fitting the driver's seat .....	2.4.4
Operating Elements .....	2.5.1
Dismantling the traverse regulation (Mechanical-hydraulic traverse drive, up to serial no. ...) .....	2.5.1
Traverse regulation dismantled (Mechanical-hydraulic ground drive, up to serial no. ...) .....	2.5.2
Assembling the traverse regulation (Mechanical-hydraulic ground drive, up to serial no. ...) .....	2.5.3
Dismantling the traverse regulation (Mechanical-hydraulic traverse drive, from serial no. ...) .....	2.5.7
Traverse regulation dismantled (Mechanical-hydraulic ground drive, from serial no. ...) .....	2.5.9
Assembling the traverse regulation (Mechanical-hydraulic ground drive, from serial no. ...) .....	2.5.10
Dismantling the traverse regulation (electro-hydraulic ground drive) .....	2.5.15
Dismantled traverse regulation (electro-hydraulic ground drive) .....	2.5.17
Assembling the traverse regulation (electro-hydraulic ground drive) .....	2.5.19
Removing the traverse lever pull actuation (mechanical-hydraulic ground drive) .....	2.5.24
Fitting the traverse lever pull actuation (mechanical-hydraulic ground drive) .....	2.5.25
Steering .....	2.6.1
Removing the steering column .....	2.6.1
Dismantling the steering column .....	2.6.5
Steering column dismantled: .....	2.6.8
Assembling the steering column .....	2.6.9
Fitting the Steering Column .....	2.6.12

Removing the steering column (adjustable) .....	2.6.17	Adjusting the drum disc .....	5.1.7
Dismantling the steering column (adjustable) .....	2.6.23	Shear bar .....	5.2.1
Steering column (adjustable) dismantled: .....	2.6.25	Removing the shear bar .....	5.2.1
Assembling the steering column (adjustable) .....	2.6.26	Fitting the shear bar .....	5.2.2
Fitting the steering column (adjustable) .....	2.6.28	Removing the shear bar support .....	5.2.5
Removing the steering unit (fixed steering column) .....	2.6.32	Shear bar support dismantled .....	5.2.7
Fitting the steering unit (fixed steering column) .....	2.6.34	Fitting the shear bar support .....	5.2.8
Removing the steering unit (adjustable steering column) .....	2.6.37	Removing the shear bar adjustment .....	5.2.10
Removing the steering unit (adjustable steering column) .....	2.6.40	Shear bar adjustment dismantled .....	5.2.13
Checking/setting the steering unit .....	2.6.43	Fitting the shear bar adjustment .....	5.2.14
<b>Brakes</b> .....	2.7.1	Basic setting of the shear bar .....	5.2.20
Removing the parking brake actuation cable .....	2.7.1	Setting the shear bar (with mechanical shear bar adjustment) .....	5.2.24
Fitting the parking brake actuation cable .....	2.7.2	Setting the shear bar (with mechanical shear bar adjustment) .....	5.2.25
Removing the brake cylinder .....	2.7.4	Cutting cylinder .....	5.3.1
Fitting the brake cylinder .....	2.7.4	Changing and setting the forage knife .....	5.3.1
<b>3. Electrics</b>		Removing the cutting cylinder .....	5.3.4
Central electrics .....	3.1.1	Dismantling the cutting cylinder .....	5.3.7
Removing the monitor (CIS) .....	3.1.1	Cutting cylinder dismantled: .....	5.3.9
Fitting the monitor (CIS) .....	3.1.2	Assembling the cutting cylinder .....	5.3.11
Power supply .....	3.2.1	Fitting the cutting cylinder .....	5.3.13
Removing the regulator .....	3.2.1	Sharpening device .....	5.4.1
Fitting the regulator .....	3.2.2	Changing the sharpening stone .....	5.4.1
Removing the starter .....	3.2.3	Removing the sharpening device .....	5.4.4
Fitting the starter .....	3.2.4	Dismantling the sharpening device .....	5.4.5
<b>4. Feed</b>		Sharpening device dismantled: .....	5.4.7
Feeder housing .....	4.1.1	Assembling the sharpening unit .....	5.4.8
Removing the feeder housing .....	4.1.1	Fitting the sharpening device .....	5.4.10
Fitting the feeder housing .....	4.1.2	<b>6. Corn-Cracker</b>	
<b>Rollers</b> .....	4.2.1	Corn-Cracker .....	6.1.1
Removing the feed roller and magnetic boxes .....	4.2.1	Removing the Corn-Cracker .....	6.1.1
Dismantling the lower feed roller and magnetic boxes ....	4.2.2	Fitting the Corn-Cracker .....	6.1.4
Lower feed roller and magnetic boxes dismantled: .....	4.2.7	Removing the front roller .....	6.1.6
Assembling the lower feed roller and magnetic boxes ....	4.2.9	Dismantling the front roller .....	6.1.7
Fitting the lower feed roller and magnetic boxes .....	4.2.15	Front roller dismantled: .....	6.1.9
Removing the upper compression roller .....	4.2.17	Assembling the front roller .....	6.1.10
Dismantling the upper compression roller .....	4.2.19	Fitting the front roller .....	6.1.12
Upper compression roller dismantled: .....	4.2.22	Removing the rear roller .....	6.1.14
Assembling the upper compression roller .....	4.2.23	Dismantling the rear roller .....	6.1.16
Fitting the upper compression roller .....	4.2.28	Rear roller dismantled: .....	6.1.18
Removing the upper rear compression roller .....	4.2.29	Assembling the rear roller .....	6.1.19
Dismantling the upper rear compression roller .....	4.2.31	Fitting the rear roller .....	6.1.22
Upper rear compression roller dismantled: .....	4.2.34	Corn-Cracker gap adjustment .....	6.2.1
Assembling the upper rear compression roller .....	4.2.35	Corn-Cracker gap adjustment removal .....	6.2.1
Assembling the upper rear compression roller .....	4.2.39	Corn-Cracker gap adjustment dismantling .....	6.2.2
Removing the lower smooth roller .....	4.2.41	Corn-Cracker gap adjustment (electric) dismantled: .....	6.2.3
Dismantling the lower smooth roller .....	4.2.42	Corn-Cracker gap adjustment assembling .....	6.2.4
Lower smooth roller dismantled: .....	4.2.43	Corn-Cracker gap adjustment fitting .....	6.2.5
Assembling the lower smooth roller .....	4.2.44	Transition piece .....	6.3.1
Fitting the lower smooth roller .....	4.2.45	Removing the guide plate .....	6.3.1
Tensioning the tension springs for the rollers .....	4.2.46	Transition piece and guide plate dismantled .....	6.3.2
<b>5. Forage device</b>		Fitting the guide plate .....	6.3.3
Drum housing .....	5.1.1	<b>7. Discharge</b>	
Removing the drum housing .....	5.1.1	Blower .....	7.1.1
Fitting the drum housing .....	5.1.4	Removing the blower bearing left .....	7.1.1
		Dismantling the blower bearing left .....	7.1.2

Blower bearing left dismantled: .....	7.1.3	Removing the distribution gearbox .....	8.4.22
Assembling the blower bearing left .....	7.1.4	Dismantling the distribution gearbox .....	8.4.27
Fitting the blower bearing left .....	7.1.5	Distribution gearbox dismantled: .....	8.4.29
Removing the blower bearing right .....	7.1.8	Assembling the distribution gearbox .....	8.4.30
Fitting the blower bearing right .....	7.1.9	Fitting the distribution gearbox .....	8.4.33
Removing the blower .....	7.1.11	Removing the torsion damper .....	8.4.37
Fitting the blower .....	7.1.13	Fitting the torsion damper .....	8.4.38
Removing the blower housing .....	7.1.17	Drum drive .....	8.5.1
Blower housing dismantled .....	7.1.19	Removing the V-belt pulley blower .....	8.5.1
Fitting the blower housing .....	7.1.20	V-belt pulley blower dismantled .....	8.5.2
Tower .....	7.2.1	Fitting the V-belt pulley blower .....	8.5.3
Removing the upper discharge chute .....	7.2.1	Removing the tensioning roller drum drive .....	8.5.5
Upper discharge chute dismantled: .....	7.2.3	Dismantling the tensioning roller drum drive .....	8.5.6
Fitting the upper discharge chute .....	7.2.4	Tensioning roller drum drive dismantled: .....	8.5.8
Rotary ring removal .....	7.2.5	Fitting the tensioning roller drum drive .....	8.5.9
Gear ring dismantled .....	7.2.7	Fitting the tensioning roller drum drive .....	8.5.10
Fitting the gear ring .....	7.2.8	Removing the guide roller drum drive (up to serial no. ...) .....	8.5.11
Removing the tower .....	7.2.12	Dismantling the guide roller drum drive (up to serial no. ...) .....	8.5.12
Tower dismantled .....	7.2.14	Guide roller drum drive dismantled: (up to serial no. ...) .....	8.5.12
Fitting the tower .....	7.2.15	Assembling the guide roller drum drive (up to serial no. ...) .....	8.5.13
<b>8. Drives</b>		Fitting the guide roller drum drive (up to serial no. ...) .....	8.5.13
Drive schematic .....	8.1.1	Removing the guide roller drum drive (from serial no. ...) .....	8.5.14
Drive schematic left .....	8.1.1	Dismantling the guide roller drum drive (from serial no. ...) .....	8.5.15
Drive schematic right .....	8.1.2	Guide roller drum drive dismantled: (from serial no. ...) .....	8.5.15
Drive belt left .....	8.2.1	Assembling the guide roller drum drive (from serial no. ...) .....	8.5.16
Removing the main drive belt (1) (up to serial no. ...) .....	8.2.1	Fitting the guide roller drum drive (from serial no. ...) .....	8.5.16
Fit the main drive belt (1) and adjust (up to serial no. ...) .....	8.2.3	Removing the V-belt pulley tensioning roller drum drive	8.5.17
Removing the main drive belt (1) (from serial no.) .....	8.2.8	V-belt pulley drum drive dismantled: .....	8.5.18
Fit the main drive belt (1) and adjust (from serial no.) .....	8.2.10	Fitting the V-belt pulley drum drive .....	8.5.18
Drive belt right .....	8.3.1	Setting the jockey pulley arm drum drive .....	8.5.20
Removing the fan drive belt (10) .....	8.3.1	Corn-Cracker drive .....	8.6.1
Fitting the fan drive belt (10) and adjusting .....	8.3.2	Removing the guide roller Corn-Cracker .....	8.6.1
Removing the Corn-Cracker drive belt (11) .....	8.3.3	Corn-Cracker drive dismantled .....	8.6.3
Fitting the Corn-Cracker drive belt (11) and setting .....	8.3.4	Guide roller Corn-Cracker assembling and fitting .....	8.6.4
Removing the feeder drive belt (12) .....	8.3.5	Removing the V-belt pulley Corn-Cracker drive (with key fixing) .....	8.6.6
Fitting the feeder drive belt (12) and adjusting .....	8.3.6	Fitting the V-belt pulley Corn-Cracker drive (with key fixing) .....	8.6.7
Removing the compressor drive belt (13) .....	8.3.7	Removing the V-belt pulley Corn-Cracker drive (with clamping disc fixing) .....	8.6.7
Fitting the compressor drive belt (13) .....	8.3.7	Fitting the V-belt pulley Corn-Cracker drive (with clamping disc fixing) .....	8.6.9
Motor drive .....	8.4.1	Feeder drive .....	8.7.1
Removing the coupling motor drive .....	8.4.1	Removing the V-belt pulley feeder drive .....	8.7.1
Motor drive coupling dismantled .....	8.4.2	Removing the V-belt pulley feeder drive .....	8.7.1
Coupling motor drive dismantled: .....	8.4.3	Removing the drive disc feeder drive .....	8.7.2
Assembling motor drive coupling .....	8.4.4	Drive disc feeder drive dismantled .....	8.7.3
Fitting motor drive coupling .....	8.4.6	Removing the drive disc feeder drive .....	8.7.3
Removing the rotary through guide .....	8.4.8		
Dismantling the rotary through guide .....	8.4.8		
Rotary through guide dismantled: .....	8.4.10		
Assembling the rotary through guide .....	8.4.11		
Fitting the rotary through guide .....	8.4.13		
Removing the motor drive .....	8.4.13		
Dismantling the motor drive .....	8.4.14		
Motor drive dismantled: .....	8.4.17		
Assembling the motor drive .....	8.4.18		
Fitting motor drive .....	8.4.21		

Removing the tensioning roller feeder drive .....	8.7.4	Universal shaft feeder drive .....	8.12.1
Tensioning roller feeder drive .....	8.7.5	Removing the universal shaft .....	8.12.1
Removing the tensioning roller feeder drive .....	8.7.5	Dismantling the universal shaft .....	8.12.1
Manual and reversing gearbox .....	8.8.1	Universal shaft dismantled: .....	8.12.3
Removing the switch off mechanism .....	8.8.1	Assembling the universal shaft .....	8.12.4
Switch off mechanism dismantled .....	8.8.4	Fitting the universal shaft .....	8.12.6
Removing the switch off mechanism .....	8.8.5	Shear bar adjustment drive .....	8.13.1
Removing the manual and reversing gearbox .....	8.8.7	Removing the geared motor .....	8.13.1
Fitting the manual and reversing gearbox .....	8.8.11	Fitting the geared motor .....	8.13.2
Removing the drive head .....	8.8.17	Removing the bevel gear .....	8.13.3
Dismantling the drive head .....	8.8.17	Dismantling the bevel gear .....	8.13.4
Drive head housing dismantled: .....	8.8.23	Bevel gear dismantled: .....	8.13.5
Drive head dismantled: .....	8.8.24	Assembling the bevel gear .....	8.13.6
Drive head dismantled: .....	8.8.25	Fitting bevel gear .....	8.13.7
Assembling the drive head .....	8.8.26	Axial gearbox .....	8.14.1
Pre-assembling the gearbox shafts: .....	8.8.27	Removing axial gearbox .....	8.14.1
Fitting the drive head .....	8.8.35	Dismantling the axial gearbox .....	8.14.2
Dismantling the manual and reversing gearbox .....	8.8.35	Axial gearbox dismantled: .....	8.14.9
Gearbox shaft overview .....	8.8.37	Assembling the axial gearbox .....	8.14.10
Removing the clutch shaft (A) .....	8.8.37	Fitting the axial gearbox .....	8.14.16
Removing the gearbox shaft (B) .....	8.8.38	Manual gearbox .....	8.15.1
Removing the gearbox shaft (D) .....	8.8.40	Removing manual gearbox .....	8.15.1
Removing the gearbox shaft (E) .....	8.8.41	Dismantling the manual gearbox and compensation gearbox	
Removing the drive shaft (F) .....	8.8.42	(without servo shifting) .....	8.15.7
Removing the drive shaft (G) .....	8.8.43	Differential dismantled: .....	8.15.17
Removing the bevel spur shaft (H) .....	8.8.44	Manual gearbox dismantled	
Removing the hollow shaft (C) .....	8.8.46	(without servo shifting): .....	8.15.18
Assembling the manual and reversing gearbox .....	8.8.49	Assembling the manual gearbox and differential	
Shifting shafts dismantled .....	8.8.50	(without servo shifting) .....	8.15.19
Bevel spur shaft (H) dismantled .....	8.8.51	Fitting the manual gearbox .....	8.15.36
Fitting the bevel spur shaft (H) .....	8.8.52	Removing the shifting cylinder servo shifting .....	8.15.41
Gearbox shaft (E) dismantled .....	8.8.55	Dismantling shifting cylinder servo shifting .....	8.15.43
Fitting gearbox shaft (E) .....	8.8.56	Shifting cylinder servo shifting dismantled: .....	8.15.44
Drive shaft (G) dismantled .....	8.8.62	Assembling the shifting cylinder servo shifting .....	8.15.44
Fitting the drive shaft (G) .....	8.8.63	Fitting the shifting cylinder servo shifting .....	8.15.45
Drive shaft (F) dismantled .....	8.8.66	Bleeding the shifting cylinder servo shifting .....	8.15.47
Fitting the drive shaft (F) .....	8.8.67	Drive axle .....	8.16.1
Gearbox shaft (D) dismantled .....	8.8.69	Removing the drive axle .....	8.16.1
Fitting the gearbox shaft (D) .....	8.8.70	Fitting the drive axle .....	8.16.4
Gearbox shaft (B) dismantled .....	8.8.76	Brake .....	8.17.1
Fitting the gearbox shaft (B) .....	8.8.77	Bleeding the brake system .....	8.17.1
Chain housing .....	8.9.1	Removing the brake blocks .....	8.17.3
Removing chain housing .....	8.9.1	Fitting the brake blocks .....	8.17.4
Dismantling the chain housing .....	8.9.2	Removing the brake saddle .....	8.17.6
Chain housing dismantled: .....	8.9.3	Fitting the brake saddles .....	8.17.8
Assembling the chain housing .....	8.9.4	Removing the brake disc .....	8.17.10
Fitting the chain housing .....	8.9.6	Fitting the brake disc .....	8.17.11
Conical shift clutch .....	8.10.1	Parking brake .....	8.18.1
Removing the conical shaft clutch .....	8.10.1	Removing the brake blocks .....	8.18.1
Conical shift clutch dismantled .....	8.10.2	Fitting brake shoes .....	8.18.1
Assembling and fitting the conical shift clutch .....	8.10.3		
Gearbox upper shafts .....	8.11.1	<b>9. Steering Axle</b>	
Removing the gearbox upper shafts .....	8.11.1	Steering Axle .....	9.1.1
Gearbox upper shafts dismantling .....	8.11.4	Removing the steering axle/rear wheel drive .....	9.1.1
Gearbox upper shafts dismantled: .....	8.11.7	Fitting the steering axle/rear wheel drive .....	9.1.5
Assembling the gearbox upper shafts .....	8.11.8	Removing the wheel bearings .....	9.1.8
Fitting the gearbox upper shafts .....	8.11.10	Wheel bearing dismantled .....	9.1.10
		Fitting the wheel bearing .....	9.1.10

Removing the stub axle .....	9.1.12	Removing hydraulic motor traverse drive (40 km/h-Version) .....	11.3.9
Stub axle dismantled .....	9.1.14	Fitting hydraulic motor traverse drive (40 km/h-Version) .....	11.3.13
Fitting the stub axle .....	9.1.14	Removing the hydraulic motor reversing .....	11.3.17
Removing the steering rod (from serial no. ...) .....	9.1.16	Fitting the hydraulic motor reversing .....	11.3.18
Steering rod dismantled (without CLAAS 4-Trac-System) (from serial no. ...) .....	9.1.18	Removing the hydraulic motor cooling cage extraction .....	11.3.20
Fitting the steering rod (from serial no. ...) .....	9.1.18	Fitting the hydraulic motor cooling cage extraction .....	11.3.21
Setting the tracking (up to serial no.) .....	9.1.20	Control valves .....	11.4.1
Setting the tracking (from serial no. ...) .....	9.1.21	Removing 3/3-way solenoid valve front attachment lowering (Y87) and (743) .....	11.4.1
Setting the steering axle stops .....	9.1.22	Dismantling 3/3-way solenoid valve front attachment lowering (Y87) and (743) .....	11.4.2
Rear wheel drive .....	9.2.1	Assembling the 3/3-way solenoid valve front attachment lowering (Y87) and (743) .....	11.4.3
Removing the multiplate clutch .....	9.2.1	Fitting 3/3-way solenoid valve front attachment lowering (Y87) and (743) .....	11.4.4
Dismantling the multiplate clutch .....	9.2.2	Removing 3/2-way solenoid valve front attachment lifting (Y85) .....	11.4.5
Multiplate clutch dismantled: .....	9.2.6	Fitting 3/2-way solenoid valve front attachment lifting (Y85) .....	11.4.6
Assembling the multiplate clutch .....	9.2.8	Removing the circulation block valve (Y77) .....	11.4.8
Fitting the multiplate clutch .....	9.2.13	Fitting the circulation block valve (Y77) .....	11.4.9
Removing the bevel gear .....	9.2.15	Removing the flow regulating valve lowering (614) .....	11.4.10
Fitting bevel gear .....	9.2.17	Dismantling the flow regulating valve lowering (614) ..	11.4.11
Dismantling the bevel gearbox (20/25 km/h-Version) .....	9.2.19	Assembling the flow regulating valve lowering (614) ..	11.4.12
Bevel gearbox dismantled (20/25 km/h-Version): .....	9.2.26	Fitting the flow regulating valve lowering (614) .....	11.4.13
Assembling the bevel gearbox (20/25 km/h-Version) .....	9.2.27	Removing the pressure regulating valve working hydraulics (703) .....	11.4.14
Dismantling the bevel gearbox (40/km/h-Version) .....	9.2.34	Fitting the pressure regulating valve working hydraulics (703) .....	11.4.16
Bevel gearbox dismantled (40/km/h-Version): .....	9.2.42	Checking/adjusting pressure regulating valve working hydraulics (703) .....	11.4.17
Assembling the bevel gearbox (40/km/h-Version) .....	9.2.43	Removing the non return valve (707) .....	11.4.18
		Fitting the non return valve (707) .....	11.4.19
		Removing the main valve .....	11.4.20
		Dismantling the main valve .....	11.4.22
		Main valve dismantled: .....	11.4.23
		Assembling the main valve .....	11.4.25
		Fitting the main valve .....	11.4.26
		Removing the 3/2 way solenoid valve knife sharpening (Y61 and Y62) .....	11.4.27
		Fitting the 3/2 way solenoid valve knife sharpening (Y61 and Y62) .....	11.4.29
		Removing the 3/2 way solenoid valve front attachments (Y72/Y93 and Y73/Y94) .....	11.4.30
		Fitting the 3/2 way solenoid valve front attachments (Y72/Y93 and Y73/Y94) .....	11.4.32
		Removing the valve block knife sharpening/ front attachments .....	11.4.33
		Valve block knife sharpening/front attachments dismantled .....	11.4.36
		Fitting the valve block knife sharpening/front attachments .....	11.4.37
<b>10. Machine body</b>			
<b>11. Hydraulics</b>			
Hydraulic tank .....	11.1.1		
Removing the hydraulic tank .....	11.1.1		
Hydraulic tank dismantled .....	11.1.3		
Fitting the hydraulic tank .....	11.1.4		
Hydraulic pump .....	11.2.1		
Removing the double pump .....	11.2.1		
Double pump/hydraulic variable displacement pump dismantled .....	11.2.4		
Fitting the double pump .....	11.2.5		
Removing the hydraulic variable displacement pump ...	11.2.8		
Fitting the hydraulic variable displacement pump .....	11.2.13		
Bleeding the hydrostatic system .....	11.2.20		
Hydraulic motor .....	11.3.1		
Removing the hydraulic motor tower swing .....	11.3.1		
Fitting the hydraulic motor tower swing .....	11.3.2		
Removing hydraulic motor traverse drive (20/25 km/h-Version) .....	11.3.3		
Fitting hydraulic motor traverse drive (20/25 km/h-Version) .....	11.3.6		

Removing 3/2 way valve Autopilot/waggon hitch (Y9/Y29 and Y10/Y30) .....	11.4.38	Dismantling 3 way cock (612) with pressure accumulator front attachment lifting/lowering (511) .....	11.4.82
Fitting 3/2 way valve Autopilot/waggon hitch (Y9/Y29 and Y10/Y30) .....	11.4.40	Assembling 3 way cock (612) with pressure accumulator front attachment lifting/lowering (511) .....	11.4.85
Removing lock-up valve unit Autopilot/waggon hitch (734) .....	11.4.41	Fitting 3 way cock (612) with pressure accumulator front attachment lifting/lowering (511) .....	11.4.88
Fitting lock-up valve unit Autopilot/waggon hitch (734) .....	11.4.44	Removing 3/2 way valve low pressure hydraulics .....	11.4.90
Removing valve block Autopilot/waggon hitch .....	11.4.46	Valve block low pressure hydraulics dismantled .....	11.4.92
Valve block Autopilot/waggon hitch dismantled .....	11.4.48	Fitting 3/2 way valve low pressure hydraulics .....	11.4.93
Fitting valve block Autopilot/waggon hitch .....	11.4.49	Removing the pressure regulating valve low pressure hydraulics (729) .....	11.4.93
Removing 3/2-way solenoid valve front attachment reversing (Y86) .....	11.4.50	Fitting the pressure regulating valve low pressure hydraulics (729) .....	11.4.95
Fitting 3/2-way solenoid valve front attachment reversing (Y86) .....	11.4.52	Checking/adjusting pressure regulating valve low pressure hydraulics (729) .....	11.4.95
Removing valve block front attachment reversing .....	11.4.53	Removing locking valve charge pressure (40 km/h-Version) (716) .....	11.4.96
Valve block front attachment reversing dismantled .....	11.4.55	Dismantling locking valve charge pressure (40 km/h-Version) (716) .....	11.4.96
Fitting valve block front attachment reversing .....	11.4.56	Locking valve charge pressure (40 km/h-Version) (716) dismantled: .....	11.4.97
Removing pressure accumulator/pressure sensor Autopilot (501 and B5) .....	11.4.57	Assembling locking valve charge pressure (40 km/h-Version) (716) .....	11.4.98
Fitting pressure accumulator/pressure sensor Autopilot (501 and B5) .....	11.4.58	Fitting locking valve charge pressure (40 km/h-Version) (716) .....	11.4.99
Removing valve block discharge chute .....	11.4.59	Lifting cylinder .....	11.5.1
Valve block discharge chute control dismantled .....	11.4.62	Removing hydraulic cylinder front attachment .....	11.5.1
Fitting valve block discharge chute control .....	11.4.63	Dismantling hydraulic cylinder front attachment .....	11.5.2
Removing 2/2 way solenoid valve discharge chute turning (fast/slow) (Y4) .....	11.4.64	Hydraulic cylinder front attachment dismantled: .....	11.5.3
Fitting 2/2 way solenoid valve discharge chute turning (fast/slow) (Y4) .....	11.4.66	Assembling hydraulic cylinder front attachment .....	11.5.4
Removing 3/2 way solenoid valve discharge chute turning (Y5 and Y6) .....	11.4.67	Fitting hydraulic cylinder front attachment .....	11.5.6
Fitting 3/2 way solenoid valve discharge chute turning (Y5 and Y6) .....	11.4.69	Removing hydraulic cylinder feeder drive (up to serial no. ...) .....	11.5.7
Removing 3/2 way solenoid valve discharge flap lifting/lowering, tower lifting/lowering (Y3/Y7 and Y2/Y8) .....	11.4.70	Dismantling hydraulic cylinder feeder drive (up to serial no. ...) .....	11.5.8
Fitting 3/2 way solenoid valve discharge flap lifting/lowering, tower lifting/lowering (Y3/Y7 and Y2/Y8) .....	11.4.72	Hydraulic cylinder feeder drive dismantled: (up to serial no. ...) .....	11.5.9
Removing lock-up valve unit discharge flap lifting/lowering, tower lifting/lowering .....	11.4.73	Assembling hydraulic cylinder feeder drive (up to serial no. ...) .....	11.5.10
Fitting lock-up valve unit discharge flap lifting/lowering, tower lifting/lowering .....	11.4.74	Fitting hydraulic cylinder feeder drive (up to serial no. ...) .....	11.5.11
Removing pressure accumulator forage harvester drive (504) .....	11.4.75	Removing hydraulic cylinder feeder drive (from serial no. ...) .....	11.5.12
Fitting pressure accumulator forage harvester drive (504) .....	11.4.76	Dismantling hydraulic cylinder feeder drive (from serial no. ...) .....	11.5.13
Removing flow regulating valve cooling cage drive (744) .....	11.4.76	Hydraulic cylinder feeder drive dismantled (from serial no. ...) .....	11.5.14
Flow regulating valve cooling cage drive (744) dismantled .....	11.4.77	Assembling hydraulic cylinder feeder drive (from serial no. ...) .....	11.5.15
Flow regulating valve cooling cage drive (744) dismantled: .....	11.4.79	Fitting hydraulic cylinder feeder drive (from serial no. ...) .....	11.5.16
Assembling flow regulating valve cooling cage drive (744) .....	11.4.80	Removing hydraulic cylinder sharpening stone .....	11.5.17
Fitting flow regulating valve cooling cage drive (744) ..	11.4.80	Dismantling the hydraulic cylinder sharpening stone ..	11.5.19
Removing 3 way cock (612) with pressure accumulator front attachment lifting/lowering (511) .....	11.4.81	Hydraulic cylinder sharpening stone dismantled: .....	11.5.21
		Assembling hydraulic cylinder sharpening stone .....	11.5.22
		Fitting hydraulic cylinder sharpening stone .....	11.5.24
		Removing hydraulic sharpening flap (up to serial no. ...) .....	11.5.26

Dismantling hydraulic sharpening flap (up to serial no. ...) .....	11.5.26	Dismantling steering cylinder left (with CLAAS Autopilot) (up to serial no. ...) .....	11.5.61
Hydraulic cylinder sharpening flap dismantled: (up to serial no. ...) .....	11.5.28	Steering cylinder left dismantled: (with CLAAS Autopilot) (up to serial no. ...) .....	11.5.64
Assembling hydraulic sharpening flap (up to serial no. ...) .....	11.5.29	Assembling steering cylinder left (with CLAAS Autopilot) (up to serial no. ...) .....	11.5.65
Fitting hydraulic cylinder sharpening flap (up to serial no. ...) .....	11.5.30	Fitting steering cylinder left (with CLAAS Autopilot) (up to serial no. ...) .....	11.5.68
Removing hydraulic cylinder sharpening flap (from serial no. ...) .....	11.5.31	Removing steering cylinder (with CLAAS 4-Trac-System, with CLAAS Autopilot) (up to serial no. ...) .....	11.5.69
Dismantling hydraulic cylinder sharpening flap (from serial no. ...) .....	11.5.32	Dismantling steering cylinder (with CLAAS 4-Trac-System, with CLAAS Autopilot) (up to serial no. ...) .....	11.5.70
Hydraulic cylinder sharpening flap dismantled: (from serial no. ...) .....	11.5.33	Steering cylinder dismantled: (with CLAAS 4-Trac-System, with CLAAS Autopilot) (up to serial no. ...) .....	11.5.72
Assembling hydraulic cylinder sharpening flap (from serial no. ...) .....	11.5.34	Assembling steering cylinder (with CLAAS 4-Trac-System, with CLAAS Autopilot) (up to serial no. ...) .....	11.5.73
Fitting hydraulic cylinder sharpening flap (from serial no. ...) .....	11.5.35	Fitting steering cylinder (with CLAAS 4-Trac-System, with CLAAS Autopilot) (up to serial no. ...) .....	11.5.75
Removing hydraulic cylinder discharge chute .....	11.5.37	Removing steering cylinder (with CLAAS 4-Trac-System, with CLAAS Autopilot) (from serial no. ...) .....	11.5.76
Dismantling hydraulic cylinder discharge chute .....	11.5.37	Dismantling steering cylinder (with CLAAS 4-Trac-System, with CLAAS Autopilot) (from serial no. ...) .....	11.5.78
Hydraulic cylinder discharge chute dismantled: .....	11.5.39	Steering cylinder dismantled: (with CLAAS 4-Trac-System, with CLAAS Autopilot) (from serial no. ...) .....	11.5.80
Assembling hydraulic cylinder discharge chute .....	11.5.40	Assembling steering cylinder (with CLAAS 4-Trac-System, with CLAAS Autopilot) (from serial no. ...) .....	11.5.81
Fitting hydraulic cylinder discharge chute .....	11.5.41	Fitting steering cylinder (with CLAAS 4-Trac-System, with CLAAS Autopilot) (from serial no. ...) .....	11.5.83
Removing the hydraulic cylinder discharge flap .....	11.5.42		
Dismantling hydraulic cylinder discharge flap .....	11.5.42		
Hydraulic cylinder discharge flap dismantled: .....	11.5.44		
Assembling hydraulic cylinder discharge flap .....	11.5.45		
Fitting hydraulic cylinder discharge flap .....	11.5.47		
Removing the hydraulic cylinder Corn-Cracker .....	11.5.48		
Dismantling the hydraulic cylinder Corn-Cracker .....	11.5.49		
Hydraulic cylinder Corn-Cracker dismantled: .....	11.5.50		
Assembling the hydraulic cylinder Corn-Cracker .....	11.5.51		
Fitting the hydraulic cylinder Corn-Cracker .....	11.5.52		
Removing steering cylinder (without CLAAS 4-Trac-System) (up to serial no. ...) .....	11.5.54		
Dismantling steering cylinder (without CLAAS 4-Trac-System) (up to serial no. ...) .....	11.5.55		
Steering cylinder dismantled: (Without CLAAS 4-Trac-System) (up to serial no. ...): .....	11.5.56		
Assembling steering cylinder (without CLAAS 4-Trac-System) (up to serial no. ...) .....	11.5.57		
Fitting steering cylinder (without CLAAS 4-Trac-System) (up to serial no. ...) .....	11.5.59		
Removing steering cylinder (without CLAAS 4-Trac-System) (from serial no. ...) .....	11.5.60		
Fitting steering cylinder (without CLAAS 4-Trac-System) (from serial no. ...) .....	11.5.60		
Removing steering cylinder left (with CLAAS Autopilot) (up to serial no. ...) .....	11.5.60		
		<b>12. Central lubrication system</b>	
		Lubricant vessel .....	12.1.1
		Removing lubricant vessel .....	12.1.1
		Lubricant vessel dismantled .....	12.1.1
		Lubricant vessel dismantled: .....	12.1.4
		Assembling lubricant vessel .....	12.1.5
		Fitting lubricant vessel .....	12.1.7
		Replacing lubrication line .....	12.1.8
		<b>13. Engine</b>	
		Fuel system .....	13.1.1
		Removing fuel tank (up to serial no. ...) .....	13.1.1
		Fitting fuel tank (up to serial no. ...) .....	13.1.5



Removing fuel tank (from serial no. ...) .....	13.1.9
Fitting fuel tank (from serial no. ...) .....	13.1.12
Removing additional fuel tank (up to serial no. ...) .....	13.1.15
Fitting additional fuel tank (up to serial no. ...) .....	13.1.16
Removing additional fuel tank (from serial no. ...) .....	13.1.18
Fitting additional fuel tank (from serial no. ...) .....	13.1.20
Cooling system .....	13.2.1
Removing water cooler .....	13.2.1
Fitting water cooler .....	13.2.2
Removing charge air cooler .....	13.2.5
Fitting charge air cooler .....	13.2.8
Removing oil cooler .....	13.2.10
Fitting oil cooler .....	13.2.12
Fan drive .....	13.3.1
Removing tensioning roller fan drive .....	13.3.1
Tensioning roller fan drive dismantled .....	13.3.1
Fitting tensioning roller fan drive .....	13.3.2
Removing angle gearbox fan drive .....	13.3.3
Dismantling angle gearbox fan drive .....	13.3.4
Angle gearbox fan drive dismantled: .....	13.3.10
Assembling angle gearbox fan drive .....	13.3.11
Fitting angle gearbox fan drive .....	13.3.18
Engine .....	13.4.1
Removing engine (DaimlerChrysler OM 457 LA/OM 502 LA) .....	13.4.1
Fitting engine (DaimlerChrysler OM 457 LA/OM 502 LA) .....	13.4.8

**14. Silaging system**

Silaging system .....	14.1.1
Removing silaging material pump .....	14.1.1
Silaging material tank dismantled .....	14.1.3
Fitting silaging material pump .....	14.1.4
Removing silaging material tank .....	14.1.5
Fitting silaging material tank .....	14.1.7

**15. Compressed air system**

Compressed air system .....	15.1.1
Removing pressure regulator .....	15.1.1
Compressed air system dismantled .....	15.1.2
Removing air vessel .....	15.1.4
Fitting air vessel .....	15.1.5

**16. Index**

**1**

***General information***

**GENERAL****Introduction**

The enclosed CLAAS-REPAIR-MANUAL is intended to help maintain the continuous readiness for operation, and thus the high value, of the CLAAS forage harvester, by dedicated care and customer service technical monitoring.

The experience of our customer service technicians and the experience gained in the factory is gathered together in this REPAIR-MANUAL.

The sequence of illustrations shows the progression of each repair process, the text provides more information in the form of the notes required for the setting, the use of the CLAAS special tools etc.

This includes the representation of the most important repairs so that individual and small tasks can be extracted and followed easily.

The CLAAS-REPAIR-MANUAL is designed as a loose-leaf binder.

It is added to continuously in the course of further technical developments of the machines and is therefore always an up-to-date reference document.

For safety reasons, we would ask you always to compare the setting values and filling volumes with the currently-valid operating instructions of the individual machine.

CLAAS KGaA mbH  
Service Department

---

## Introduction to the CLAAS Repair Manual

The CLAAS-REPAIR-MANUAL is divided into main groups and sub-groups.

With regard to the numbering at the foot of each page, the first figure indicates the main group, the figure behind the point is the sub-group and the figure after the second point is the page number. In each sub-group, the illustrations and pages are continuously numbered starting from 1.

Differences between machine types are indicated by text or illustration notes. Fitting procedures which are valid for all machine types referred to in this manual, are kept neutral.

In the case of additions, the sub-groups are added to or replaced. Any additions are filed under the relevant main group/sub-group and the index is replaced.

The picture symbols serve to provide quick orientation in the case of recurring fitting procedures. Their significance is described at the beginning of this book.

Extensive descriptions are given under the designation "GENERAL REPAIR NOTES" at the beginning of this book. Read and observe these important notes. They provide the basis for safe and long-term operation after repair work.


**The index for the relevant main group/sub-group provides easy, quick access to all fitting descriptions.**

**2**


***Operator's platform***

**CAB**

**Removing front frame**

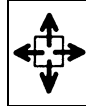


Remove screen (A).  
(Fig. 1)

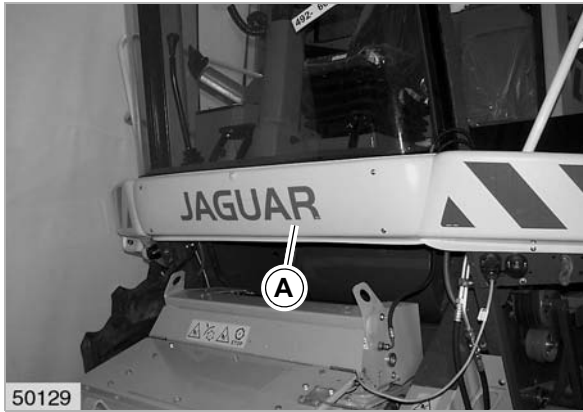


1

Remove the windscreen wiper (B).  
Unscrew the wiper motor (D) from the front plate.  
(Fig. 2)

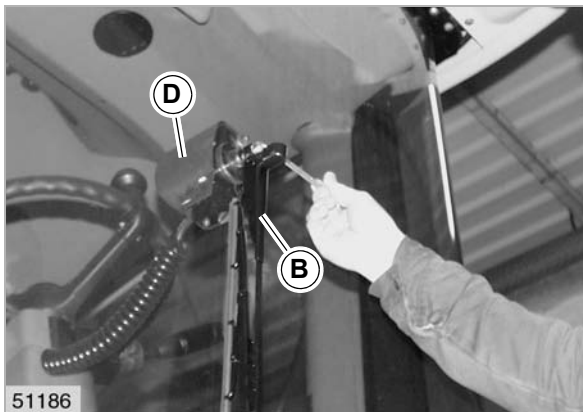


2

Remove the air ducting (E) from the left and right hand sides.  
(Fig. 3)

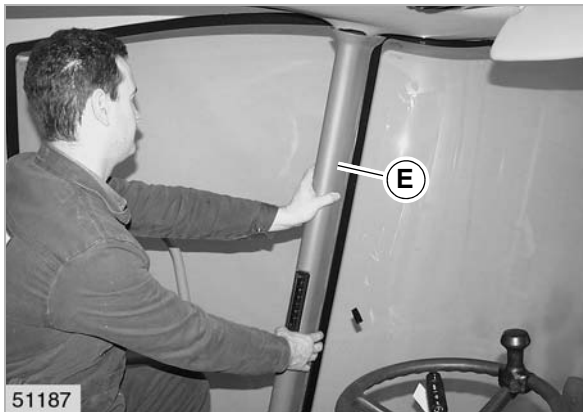

3

Unscrew the doors (F) on the left and right hand sides from the side wall at the hinge.  
(Fig. 4)

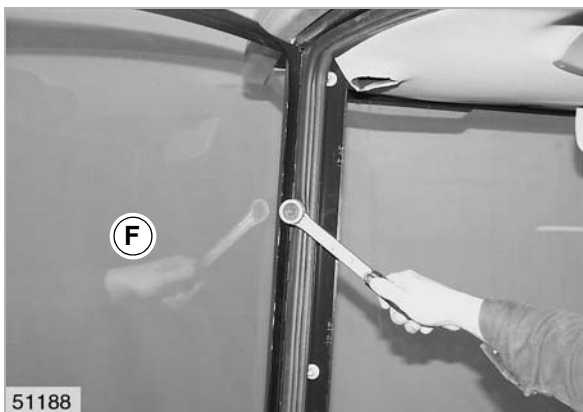

4

**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)