


**REPAIR  
MANUAL**

# ***CLAAS***

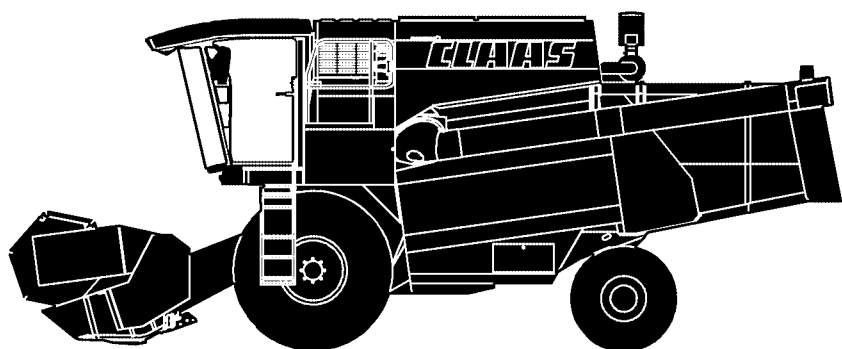

***MEDION 340***

***MEDION 330***

***MEDION 320***

***MEDION 310***

**1. General information**

General .....	1.1.1
Introduction .....	1.1.1
Introduction into the CLAAS Repair Manual .....	1.1.2
Explanation of pictorials .....	1.1.3
Safety rules .....	1.2.1
Important note .....	1.2.1
Identification of warning and danger signs .....	1.2.2
Intended use .....	1.2.2
General safety and accident prevention regulations .....	1.2.2
Leaving the machine .....	1.2.3
Compressor-type air conditioner .....	1.2.3
Maintenance .....	1.2.3
Basic rule .....	1.2.3
Hydraulic accumulators .....	1.2.3
General repair instructions .....	1.3.1
Reason of damage .....	1.3.1
Spare parts .....	1.3.1
Engine .....	1.3.1
Gearboxes .....	1.3.1
Alternator .....	1.3.1
Tensioning the steel roller chains .....	1.3.1
Taper ring fasteners .....	1.3.1
Self-locking bolts .....	1.3.1
Liquid locking compound .....	1.3.2
Proper installation of lock collar bearings .....	1.3.2
Proper installation of adapter sleeve bearing .....	1.3.2
Ferrule fittings on hydraulic lines .....	1.3.2
Profiled ring fittings on hydraulic lines .....	1.3.3
Taper fittings on hydraulic lines .....	1.3.4
Welding Work .....	1.3.4
Some advice for speedy and correct repair work .....	1.3.4
Torque settings .....	1.4.1
Bolts .....	1.4.1
Hydraulic screw joints .....	1.4.2
Brake line screw joints .....	1.4.3
Wheel bolts .....	1.4.4
Specifications .....	1.5.1
Lubricants chart .....	1.5.1
Hydraulic pressures .....	1.5.4
Engine data .....	1.5.6

**2. Operator's platform**

Cab .....	2.1.1
Removing the front frame .....	2.1.1
Installing the front frame .....	2.1.4
Removing the cab rear panel .....	2.1.6
Installing the cab rear panel .....	2.1.8
Cab heater .....	2.2.1
Removing the radiator .....	2.2.1
Installing the radiator .....	2.2.3
Removing the regulating valve .....	2.2.5
Installing the regulating valve .....	2.2.7
Air conditioner .....	2.3.1
Air conditioner – topping up refrigerant .....	2.3.1

Checking the refrigerant oil level / topping up refrigerant oil .....	2.3.2
Removing the evaporator .....	2.3.4
Air conditioner (cab side), exploded view .....	2.3.6
Installing the evaporator .....	2.3.7
Removing the expansion valve .....	2.3.8
Installing the expansion valve .....	2.3.9
Removing the temperature switch .....	2.3.10
Installing the temperature switch .....	2.3.12
Removing the filter drier .....	2.3.13
Filter drier, exploded view .....	2.3.14
Installing the filter drier .....	2.3.14
Removing the condenser .....	2.3.14
Installing the condenser .....	2.3.15
Removing the air conditioner compressor .....	2.3.16
Installing the air conditioner compressor .....	2.3.18
Air conditioner compressor – Removing the electro-magnetic clutch .....	2.3.18
Air conditioner compressor Sanden Sd 5 h14, exploded view .....	2.3.22
Air conditioner compressor – Installing the electro-magnetic clutch .....	2.3.23
Air conditioner compressor – Removing the cylinder head / cylinder head gasket .....	2.3.26
Air conditioner compressor – Installing the cylinder head / cylinder head gasket .....	2.3.27
Air conditioner compressor – Removing the shaft seal .....	2.3.29
Air conditioner compressor – Installing the shaft seal .....	2.3.32
Driver's seat .....	2.4.1
Removing the driver's seat .....	2.4.1
Installing the driver's seat .....	2.4.1
Steering .....	2.5.1
Removing the steering column .....	2.5.1
Disassembling the steering column .....	2.5.5
Steering column, exploded view .....	2.5.6
Assembling the steering column .....	2.5.7
Installing the steering column .....	2.5.8
Removing the steering unit	
Danfoss Ospc 125 steering unit .....	2.5.11
Installing the steering unit	
Danfoss Ospc 125 steering unit .....	2.5.12
Checking / adjusting the steering unit	
Danfoss Ospc 125 steering unit .....	2.5.13
Control elements .....	2.6.1
Removing the control stick .....	2.6.1
Disassembling the control stick .....	2.6.2
Control stick, exploded view .....	2.6.3
Assembling the control stick .....	2.6.4
Installing the control stick .....	2.6.6
Brakes .....	2.7.1
Removing the parking brake rope .....	2.7.1
Parking brake, exploded view .....	2.7.3
Installing the parking brake rope .....	2.7.4
Removing the master cylinder .....	2.7.6
Installing the master cylinder .....	2.7.6

Gear shift mechanism .....	2.8.1	Assembling the right threshing	
Removing the gear shift mechanism .....	2.8.1	drum bearing .....	3.3.16
Disassembling the gear shift mechanism .....	2.8.2	Installing the right threshing drum bearing .....	3.3.17
Gear shift mechanism, exploded view .....	2.8.3	Removing the threshing drum .....	3.3.21
Assembling the gear shift mechanism .....	2.8.4	Replacing the beater bars .....	3.3.25
Installing the gear shift mechanism .....	2.8.5	Replacing the threshing drum shaft .....	3.3.27
Power supply .....	2.9.1	Threshing drum, exploded view .....	3.3.28
Removing the starter .....	2.9.1	Installing the threshing drum .....	3.3.29
Installing the starter .....	2.9.1	Impeller .....	3.4.1
Removing the alternator .....	2.9.2	Removing the left impeller bearing .....	3.4.1
Installing the alternator .....	2.9.3	Installing the left impeller bearing .....	3.4.3
<b>3. Threshing mechanism</b>		Removing the right impeller bearing .....	3.4.4
Feed rake conveyor .....	3.1.1	Installing the right impeller bearing .....	3.4.6
Removing the feed rake conveyor .....	3.1.1	Removing the impeller .....	3.4.8
Installing the feed rake conveyor .....	3.1.3	Disassembling the impeller .....	3.4.9
Removing the wooden ledges .....	3.1.6	Impeller, exploded view .....	3.4.11
Installing the wooden ledges .....	3.1.8	Assembling the impeller .....	3.4.12
Replacing the slide rails .....	3.1.10	Installing the impeller .....	3.4.13
Replacing the feeder chains .....	3.1.10	<b>4. Cleaning unit</b>	
Removing the upper feed rake shaft .....	3.1.13	Under-walker return floor .....	4.1.1
Upper feed rake shaft, exploded view		Removing the under-walker return floor .....	4.1.1
(MEDION 340) .....	3.1.19	Front rocker arm, exploded view .....	4.1.2
Upper feed rake shaft, exploded view		Rear rocker arm, exploded view .....	4.1.2
(MEDION 330 – 310) .....	3.1.20	Installing the under-walker return floor .....	4.1.2
Installing the upper feed rake shaft .....	3.1.21	Straw walker .....	4.2.1
Removing the lower feed rake roller .....	3.1.24	Removing the straw walker racks .....	4.2.1
Disassembling the lower feed rake roller .....	3.1.27	Installing the straw walker racks .....	4.2.3
Lower feed rake roller, exploded view .....	3.1.28	Removing the front straw walker crankshaft .....	4.2.5
Assembling the lower feed rake roller .....	3.1.29	Installing the front straw walker crankshaft .....	4.2.7
Installing the lower feed rake roller .....	3.1.30	Removing the rear straw walker crankshaft .....	4.2.8
Removing the intermediate drive shaft .....	3.1.31	Installing the rear straw walker crankshaft .....	4.2.12
Installing the intermediate drive shaft .....	3.1.36	Disassembling the straw walker crankshafts	
Removing the (electric) reverser drive .....	3.1.39	(for straw walker crankshafts	
Reverser drive (electric), exploded view .....	3.1.41	with ball bearings) .....	4.2.15
Installing the reverser drive (electric) .....	3.1.42	Straw walker bearing, exploded view .....	4.2.16
Removing the reverser guard (hydraulic) .....	3.1.43	Assembling the straw walker crankshafts	
Disassembling the reverser drive		(for straw walker crankshafts	
(hydraulic) .....	3.1.44	with ball bearings) .....	4.2.16
Reverser drive (hydraulic), exploded view .....	3.1.45	Intensive separation system .....	4.3.1
Assembling the reverser drive (hydraulic) .....	3.1.46	Removing the front intensive separation	
Threshing concave .....	3.2.1	system crankshaft .....	4.3.1
Removing the stone trap .....	3.2.1	Installing the front intensive separation	
Installing the stone trap .....	3.2.2	system crankshaft .....	4.3.4
Basic concave setting .....	3.2.4	Removing the rear intensive separation	
Removing the concave .....	3.2.5	system crankshaft .....	4.3.8
Installing the concave .....	3.2.9	Installing the rear intensive separation	
Threshing drum .....	3.3.1	system crankshaft .....	4.3.10
Removing the left threshing drum bearing .....	3.3.1	Disassembling the intensive separation	
Disassembling the left threshing		system crankshaft .....	4.3.13
drum bearing .....	3.3.5	Assembling the intensive separation	
Assembling the left threshing drum bearing .....	3.3.6	system crankshaft .....	4.3.14
Installing the left threshing drum bearing .....	3.3.7	Replacing the intensive separation	
Removing the right threshing drum bearing .....	3.3.11	system control shaft .....	4.3.14
Disassembling the right threshing		Replacing the agitator tine .....	4.3.15
drum bearing .....	3.3.15	Sieve pan .....	4.4.1
Right threshing drum bearing,		Removing the upper sieves .....	4.4.1
exploded view .....	3.3.16	Installing the upper sieves .....	4.4.1
		Removing the lower sieves .....	4.4.1

Installing the lower sieves .....	4.4.1	Removing the fan housing (MEDION 330 – 310) .....	4.8.28
Removing the sieve frame .....	4.4.2	Installing the fan housing (MEDION 330 – 310) .....	4.8.30
Sieve frame, exploded view .....	4.4.5	Removing the wind boards (MEDION 330 – 310) .....	4.8.31
Installing the sieve frame .....	4.4.6	Installing the wind boards (MEDION 330 – 310) .....	4.8.32
Removing the sieve pan .....	4.4.9		
Installing the sieve pan .....	4.4.12		
Preparation floor .....	4.5.1	<b>5. Grain delivery</b>	
Removing the preparation floor .....	4.5.1	Returns elevator .....	5.1.1
Preparation floor, exploded view .....	4.5.5	Removing the returns elevator chain .....	5.1.1
Installing the preparation floor .....	4.5.6	Installing the returns elevator chain .....	5.1.2
Sieve frame linkage .....	4.6.1	Removing the top returns auger .....	5.1.4
Removing the 3-D sieve pan control system .....	4.6.1	Installing the top returns auger .....	5.1.6
Installing the 3-D sieve pan control system .....	4.6.1	Removing the returns elevator .....	5.1.8
3-D sieve frame suspension and sieve pan control system, exploded view .....	4.6.2	Disassembling the returns elevator .....	5.1.8
Adjusting the 3-D sieve pan control system .....	4.6.3	Assembling the returns elevator .....	5.1.10
Rocker arm drive .....	4.7.1	Installing the returns elevator .....	5.1.12
Removing the rocker arm drive .....	4.7.1	Removing the bottom returns auger .....	5.1.13
Rocker arm drive, exploded view .....	4.7.4	Installing the bottom returns auger .....	5.1.16
Installing the rocker arm drive .....	4.7.6	Removing the returns elevator boot .....	5.1.19
Cleaning fan .....	4.8.1	Installing the returns elevator boot .....	5.1.21
Removing the left and right cleaning fan bearings .....	4.8.1	Grain elevator .....	5.2.1
Self-aligning ball bearing, exploded view .....	4.8.4	Removing the grain elevator chain .....	5.2.1
Installing the left and right cleaning fan bearings .....	4.8.4	Installing the grain elevator chain .....	5.2.3
Removing the centre cleaning fan bearing (MEDION 340) .....	4.8.8	Removing the grain tank filler auger .....	5.2.4
Centre cleaning fan bearing, exploded view (MEDION 340) .....	4.8.8	Disassembling the grain tank filler auger angle drive .....	5.2.6
Installing the centre cleaning fan bearing (MEDION 340) .....	4.8.9	Grain tank filler auger, exploded view .....	5.2.9
Removing the fan shaft (MEDION 340) .....	4.8.9	Assembling the grain tank filler auger angle drive .....	5.2.10
Installing the fan shaft (MEDION 340) .....	4.8.12	Installing the grain tank filler auger .....	5.2.12
Removing the fan rotors (MEDION 340) .....	4.8.15	Removing the grain elevator head .....	5.2.13
Installing the fan rotors (MEDION 340) .....	4.8.16	Disassembling the grain elevator head .....	5.2.14
Removing the fan housing (MEDION 340) .....	4.8.17	Grain elevator head, exploded view .....	5.2.17
Installing the fan housing (MEDION 340) .....	4.8.18	Assembling the grain elevator head .....	5.2.18
Removing the wind boards (MEDION 340) .....	4.8.20	Installing the grain elevator head .....	5.2.20
Installing the wind board (MEDION 340) .....	4.8.21	Removing the grain elevator shaft .....	5.2.21
Removing the fan blast reduction kit (MEDION 340) .....	4.8.22	Installing the grain elevator shaft .....	5.2.22
Installing the fan blast reduction kit (MEDION 340) .....	4.8.23	Removing the grain auger .....	5.2.23
Removing the fan shaft (MEDION 330 – 310) .....	4.8.26	Installing the grain auger .....	5.2.27
Installing the fan shaft (MEDION 330 – 310) .....	4.8.26	Removing the grain elevator boot .....	5.2.30
Replacing the fan blades (MEDION 330 – 310) .....	4.8.27	Installing the grain elevator boot .....	5.2.31
		Grain tank unloading .....	5.3.1
		Removing the lateral augers (MEDION 340 / 330) .....	5.3.1
		Installing the lateral augers (MEDION 340 / 330) .....	5.3.4
		Removing the grain tank unloading auger .....	5.3.7
		Installing the grain tank unloading auger .....	5.3.11
		Removing the grain tank unloading tube auger .....	5.3.13
		Grain tank unloading tube, exploded view .....	5.3.15
		Installing the grain tank unloading tube auger .....	5.3.16
		Removing the grain tank unloading tube .....	5.3.18
		Installing the grain tank unloading tube .....	5.3.19
		Replacing the wear ring .....	5.3.21

Chaff spreader .....	5.4.1	Installing and adjusting the threshing mechanism	
Removing the chaff spreader		drive belt (5) .....	7.2.13
flange housing .....	5.4.1	Removing the grain tank unloading drive	
Disassembling the chaff spreader		belt (6) .....	7.2.15
flange housing .....	5.4.2	Installing and adjusting the grain tank unloading	
Chaff spreader, exploded view .....	5.4.4	drive belt (6) .....	7.2.16
Assembling the chaff spreader		Removing the sieve pan / fan intermediate	
flange housing .....	5.4.6	drive belt (7) .....	7.2.17
Installing the chaff spreader		Installing and adjusting the sieve pan /	
flange housing .....	5.4.8	fan intermediate drive belt (7) .....	7.2.17
Removing the chaff spreader drive shaft .....	5.4.9	Removing the fan variable-speed belt (8) .....	7.2.18
Disassembling the chaff spreader		Installing the fan variable-speed belt (8) .....	7.2.19
drive shaft .....	5.4.10	Removing the sieve pan intermediate	
Assembling the chaff spreader drive shaft .....	5.4.11	drive belt (9) .....	7.2.19
Installing the chaff spreader drive shaft .....	5.4.11	Installing and adjusting the sieve pan	
<b>6. Straw discharge</b>		intermediate drive belt (9) .....	7.2.20
Straw spreader .....	6.1.1	Removing the sieve pan drive belt (10) .....	7.2.20
Removing the straw spreader .....	6.1.1	Installing and adjusting the sieve pan	
Disassembling the straw spreader .....	6.1.2	drive belt (10) .....	7.2.21
Straw spreader, exploded view .....	6.1.5	Removing the straw walker	
Assembling the straw spreader .....	6.1.6	drive belt (11) .....	7.2.21
Installing the straw spreader .....	6.1.8	Installing and adjusting the straw walker	
Straw chopper .....	6.2.1	drive belt (11) .....	7.2.22
Removing the right straw chopper bearing .....	6.2.1	Removing the intensive separation system	
Removing the left straw chopper bearing .....	6.2.3	drive belt (12) .....	7.2.23
Disassembling the left and right straw		Installing and adjusting the intensive separation	
chopper bearing .....	6.2.5	system drive belt (12) .....	7.2.24
Assembling the left and right straw		Removing the straw spreader	
chopper bearing .....	6.2.5	drive belt (14) .....	7.2.24
Installing the right straw chopper bearing .....	6.2.6	Installing and adjusting the straw spreader	
Installing the left straw chopper bearing .....	6.2.8	drive belt (14) .....	7.2.25
Removing the cutting cylinder .....	6.2.9	Removing the chaff spreader intermediate	
Cutting cylinder, exploded view .....	6.2.12	drive belt (15) .....	7.2.26
Pre-assembling the cutting cylinder .....	6.2.13	Installing and adjusting the chaff spreader	
Installing the cutting cylinder .....	6.2.14	intermediate drive belt (15) .....	7.2.26
<b>7. Drives</b>		Removing the chaff spreader	
Drive diagram .....	7.1.1	drive belt (16) .....	7.2.27
Drive diagram, left side .....	7.1.1	Installing and adjusting the chaff spreader	
Drive diagram, right side .....	7.1.2	drive belt (16) .....	7.2.27
Drive belts on left side .....	7.2.1	Right drive belt .....	7.3.1
Removing the cutterbar drive belt (1) .....	7.2.1	Removing the straw chopper drive belt (20) .....	7.3.1
Installing and adjusting the cutterbar		Installing and adjusting the straw chopper	
drive belt (1) .....	7.2.3	drive belt (20) .....	7.3.2
Removing the compressor drive belt (2) .....	7.2.5	Removing the straw chopper intermediate	
Installing and adjusting the compressor		drive belt (21) .....	7.3.3
drive belt (2) .....	7.2.6	Installing and adjusting the straw chopper	
Hydrostatic ground drive –		intermediate drive belt (21) .....	7.3.3
Removing the drive belt (3) .....	7.2.7	Removing the suction blower	
Hydrostatic ground drive –		drive belt (22) .....	7.3.4
Installing and adjusting the drive belt (3) .....	7.2.9	Installing and adjusting the suction blower	
Working hydraulics pump drive –		drive belt (22) .....	7.3.5
Removing the drive belt (4) .....	7.2.10	Removing the threshing drum variable-speed	
Working hydraulics pump drive –		belt (23) .....	7.3.6
Installing and adjusting the drive belt (4) .....	7.2.11	Installing the threshing drum variable-speed	
Removing the threshing mechanism		belt (23) .....	7.3.7
drive belt (5) .....	7.2.12	Removing the threshing drum drive belt (24) .....	7.3.8
		Installing and adjusting the threshing cylinder	
		drive belt (24) .....	7.3.10

Removing the threshing drum variable-speed belt (25) (without intermediate drive) .....	7.3.12	Threshing drum variable-speed drive (spring-loaded), exploded view .....	7.5.16
Installing the threshing drum variable-speed belt (25) (without intermediate drive) .....	7.3.13	Assembling the threshing drum variable-speed drive (spring-loaded) .....	7.5.18
Removing the rotary chaff screen drive belt (26) .....	7.3.14	Installing the threshing drum variable-speed drive (spring-loaded) .....	7.5.21
Installing the rotary chaff screen drive belt (26) .....	7.3.15	Removing the threshing drum variable-speed drive intermediate drive .....	7.5.25
Removing the rotary chaff screen intermediate drive belt (27) .....	7.3.15	Disassembling the threshing drum variable-speed intermediate drive .....	7.5.26
Installing and adjusting the rotary chaff screen intermediate drive belt (27) .....	7.3.16	Threshing drum variable-speed intermediate drive, exploded view .....	7.5.28
Removing the alternator / fan drive belt (28) .....	7.3.17	Assembling the threshing drum variable-speed intermediate drive .....	7.5.29
Installing the alternator / fan drive belt (28) .....	7.3.17	Installing the threshing drum variable-speed drive intermediate drive .....	7.5.31
Removing the grain elevator top drive chain (30) .....	7.3.18	Removing the drum drive jockey pulley (with intermediate drive) .....	7.5.32
Installing the grain elevator top drive chain (30) .....	7.3.18	Drum drive jockey pulley, exploded view (with intermediate drive) .....	7.5.32
Removing the grain tank unloading intermediate drive chain (31) .....	7.3.19	Installing the drum drive jockey pulley (with intermediate drive) .....	7.5.33
Installing and adjusting the grain tank unloading intermediate drive chain (31) .....	7.3.19	Removing the threshing drum reduction gearbox .....	7.5.34
Removing the grain tank unloading intermediate drive chain (32) (MEDION 340 / 330) .....	7.3.19	Disassembling the threshing drum reduction gearbox .....	7.5.35
Installing and adjusting the grain tank unloading intermediate drive chain (32) (MEDION 340 / 330) .....	7.3.20	Threshing drum reduction gearbox, exploded view .....	7.5.40
Removing the returns drive chain (33) .....	7.3.20	Assembling the threshing drum reduction gearbox .....	7.5.42
Installing and adjusting the returns drive chain (33) .....	7.3.21	Installing the threshing drum reduction gearbox .....	7.5.47
Threshing mechanism drive on left side .....	7.4.1	Removing the drum drive V-belt pulley .....	7.5.49
Removing the threshing mechanism drive jockey pulley .....	7.4.1	Installing the drum drive V-belt pulley .....	7.5.50
Threshing mechanism drive jockey pulley, exploded view .....	7.4.2	Cutterbar drive .....	7.6.1
Installing the threshing mechanism drive jockey pulley .....	7.4.2	Removing the cutterbar clutch .....	7.6.1
Removing the threshing mechanism drive V-belt pulley .....	7.4.3	Cutterbar clutch, exploded view .....	7.6.5
Installing the threshing mechanism drive V-belt pulley .....	7.4.3	Installing the cutterbar clutch .....	7.6.7
Right threshing mechanism drive .....	7.5.1	Removing the cutterbar drive jockey pulley .....	7.6.11
Removing the threshing drum variable-speed drive (hydraulic) .....	7.5.1	Cutterbar drive jockey pulley, exploded view .....	7.6.11
Disassembling the threshing drum variable-speed drive (hydraulic) .....	7.5.3	Installing the cutterbar drive jockey pulley .....	7.6.12
Threshing drum variable-speed drive (hydraulic), exploded view .....	7.5.5	Removing the cutterbar drive guide roller .....	7.6.13
Assembling the threshing drum variable-speed drive (hydraulic) .....	7.5.7	Cutterbar drive guide roller, exploded view (MEDION 340) .....	7.6.13
Installing the threshing drum variable-speed drive (hydraulic) .....	7.5.9	Cutterbar drive guide roller, exploded view (MEDION 330 – 310) .....	7.6.13
Removing the threshing drum variable-speed drive (spring-loaded) .....	7.5.11	Installing the cutterbar drive guide roller .....	7.6.14
Disassembling the threshing drum variable-speed drive (spring-loaded) .....	7.5.13	Removing the front cutterbar drive V-belt pulley .....	7.6.15
		Installing the front cutterbar drive V-belt pulley .....	7.6.16
		Removing the cutterbar drive slip clutch .....	7.6.17
		Disassembling the cutterbar drive slip clutch .....	7.6.18
		Cutterbar drive slip clutch, exploded view .....	7.6.20
		Assembling the cutterbar drive slip clutch .....	7.6.20
		Installing the cutterbar drive slip clutch .....	7.6.22

Straw walker drive .....	7.7.1	Assembling the fan variable-speed drive (electric) .....	7.9.11
Removing the straw walker drive jockey pulley .....	7.7.1	Installing the fan variable-speed drive (electric) .....	7.9.13
Straw walker drive jockey pulley, exploded view .....	7.7.1	Aligning the fan variable-speed pulleys .....	7.9.16
Installing the straw walker drive jockey pulley .....	7.7.2	Removing the fan variable-speed drive (spring-loaded) .....	7.9.17
Removing the intensive separation system jockey pulley .....	7.7.3	Disassembling the spring-loaded fan variable-speed drive .....	7.9.18
Intensive separation system jockey pulley, exploded view .....	7.7.3	Fan variable-speed drive (spring-loaded), exploded view .....	7.9.19
Installing the intensive separation system jockey pulley .....	7.7.4	Assembling the spring-loaded fan variable-speed drive .....	7.9.20
Removing the intensive separation system guide roller .....	7.7.5	Installing the fan variable-speed drive (spring-loaded) .....	7.9.22
Intensive separation system guide roller, exploded view .....	7.7.5	Chaff spreader drive .....	7.10.1
Installing the intensive separation system guide roller .....	7.7.6	Removing the chaff spreader drive bracket .....	7.10.1
Sieve pan drive .....	7.8.1	Disassembling the chaff spreader drive bracket .....	7.10.2
Removing the sieve pan / fan drive intermediate drive jockey pulley .....	7.8.1	Chaff spreader bracket, exploded view .....	7.10.3
Sieve pan / fan drive intermediate drive jockey pulley, exploded view .....	7.8.1	Assembling the chaff spreader drive bracket .....	7.10.3
Installing the sieve pan / fan drive intermediate drive jockey pulley .....	7.8.2	Installing the chaff spreader drive bracket .....	7.10.5
Removing the sieve pan / straw walker drive intermediate drive guide roller .....	7.8.3	Removing the chaff spreader drive jockey pulley .....	7.10.6
Sieve pan / straw walker drive intermediate drive guide roller, exploded view .....	7.8.3	Chaff spreader drive jockey pulley, exploded view .....	7.10.6
Installing the sieve pan / straw walker drive intermediate drive guide roller .....	7.8.4	Installing the chaff spreader drive jockey pulley .....	7.10.7
Removing the sieve pan / straw walker drive intermediate drive V-belt pulley .....	7.8.5	Grain tank drive .....	7.11.1
Disassembling the sieve pan / straw walker drive intermediate drive V-belt pulley .....	7.8.6	Removing the grain tank drive jockey pulley .....	7.11.1
Sieve pan / straw walker drive intermediate drive V-belt pulley, exploded view .....	7.8.7	Grain tank drive jockey pulley, exploded view .....	7.11.1
Assembling the sieve pan / straw walker drive intermediate drive V-belt pulley .....	7.8.7	Installing the grain tank drive jockey pulley .....	7.11.2
Installing the sieve pan / straw walker drive intermediate drive V-belt pulley .....	7.8.9	Removing the grain tank drive intermediate drive shaft .....	7.11.2
Removing the sieve pan drive guide roller .....	7.8.10	Grain tank drive intermediate drive shaft, exploded view .....	7.11.5
Sieve pan drive guide roller, exploded view .....	7.8.10	Installing the grain tank drive intermediate drive shaft .....	7.11.6
Installing the sieve pan drive guide roller .....	7.8.11	Removing the grain tank drive safety clutch .....	7.11.8
Fan drive .....	7.9.1	Disassembling the grain tank drive safety clutch .....	7.11.9
Removing the fan adjustment (electric) .....	7.9.1	Grain tank drive safety clutch, exploded view .....	7.11.10
Disassembling the fan adjustment (electric) .....	7.9.2	Assembling the grain tank drive safety clutch .....	7.11.10
Fan adjustment (electric), exploded view .....	7.9.3	Installing the grain tank drive safety clutch .....	7.11.11
Assembling the fan adjustment (electric) .....	7.9.4	Removing the equalising auger .....	7.11.11
Installing the fan adjustment (electric) .....	7.9.6	Disassembling the equalising auger .....	7.11.13
Removing the fan variable-speed drive (electric) .....	7.9.7	Equalising auger, exploded view .....	7.11.15
Disassembling the fan variable-speed drive (electric) .....	7.9.8	Assembling the equalising auger .....	7.11.16
Fan variable-speed drive (electric), exploded view (MEDION 340) .....	7.9.10	Installing the equalising auger .....	7.11.18
Fan variable-speed drive (electric), exploded view (MEDION 330 – 310) .....	7.9.10	Straw chopper drive .....	7.12.1
		Removing the straw chopper intermediate drive jockey pulley .....	7.12.1

Straw chopper intermediate drive jockey pulley, exploded view (MEDION 340) .....	7.12.1	Installing the ground drive jockey pulley .....	7.14.2
Straw chopper intermediate drive jockey pulley, exploded view (MEDION 330 – 310 with threshing drum reduction gearbox) .....	7.12.2	Removing the actuating rope .....	7.14.2
Straw chopper intermediate drive jockey pulley, exploded view (MEDION 330 – 310 without threshing drum reduction gearbox) .....	7.12.2	Installing the actuating rope .....	7.14.3
Installing the straw chopper intermediate drive jockey pulley .....	7.12.3	Rotary chaff screen drive .....	7.15.1
Removing the straw chopper drive intermediate drive .....	7.12.4	Removing the rotary chaff screen drive shaft .....	7.15.1
Disassembling the straw chopper drive intermediate drive .....	7.12.5	Disassembling the rotary chaff screen drive shaft .....	7.15.2
Straw chopper drive intermediate drive, exploded view (MEDION 340) .....	7.12.7	Rotary chaff screen drive, exploded view .....	7.15.6
Assembling the straw chopper drive intermediate drive .....	7.12.8	Assembling the rotary chaff screen drive shaft .....	7.15.7
Installing the straw chopper drive intermediate drive .....	7.12.10	Installing the rotary chaff screen drive shaft .....	7.15.9
Removing the straw chopper drive jockey pulley (stage 1) .....	7.12.11	Rotary chaff screen suction blower .....	7.16.1
Straw chopper drive jockey pulley, exploded view (stage 1) .....	7.12.11	Removing the rotary chaff screen suction blower .....	7.16.1
Installing the straw chopper drive jockey pulley (stage 1) .....	7.12.12	Disassembling the rotary chaff screen suction blower .....	7.16.1
Removing the straw chopper drive jockey pulley (stage 2) .....	7.12.13	Rotary chaff screen suction blower, exploded view .....	7.16.4
Straw chopper drive jockey pulley, exploded view (stage 2) .....	7.12.13	Assembling the rotary chaff screen suction blower .....	7.16.5
Installing the straw chopper drive jockey pulley (stage 2) .....	7.12.14	Installing the rotary chaff screen suction blower .....	7.16.7
Removing the straw chopper drive guide roller (stage 2) .....	7.12.15	Drive axle .....	7.17.1
Straw chopper drive guide roller, exploded view (stage 2) .....	7.12.15	Removing the drive axle .....	7.17.1
Installing the straw chopper drive guide roller (stage 2) .....	7.12.16	Installing the drive axle .....	7.17.5
Removing the cutting cylinder drive .....	7.12.17	Manual gearbox .....	7.18.1
Cutting cylinder drive, exploded view .....	7.12.17	Removing the manual gearbox .....	7.18.1
Installing the cutting cylinder drive .....	7.12.18	Disassembling the manual gearbox and the differential .....	7.18.6
Straw spreader drive .....	7.13.1	Manual gearbox, exploded view .....	7.18.15
Removing the straw spreader tensioning device .....	7.13.1	Differential, exploded view .....	7.18.16
Disassembling the straw spreader tensioning device .....	7.13.2	Assembling the manual gearbox and the differential .....	7.18.17
Straw spreader tensioning device, exploded view .....	7.13.3	Installing the manual gearbox .....	7.18.31
Assembling the straw spreader tensioning device .....	7.13.4	Brakes .....	7.19.1
Installing the straw spreader tensioning device .....	7.13.5	Removing the brake shoes of the parking brake .....	7.19.1
Ground drive .....	7.14.1	Installing the brake shoes of the parking brake .....	7.19.2
Removing the ground drive jockey pulley .....	7.14.1	Bleeding the brake system .....	7.19.3
Ground drive jockey pulley, exploded view .....	7.14.1	Removing the brake linings of the foot brake .....	7.19.4
		Installing the brake linings of the foot brake .....	7.19.6
		Removing the fixed caliper .....	7.19.7
		Installing the fixed caliper .....	7.19.9
		Removing the brake disc .....	7.19.11
		Installing the brake disc .....	7.19.12
		Final drives .....	7.20.1
		Removing the axle drives .....	7.20.1
		Installing the axle drive .....	7.20.3
		Disassembling the axle drive (MEDION 340) .....	7.20.5
		Axle drive, exploded view (MEDION 340) .....	7.20.14
		Assembling the axle drive (MEDION 340) .....	7.20.16



Disassembling the axle drive (MEDION 330 – 310) .....	7.20.26	Checking the hydraulic oil level (Hydrostatic ground drive and working hydraulics) .....	9.1.5
Axle drive, exploded view (MEDION 330 – 310) .....	7.20.32	Hydraulic oil cooler .....	9.2.1
Assembling the axle drive (MEDION 330 – 310) .....	7.20.33	Removing the hydraulic oil cooler .....	9.2.1
Rear axle .....	7.21.1	Installing the hydraulic oil cooler .....	9.2.2
Removing the wheel bearings (2.05 m rear axle) .....	7.21.1	Hydraulic pump .....	9.3.1
Wheel bearing, exploded view (2.05 m rear axle) .....	7.21.3	Removing the double pump .....	9.3.1
Installing the wheel bearings (2.05 m rear axle) .....	7.21.3	Disassembling the double pump .....	9.3.2
Removing the stub axles (2.05 m rear axle) .....	7.21.5	Double pump, exploded view .....	9.3.3
Stub axle, exploded view (2.05 m rear axle) .....	7.21.8	Assembling the double pump .....	9.3.3
Installing the stub axles (2.05 m rear axle) .....	7.21.8	Installing the double pump .....	9.3.4
Removing the wheel bearings (2.40 m rear axle / adjustable rear axle) .....	7.21.10	Removing the hydraulic variable-displacement pump (Linde HPV 105) .....	9.3.7
Wheel bearing, exploded view (2.40 m rear axle / adjustable rear axle) .....	7.21.12	Hydrostatic ground drive, exploded view (Linde HPV 105) .....	9.3.10
Installing the wheel bearings (2.40 m rear axle / adjustable rear axle) .....	7.21.13	Installing the hydraulic variable-displacement pump (Linde HPV 105) .....	9.3.11
Removing the stub axles (2.40 m rear axle / adjustable rear axle) .....	7.21.15	Venting the hydrostatic system .....	9.3.16
Stub axle, exploded view (2.40 m rear axle / adjustable rear axle – MEDION 330 – 310) .....	7.21.18	Bleeding the CLAAS 4-Trac system .....	9.3.17
Stub axle, exploded view (adjutable rear axle – MEDION 340) .....	7.21.18	Hydraulic motor .....	9.4.1
Installing the stub axles (2.40 m rear axle / adjustable rear axle) .....	7.21.18	Removing the ground drive hydraulic motor (Linde HMV 105) .....	9.4.1
Adjusting the rear axle stops (2.05 m rear axle, 2.40 m rear axle, adjustable rear axle) .....	7.21.21	Installing the ground drive hydraulic motor (Linde HMV 105) .....	9.4.3
Adjusting the rear axle stops (CLAAS 4-Trac axle) .....	7.21.22	Low-pressure hydraulic system control valves .....	9.5.1
Adjusting the track width .....	7.21.23	Removing the low-pressure hydraulic system solenoid valve .....	9.5.1
Removing the rear axle .....	7.21.25	Low-pressure hydraulic system solenoid valve, exploded view .....	9.5.4
Installing the rear axle .....	7.21.27	Installing the low-pressure hydraulic system solenoid valve .....	9.5.5
Removing the CLAAS 4-Trac axle .....	7.21.29	Removing the low-pressure hydraulic system pressure relief valve .....	9.5.6
Installing the CLAAS 4-Trac axle .....	7.21.31	Installing the low-pressure hydraulic system pressure relief valve .....	9.5.7
Removing the CLAAS 4-Trac system .....	7.21.34	Adjusting / checking the low-pressure hydraulic system pressure relief valve .....	9.5.7
CLAAS 4-Trac system, exploded view .....	7.21.37	Removing the 3-D sieve pan pendulum control .....	9.5.8
Installing the CLAAS 4-Trac system .....	7.21.38	Disassembling the 3-D sieve pan pendulum control .....	9.5.8
Removing the stub axle housings (CLAAS 4-Trac system) .....	7.21.40	3-D sieve pan pendulum control, exploded view .....	9.5.10
Installing the stub axle housings (CLAAS 4-Trac system) .....	7.21.42	Assembling the 3-D sieve pan pendulum control .....	9.5.11
		Installing the 3-D sieve pan pendulum control .....	9.5.12
		Working hydraulics control valves .....	9.6.1
		Removing the grain tank unloading tube lock-up valve unit .....	9.6.1
		Grain tank unloading tube lock-up valve unit, exploded view .....	9.6.1
		Installing the grain tank unloading tube lock-up valve unit .....	9.6.2
		Removing the CLAAS Auto-Contour lock-up valve unit .....	9.6.3
		CLAAS Auto-Contour lock-up valve unit, exploded view .....	9.6.3
<b>8. Machine body</b>			
<b>9. Hydraulic system</b>			
Hydraulic tank .....	9.1.1		
Removing the hydraulic tank .....	9.1.1		
Hydraulic tank, exploded view .....	9.1.3		
Installing the hydraulic tank .....	9.1.3		

Installing the CLAAS Auto-Contour lock-up valve unit .....	9.6.4	Removing the CLAAS Autopilot master valve .....	9.6.36
Removing the working hydraulics pressure relief valve .....	9.6.5	CLAAS Autopilot master valve, exploded view .....	9.6.37
Disassembling the working hydraulics pressure relief valve .....	9.6.5	Installing the CLAAS Autopilot master valve .....	9.6.37
Working hydraulics pressure relief valve, exploded view .....	9.6.7	Removing the CLAAS Autopilot solenoid valve block .....	9.6.38
Assembling the working hydraulics pressure relief valve .....	9.6.8	CLAAS Autopilot solenoid valve block, exploded view .....	9.6.40
Installing the working hydraulics pressure relief valve .....	9.6.9	Installing the CLAAS Autopilot solenoid valve block .....	9.6.41
Adjusting / checking the working hydraulics pressure relief valve .....	9.6.10	Low-pressure hydraulic system	
Removing the front working hydraulics valve block .....	9.6.11	hydraulic cylinder .....	9.7.1
Installing the front working hydraulics valve block .....	9.6.12	Removing the threshing mechanism circuit hydraulic cylinder .....	9.7.1
Removing the 3/3-way drum speed adjustment valve .....	9.6.12	Disassembling the threshing mechanism circuit hydraulic cylinder .....	9.7.2
Disassembling the 3/3-way drum speed adjustment valve .....	9.6.13	Threshing mechanism circuit hydraulic cylinder, exploded view .....	9.7.3
3/3-way drum speed adjustment valve, exploded view .....	9.6.15	Assembling the threshing mechanism circuit hydraulic cylinder .....	9.7.4
Assembling the 3/3-way drum speed adjustment valve .....	9.6.16	Installing the threshing mechanism circuit hydraulic cylinder .....	9.7.5
Installing the 3/3-way drum speed adjustment valve .....	9.6.17	Removing the grain tank circuit hydraulic cylinder (MEDION 340) .....	9.7.6
Removing the 4/3-way hydraulic fore and aft reel adjustment and CLAAS Auto-Contour solenoid valve .....	9.6.18	Installing the grain tank circuit hydraulic cylinder (MEDION 340) .....	9.7.7
4/3-way hydraulic fore and aft reel adjustment and CLAAS Auto-Contour solenoid valve, exploded view .....	9.6.19	Removing the grain tank circuit hydraulic cylinder (MEDION 330 – 310) .....	9.7.8
Installing the 4/3-way hydraulic fore and aft reel adjustment and CLAAS Auto-Contour solenoid valve .....	9.6.20	Installing the grain tank circuit hydraulic cylinder (MEDION 330 – 310) .....	9.7.9
Removing the rear working hydraulics valve block .....	9.6.21	Disassembling the grain tank circuit hydraulic cylinder .....	9.7.10
Installing the rear working hydraulics valve block .....	9.6.23	Grain tank circuit hydraulic cylinder, exploded view .....	9.7.11
Removing the 3/3-way raise / lower reel and raise / lower cutterbar solenoid valve .....	9.6.23	Assembling the grain tank circuit hydraulic cylinder .....	9.7.11
Disassembling the 3/3-way raise / lower reel and raise / lower cutterbar solenoid valve .....	9.6.24	Removing the cutterbar clutch rotary coupling .....	9.7.12
3/3-way raise / lower reel and raise / lower cutterbar solenoid valve, exploded view .....	9.6.29	Disassembling the cutterbar clutch rotary coupling .....	9.7.13
Assembling the 3/3-way raise/lower reel and raise/lower cutterbar solenoid valve .....	9.6.30	Assembling the cutterbar clutch rotary coupling .....	9.7.15
Installing the 3/3-way raise / lower reel and raise / lower cutterbar solenoid valve .....	9.6.31	Installing the cutterbar clutch rotary coupling .....	9.7.17
Removing the 4/3-way swing grain tank unloading tube solenoid valve .....	9.6.32	Removing the cutterbar clutch hydraulic cylinder .....	9.7.17
4/3-way swing grain tank unloading tube solenoid valve, exploded view .....	9.6.33	Disassembling the cutterbar clutch hydraulic cylinder .....	9.7.18
Installing the 4/3-way swing grain tank unloading tube solenoid valve .....	9.6.34	Rotary coupling / Cutterbar clutch hydraulic cylinder, exploded view .....	9.7.19
Removing the CLAAS Auto-Contour flow control valve .....	9.6.35	Assembling the cutterbar clutch hydraulic cylinder .....	9.7.20
CLAAS Auto-Contour flow control valve, exploded view .....	9.6.35	Installing the cutterbar clutch hydraulic cylinder .....	9.7.22
Installing the CLAAS Auto-Contour flow control valve .....	9.6.36	Removing the 3-D cleaning system hydraulic cylinder .....	9.7.22

Disassembling the 3-D cleaning system hydraulic cylinder .....	9.7.23	Assembling the reverser drive hydraulic cylinder .....	9.8.32
3-D sieve pan control system hydraulic cylinder, exploded view .....	9.7.25	Installing the reverser drive hydraulic cylinder .....	9.8.33
Assembling the 3-D cleaning system hydraulic cylinder .....	9.7.26	Adjusting the reverser drive hydraulic cylinder .....	9.8.34
Installing the 3-D cleaning system hydraulic cylinder .....	9.7.27	Steering hydraulics hydraulic cylinders .....	9.9.1
Working hydraulics hydraulic cylinders .....	9.8.1	Removing the steering cylinders (for 2.05 m rear axle) .....	9.9.1
Removing the cutterbar cylinders .....	9.8.1	Disassembling the steering cylinders (for 2.05 m rear axle) .....	9.9.2
Disassembling the cutterbar cylinder .....	9.8.2	Steering cylinder, exploded view (for 2.05 m rear axle) .....	9.9.3
Cutterbar cylinder, exploded view .....	9.8.4	Assembling the steering cylinders (for 2.05 m rear axle) .....	9.9.4
Assembling the cutterbar cylinders .....	9.8.5	Assembling the steering cylinders (for 2.05 m rear axle) .....	9.9.6
Installing the cutterbar cylinder .....	9.8.7	Removing the steering cylinders (for adjustable rear axle, for CLAAS 4-Trac axle) .....	9.9.7
Removing the CLAAS Auto-Contour hydraulic cylinder .....	9.8.8	Disassembling the steering cylinders (for adjustable rear axle, for CLAAS 4-Trac axle) .....	9.9.8
Disassembling the CLAAS Auto-Contour hydraulic cylinder .....	9.8.8	Steering cylinder, exploded view (for adjustable rear axle, for CLAAS 4-Trac axle) .....	9.9.9
CLAAS Auto-Contour hydraulic cylinder, exploded view .....	9.8.10	Assembling the steering cylinders (for adjustable rear axle, for CLAAS 4-Trac axle) .....	9.9.10
Assembling the CLAAS Auto-Contour hydraulic cylinder .....	9.8.11	Installing the steering cylinders (for adjustable rear axle, for CLAAS 4-Trac axle) .....	9.9.12
Installing the CLAAS Auto-Contour hydraulic cylinder .....	9.8.13		
Removing the grain tank unloading tube hydraulic cylinder .....	9.8.14	<b>10. Engine</b>	
Disassembling the grain tank unloading tube hydraulic cylinder .....	9.8.15	Engine output .....	10.1.1
Grain tank unloading tube hydraulic cylinder, exploded view .....	9.8.17	Removing the engine output shaft (DAIMLER CHRYSLER OM 906 LA) .....	10.1.1
Assembling the grain tank unloading tube hydraulic cylinder .....	9.8.18	Engine output, exploded view (DAIMLER CHRYSLER OM 906 LA) .....	10.1.8
Installing the grain tank unloading tube hydraulic cylinder .....	9.8.20	Installing the engine output shaft (DAIMLER CHRYSLER OM 906 LA) .....	10.1.9
Removing the drum variable-speed drive rotary coupling .....	9.8.21	Engine .....	10.2.1
Disassembling the drum variable-speed drive rotary coupling .....	9.8.22	Removing the engine (DAIMLER CHRYSLER OM 906 LA) .....	10.2.1
Assembling the drum variable-speed drive rotary coupling .....	9.8.24	Installing the engine (DAIMLER CHRYSLER OM 906 LA) .....	10.2.8
Installing the drum variable-speed drive rotary coupling .....	9.8.25	Fuel system .....	10.3.1
Removing the drum variable-speed drive hydraulic cylinder .....	9.8.26	Removing the fuel tank .....	10.3.1
Disassembling the drum variable-speed drive hydraulic cylinder .....	9.8.26	Fuel tank, exploded view .....	10.3.3
Drum variable-speed drive hydraulic cylinder, exploded view .....	9.8.27	Installing the fuel tank .....	10.3.4
Assembling the drum variable-speed drive hydraulic cylinder .....	9.8.28	Engine cooling system .....	10.4.1
Installing the drum variable-speed drive hydraulic cylinder .....	9.8.29	Removing the radiator .....	10.4.1
Removing the reverser drive hydraulic cylinder .....	9.8.29	Engine cooling system, exploded view (DaimlerChrysler OM 906 LA) .....	10.4.4
Disassembling the reverser drive hydraulic cylinder .....	9.8.30	Installing the radiator .....	10.4.5
Reverser drive hydraulic cylinder, exploded view .....	9.8.31	Removing the charge air cooler .....	10.4.8
		Installing the charge air cooler .....	10.4.10
		<b>11. Index</b>	

**1**

## ***General information***

**GENERAL****Introduction**

The present CLAAS REPAIR MANUAL is intended to assist in preserving the permanent operational readiness and therefore the high value of your CLAAS combine harvester by thorough maintenance and service supervision.

Experience gathered by both our service engineers and factory staff has been compiled in this REPAIR MANUAL.

The sequences of pictures illustrate the course of a repair process while the text provides the necessary information on adjustments, application of CLAAS special tools and the like.

The illustrations included in support to the explanations show the sequence of major repairs so that minor repairs can easily be followed.

The CLAAS REPAIR MANUAL is filled in a folder which allows to insert supplementary pages as issued following technical developments and to always have an updated manual at hand for reference.

To be sure, always compare settings and filling capacities with specifications stated in the current Operator's Manual of the combine-harvester.

CLAAS KGaA mbH  
Service Department

---

## Introduction into the CLAAS Repair Manual

The CLAAS Repair Manual is subdivided into main groups and subgroups.

The first digit of the number to be found at the bottom of each page indicates the main group, the digit following the first dot indicates the subgroup and the digit following the second dot the page number. Both pictures and pages are numbered consecutively in each subgroup, starting at 1.

Differences between the machine types are highlighted by captions or headings. Mechanical procedures applying to all machine types covered in this manual are kept neutral.

Supplements are realised by adding and/or replacing the subgroups. Any supplements are filed in the respective main group / subgroup and the table of contents is updated.

The pictorials serve for quick orientation in recurring mechanical procedures. Their meanings are explained at the beginning of this manual.

The "GENERAL REPAIR INFORMATION" section at the beginning of this manual contains informative explanations. Read and follow this important information. This is the basis of safe and continued function following a repair.

**The table of contents of the main group / subgroup in question will allow you to locate any mechanical work description quickly.**

**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)