Farmall 460, 560 & International 560 Tractors

Operators Manual

1014051R7

Reprinted





This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

- 1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
- 2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

- 1. READ THE OPERATOR'S MANUAL.
- 2. READ ALL SAFETY DECALS ON THE MACHINE.
- 3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

© 1995 Case Corporation

CASE and IH are registered trade marks of Case Corporation

TO THE OWNER

We are glad to welcome you as an owner of a product of International Harvester Company. You have a fine product, designed and built to give you many years of efficient operation. The way you operate and the care you give this product will have much to do with its successful performance.

To help you operate your equipment with utmost efficiency we have provided this operator's manual. It has been carefully prepared to give you the benefit of many years of experience gained in field testing and normal usage of this and similar products.

We urge you to study this manual so you will understand your new equipment thoroughly before operating it. We also urge you to take care of your manual so you will have it available for reference when you need it.

If your manual is lost or destroyed, a new copy may be ordered from the International Harvester dealer at a nominal price. Your International Harvester dealer will also be glad to answer any questions you may have on the operation or care of this product.

It is the policy of International Harvester Company to improve its products whenever it is possible and practical to do so. We reserve the right to make changes or add improvements at any time without incurring any obligation to make such changes on products sold previously.

IMPORTANT FUEL SYSTEM SAFETY WARNING AND ANNOUNCEMENT OF FREE, REPLACEMENT GASOLINE CAP



CAUTION! The following information pertains to personal safety. Be sure to read and follow these instructions.

PROBLEM — Gasoline vapors can build up pressure in your gasoline tank.

All gasoline fuels are more volatile today than ever before. They vaporize and build up pressure in your gasoline tank more easily than in the past. Winter grade gasoline is especially subject to vaporization and pressure build-up when used on hot Spring or Fall days. If you have a tractor which is out of tune or not properly maintained, it can run hotter and increase vaporization.

DANGER — Fire and personal injury.

If the fuel cap is removed when the gasoline tank is hot and vapor pressure has, under certain circumstances, built up in the tank, this sudden release of pressure could force gasoline out of the tank. If the gas cap is not fully secured and tightened, it could come off the tank, and again, gasoline could escape. This sudden eruption of gasoline exposes the operator to, and may cover him with, liquid fuel and vapors and is a clear fire hazard if a source of ignition is present. A running engine is a source of ignition, as are cigarettes, open flames, sparks or a poorly maintained exhaust system. An immediate fire could occur. The operator or anyone in the area could be burned and suffer serious injury or even death.

PRECAUTIONS — Observe the following steps for safe operation:

- Always tighten gas caps securely.
- Never, under any circumstances, take the gas cap off a hot or running tractor.
- Never hold over Winter gasoline for use in the Spring. Remove any equipment unnecessary for warm weather operations, such as comfort covers, heat housers, or radiator covers.
- Maintain equipment properly and pay particular attention to electrical, exhaust, fuel, and cooling systems. Repair or replace frayed electrical wires; leaky exhaust manifolds, gaskets, pipes and mufflers; damaged carburetors, sediment bowls and fuel lines. Be sure radiators are clean inside and out. Clean off any accumulation of trash, oil or grease.
- Make sure that fuel cap vent holes are not plugged, gaskets are in good condition, and that cap tangs are firmly riveted. Repair worn, bent, or deformed filler necks and damaged heat shields or shield insulation. If your tractor is not equipped with a heat shield or insulation, install such equipment on applicable models.
- Be alert to any unusual sights and sounds during operation. If you suspect overheating or pressure build-up in the fuel system, do not touch the cap. Turn off the engine and allow the tractor to cool before you touch the cap.

FREE GASOLINE CAP — See your dealer today.

International Harvester has developed a new gasoline cap designed to improve vapor venting and to inhibit the sudden eruption of liquid fuel if the safety precautions against cap removal are not observed.

The transfer that be exertained at the grant general
owners of certain models of International
Harvester farm tractors. To see whether your
tractor already has the new cap or to arrange to
obtain one, simply contact your local International
Harvester dealer. Also ask him for a free
International Harvester brochure "New Facts
About Fuels" and for free "Warning" decals for all
gasoline equipment.

New caps will be exchanged free of charge with

Gasoline Tractor Models Included in Cap Exchange Program (See Note)						

Exchange Program (See Note)					
Α	100	*504	2404		
AV	130	F-544 Only	2424		
В	140	560	2444		
BN	200	600	2504		
C	230	*606	2544		
H	240	650	*2606		
HV	300	F-656 Only	2706		
М	330	660	2756		
MV	340	666	2806		
0	350	686	2826		
os	400	706	2856		
W	404	756			
WR	424	766			
70	444	806			
86	450	826			
1	460	856			

NOTE: New cap will not fit on any of these tractors.

B-275	I-434
B-276	I-544
I -284	I-656
I -354	I-2656
R-414	

* New cap will not fit on these tractors above serial numbers shown.

> F-504 above serial No. 13400 1 -504 above serial No. 14272 I -606 above serial No. 6879 I -2606 above serial No. 6879

New cap will not fit on any lawn and garden tractor in the Cadet model series or on any tractor with the gasoline tank behind the operator's seat.

INTERNATIONAL HARVESTER COMPANY 401 NORTH MICHIGAN AVE / CHICAGO, ILLINOIS 60611 / U.S.A.

1 258 504 C1. 4-81. PRINTED IN UNITED STATES OF AMERICA

CONTENTS


Description	Page No.
INTRODUCTION	3
DESCRIPTION	4, 5
INSTRUMENTS AND CONTROLS	5 to 9
BEFORE STARTING YOUR NEW TRACTOR	9, 10
PREPARING YOUR TRACTOR FOR EACH DAY'S WORK	11
OPERATING A GASOLINE ENGINE	12, 13
DRIVING THE TRACTOR	14 to 17
OPERATING THE TORQUE AMPLIFIER	17, 18
OPERATING THE HYDRA-TOUCH SYSTEM	19 to 23
HITCHING THE IMPLEMENT TO THE TRACTOR	23, 24
OPERATING THE INDEPENDENT POWER TAKE-OFF	25, 26
OPERATING THE BELT PULLEY	26, 27
WHEELS	28 to 35
WEIGHTS	36 to 38
PNEUMATIC TIRES	39 to 41
STARTING AND LIGHTING EQUIPMENT	42 to 45
COOLING SYSTEM	46
COLD WEATHER PRECAUTIONS	47
GENERAL ENGINE LUBRICATION	48
LUBRICATING OIL AND GREASE SPECIFICATIONS	48, 50
LUBRICATION TABLE	49
LUBRICATION GUIDE	51 to 54
SPECIFICATIONS	55 to 61
EXTRA EQUIPMENT AND ACCESSORIES	
INDEX	63 to 65

INTRODUCTION

Assembled in this book are operating and lubrication instructions for the Farmall 460, 460 Hi-Clear, 560, 560 Hi-Clear, and International 560 Tractors. This material has been prepared in detail in the hope that it will help you to better understand the correct care and efficient operation of your tractor.

If you should need information not given in this manual, or in the tractor Preventive Maintenance Manual, or require the services of a trained mechanic, get in touch with the International Harvester dealer in your locality. Dealers are kept informed on the latest methods of servicing tractors. They carry stocks of IH parts, and are backed in every case by the full facilities of a nearby International Harvester District Office.

Throughout this manual the use of the terms LEFT, RIGHT, FRONT, and REAR must be understood to avoid confusion when following instructions. LEFT and RIGHT indicate the left and right sides of the tractor when facing forward in the driver's seat. Reference to FRONT indicates the radiator end of the tractor; to REAR, the drawbar end. See Illust. 3.

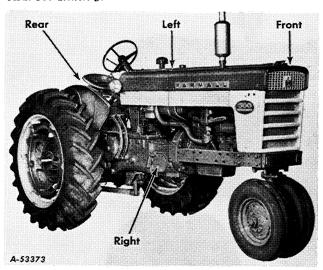


Illust. 3
Terms of location.

The illustrations in this manual are numbered to correspond with the pages on which they appear; for example, *Illusts. 3 and 3A are on page 3*.

In order to provide a tractor equipped as nearly as possible to suit each customer's needs, a variety of extra equipment and accessories is available. For a list of the extra equipment and accessories available, see page 62.

Where operating and maintaining instruction on these items is required, it is included in the instructions in the Operator's or Preventive Maintenance Manual. Disregard the instructions for equipment not on your tractor.

When in need of parts, always specify the tractor and engine serial numbers, including any prefix or suffix letters. On the Farmall 460 Tractor the tractor serial number is stamped on a plate attached to the right side of the clutch housing. On the Farmall and International 560 Tractors the serial number is on a plate attached to the left side of the clutch housing. See Illust. 3A.

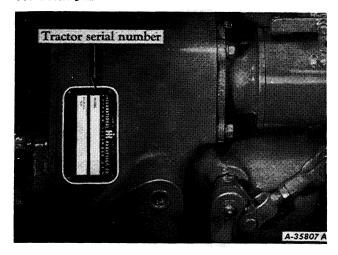

Illust. 3A

Location of the tractor serial number.

The engine serial number is stamped on the left side of the engine crankcase on a pad below the distributor housing. This serial number is preceded by the prefix C-221 or C-263, which indicates that it is a carbureted engine with a 221 or 263 cubic-inch piston displacement.

For ready reference, we suggest that you write these serial numbers in the spaces provided on the Delivery Report.



Our support email: ebooklibonline@outlook.com