

606 Tractors

Operators Manual

1014326R7

Reprinted

CASE III



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

To The Owner




Your new International Harvester tractor is designed to meet today's exacting operating requirements. The ease and comfort of operation, the ability to match ground speeds to engine power and work requirement, and the effortless versatility of the hydraulic system are intended to lighten your work and shorten your hours on the job.

Your local International Harvester dealer is interested in the performance you receive from this tractor. He has factory-trained servicemen, informed in the latest method of servicing tractors, and modern tools, and original-equipment IH service parts which assure proper fit and good performance.

To obtain top performance and assure economical operation, the tractor should be inspected depending on its use, periodically, or at least once a year, by your International Harvester Dealer.

Before you operate the tractor study this manual carefully. It has been prepared to help you operate and maintain your tractor with utmost efficiency. New copies may be ordered from your dealer at a nominal price.

When in need of parts, always specify the tractor and engine serial numbers, including prefix and suffix letters. Write these serial numbers in the spaces provided below.

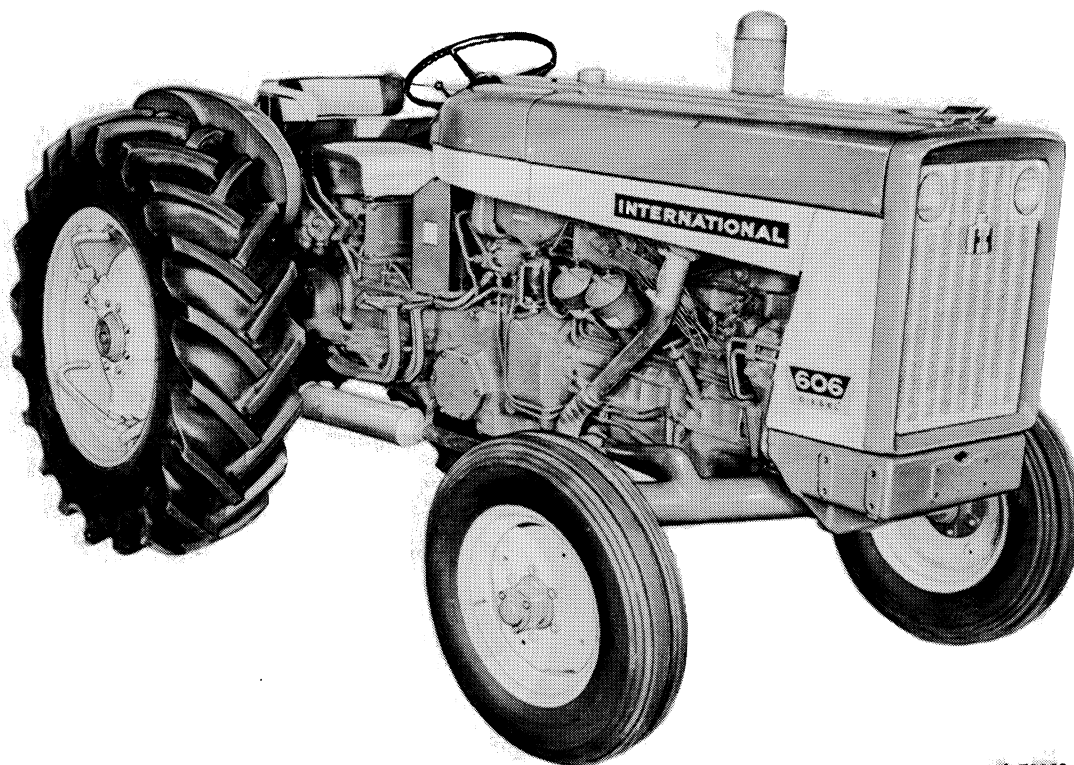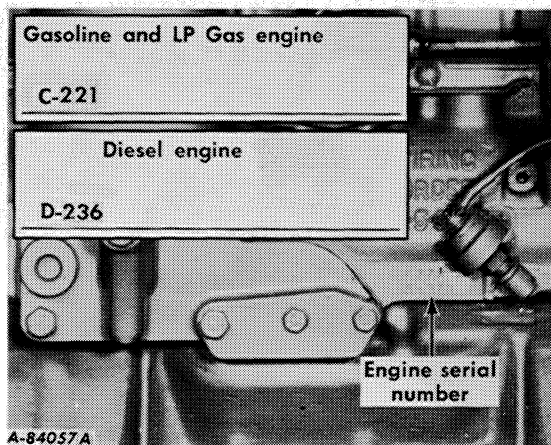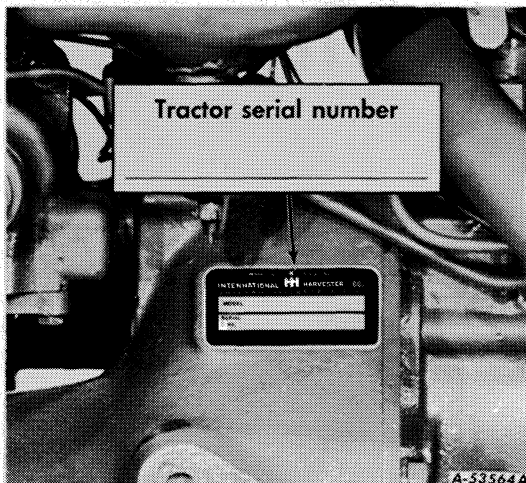

Right side of International 606 Diesel Tractor

A-72058

**IMPORTANT FUEL SYSTEM SAFETY WARNING
AND
ANNOUNCEMENT OF FREE, REPLACEMENT GASOLINE CAP**



CAUTION! The following information pertains to personal safety. Be sure to read and follow these instructions.

PROBLEM — Gasoline vapors can build up pressure in your gasoline tank.

All gasoline fuels are more volatile today than ever before. They vaporize and build up pressure in your gasoline tank more easily than in the past. Winter grade gasoline is especially subject to vaporization and pressure build-up when used on hot Spring or Fall days. If you have a tractor which is out of tune or not properly maintained, it can run hotter and increase vaporization.

DANGER — Fire and personal injury.

If the fuel cap is removed when the gasoline tank is hot and vapor pressure has, under certain circumstances, built up in the tank, this sudden release of pressure could force gasoline out of the tank. If the gas cap is not fully secured and tightened, it could come off the tank, and again, gasoline could escape. This sudden eruption of gasoline exposes the operator to, and may cover him with, liquid fuel and vapors and is a clear fire hazard if a source of ignition is present. A running engine is a source of ignition, as are cigarettes, open flames, sparks or a poorly maintained exhaust system. **An immediate fire could occur.** The operator or anyone in the area could be burned and suffer serious injury or even death.

PRECAUTIONS — Observe the following steps for safe operation:

- Always tighten gas caps securely.
- Never, under any circumstances, take the gas cap off a hot or running tractor.
- Never hold over Winter gasoline for use in the Spring. Remove any equipment unnecessary for warm weather operations, such as comfort covers, heat housers, or radiator covers.
- Maintain equipment properly and pay particular attention to electrical, exhaust, fuel, and cooling systems. Repair or replace frayed electrical wires; leaky exhaust manifolds, gaskets, pipes and mufflers; damaged carburetors, sediment bowls and fuel lines. Be sure radiators are clean inside and out. Clean off any accumulation of trash, oil or grease.
- Make sure that fuel cap vent holes are not plugged, gaskets are in good condition, and that cap tangs are firmly riveted. Repair worn, bent, or deformed filler necks and damaged heat shields or shield insulation. If your tractor is not equipped with a heat shield or insulation, install such equipment on applicable models.
- Be alert to any unusual sights and sounds during operation. If you suspect overheating or pressure build-up in the fuel system, do not touch the cap. Turn off the engine and allow the tractor to cool before you touch the cap.

FREE GASOLINE CAP — See your dealer today.

International Harvester has developed a new gasoline cap designed to improve vapor venting and to inhibit the sudden eruption of liquid fuel if the safety precautions against cap removal are not observed.

New caps will be exchanged **free of charge** with owners of certain models of International Harvester farm tractors. To see whether your tractor already has the new cap or to arrange to obtain one, simply contact your local International Harvester dealer. Also ask him for a free International Harvester brochure "New Facts About Fuels" and for free "Warning" decals for all gasoline equipment.

Gasoline Tractor Models Included in Cap Exchange Program (See Note)			
A	100	*504	2404
AV	130	F-544 Only	2424
B	140	560	2444
BN	200	600	2504
C	230	*606	2544
H	240	650	*2606
HV	300	F-656 Only	2706
M	330	660	2756
MV	340	666	2806
O	350	686	2826
OS	400	706	2856
W	404	756	
WR	424	766	
70	444	806	
86	450	826	
	460	856	

NOTE: New cap **will not** fit on any of these tractors.

B-275	I-434
B-276	I-544
I -284	I-656
I -354	I-2656
B-414	

* New cap **will not** fit on these tractors above serial numbers shown.

F-504 above serial No. 13400
 I -504 above serial No. 14272
 I -606 above serial No. 6879
 I -2606 above serial No. 6879

New cap **will not** fit on any lawn and garden tractor in the Cadet model series or on any tractor with the gasoline tank behind the operator's seat.

CONTENTS

INTRODUCTION	4	GASOLINE ENGINE AND FUEL SYSTEM	12
INSTRUMENTS AND CONTROLS	4	Fuel System	12
Brake Pedals	4	Starting the Engine	12
Clutch Pedal	4	After the Engine Starts	13
Torque Amplifier Operating Handle	4	Stopping the Engine	13
Gearshift Lever	4, 5	Cleaning the Fuel Strainer and Sediment Bowl	13
Choke Control Button	6	Carburetor	13, 14
Fuel Stop Control Button (Diesel Engine)	6	LP GAS ENGINE AND FUEL SYSTEM	15
Engine Speed Control Lever	6	Starting the Engine	15
Governor	6	After the Engine Starts	15
Ignition Switch (Gasoline Engine)	6	Stopping the Engine	15
Key Switch (Diesel Engine)	6	General Information	16
Push Button Starting Switch	6	Principal Elements	16
Glow Plug Switch Button (Diesel Engine)	6	Fuel Filter	16
Lighting Switch	7	Carburetor	17
Hydraulic System Control Levers	7	DIESEL ENGINE AND FUEL SYSTEM	18
Power Take-Off Operating Lever	7	Venting the Fuel System	18
Oil Pressure Tellite	7	Starting the Engine	19
Generator Tellite	7	After the Engine Starts	20
Temperature Gauge	8	Stopping the Engine	20
Fuel Gauge	8	Exhaust Smoke Table	20
Tachometer	8	Diesel Fuel Specification Requirements	20
Cigarette Lighter	8	Fuel Storage	21
LP GAS ENGINE	8	Fuel Strainer and Water Trap	21
Fuel Tank Filler Valve	8	Fuel Filters	22
Liquid Level Gauge	8	Fuel Injection Pump	23
Outage Valve	8	Injection Pump Governor	23
Safety Relief Valve	8	DRIVING THE TRACTOR	24
Vapor Return Valve	8	Adjusting the Seat	24
Vapor and Liquid Service Valves	8	Starting the Tractor	24
BEFORE OPERATING THE TRACTOR	9	Steering the Tractor	25
Tractor Break-In Procedure	9	Towing the Tractor	25
Lubrication	9	Stopping the Tractor	25
Pneumatic Tires	10	High Speed Low and Reverse Gears	25
Engine Cooling System	10	Locking the Brakes	25
Air Cleaning System	10	Forward and Reverse Drive	26
Fuel System	10	TORQUE AMPLIFIER	26
Instruments and Controls	10	Engaging or Disengaging the Torque Amplifier	26
PREPARING FOR EACH DAY'S WORK	11	BASIC HYDRAULIC SYSTEM WITH POWER STEERING	27, 28
After Every 10 Hours of Operation	11		
Filling the Fuel Tank	11		
Cooling System	11		

CONTENTS

HYDRAULIC CONTROLS FOR THREE-POINT OR TWO-POINT HITCH 29

Position Control	29
Load Control	30, 31
Action Control	32

THREE-POINT HITCH 32

Lift Links and Leveling Crank	33
Hitch Lower Links	34
Hitch Upper Links	34
Restraining Chains	34 to 36
Stabilizers	36
Cross Drawbar	37
Hitch Positions	37
Higher Lift for Hay Tools	37
Power Take-Off	38
Coupling the Equipment	38, 39
Operating the Three-Point Hitch with Load Control	40
Uncoupling the Equipment	40
Removing Three-Point Hitch Linkage	40, 41

TWO-POINT FAST-HITCH 41

Lift Links and Leveling Cranks	42
Hitch Bail	42
Hitch Sockets	42
Hitch Unit Adjustments	42
Hitch Positions	43
Cross Drawbar	43
Power Take-Off	44
Coupling the Equipment	44
Uncoupling the Equipment	44

AUXILIARY VALVES AND REMOTE CYLINDERS 45

Connecting Hoses to Junction Ports	45
Connecting Hoses to Remote Control Break-Away Couplings	46
Thermal Expansion Pressures	46
Operating Double-Action Cylinders	46
Operating Single-Action Cylinders	46
Adding Fluid After Connecting Cylinders and Hoses	47
Air in the System	47

HITCHING TRAILING EQUIPMENT TO THE TRACTOR 48

POWER TAKE-OFF 49

Operating the Power Take-Off	49
Clutch Adjustment	50 to 52

BELT PULLEY 53

COOLING SYSTEM 53

Filling the Cooling System	53
Adding Water to the Cooling System	54
Cleaning the Cooling System	54
Rust Prevention	54, 55
Radiator Core	55
Water Pump, Fan and Generator Belt Tension	55
Water Pump	56

AIR CLEANING SYSTEM 56

Air Cleaner Cup Service	56
Air Cleaner Element	57, 58
Cleaning the Air Intake Cover and Screen	59
Pre-Screener	60
Combination Pre-Screener-Pre- Cleaner	60
Crankcase Breather	60

ELECTRICAL SYSTEM 61

Gasoline and LP Gas Engine Tractors	61 to 63
Spark Plugs and Cables	61
Distributor and Coil Unit	62
Power Timing Light	63
Ignition Coil	63
Diesel Engine Tractors	64
Glow Plugs	64
Electrical Wiring Diagrams	65 to 69
Generator and Regulator	70
Polarizing the Electrical System	70

CONTENTS

ELECTRICAL SYSTEM — Continued

Alternator Generator and Regulator	71
Generator Belt Tension	71
Lights	71, 72
Breakaway Connector Socket	72
Fuse	72
Storage Battery	72 to 74

MINOR ENGINE SERVICE OPERATIONS 74

Cylinder Head Gasket (Gasoline or LP Gas Engines)	74
Cylinder Head Gasket (Diesel Engine)	75
Crankshaft Bearings, Pistons, and Rings	75
Valve Clearance Adjustment (Gasoline or LP Gas Engines)	75, 76
Valve Clearance Adjustment (Diesel Engine)	76
Governor Adjustments	76 to 78
Engine Speed Control Lever	78

FRONT WHEELS 78

Adjusting the Tread Widths	78
Checking the Toe-In	79
Adjusting the Toe-In	79

REAR WHEELS 80

Hub Retainer Cap Screw	81
Adjusting the Tread Widths	81
Power-Adjusted Rear Wheels	81, 82
Dual Rear Wheels	83

WEIGHTS 83

Front End Weights	83
Front Bolster Weights	84
Front Wheel Weights	85
Rear Wheel Weights	85, 86

PNEUMATIC TIRES 86

Inflation	87
Using the Spark Plug Tire Pump	87
Inflation Pressure Tables	86, 87
Low-Pressure Tires	88

Mounting Tires on the Rim	88
Traction and Weights	88
Wheel Weights	88
Overloading	88
Care of Tires	88
Tire Chains	88

BRAKES 88

Brake Adjustments	88, 89
-----------------------------	--------

CLUTCHES 89

Care and Adjusting the Engine Clutch	90
Care and Adjusting the Torque Amplifier Clutch	90

STORING THE TRACTOR 91

Removing from Storage	92
---------------------------------	----

COLD WEATHER PRECAUTIONS 93

Fuel System	93
Lubrication	93
Cooling System	93, 94

TROUBLE SHOOTING 94 to 100

LUBRICATION 100

Oil Pump	101
Engine Oil Cooler	101
Engine Oil	101
To Aid Starting	101
Gear Lubricant	101
Lubrication Fitting Grease	102
Oil Filter	102
Changing the Filter Element	102, 103
Hydraulic Fluid Filter	104, 105
Greasing the Front Wheels	105

LUBRICATION TABLE 106


LUBRICATION GUIDE 107 to 110

PREVENTIVE MAINTENANCE GUIDE 111, 112

SPECIFICATIONS 113 to 117

EXTRA EQUIPMENT AND ACCESSORIES 118

INTRODUCTION

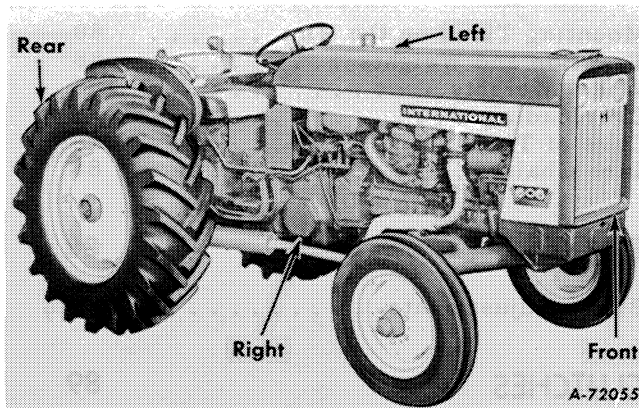

Illust. 4
Terms of location.

LEFT and RIGHT indicate the left and right sides of the tractor when facing forward in the driver's seat. See Illust. 4.

The illustrations in this manual are numbered to correspond with the pages on which they appear; for example, Illust. 4 is on page 4.

A variety of extra equipment and accessories is available. Refer to page 118. Operating and maintenance instructions on these items is included in the instructions for operating or maintaining the tractor.

INSTRUMENTS AND CONTROLS

BRAKE PEDALS

These pedals are used to stop the tractor, to hold the tractor in a stationary position, or to assist in making sharp turns as outlined below.

The brake pedal latch (Illusts. 5 and 25) is used to latch both brake pedals together, causing the brakes to operate simultaneously.

The brake pedal lock rod (Illust. 25) is used to lock the brake pedals in the depressed position. This prevents the tractor from moving.

To stop the tractor, depress both pedals at the same time. Before driving the tractor in high gear, always latch the pedals together.

To hold the tractor in a stationary position, latch the pedals together, depress them, and lock them in this depressed position by using the brake pedal lock.

To assist in making a sharp turn, operate the pedals individually, depressing the pedal on the side toward which the turn is to be made.

Caution! Always latch the brake pedals together when driving the tractor in high gear (fifth speed). To latch the

pedals together, engage the latch in the back of the left pedal (Illust. 25) in the slot in the back of the right pedal. When the brake pedals are not latched together, the latch should rest in the slot in the back of the left brake pedal.

CLUTCH PEDAL

This pedal, when depressed all the way, disengages the engine from the transmission.

TORQUE AMPLIFIER OPERATING HANDLE

This lever is used to select low and high operating range on tractors equipped with dual range transmission. See page 26 for operating instructions.

On tractors with forward and reverse drive transmission, the selector lever is located to the left of the gearshift lever (See Illust. 26). See page 26 for operating instructions.

GEARSHIFT LEVER

This lever is used to select the various gear ratios in the transmission. There are five forward speeds and one reverse speed. See Illust. 6.

Continued on page 6.

Buy Now



Our support email:

ebooklibonline@outlook.com