


B-250
DIESEL
TRACTOR

1026 140 R6

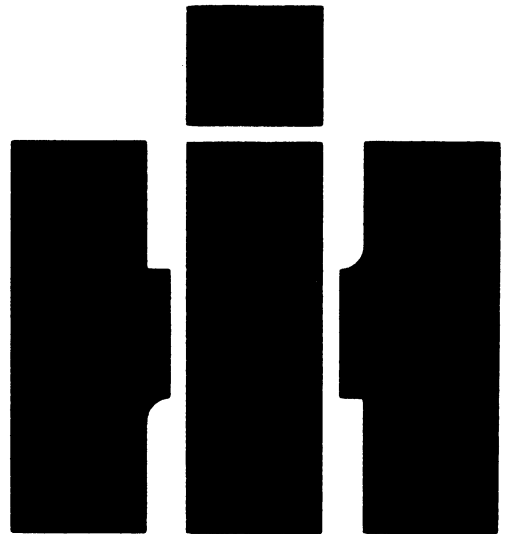

OPERATORS MANUAL

NOTE

NOT ALL ATTACHMENTS AND EQUIPMENT SHOWN ARE AVAILABLE IN ALL COUNTRIES. ROUTINE SERVICING SCHEDULES MAY VARY IN DIFFERENT COUNTRIES.

INTERNATIONAL

B-250 DIESEL TRACTOR

1026 140 R6

INTERNATIONAL HARVESTER COMPANY OF GREAT BRITAIN LIMITED

P.O. BOX 25

259 CITY ROAD

LONDON

EC1P 1AD

250 / 9 / 76 CP.

Please note our new Registered Office

Wheatley Hall Road Doncaster DN2 4PG

TO THE OWNER

The purpose of this manual is to assist you in realizing the benefits you anticipated when you purchased this International Harvester product.

The way you operate and the care you give this equipment will have much to do with its successful performance. This manual has been carefully prepared and the information arranged and illustrated to make it as easy as possible for you to find the information you wish. It will pay you to read the entire manual carefully before operating and keep it handy for future reference. Your International Dealer or Distributor will be glad to answer any further questions you may have on the operation or care of this product.

It is the policy of International Harvester Company to improve its products whenever it is possible and practical to do so. We reserve the right to make changes or add improvements at any time without incurring any obligation to make such changes on products sold previously.

WARRANTY PERIOD

The Notes contained in this Operator's Manual for proprietary items, such as electrical and fuel injection equipment, have been compiled for use after the warranty period has expired. If attention, however small, is required to any of these items, whilst they are still within the warranty period, your International Dealer or Distributor should be informed.

CONTENTS

	Page
INTRODUCTION - Serial Numbers	1
SPECIFICATIONS	3, 5
SAFETY RULES	6
GENERAL INSTRUCTIONS AND PRECAUTIONS	7
INSTRUMENTS AND CONTROLS	8
PREPARING AND OPERATING YOUR TRACTOR	9, 18
1. Coolant	9
2. Fuel	9
3. Engine lubrication	9
4. Injection pump	9
5. Air cleaner	9
6. Transmission	9
7. Pneumatic tyres	10
8. Adding weight to the tractor	10
9. Tractor performance and tyre pressures	11
10. Liquid weight... ..	12
11. Tractor seat	12
12. Starting the engine... ..	13
13. Stopping the engine... ..	13
14. Oil pressure	13
15. Heat indicator	14
16. Engine speed control	14
17. Gearshift lever	14
18. Clutch Pedal	14
19. Brakes	14
20. Swinging drawbar and adjuster frame	15
21. Drawbar height adjustment... ..	15
22. Adjustable front axle	15
23. Adjustment of rear wheel tread widths... ..	17
24. Differential lock	17
25. Power take-off attachment... ..	18
OPERATION OF THE HYDRAULIC LIFT, AUTOMATIC HITCH AND SELF-SEALING COUPLING	19, 27
USING THREE POINT LINKAGE	19, 25
Universal linkage	19
Lower links	19
Top link	19
Lift rods	19
Lower link hitch points... ..	20
Check chains	20
Hitching implements to the tractor	20
Operating the hydraulic section	21
General description... ..	21
Hydraulic controls	21
Main control valve lever	21

USING THREE POINT LINKAGE - *continued*

Isolating valve	21
Normal linkage operation	22
Depth control handwheel... ..	23
Fixing implement operating height	23
Depth control stop	23
Weight transfer and depth control	23
Depth control stop spring	23
Setting the depth	24
Field depth adjustment	24
Using telescopic top link	25
Improving penetration (lower hitch points)	25
Removal of implement	25
AUTOMATIC HITCH ATTACHMENT	25, 26
Assembly instructions	25
Operating instructions	26
SELF SEALING COUPLING ATTACHMENT	27
MAINTENANCE	28
Engine and chassis lubricant specifications	28
Lubricating oil and grease specifications... ..	28
Diesel engine crankcase oil	28
Gear lubricant	29
Lubrication fittings - grease... ..	29
Changing engine oil	29
Oil filter	30
Changing transmission lubricant	31
Greasing front wheels	31
Lubrication guide... ..	32
Key to lubrication guide	33
Cooling system	34, 35
General... ..	34
Adding water	34
Draining cooling system	34
Cleaning out dirt and sludge	34
Rust prevention	34
Radiator core... ..	35
Cold weather precautions	35
Refilling the system in freezing weather	35
Water pump	35
Thermostat	35
Fan Belt	36
Fan belt tension	36
Adjusting fan belt	36
Removing fan belt	36
Replacing fan belt	36
Generator	37
Generator belt tension	37
Adjusting generator belt	37

MAINTENANCE - continued

Removing	37
Replacing	37
Commutator and brushgear	37
Lubrication	37
Starter motor	38, 39
General	38
Operating the starter motor	38
Adjustment of the starter motor	38
Commutator and brushgear	38
Starter motor removal	39
Air cleaning system	40
Oil cup service	40
Washer air cleaner	40
Fuel filter	41
Fuel filter element	41
Removing and replacing the fuel filter element	41
Diesel fuel water trap	41
Draining water trap	41
Venting air from the fuel system	42
Adjusting valve clearance	43
Adjusting engine clutch	44
Adjusting brakes	44
Hydraulic system	45, 46
Electrical equipment	47
Storage battery	47
Ammeter	47
Wiring diagram	48
Key to wiring diagram	49
Road traffic regulations attachment	50
Cable clips, grommet and loom clamps	51
Trouble shooting	52-56
Storing and housing your tractor	57
Preparations for storing	57
Starting the engine after winter storage	57

	Page
SPECIAL EQUIPMENT	58-60
Front wheel weights	58
Rear wheel weights	58
Front end weights	59
Dual rear wheels	59
Oversize rims and tyres (factory application only)	59
Linkage drawbar	59
Hourmeter	59
Radiator curtain	59
3-1/2 m.p.h. reverse speed gear	59
Upright air cleaner	59
Downswept exhaust	59
Road traffic regulations attachment	59
Head and plough lamps	59
Foam rubber seat	59
Increased capacity radiator	59
De-luxe seat	60
Belt pulley	61

Buy Now



Our support email:

ebooklibonline@outlook.com