

656 Tractor

Operators Manual

1082671R2

Reprinted





This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.

WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

To The Owner

The Farmall and International 656 Series Tractors have either a conventional clutch and transmission or a hydrostatic drive.



There are a few facts that you should know about your hydrostatic drive tractor.

1. You cannot start the engine by towing the tractor, attempts to do so will damage the hydrostatic motor.
2. To tow the tractor, place the Hi-Lo Range Selector in neutral. Refer to Towing the Tractor on page 18.
3. Never attempt to effect a high speed coast by putting the speed ratio control lever in neutral or by depressing the Foot-N-Inch pedal.
4. Never coast the tractor with the engine shut off.
5. Change the filters at the specified interval. The 10 hour and 100 hour changes are extremely important and must not be overlooked.


Your new International Harvester tractor is designed to meet today's exacting operating requirements. The ease and comfort of operation, the ability to match ground speeds to engine power and work requirement, and the effortless versatility of the hydraulic system are intended to lighten your work and shorten your hours on the job.

The hydrostatic drive will require minimum service if recommended operating and maintenance procedures are followed. Should you have difficulties with the unit consult your International Harvester dealer.

UNDER NO CIRCUMSTANCES SHOULD YOU ATTEMPT TO SERVICE THESE UNITS YOURSELF. Only your dealer is authorized to repair or replace units on the hydrostatic drive under the terms of the warranty.

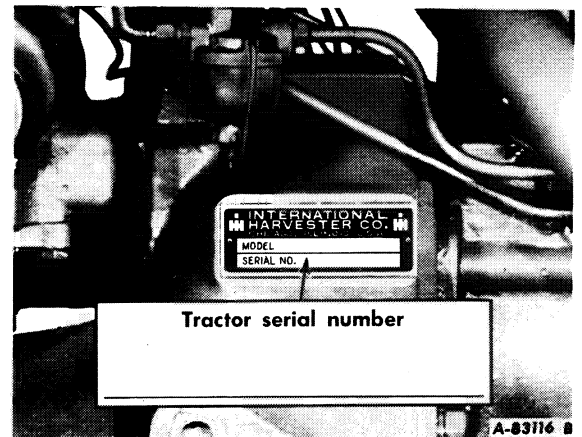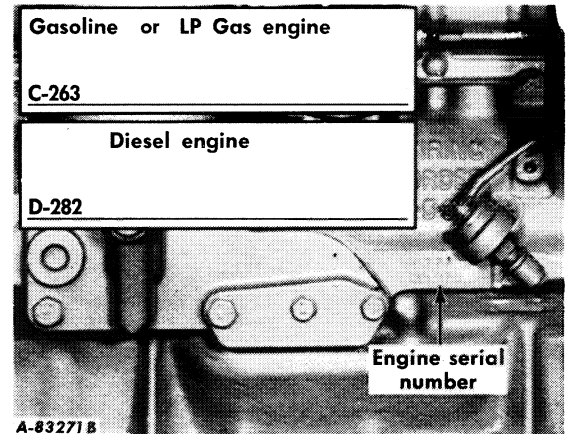

Tractors with gear drive.

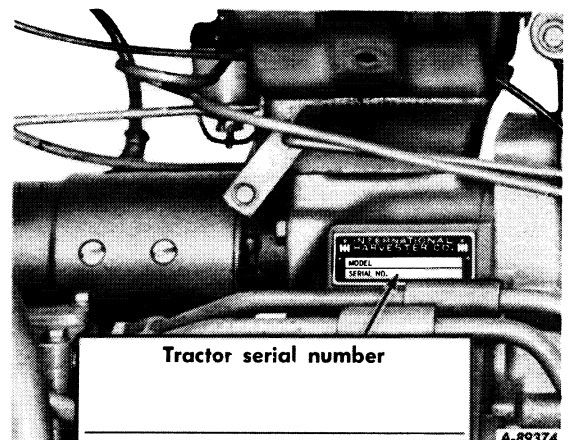

Tractors with hydrostatic drive.

**IMPORTANT FUEL SYSTEM SAFETY WARNING
AND
ANNOUNCEMENT OF FREE, REPLACEMENT GASOLINE CAP**



CAUTION! The following information pertains to personal safety. Be sure to read and follow these instructions.

PROBLEM — Gasoline vapors can build up pressure in your gasoline tank.

All gasoline fuels are more volatile today than ever before. They vaporize and build up pressure in your gasoline tank more easily than in the past. Winter grade gasoline is especially subject to vaporization and pressure build-up when used on hot Spring or Fall days. If you have a tractor which is out of tune or not properly maintained, it can run hotter and increase vaporization.

DANGER — Fire and personal injury.

If the fuel cap is removed when the gasoline tank is hot and vapor pressure has, under certain circumstances, built up in the tank, this sudden release of pressure could force gasoline out of the tank. If the gas cap is not fully secured and tightened, it could come off the tank, and again, gasoline could escape. This sudden eruption of gasoline exposes the operator to, and may cover him with, liquid fuel and vapors and is a clear fire hazard if a source of ignition is present. A running engine is a source of ignition, as are cigarettes, open flames, sparks or a poorly maintained exhaust system. **An immediate fire could occur.** The operator or anyone in the area could be burned and suffer serious injury or even death.

PRECAUTIONS — Observe the following steps for safe operation:

- Always tighten gas caps securely.
- Never, under any circumstances, take the gas cap off a hot or running tractor.
- Never hold over Winter gasoline for use in the Spring. Remove any equipment unnecessary for warm weather operations, such as comfort covers, heat housers, or radiator covers.
- Maintain equipment properly and pay particular attention to electrical, exhaust, fuel, and cooling systems. Repair or replace frayed electrical wires; leaky exhaust manifolds, gaskets, pipes and mufflers; damaged carburetors, sediment bowls and fuel lines. Be sure radiators are clean inside and out. Clean off any accumulation of trash, oil or grease.
- Make sure that fuel cap vent holes are not plugged, gaskets are in good condition, and that cap tangs are firmly riveted. Repair worn, bent, or deformed filler necks and damaged heat shields or shield insulation. If your tractor is not equipped with a heat shield or insulation, install such equipment on applicable models.
- Be alert to any unusual sights and sounds during operation. If you suspect overheating or pressure build-up in the fuel system, do not touch the cap. Turn off the engine and allow the tractor to cool before you touch the cap.

FREE GASOLINE CAP — See your dealer today.

International Harvester has developed a new gasoline cap designed to improve vapor venting and to inhibit the sudden eruption of liquid fuel if the safety precautions against cap removal are not observed.

New caps will be exchanged **free of charge** with owners of certain models of International Harvester farm tractors. To see whether your tractor already has the new cap or to arrange to obtain one, simply contact your local International Harvester dealer. Also ask him for a free International Harvester brochure "New Facts About Fuels" and for free "Warning" decals for all gasoline equipment.

Gasoline Tractor Models Included in Cap Exchange Program (See Note)			
A	100	*504	2404
AV	130	F-544 Only	2424
B	140	560	2444
BN	200	600	2504
C	230	*606	2544
H	240	650	*2606
HV	300	F-656 Only	2706
M	330	660	2756
MV	340	666	2806
O	350	686	2826
OS	400	706	2856
W	404	756	
WR	424	766	
70	444	806	
86	450	826	
	460	856	

NOTE: New cap will not fit on any of these tractors,

B-275	I-434
B-276	I-544
I -284	I-656
I -354	I-2656
B-414	

* New cap will not fit on these tractors above serial numbers shown.

F-504 above serial No. 13400
I -504 above serial No. 14272
I -606 above serial No. 6879
I -2606 above serial No. 6879

New cap will not fit on any lawn and garden tractor in the Cadet model series or on any tractor with the gasoline tank behind the operator's seat.

To The Owner

Your local International Harvester dealer is interested in the performance you receive from this tractor. He has factory-trained servicemen, informed in the latest method of servicing tractors, and modern tools, and original-equipment IH service parts which assure proper fit and good performance.

To obtain top performance and assure economical operation the tractor should be inspected, depending on its use, periodically, or at least once a year, by your International Harvester dealer.

Before you operate the tractor study this manual carefully. It has been prepared to help you operate and maintain your tractor with utmost efficiency. New copies may be ordered from your dealer at a nominal price.

When in need of parts, always specify the tractor and engine serial numbers including prefix and suffix letters. Write these serial numbers in the spaces provided.




This symbol is used to call your attention to instructions concerning your personal safety. Be sure to observe and follow these instructions.

CONTENTS

Description	Page No.
CONTENTS	1
INTRODUCTION	2, 3, 4
WORK SAFELY - FOLLOW THESE RULES	4, 5
INSTRUMENTS AND CONTROLS	6 to 11
BEFORE OPERATING YOUR NEW TRACTOR	12
DRIVING THE TRACTOR	13 to 20
GASOLINE ENGINE AND FUEL SYSTEM	20 to 23
LP GAS ENGINE AND FUEL SYSTEM	24 to 28
DIESEL ENGINE AND FUEL SYSTEM	29 to 34
BASIC HYDRAULIC SYSTEM WITH POWER STEERING	34, 35, 36
HYDRAULIC CONTROLS FOR HITCHES	37 to 40
THREE-POINT HITCH	41 to 46
WEIGHT TRANSFER HITCH	46, 47, 48
TWO-POINT HITCH	48 to 51
AUXILIARY VALVES, REMOTE CYLINDERS AND HYDRAULIC OUTLETS	52 to 58
HITCHING TRAILING EQUIPMENT TO THE TRACTOR	58 to 62
POWER TAKE-OFF	63
BELT PULLEY	64, 65
COOLING SYSTEM	65 to 68
AIR CLEANING SYSTEM	68 to 70
ELECTRICAL SYSTEM	70 to 101
MINOR ENGINE SERVICE OPERATIONS	101 to 108
FRONT WHEELS	109 to 113
REAR WHEELS	113 to 121
WEIGHTS	122 to 125
PNEUMATIC TIRES	126, 127
BRAKES	127, 128
CLUTCHES (Gear Drive)	128 to 130
HYDROSTATIC CONTROLS (Hydrostatic Drive)	131 to 134
STORING THE TRACTOR	135, 136
COLD WEATHER PRECAUTIONS	136, 137
TROUBLE SHOOTING	138 to 144
LUBRICATION	144 to 150
LUBRICATION TABLE	151
LUBRICATION GUIDE	152 to 160
PREVENTIVE MAINTENANCE GUIDE	161, 162
SPECIFICATIONS	163 to 168
OPTIONAL EQUIPMENT	169
INDEX	170 to 173

INTRODUCTION

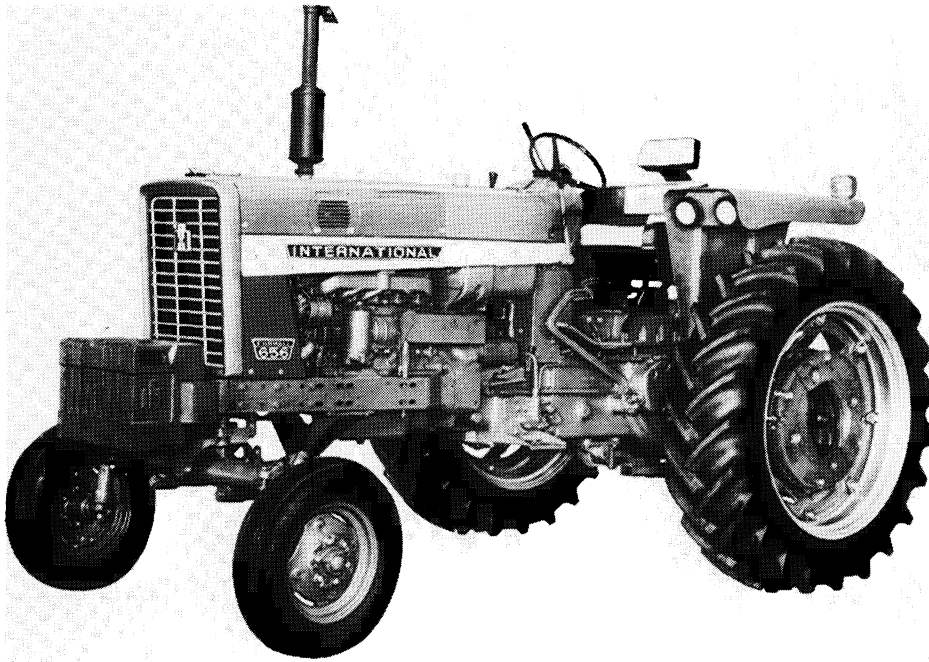

A-83115 D

Illust. 2 -Left side view of Farmall 656 Diesel Tractor. (Gear drive)



A-88513 B

Illust. 2A -Right side view of International 656 Gasoline Tractor. (Gear drive)



Our support email:

ebooklibonline@outlook.com