

464 Tractor

Operators Manual

1084162R2

Reprinted

CASE III



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

To The Owner

The International 464 Series Tractors have synchromesh speed gears with sliding range gears.

Your new International Harvester tractor is designed to meet today's exacting operating requirements. The ease and comfort of operation, the ability to match ground speeds to engine power and work requirement, and the effortless versatility of the hydraulic system are intended to lighten your work and shorten your hours on the job.

The synchromesh transmission will require minimum service if recommended operating and maintenance procedures are followed. Should you have difficulties with the unit consult your International Harvester dealer.


To obtain top performance and assure economical operation the tractor should be

inspected, depending on its use, periodically, or at least once a year, by your International Harvester dealer.


Your local International Harvester dealer is interested in the performance you receive from this tractor. He has factory-trained servicemen, informed in the latest method of servicing tractors, and modern tools, and original-equipment IH service parts which assure proper fit and good performance.

Before you operate the tractor study this manual carefully. It has been prepared to help you operate and maintain your tractor with utmost efficiency. New copies may be ordered from your dealer at a nominal price.


When in need of parts, always specify the tractor and engine serial numbers, including prefix and suffix letters. Write these serial numbers in the spaces provided below.

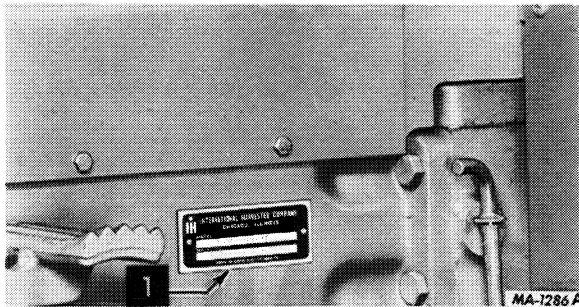


1 - Tractor serial number

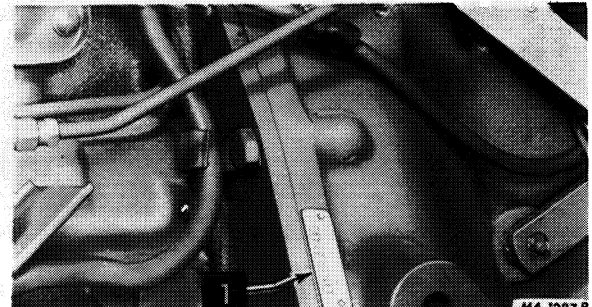

1 - Skidded unit serial number

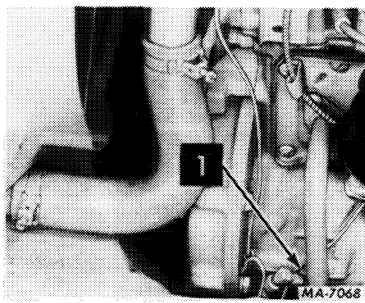

1 - Gasoline engine serial number
C-175 Synchromesh transmission

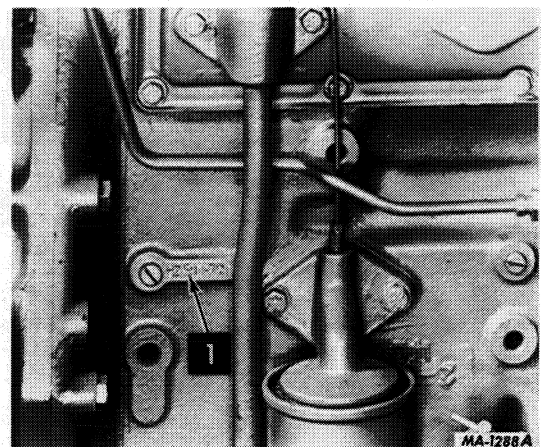

1 - Diesel engine serial number
D-179

CONTENTS

INTRODUCTION	2	DIESEL ENGINE AND FUEL SYSTEM	19 to 26
WORK SAFELY – FOLLOW THESE RULES	3,4	Fuel System	20
Servicing and Before Starting	3	Warranty Notice	20
Starting	3	Venting the Fuel System	20
Transporting	4	Starting the Engine	21
Before Dismounting	4	After the Engine is Running	23
Dismounting	4	Engine Oil Pressure Gauge	24
After an Upset	4	Stopping the Engine	24
INSTRUMENTS AND CONTROLS	5,6	Changing the Ether Fluid Container	24
BEFORE OPERATING YOUR NEW TRACTOR	7	Fuel Filters	25
Tractor Break-In Procedure	7	Fuel Filter Water Drain Valves	26
Lubrication	7	Fuel Injection Pump and Nozzles	26
Tires	7	Injection Pump Governor	26
Air Cleaning System	7	HYDRAULIC CONTROLS FOR THREE – POINT HITCH	27 to 31
Engine Cooling System	7	Position Control Lever	27
Fuel System	7	Adjustable Stop	28
DRIVING THE TRACTOR	8 to 13	Draft Control	28
Preparing the Tractor For Each Day's Work	8	Raise Response	30
Fuel Gauge	8	Drop Response	31
Filling the Fuel Tank	8	THREE – POINT HITCH	32 to 38
Suspension Seat	8	Lift Links and Leveling Cranks	32
Steering the Tractor	9	Hitch Lower Links	33
Using the Brakes	9	Hitch Upper Link	33
Safety Starting Switch	9	Restraining Chains	34
Transmission Range and Speed Levers	10	Stabilizers	35
Accelerator Pedal	10	Power Take-Off	35
Starting the Tractor	10	Coupling the Equipment	35
Differential Lock	11	Example of Operating the Three-Point Hitch with Draft Control	37
Stopping the Tractor	12	Uncoupling the Equipment	38
Park Brake	12	Removing the Three-Point Hitch Linkage	38
Towing the Tractor	13	Installing the Three-Point Hitch Linkage	38
Tachometer	13	HITCHING TRAILING EQUIPMENT TO THE TRACTOR	39, 40
GASOLINE ENGINE AND FUEL SYSTEM	14 to 18	Swinging Drawbar	39
Starting the Engine	15	Operating Position	40
After the Engine is Running	16	Storage Position	40
Engine Oil Pressure Gauge	16		
Stopping the Engine	16		
Cleaning the Fuel Strainer and Sediment Bowl	17		
Carburetor	17		
Solenoid Fuel Shut-off Valve	18		

CONTENTS

AUXILIARY VALVES AND REMOTE CYLINDERS	41 to 44	ELECTRICAL SYSTEM	51 to 57
Connecting Hoses to Junction Ports on Valves	41	Charging System for Alternator- Generator	52
Connecting Hoses to Remote Control Break-Away Couplings At Rear of Tractor	41	Cranking System	52
Thermal Expansion Pressures	42	Ignition System	52
Operating Double-Action Cylinders	42	Lighting System	54
Operating Single-Action Cylinders	43	Transmission Oil Pressure Tellite	54
Float Lockout	43	Ammeter	55
Neutral and Float Lockout	43	Flashing Warning Lights	55
Adding Fluid After Connecting Cylinders and Hoses	43	Lighting Switch Positions	55
Air in the Hydraulic System	43	Parking Hand Brake Warning Light	56
		Fuse	56
		Battery	56
POWER TAKE – OFF	44,45	FRONT WHEELS	58, 59
Operating the Independent Power Take-Off	44	Adjusting the Tread Widths	58
		Checking the Toe-In	59
		Adjusting the Front Wheel Toe-In	59
COOLING SYSTEM	46, 47, 48	REAR WHEELS	60 to 63
Heat Indicator (Coolant)	46	Adjusting the Tread Widths	60
Coolants	46	Power Adjusted Rear Wheels	62
Cooling System Conditioner	46	WEIGHTS	64, 65, 66
Checking the Coolant Level	47	Front End Weights	64
Draining and Filling the Cooling System	47	Front Wheel Weights	65
Hoses and Clamps	47	Rear Wheel Weights	65
Cleaning the Cooling System	47	TIRES	67, 68
Thermostat	48	Front Tire Inflation Pressure	67
Cleaning the Radiator Core and Transmission Oil Cooler	48	Rear Tire Inflation Pressure	67
Water Pump, Alternator- Generator and Fan Belt Tension	48	Inflation	68
		Tire Chains	68
AIR CLEANING SYSTEM	49, 50	STORING THE TRACTOR	69, 70
Dry-Type Air Cleaner	49	Storage	69
Removing the Filter Element	49	Removing From Storage	70
Automatic Dust Unloader	50	COLD WEATHER PRECAUTIONS	71
		Fuel System	71
		Electrical	71
		Lubrication	71
		Cooling System	71

CONTENTS

LUBRICATION	72 to 77
Engine Oil	72
Gear Lubricant	73
Lubrication Fitting Grease	74
Engine Oil Filter	74
Changing the Engine Oil Filter	75
Hydraulic Fluid Filter	75
Greasing the Front Wheels	77
LUBRICATION TABLE	78
LUBRICATION GUIDE	79 to 83
PREVENTIVE MAINTENANCE GUIDE	84, 85, 86
SPECIFICATIONS	87 to 90
OPTIONAL EQUIPMENT	91
UNIVERSAL SYMBOLS	92
ENGINE CLUTCH	93
METRIC (SI) MEASUREMENTS	Inside Back Cover

Buy Now



Our support email:

ebooklibonline@outlook.com