


Hydro 70 Tractor

Operators Manual

1084275R1

Reprinted



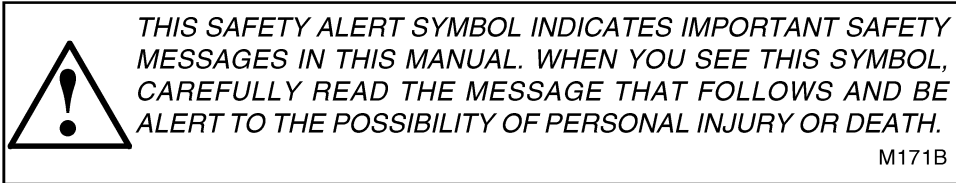




If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

To The Owner

Assembled in this manual are operation, lubrication, and maintenance instructions for the Hydro 70 Tractor. This material has been prepared in detail in the hope that it will help you to better understand the correct care and efficient operation of your tractor.




Your new International Harvester tractor is designed to meet today's exacting operating requirements. The ease and comfort of operation, the ability to match ground speeds to engine power and work requirement, and the effortless versatility of the hydraulic system are intended to lighten your work and shorten your hours on the job.

Your local International Harvester dealer is interested in the performance you receive from this tractor. He has factory-trained service men, informed in the latest method of servicing tractors, and modern tools, and original equipment IH service parts which assure proper fit and good performance.

To obtain top performance and assure economical operation the tractor should be inspected, depending on its use, periodically, or at least once a year, by your International Harvester dealer.

Before you operate the tractor study this manual carefully. It has been prepared to help you operate and maintain your tractor with utmost efficiency. New copies may be ordered from your dealer at a nominal price.

When in need of parts, always specify the tractor and engine serial numbers, including prefix and suffix letters. Write these serial numbers in the spaces provided.

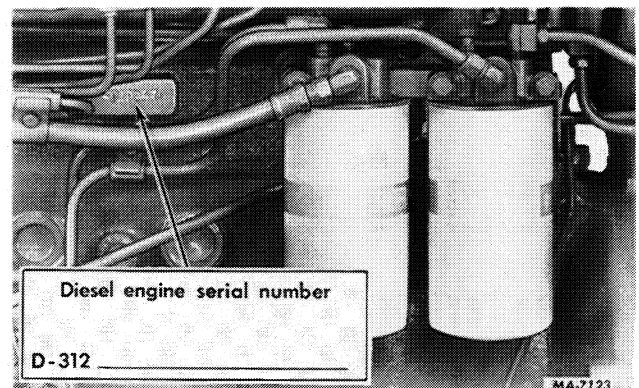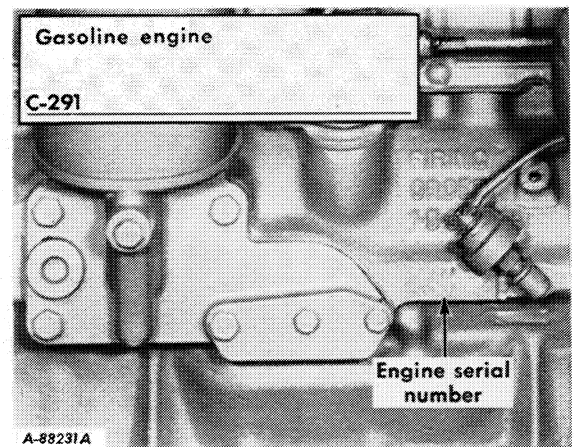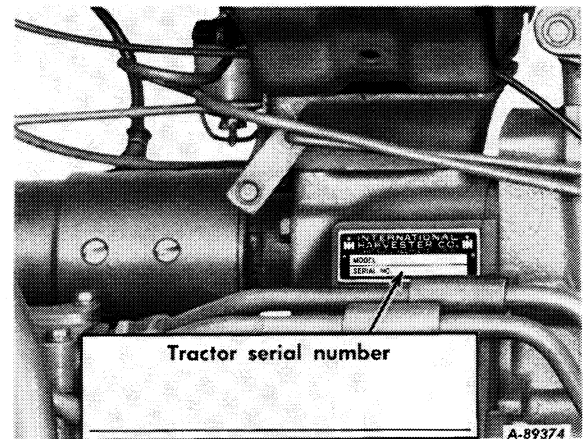

**IMPORTANT FUEL SYSTEM SAFETY WARNING
AND
ANNOUNCEMENT OF FREE, REPLACEMENT GASOLINE CAP**



CAUTION! The following information pertains to personal safety. Be sure to read and follow these instructions.

PROBLEM — Gasoline vapors can build up pressure in your gasoline tank.

All gasoline fuels are more volatile today than ever before. They vaporize and build up pressure in your gasoline tank more easily than in the past. Winter grade gasoline is especially subject to vaporization and pressure build-up when used on hot Spring or Fall days. If you have a tractor which is out of tune or not properly maintained, it can run hotter and increase vaporization.

DANGER — Fire and personal injury.

If the fuel cap is removed when the gasoline tank is hot and vapor pressure has, under certain circumstances, built up in the tank, this sudden release of pressure could force gasoline out of the tank. If the gas cap is not fully secured and tightened, it could come off the tank, and again, gasoline could escape. This sudden eruption of gasoline exposes the operator to, and may cover him with, liquid fuel and vapors and is a clear fire hazard if a source of ignition is present. A running engine is a source of ignition, as are cigarettes, open flames, sparks or a poorly maintained exhaust system. **An immediate fire could occur.** The operator or anyone in the area could be burned and suffer serious injury or even death.

PRECAUTIONS — Observe the following steps for safe operation:

- Always tighten gas caps securely.
- Never, under any circumstances, take the gas cap off a hot or running tractor.
- Never hold over Winter gasoline for use in the Spring. Remove any equipment unnecessary for warm weather operations, such as comfort covers, heat housers, or radiator covers.
- Maintain equipment properly and pay particular attention to electrical, exhaust, fuel, and cooling systems. Repair or replace frayed electrical wires; leaky exhaust manifolds, gaskets, pipes and mufflers; damaged carburetors, sediment bowls and fuel lines. Be sure radiators are clean inside and out. Clean off any accumulation of trash, oil or grease.
- Make sure that fuel cap vent holes are not plugged, gaskets are in good condition, and that cap tangs are firmly riveted. Repair worn, bent, or deformed filler necks and damaged heat shields or shield insulation. If your tractor is not equipped with a heat shield or insulation, install such equipment on applicable models.
- Be alert to any unusual sights and sounds during operation. If you suspect overheating or pressure build-up in the fuel system, do not touch the cap. Turn off the engine and allow the tractor to cool before you touch the cap.

FREE GASOLINE CAP — See your dealer today.

International Harvester has developed a new gasoline cap designed to improve vapor venting and to inhibit the sudden eruption of liquid fuel if the safety precautions against cap removal are not observed.

New caps will be exchanged **free of charge** with owners of certain models of International Harvester farm tractors. To see whether your tractor already has the new cap or to arrange to obtain one, simply contact your local International Harvester dealer. Also ask him for a free International Harvester brochure "New Facts About Fuels" and for free "Warning" decals for all gasoline equipment.

Gasoline Tractor Models Included in Cap Exchange Program (See Note)			
A	100	*504	2404
AV	130	F-544 Only	2424
B	140	560	2444
BN	200	600	2504
C	230	*606	2544
H	240	650	*2606
HV	300	F-656 Only	2706
M	330	660	2756
MV	340	666	2806
O	350	686	2826
OS	400	706	2856
W	404	756	
WR	424	766	
70	444	806	
86	450	826	
	460	856	

NOTE: New cap **will not** fit on any of these tractors,

B-275	I-434
B-276	I-544
I -284	I-656
I -354	I-2656
B-414	

* New cap **will not** fit on these tractors above serial numbers shown.

F-504 above serial No. 13400
I -504 above serial No. 14272
I -606 above serial No. 6879
I -2606 above serial No. 6879

New cap **will not** fit on any lawn and garden tractor in the Cadet model series or on any tractor with the gasoline tank behind the operator's seat.

CONTENTS

TO THE OWNER	INSIDE FRONT COVER	GASOLINE ENGINE AND FUEL SYSTEM	16,17,18
INTRODUCTION	4	Starting the engine	
WORK SAFELY – FOLLOW THESE RULES	5, 6, 7	After the engine is running	
Before starting		Stopping the engine	
During operation		Cleaning the fuel strainer and sediment bowl	
Transporting		Carburetor	
After operation		Fuel shut-off solenoid valve	
INSTRUMENTS AND CONTROLS	8	DIESEL ENGINE AND FUEL SYSTEM	19 to 24
BEFORE OPERATING YOUR NEW TRACTOR	9	Fuel system	
Tractor break-in procedure		Warranty notice	
Lubrication		Venting the fuel system	
Tires		Fuel storage	
Air cleaning system		Engine coolant heater	
Engine cooling system		Starting the engine	
Fuel system		Stopping the engine	
DRIVING THE TRACTOR	10 to 15	Changing the ether fluid container	
Preparing the tractor for each days work		Draining water from the tractor fuel tank	
Fuel gauge		Fuel filters	
Filling the fuel tank		Fuel injection pump and nozzles	
Adjusting the seat		Injection pump governor	
Steering the tractor		HYDRAULIC CONTROLS FOR THREE-POINT HITCH	24 to 27
Locking the brakes		Position Control (inside lever)	
Safety starting switch		Draft control (outside lever)	
Speed ratio control		Run range (inside lever)	
Hi-Lo range selector control		THREE-POINT HITCH	28 to 33
Foot-N-Inch pedal		Lift links and leveling cranks	
Starting the tractor		Rigid hitch position	
Starting procedure for hydrostatic drive tractors after transporting on truck or flatcar		Free to float position	
Transmission oil heater		Hitch lower links	
Stopping the tractor		Hitch upper link	
Brake lock		Lateral limiter	
Towing the tractor		Coupling the equipment	
Tachometer		Example of operating the three-point hitch with draft control	
Speedometer		Uncoupling the equipment	
		Removing the three-point hitch linkage	
		Installing the three-point hitch linkage	

CONTENTS

HITCHING TRAILING EQUIPMENT TO THE TRACTOR	34,35,36	AIR CLEANING SYSTEM	44, 45
Fixed-type (quick attachable) drawbar		Dry-type air cleaner	
Swinging drawbar		Air cleaner service indicator	
Telescoping-type swinging drawbar		Removing and cleaning the filter element	
Cross drawbar		Inspection	
		Automatic dust unloader	
AUXILIARY VALVE, REMOTE CYLINDERS AND HYDRAULIC OUTLETS	36 to 40	ELECTRICAL SYSTEM	46 to 50
Connecting hoses to the rear hydraulic outlets		Charging system for alternator-generator	
Connecting hoses to front hydraulic outlets		Cranking system	
Thermal expansion pressures		Ignition system (gasoline engine only)	
Operating double-acting cylinders		Lighting system	
Operating single-acting cylinders		Lighting switch positions	
Float lockout		Tellites	
Lower and float lockout		Fuse	
Adding fluid after connecting cylinders and hoses		Battery	
Freeing the system of trapped air		FRONT WHEELS	51,52,53
POWER TAKE-OFF	41	Adjustable wide tread front axle	
Operating the independent power take-off		Farmall hi-clear adjustable front axle	
		Tricycle front axle	
COOLING SYSTEM	42,43,44	Adjusting wide-tread front axle and farmall hi-clear adjustable front axle for tread widths	
Temperature gauge		Adjusting the toe-in	
Filling the cooling system		REAR WHEELS	53, 54, 55
Adding coolant to the cooling system		Adjusting the tread widths	
Cleaning the cooling system		Hub clamp bolts	
Radiator core and transmission oil cooler		Assembling the rear wheel double-beaded rims	
Water pump, alternator-generator, and fan belt tension		Reversing the rear wheels	
		Wheels with double-beaded rims	
		Dual rear wheels	

Buy Now



Our support email:

ebooklibonline@outlook.com