

**185 Lo-Boy
Tractor**
Operators Manual

1084466R1

Reprinted

CASE III



*This symbol means **ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED.** The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.*

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

INTERNATIONAL[®]
CUB[®]
185 LO-BOY[®]
TRACTOR

INTERNATIONAL[®]

OPERATOR'S MANUAL



To The Owner

Your new International Harvester tractor is designed to meet today's exacting operating requirements. The ease and comfort of operation, the ability to match ground speeds to engine power and work requirement, and the effortless versatility of the hydraulic system are intended to lighten your work and shorten your hours on the job.

Your local International Harvester dealer is interested in the performance you receive from this tractor. He has factory trained servicemen, informed in the latest method of servicing tractors, and modern tools, and original-equipment IH service parts which assure proper fit and good performance.


To obtain top performance and assure economical operation the tractor should be inspected, depending on its use, periodically, or at least once a year, by your International Harvester Dealer.

Before you operate the tractor, study this manual carefully. It has been prepared to help you operate and maintain your tractor with utmost efficiency. New copies may be ordered from your dealer at a nominal price.

When in need of parts, always specify the tractor and engine serial numbers, including prefix and suffix letters. Write these serial numbers in the spaces provided below.

METRIC (SI) MEASUREMENTS

A standard of measurement known as International System of Units (SI) has been adopted for world-wide use. English Units followed by Metric Equivalents are used throughout this manual. (Metric Equivalents are given in parenthesis)

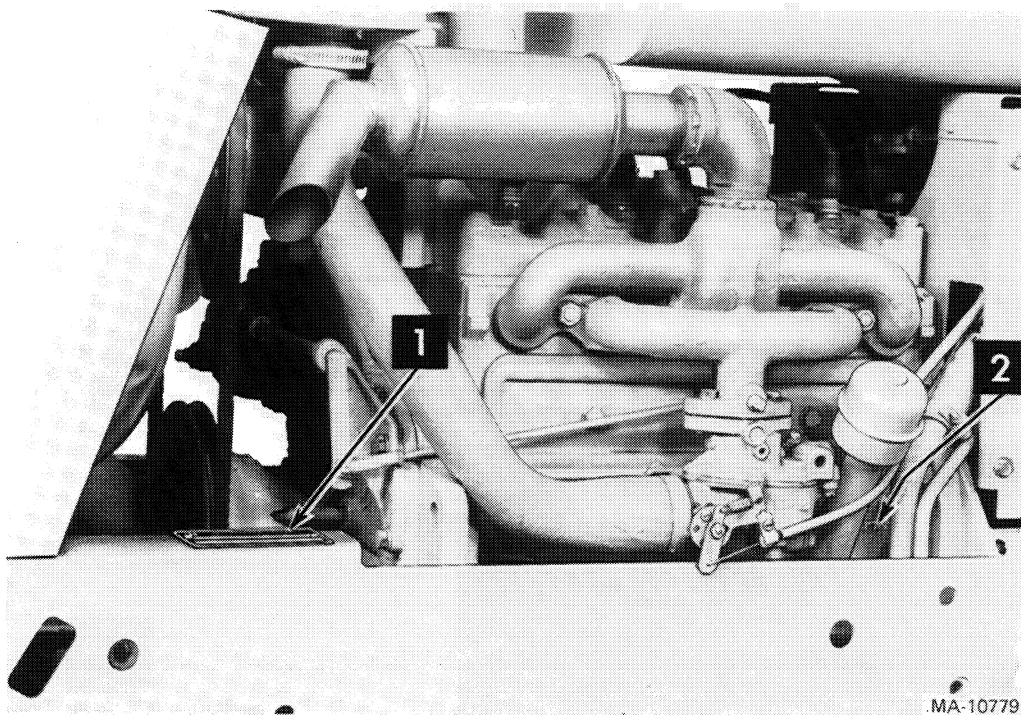

1. Tractor serial number _____

2. Engine serial number _____

CONTENTS

CONTENTS	1, 2	HYDRAULIC LIFT AND HITCH SYSTEMS	17
INTRODUCTION	3	MID LIFT	17, 18
WORK SAFELY – FOLLOW THESE RULES	4, 5	Implement Height Adjustment	
		Locking Out the Mid Lift	
INSTRUMENTS AND CONTROLS	6 thru 9	THREE POINT HITCH	18 thru 22
Brake Pedal		Lower Links and Upper Link	
Brake Pedal Lock		Lower Link Adjustments	
Charge Indicator		Upper Link Adjustment	
Choke Control		Lock Bar	
Clutch Pedal		Attaching to the Tractor	
Fuse Holder		Uncoupling the Implement	
Gearshift Lever		Removing the Three Point Hitch Linkage	
Hydraulic Control Lever		Installing the Three Point Hitch Linkage	
Ignition Switch			
Lighting Switch		MID LIFT AND HITCH OPERATION	22
Oil Pressure Tellite		Tractors Equipped with Hydraulic Selector Control (Optional)	
Power Take-Off Lever			
Throttle Lever			
OPTIONAL INSTRUMENTS AND CONTROLS	10, 11, 12	DRAWBARS	23
Two Pedal Brakes		Fixed Drawbar	
Brake Pedal Latch (Two Pedal Brakes)		Cross Drawbar (Optional)	
Brake Pedal Lock (Two Pedal Brakes)			
Creeper Drive Control		WEIGHTS	24, 25
Hydraulic Selector Control		Front Wheel Weights	
		Rear Wheel Weights	
BEFORE OPERATING THE TRACTOR	12, 13	PREVENTIVE MAINTENANCE GUIDE	26, 27
Lubrication			
Air Cleaning System		PREVENTIVE MAINTENANCE	28 thru 42
Tires		Fuel System	28
Engine Cooling System		Fuel Shut Off Valve	28
Adjusting the Seat		Filler Cap Air Vent	28
Fuel		Cleaning the Fuel Strainer and Sediment Bowl	28
Tractor Break-In Procedure		Carburetor	29
OPERATING THE TRACTOR	14, 15, 16	Adjusting the Power Take Off Belts	29, 30
Starting the Tractor		Cooling System	31
After the Engine Starts		Adding Coolant to the Cooling System	31
Driving the Tractor		Draining the Cooling System	31, 32
Driving on Slopes		Cleaning the Cooling System	32
Stopping the Tractor		Filling the Cooling System	32
POWER TAKE-OFF	16	Care of the Radiator	32
Operating Stationary Equipment from the Tractor		Fan, and Motor-Generator	
Power Take-Off		Belt Tension	32

CONTENTS

Air Cleaning System	33	STORING THE TRACTOR	43
Automatic Dust Unloader	34	Storage	
Electrical System	34, 35	Removing from Storage	
Ignition System	35		
Motor-Generator and Regulator	35	COLD WEATHER PRECAUTIONS	44
Lighting System	36	Fuel System	
Headlight Replacement	36	Electrical	
Taillight	36	Lubrication	
Combination Rear and Taillight (Optional)	36	Cooling System	
Fuse	36		
Battery	37, 38	LUBRICATION	44, 45, 46
Tellite Bulb Replacement	38	Checking the Oil Level	
Front and Rear Wheels	38	Crankcase Breather Service	
Tires	39	Engine Oil	
Care of Tires	39	Gear Lubricant and Hydraulic Fluid	
Inflation	39	Lubrication Fitting Grease	
Using the Spark Plug Tire Pump	39	Oil Filter	
Shipping Tractors Equipped with Pneumatic Tires	39		
Mounting Tires on the Rim	39	LUBRICATION TABLE	47
Traction and Weights	40		
Tire Chains	40	LUBRICATION GUIDE	48 thru 51
Overloading	40		
Single Pedal Brakes	40	SPECIFICATIONS	52, 53, 54
Brake Adjustment (Single Pedal Brakes)	40		
Two Pedal Brakes	41	EXTRA EQUIPMENT AND ACCESSORIES	54
Brake Adjustment (Two Pedal Brakes)	41		
Clutch	42		
Adjusting the Engine Clutch	42	METRIC (SI) MEASUREMENTS	55



INTERNATIONAL HARVESTER


INTRODUCTION



International Cub 185 Lo-Boy Tractor showing terms of location.

Assembled in this manual are operation, lubrication, and maintenance instructions for International Cub 185 Lo-Boy Tractors. This material has been prepared in detail in the hope that it will help you to better understand the correct care, efficient and safe operation of the tractor.

Throughout this manual the use of the terms LEFT, RIGHT, FRONT, and REAR must be understood when following instructions to avoid confusion. LEFT and RIGHT indicate the left and right sides of the tractor when facing forward in the driver's seat. FRONT indicates the radiator end of the tractor; REAR indicates the hitch end.

 **CAUTION**

Read the Operator's Manual.
Learn to operate this machine SAFELY.
Be alert. Observe ALL Safety Practices.
Machines can be hazardous in the hands of an UNFAMILIAR, UNTRAINED or COMPLACENT operator.
Don't risk INJURY or DEATH.

MA-10034

Buy Now



Our support email:

ebooklibonline@outlook.com