


**International
3388, 3588, and 3788
Tractors**

Operator's Manual

1096188R4

Reprinted

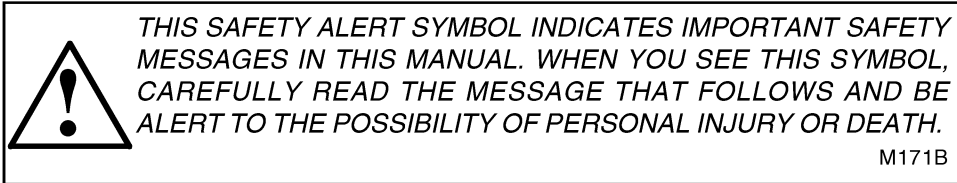


CASE III



If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

INTERNATIONAL®


3388, 3588,

AND

3788 TRACTORS

INTERNATIONAL®

OPERATOR'S MANUAL

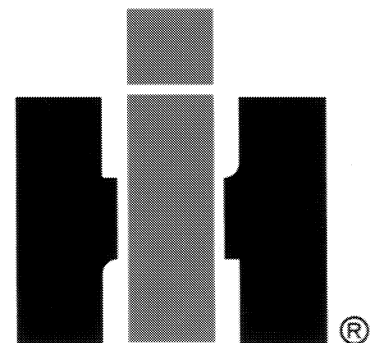

To The Owner

Before you operate the tractor study this manual carefully. It has been prepared to help you operate and maintain your tractor with utmost efficiency.



Instructions given with this symbol are for personal safety. Be sure you and your workers follow them.

Assembled in this manual are operation, lubrication, and maintenance instructions for the International 3388, 3588 and 3788 Articulated Tractors. This material has been prepared in detail in the hope that it will help you to better understand the correct care and efficient operation of your tractor.

For prompt, efficient service, always specify the tractor model and serial numbers, including prefix and suffix letters. Write these serial numbers in the spaces under "Serial Numbers".

The International 3388, 3588, and 3788 four-wheel drive tractors are designed to distribute the tractor weight on the four driving wheels during operation, and thus provide better floatation and less soil compaction. Also, the four driving wheels, with proper load distribution, will enable the tractor to achieve higher drawbar pull than a two wheel drive tractor with equivalent power.


Your local International Harvester dealer is interested in the performance you receive from these tractors. He has factory-trained servicemen, informed in the latest method of servicing tractors, modern tools, and original-equipment IH service parts which assure proper fit and good performance.

To obtain top performance and assure economical operation the tractor should be inspected, depending on its use, periodically, or at least once a year by your International Harvester Dealer.



Universal symbols are used to pictorially identify various tractor instruments and controls. Throughout this manual, an identifying symbol is placed by the instructions like this example for engine coolant temperature. The waves signify water or coolant and the thermometer indicates temperature. Regardless of the language used in a nation, and without translation, this symbol means water or coolant temperature.

Optional equipment and accessories are available. Disregard the instructions for equipment not on your tractor.

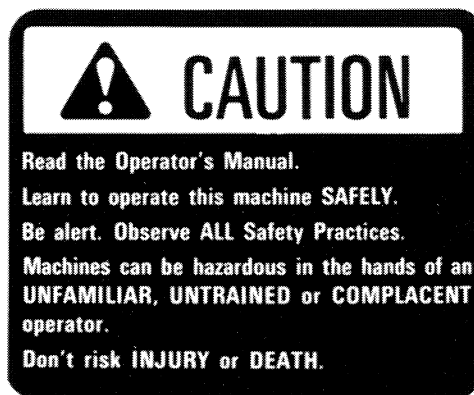

METRIC (SI) MEASUREMENTS

A standard metric measurement known as International System of Units (SI) has been adopted for world-wide use. English Units followed by Metric Equivalents are used throughout this manual. (Metric Equivalents are given in parenthesis)

DELIVERY SERVICE FOR INTERNATIONAL® HARVESTER EQUIPMENT

This form must be filled out by the dealer and signed by both the dealer and the customer at the time of delivery.

Equipment and Model No. _____
Serial No. _____ Engine Serial No. _____
Owner _____ Dealer _____
Address _____ Address _____
Town _____ Town _____
State _____ Zip _____ State _____ Zip _____

I have thoroughly instructed the buyer on the above described equipment which review included the Operator's Manual content, equipment care, adjustments, and safe operation. The warranty policy provisions were also explained and reviewed.

DEALER'S SIGNATURE

Above equipment and Operator's Manual have been received by me and I have been thoroughly instructed as to care, adjustments, safe operation and applicable warranty policy.

DATE

AUTHORIZED SIGNATURE

INTERNATIONAL HARVESTER COMPANY
401 NORTH MICHIGAN AVE. / CHICAGO, ILLINOIS 60611 / U.S.A.

1 096 278 R1.

PRINTED IN UNITED STATES OF AMERICA

DEALER'S COPY

TECHNICAL PUBLICATIONS AVAILABLE

Your International Harvester Dealer and his factory trained servicemen are best qualified to service your equipment. Up-to-date instructions and adequate special tools are also a part of your Dealer's service facilities.

This Operator's Manual was prepared to instruct you in proper operation and maintenance of your equipment. If you desire additional information you may purchase Service Manuals and/or Parts Catalogs. Additional copies of the Operator's Manual are also available.

Fill out the order blank and forward together with your check or money order in the appropriate amount (U.S. Funds) to:

International Harvester Company

PRINTING AND
DISTRIBUTION SERVICES

807 Blackhawk Drive
Westmont, Illinois 60559

Attention: Cashier

----- Cut Along This Line -----

Title	Number	Qty.	Price Each
Operator's Manual			
3388, 3588, and 3788 Tractors . . .	1 096 188 R		8.00
Parts Catalogs			
3388, 3588, and 3788 Tractors . . .	TC-190		10.00
6 Cyl. Diesel Engine	ENG-5		18.00
Service Manuals			
Chassis	GSS-1490-1		18.10
Engine and Fuel System	GSS-1427-1		18.30

TOTAL _____

Cut Along This Line

Please Print

Name _____

Street Address _____

City _____

State _____

Zip Code _____

Date _____

Signed _____

Do not send cash or stamps

Prices subject to change without notice.

CONTENTS

TO THE OWNER	Inside Front Cover	CAB INTERIOR AND CONTROLS	24 to 27
		Operating the Controls	24
		Control Settings	25
		Radio Units	25
		Seat	26
SERIAL NUMBERS	4		
WORK SAFETY — FOLLOW THESE RULES	6 to 8	ENGINE AND FUEL SYSTEM	28 to 31
Servicing and Before Starting	6	Warranty Notice	29
Starting	6	Fuel System	29
During Operation	7	Fuel Injection Pump and Nozzles	31
Transporting	7	Priming the Turbocharger	31
Cabs	7		
Before Dismounting	8	COOLING SYSTEM	32 to 34
Dismounting	8	Coolants	32
After an Upset	8	Checking the Coolant Level	32
		Draining and Filling the Cooling System	33
ENERGY CONSERVATION FOLLOW THESE RECOMMENDATIONS	9, 10	Thermostat	33
		Cleaning the Radiator, Transmission Oil Cooler and Condenser Core Fins	33
INSTRUMENTS AND CONTROLS	11 to 13	Hoses and Clamps	33
Instrument Panel and Controls	11	Cooling System, Filter Conditioner	34
Left and Right Console and Seat Controls	12	Water Pump, Alternator-Generator and Fan Belt Tension	34
Cab Interior	13		
BEFORE OPERATING YOUR TRACTOR	13	AIR CLEANING SYSTEM	35 to 37
		Tractors with Automatic Dust Unloader	35
OPERATING THE TRACTOR	14 to 23	Tractors with Aspirated Air Cleaner	35
Neutral Starting Switch	14	Removing and Cleaning the Primary Filter Element	36
Starting the Engine	14	Inspection	36
Stopping the Engine	16	Secondary Filter Element	36
With the Engine Running	16		
Steering the Tractor	18		
Driving the Tractor	19		
Hydraulic Powered Clutch Control	19		
Stopping the Tractor	19		
Hood Release	19		
Emergency Hood Release Lever	19		
Auxiliary Step	20		
Data Center	20		
(EGT) Exhaust Gas Temperature	20		
Selecting Ground Speeds	21		
Torque Amplifier	22		
Park	22		
Frame Lock Pin	22		
Towing the Tractor	23		
Tractor Break-in Procedure	23		

Buy Now



Our support email:

ebooklibonline@outlook.com