

**Wildcat  
Super Wildcat  
Bearcat**

**Operators Manual**

37-001

Reprinted





***This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.***

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



**IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.**

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

# ***OPERATORS MANUAL***

**IMPORTANT  
Please Read Carefully**



FARGO, N. DAK. 58102

# Warranty

Steiger Tractor, Inc. (Steiger) warrants, to the original purchaser only, each new Steiger Tractor to be free from defects in material and workmanship under normal use and service, subject to the conditions and qualifications herein set forth. The obligation of Steiger hereunder is limited to the repair or replacement of those parts which Steiger, in its sole discretion, determines to have failed as a result of defects in material or workmanship within twelve months or 1500 hours of use, whichever occurs first, after delivery to the original purchaser. Steiger's obligation hereunder shall in no case be greater than the cost of the necessary parts and labor which Steiger, in its sole discretion, determines to have failed as a result of defects in material or workmanship.

Steiger shall not be liable for any costs other than those specified herein, specifically excluding damage to crops, loss of use, transportation expense to an authorized Steiger dealer, service calls, normal maintenance and upkeep cost, overtime labor cost, and any and all other injuries, damages or expenses incidental or consequential to the defects covered by this warranty. Also this warranty does not extend to tires, tubes, radios, batteries, air conditioners and like accessories not manufactured by Steiger.

NO WARRANTY of MERCHANTABILITY or FITNESS for USE is made. This is the sole warranty applicable to Steiger Tractors, exclusive of any and all other warranties, whether written, oral or implied. No dealer, salesman or agent has any authority to alter or amend this warranty nor does any dealer, salesman or agent make any warranty for himself unless the same is reduced to writing and delivered to the purchaser at the time of purchase.


This warranty shall be effective only if the purchaser requests warranty repairs to be made by an authorized Steiger dealer at his place of business and, if requested by such dealer, the purchaser presents evidence of the date of delivery of the equipment. This warranty shall not apply unless Steiger or one of its dealers is promptly notified of claimed defect and the allegedly defective part is preserved for inspection.

This warranty shall immediately become void if any service, other than normal maintenance, is performed by anyone other than an authorized Steiger dealer; or if any alteration or modification is made without the prior written consent of Steiger; or if, in Steiger's sole discretion, the failure is due to abuse or neglect in the operation or maintenance of the tractor or due to failure to follow the provisions of the operator's manual.

#### IMPORTANT

THIS WARRANTY SHALL IMMEDIATELY BECOME VOID IF DELIVERY NOTIFICATION FOR WARRANTY IS NOT MAILED IMMEDIATELY UPON COMPLETION OF SALE.

**STEIGER**  
TRACTOR, INC.

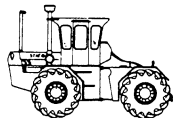

FARGO, NORTH DAKOTA

## PRE-DELIVERY CHECK

Date \_\_\_\_\_

Dealer Name \_\_\_\_\_ Address \_\_\_\_\_

Customer's Name \_\_\_\_\_ Address \_\_\_\_\_

Model \_\_\_\_\_ Serial No. \_\_\_\_\_

Engine Model \_\_\_\_\_ Serial No. \_\_\_\_\_

Engine performance	—	Battery performance	—
Radiator level	—	Alternator	—
Air conditioner operation	—	Battery cables	—
Electric wire system	—	Amp. guage	—
Fuel lines leaks	—	Engine oil level	—
Fuel tanks	—	Oil pressure, min.setting 20 psi	—
Fuel tank cover	—	Fuel guage	—
Fuel filters	—	Fuel sender	—
Oil filters	—	Temp. guage(Engine)max.setting 220°	—
Engine idle	—	Tac and Hour meter	—
Throttle linkage	—	Lights and wires	—
Throttle lever	—	Radio	—
Cab apperance	—	Interior lights	—
Vinyl ccovering	—	Brakes	—
Window glass	—	Belts	—
Door latches	—	Clutch adjustment	—
Weather stripping	—	Engine mounts	—
Window wipers	—	Brake fluid	—
Seat and arm rests	—		
Floor board rug	—	Dropbox	—
		Oil level	—
Transmission	—	Flange bolts	—
Leaks	—	U joints	—
Oil level	—	Mount bolts	—
Filter	—	Swing box mount	—
Flange bolts	—		
Drive shafts	—	Differential make	—
U joints	—	Front	—
Transmission mounts	—	Oil level	—
		Oil level planet	—
Differential make	—	Mount bolts	—
Rear	—	Brake lines	—
Oil level	—	Lug bolts and nuts	—
Oil level planet	—	Drive line joints	—
Mount bolts	—	Tire pressure and size	—
Lug bolts and nuts	—		
DANA 450 ft. lbs.	—		
Clark 250 ft. lbs.	—		
Drive line joints	—		
Tire pressure and size	—		

Hydraulic system	—	Pump couplers	—
Oil tank leaks	—	Coupler mounts	—
Oil tank level	—	Hose mounts	—
Oil lines leaks	—	Air vents	—
Oil filters	—	Steering cylinders	—
Hose connectors	—	Steering cylinder pins	—
Control valves	—	Quick couplers	—
Hydraulic pump	—		—
		Grill and bolts	—
Main frame	—	Slow moving sign	—
Hinge pins and locks	—	Draw bar and pins	—
Floor boards	—		—
Fender for apperance	—		
Handles	—		
Cylinder mounts weld	—		

UPON COMPLETION MAIL TO THE SERVICE DEPARTMENT OF STEIGER TRACTOR:

COMMENTS

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

# SAFETY PRECAUTIONS

A CAREFUL OPERATOR IS ALWAYS THE BEST INSURANCE AGAINST AN ACCIDENT

1. Be sure all control levers are in neutral before attempting to start the engine.
2. Do not operate tractor from any position but seated in the operator's seat.
3. Operate tractor at lower speed to insure safety and complete control, especially over rough terrain.
4. Reduce speed when making a turn, going down hill or applying brakes.
5. Do not leave engine running while it is unattended.
6. Shut the engine off before making any adjustments or when servicing tractor.
7. Do not dismount from tractor when it is in motion.
8. Do not allow passengers on tractor.
9. Use the braking power of the engine, always downshift to lower gear before descending a steep grade.
10. Shift to lower gear before approaching a hill, so it does not become necessary to shift against the hillside with danger of rolling backward while shifting.
11. Take care when removing radiator pressure cap when radiator is hot. Add to radiator only when engine is stopped and fully cooled.
12. Refuel in a safe place away from open fire or sparks.
13. Prevent accidents--use red flags or a safety emblem when transporting tractor.
14. Never stand near center hinged area while engine is running.
15. Never by-pass (wire around) safety starting switch.
16. Machinery should only be operated by those who are responsible and delegated to do so.
17. Brakes should be properly adjusted.
18. Never operate your tractor in closed garage or shed.
19. Provide a first aid kit. Treat all scratches, cuts, etc. with the proper anti-septic immediately.
20. Keep a fire extinguisher handy at all times.

**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)