



42016010

**160
TRACTOR
OPERATOR'S MANUAL
1982**

Reprinted

VERSATILE WARRANTY

VERSATILE FARM EQUIPMENT COMPANY (Versatile) warrants each item of new Versatile equipment sold by it to be free from defects in material and workmanship under normal use and service. The sole obligation of Versatile to the Dealer under this warranty is limited to repairing or replacing, as Versatile may elect, any part or parts that prove in Versatile's judgment to be defective in material or workmanship within one year after delivery to the original purchaser, under normal farm use. Such defective part or parts will be replaced or repaired **ONLY TO THE ORIGINAL PURCHASER**, such repair or replacement will be done at the location of the selling Versatile Dealer. Purchaser must give written notice to the Authorized Dealer from whom equipment was purchased of any claimed defect and the Dealer will have a reasonable time under the circumstances then existing to repair or replace said part or parts found to be defective. It is understood that if there is any delay in giving such written notice wherein it is possible that the alleged defective part may have caused damage or defects to other parts of the equipment, then this warranty shall not cover the repairs necessitated therein.

NOTE: THE SOLE AND EXCLUSIVE REMEDY OF THE PURCHASER FOR BREACH OF THIS WARRANTY IS THE REPAIR OR REPLACEMENT OF DEFECTIVE PARTS.

This warranty does not extend to the engine or tires on Versatile tractors which are manufactured by others, and which carry separate warranties from said manufacturers. There are no representations, warranties, or conditions express or implied, statutory or otherwise, except those herein contained and no agreement collateral hereto shall be binding upon either party unless in writing hereon or attached hereto, signed by purchaser and accepted by Versatile at its head office.

Versatile's liability under this warranty is limited to the repairing or replacing of parts, and Versatile shall in no event be liable to the Purchaser for consequential damages or loss of profits on crops sustained by it as a result of any defect in material or workmanship on any of the equipment covered by this warranty.

Versatile equipment is warranted for agricultural work only. This Warranty does not cover industrial application. ALTERING, MODIFYING OR ADDING ADDITIONAL EQUIPMENT WHICH IS NOT APPROVED FOR INSTALLATION ON VERSATILE EQUIPMENT BY THE COMPANY WILL VOID THE WARRANTY.

All Warranties are subject to legislation of the state or province in which the machine is sold.

•THERE WILL BE NO DEVIATION FROM THE PROCEDURE AS OUTLINED•

NOTE: THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE BY VERSATILE OR ITS AUTHORIZED DEALER, REGARDING VERSATILE EQUIPMENT EXCEPT THE WARRANTY AGAINST DEFECTS IN MATERIAL OR WORKMANSHIP EXPRESSED HEREIN. VERSATILE SHALL NOT, IN ANY EVENT, BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, WHETHER IN CONTRACT, TORT OR OTHERWISE. NO PERSON IS AUTHORIZED TO BIND VERSATILE FOR ANY OTHER WARRANTY WHATSOEVER.

 **VERSATILE**
VERSATILE FARM EQUIPMENT COMPANY

A division of Versatile Corporation

1260 CLARENCE AVENUE, WINNIPEG
MANITOBA, CANADA, R3T 1T3/(204) 284-6100

*VERSATILE® is a registered trademark of Versatile Corporation
Copyright© 1981 Versatile Corporation*

Table of Contents

 **VERSATILE**

160 Tractor

1	Safety	1
2	Operation	6
3	Lubrication and Maintenance	19
4	Troubleshooting	41
5	Storage	44
6	Specifications and Schematics	46
7	Index	54




Introduction

We at Versatile Farm Equipment Company are pleased you have chosen a VERSATILE® Model 160 Tractor to complement your farming operation. It is designed to meet the many demands of modern farming. Carefully follow the operating and maintenance procedures given in this manual for maximum operating efficiency of the machine.

All directions; front, rear, left and right, are based on the tractor in the engine forward configuration.

Replacement parts are available from your Versatile dealer. Consult him for all your parts and service needs.

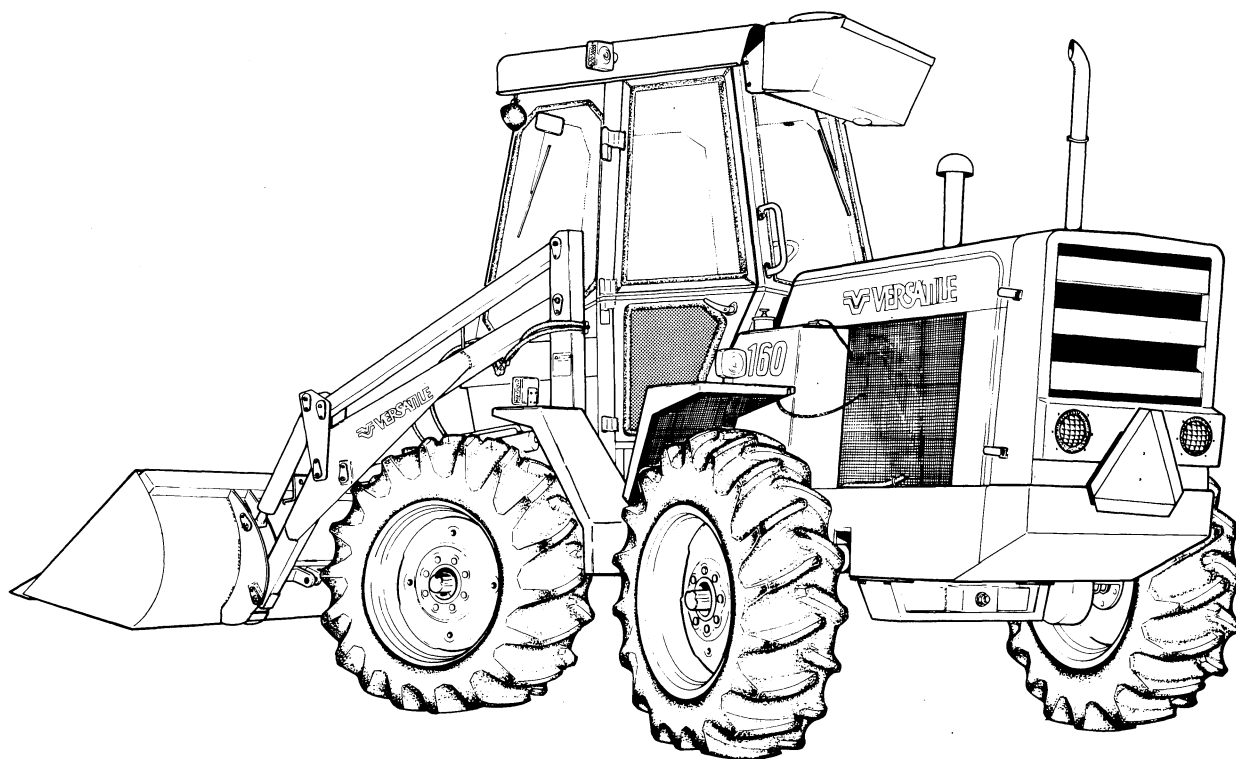


Serial Number Location

IMPORTANT

To obtain the fastest service when ordering parts, remember to:

1. Order the part by the correct number
2. State the machine model and year
3. Include the serial numbers

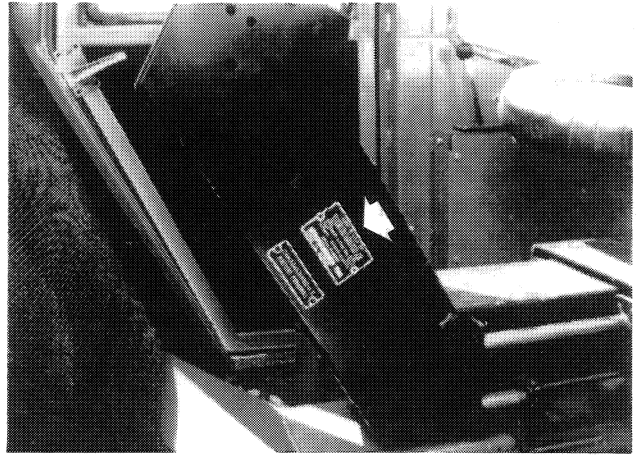

Tractor

TRACTOR


The tractor serial number is stamped on a metal tag located on the steering column.

Serial

ENGINE

The engine serial number is stamped on the rear side below the engine's exhaust manifold.

Serial

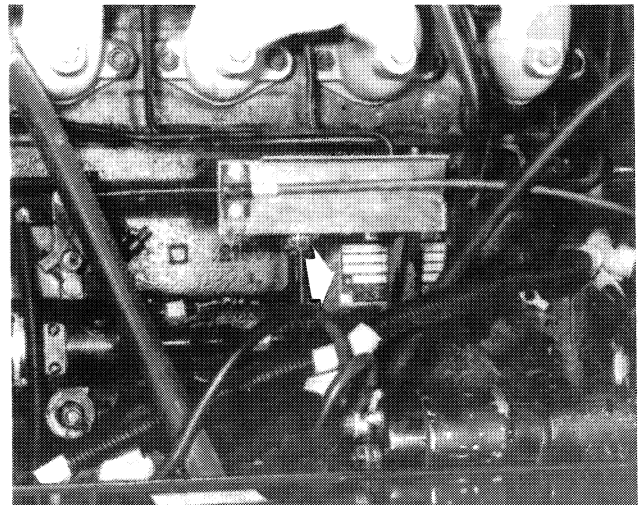

Engine



Watch for this symbol. It identifies potential hazards to health or personal safety. It points out safety precautions. It means: **ATTENTION - Be Alert.** Your safety is involved.



Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com