



# FORD

## Operator's Manual

---

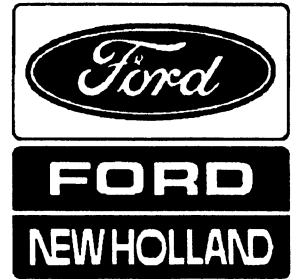

Front Blade  
Series 702A  
1110 and 1210 Tractors  
42070213

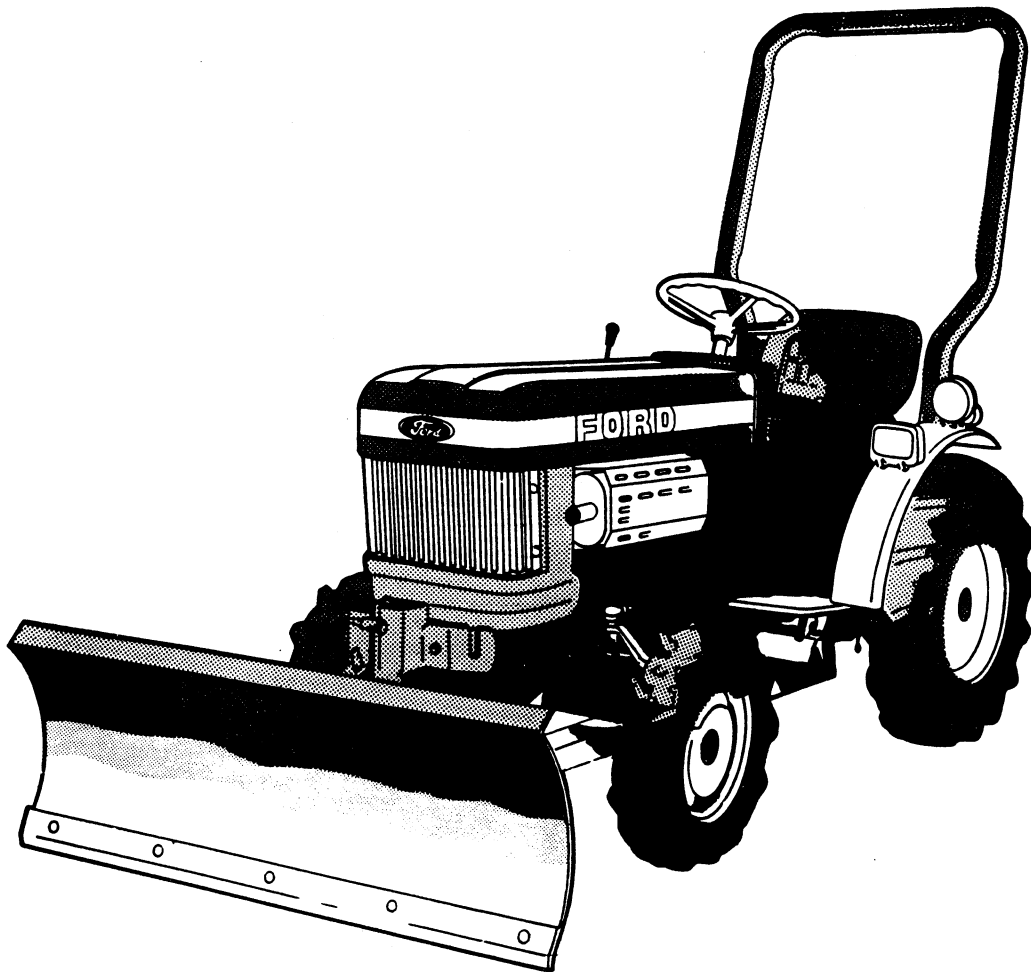

Reprinted

## FOREWORD

THIS MANUAL CONTAINS INFORMATION ON THE OPERATION OF YOUR NEW FORD SERIES 702A DOZER. ALSO INCLUDED IS INFORMATION ON MAINTENANCE, REMOVAL AND STORAGE, SHIPPING INFORMATION, AND ASSEMBLY.

READ THIS MANUAL CAREFULLY BEFORE OPERATING YOUR DOZER, AND KEEP IT HANDY FOR FUTURE REFERENCE. IF AT ANY TIME, YOU HAVE A SERVICE PROBLEM WITH YOUR DOZER, REMEMBER YOUR FORD TRACTOR-EQUIPMENT DEALER IS BEST QUALIFIED TO SERVICE IT; HE HAS FACTORY-TRAINED SERVICE TECHNICIANS, GENUINE FORD PARTS, AND THE CORRECT TOOLS AND EQUIPMENT TO DO THE RIGHT JOB IN THE SHORTEST POSSIBLE TIME.

FORD TRACTOR DIVISION  
FORD MOTOR COMPANY



## TABLE OF CONTENTS

	Page
PRE-OPERATION .....	1
SAFETY PRECAUTIONS .....	3
GENERAL INFORMATION .....	4
OPERATION .....	4
CONTROLS .....	4
LUBRICATION & MAINTENANCE .....	4
REMOVAL .....	4
STORAGE .....	5
ASSEMBLY .....	5
CLUTCH HOUSING BRACKET .....	5
REAR AXLE BRACKETS .....	6
SUB-FRAME .....	6
PIVOT ASSEMBLY .....	6
BLADE TO PIVOT INSTALLATION .....	6
TRIP SPRINGS INSTALLATION .....	7
LIFT CYLINDER MOUNTING BRACKET .....	7
LIFT CYLINDER INSTALLATION .....	7
HYDRAULIC HOSES INSTALLATION .....	8
HYDRAULIC ANGLE (OPTIONAL) KIT INSTALLATION .....	9
SKID SHOES (OPTIONAL) INSTALLATION .....	10
BLADE COMPONENT LIST .....	11
SPECIFICATIONS .....	14
SAFETY DECAL .....	15

## SAFETY PRECAUTIONS

Most farm equipment accidents can be avoided by following simple safety precautions. These precautions, if followed at all times, will help you operate your dozer safely.

1. Do not attempt to start the tractor engine while standing beside the tractor. Always start the engine while sitting in the tractor operator's seat.
2. Always stop the engine when leaving the tractor.
3. Do not leave the tractor-dozzer when it is in motion.
4. Do not allow anyone but the operator to ride on the tractor-dozzer.
5. Do not make mechanical adjustments while the unit is in motion, the blade is raised, or the engine is running.
6. Do not tow the tractor faster than 20 mph.
7. Do not attempt to repair or tighten hydraulic hoses when under pressure, when the tractor engine is running, or when the blade is raised.
8. Do not dismount from the tractor and leave the dozer blade raised.
9. Do not get under the blade when the dozer blade is raised.
10. When parking, make sure the parking brakes are set and the dozer blade is fully lowered.
11. Place adequate counterweight on the rear of the tractor and move wheels to recommended settings for optimum stability.
12. Exercise extreme caution when operating the tractor with the dozer blade on the sides of a hill.


Whenever you see this symbol



it means:

**ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!**

## Serial No. Plate

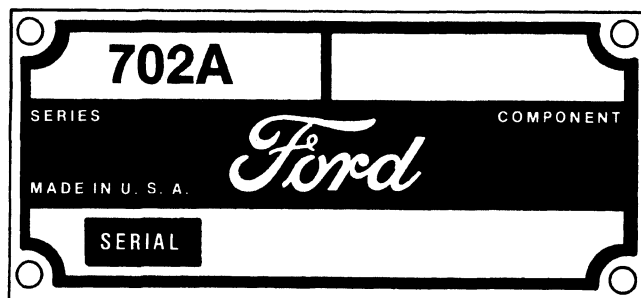

The serial no. plate is located on the top at the front of the subframe. It is riveted on and should not be removed.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)