 


# VERSATILE

## Operator's Manual

---

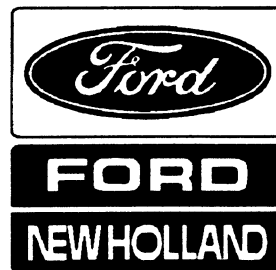

Tractor  
756

1986





**VERSATILE FARM EQUIPMENT COMPANY**

*A division of Versatile Corporation*

1260 CLARENCE AVENUE, WINNIPEG  
MANITOBA, CANADA, R3T 1T3/(204) 284-6100

 
**VERSATILE®** is a registered trademark of Versatile Corporation.  
Copyright © 1986 Versatile Corporation

# Table of Contents



## Model 756 Tractor Operator's Manual

Safety .....	1
Operation .....	7
Lubrication and Maintenance .....	29
Troubleshooting .....	70
Storage .....	87
Specifications and Schematics .....	89
Index .....	97

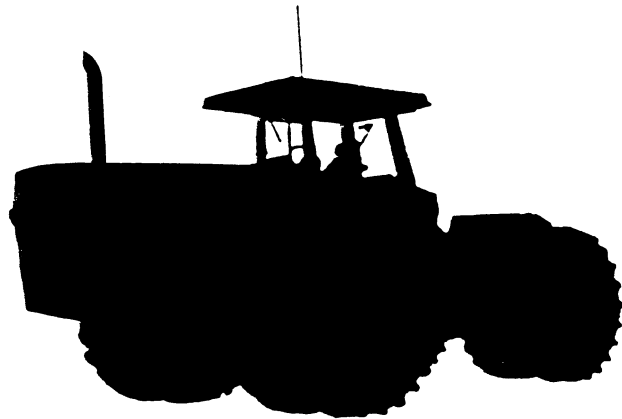

---

# Serial Number Location

---

## SERIAL NUMBER LOCATION

### IMPORTANT

To obtain fastest service when ordering parts. Remember to:

- 1. Order part by the correct number.
- 2. State machine model and year.
- 3. Include tractor, engine, transmission and frame serial numbers.

### TRACTOR

Serial number plate is stamped on front doorpost lower half.

SERIAL .....

 


Tractor Serial Number Plate

### ENGINE

Serial number plate is located on engine left side ahead of fuel injection pump and below air conditioning compressor.

SERIAL .....

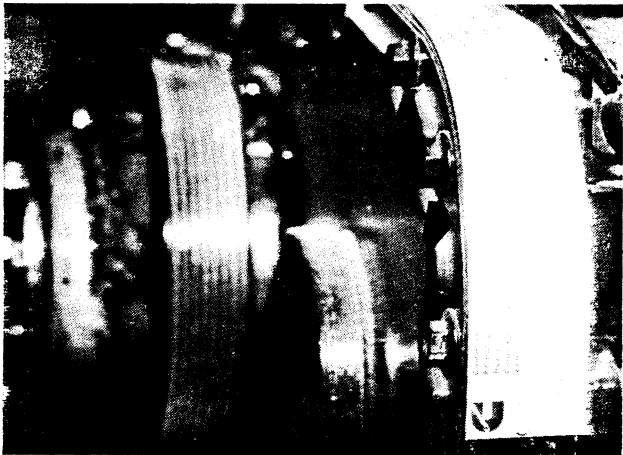


Engine Serial Number Location

### FRAME

 Serial number is stamped on the rear, bottom left-hand corner of the front frame.

SERIAL .....

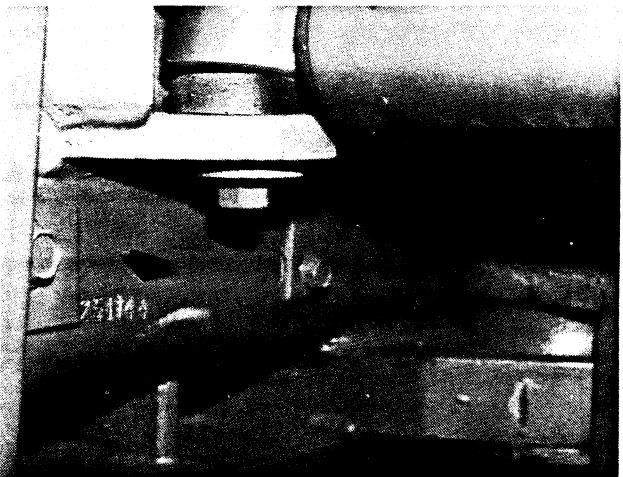


Frame Stamp Location

## **TRANSMISSION**
 
### **12 Speed Mechanical**


Serial number plate is stamped on transmission front above the reverse idler assembly.

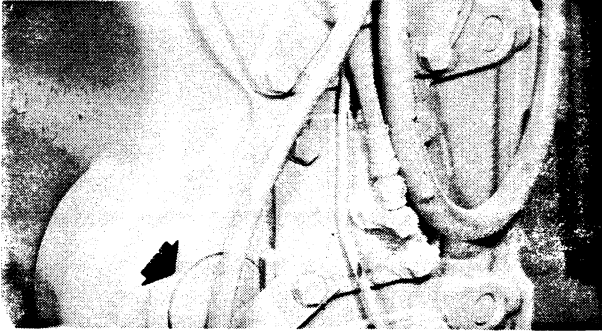

**12-Speed Mechanical Transmission**

### **15-Speed Mechanical**

 
Serial number plate is stamped on the lower front of the transmission.

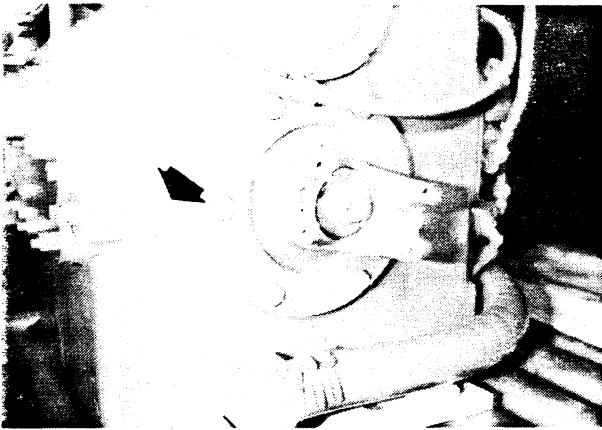

**15-Speed Mechanical Transmission**

## **Powershift**

 Serial number plate is located on the right rear of the transmission housing.

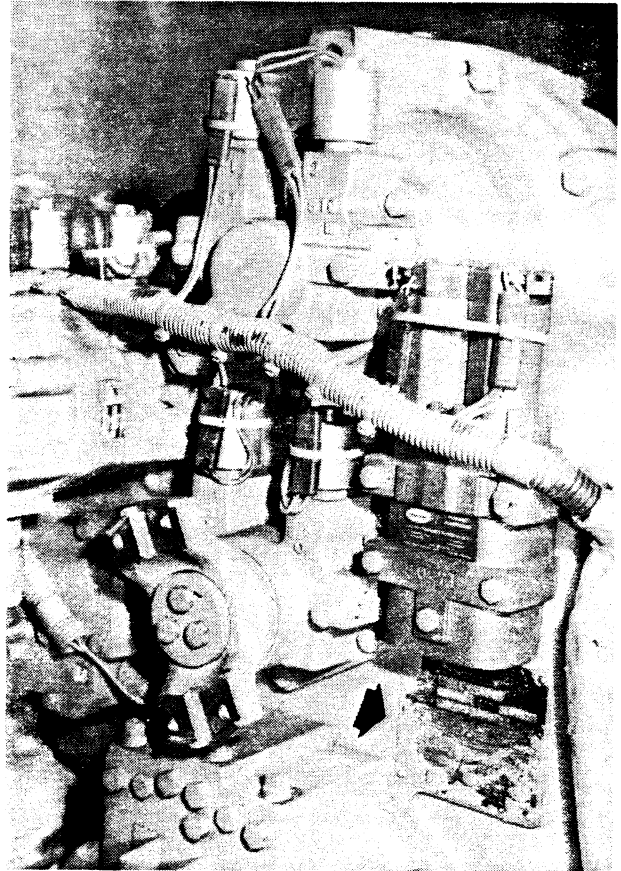

**Powershift Transmission**

---

# Introduction

---

We at Versatile Farm Equipment are pleased you have chosen a Model 756 VERSATILE® Four-Wheel Drive Tractor for your farming operation. It has evolved through the ideas and suggestions submitted to us by customers such as yourself.

We ask that you study this manual and adopt the preventive maintenance program outlined in it. The suggested schedule has been designed to meet most operating conditions although it may be necessary to adjust your maintenance program to suit your specific operating conditions.

We ask that for engine maintenance not covered by this manual, you follow the instructions given in the Cummins Manual. Before putting the tractor in service become familiar with all the procedures described in both manuals.

Your Versatile dealer is factory trained to provide genuine parts and professional repair service. Consult him for all your service needs.





Watch for this symbol. It identifies potential hazards to health or personal safety. It points out safety precautions. It means: **ATTENTION – Be Alert.** Your safety is involved.

---

 


# 1 Safety

National Safety Council statistics indicate many people die or suffer serious injury each year as a result of farm accidents.

Don't become a statistic or victim.


Carefully review the procedures given in this manual with all operators **ANNUALLY**. It is important that all operators be familiar with, **AND FOLLOW**, safety precautions.

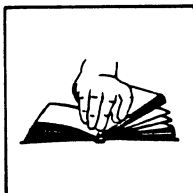


**Operating instructions must be given to everyone using the tractor before operation and at least once yearly thereafter in compliance with OSHA Regulation 1928.57.**

## GENERAL SAFETY

 1. Never let an unauthorized driver operate tractor.
2. Keep a fire extinguisher in the cab. Maintain it and be familiar with its use.

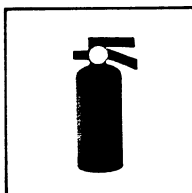

 
3. Never carry passengers.
4. Never operate machine in a closed building.
5. Always keep sleeves, jackets or other clothing relatively tight and belted. Loose clothing might catch in moving parts.
6. Provide a first-aid kit in the cab for use in case of accident.

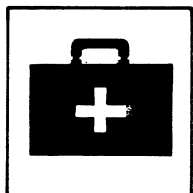

7. Never jump from tractor. There is a danger of catching clothing on protruding parts.

8. Use steps and handhold when mounting and dismounting tractor or for servicing components too high to reach from the ground.

 
9. Fasten seat belt before starting engine.

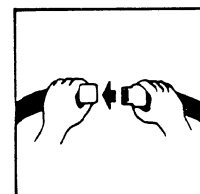

10. Safety devices are intended to protect operators of Versatile equipment from injury or death. Under no circumstances should they be disabled or removed.
11. To provide a better view, certain photos and illustrations show a safety shield removed. It is important that a machine never be operated in this way. Keep all shields in place.

## OPERATING SAFETY

 1. Always operate tractor from the operator's seat.
2. Lock seat in position before operating tractor.
3. Always start tractor with transmission in neutral. This is particularly important during cold weather operation.

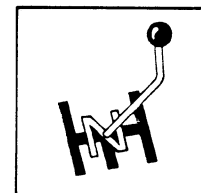

4. Always wait until all warning lights and audio alarm go out before putting tractor in gear.
5. Never oil, grease or adjust tractor while it is running. Do not leave engine running while tractor or drawn equipment is being adjusted, repaired or cleaned.
6. Ensure parkbrake is set when tractor is stopped. Tractor can freewheel even when in gear.
7. Avoid abrupt turns, starts or stops especially at high speeds.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)