


# VERSATILE

## Operator's Manual


---

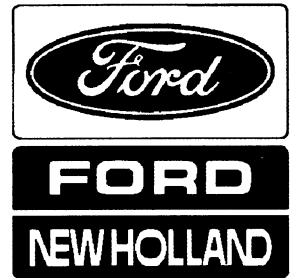

Tractors  
835, 855, and 875

1979

42083531

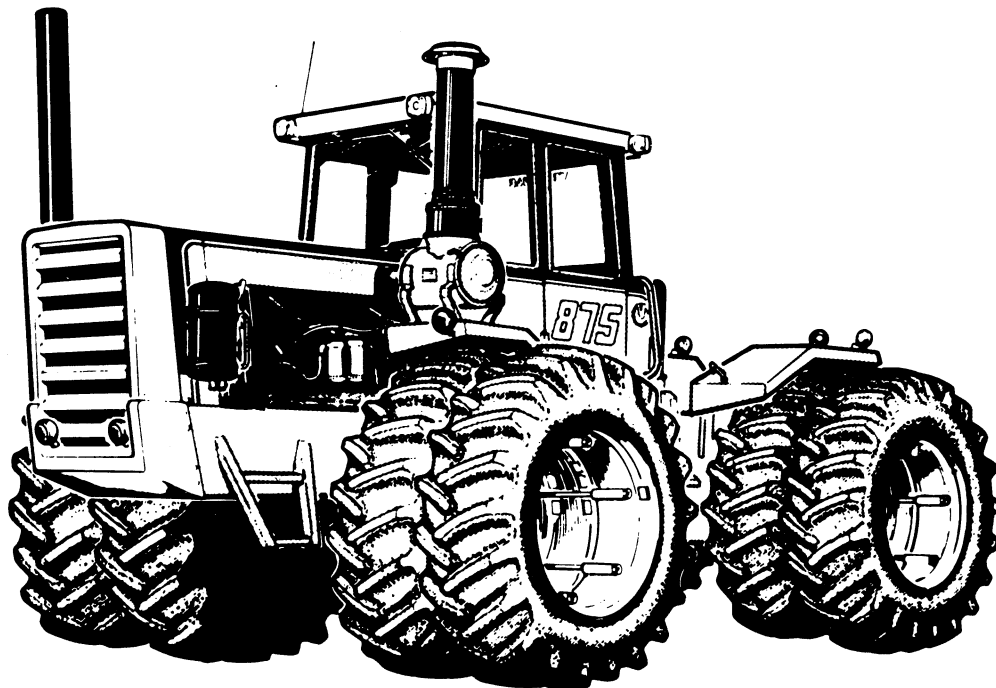

Reprinted

## VERSATILE WARRANTY

VERSATILE MANUFACTURING LTD. (VERSATILE) warrants each item of new Versatile equipment sold by it to be free from defects in material and workmanship under normal use and service. The sole obligation of Versatile to the Dealer under this warranty is limited to repairing or replacing, as Versatile may elect, any part or parts that prove in Versatile's judgment to be defective in material or workmanship within one year after delivery to the original purchaser, under normal farm use. Such a defective part or parts will be replaced or repaired ONLY TO THE ORIGINAL PURCHASER, such repair or replacement will be done at the location of the selling Versatile Dealer. Purchaser must give written notice to the Authorized Dealer from whom equipment was purchased of any claimed defect and the Dealer will have a reasonable time under the circumstances then existing to repair or replace said part or parts found to be defective. It is understood that if there is any delay in giving such written notice wherein it is possible that the alleged defective part may have caused damage or defects to other parts of the equipment, then this warranty shall not cover the repairs necessitated therein.

**NOTE: THE SOLE REMEDY OF THE PURCHASER FOR BREACH OF THIS WARRANTY IS THE REPAIR OR REPLACEMENT OF DEFECTIVE PARTS.**

This warranty does not extend to the engine or tires on Versatile tractors which are manufactured by others, and which carry separate warranties from said manufacturers. There are no representations, warranties, or conditions express or implied, statutory or otherwise, except those herein contained and no agreement collateral otherwise, except those herein contained and no agreement collateral hereto shall be binding upon either party unless in writing hereon or attached hereto, signed by purchaser and accepted by Versatile at its head office.

Versatile's liability under this warranty is limited to the repairing or replacing of parts, and Versatile shall in no event be liable to the Purchaser for consequential damages or loss of profits on crops sustained by it as a result of any defect in material or workmanship on any of the equipment covered by this warranty.

Versatile equipment is warranted for agricultural use only. This Warranty does not cover industrial application. ALTERING, MODIFYING OR ADDING ADDITIONAL EQUIPMENT WHICH IS NOT APPROVED FOR INSTALLATION ON VERSATILE EQUIPMENT BY THE COMPANY WILL VOID THE WARRANTY.

All Warranties are subject to the legislation of the state or province in which the machine is sold.

**\*THERE WILL BE NO DEVIATION FROM THE PROCEDURE AS OUTLINED\***

**NOTE: THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE BY VERSATILE OR ITS AUTHORIZED DEALER, REGARDING VERSATILE EQUIPMENT EXCEPT THE WARRANTY AGAINST DEFECTS IN MATERIAL OR WORKMANSHIP EXPRESSED HEREIN. NO PERSON IS AUTHORIZED TO BIND VERSATILE FOR ANY OTHER WARRANTY WHATSOEVER.**

### DELIVERY SERVICE FOR VERSATILE FOUR WHEEL DRIVE TRACTORS

ATTENTION DEALERS! This form must be filled out and signed by both the dealer and customer at time of delivery and RETURN IMMEDIATELY to VERSATILE Manufacturing Ltd.

Delivered to \_\_\_\_\_ Dealer \_\_\_\_\_

R.R. No. \_\_\_\_\_ Box No. \_\_\_\_\_ R.R. No. \_\_\_\_\_ Box No. \_\_\_\_\_

Town \_\_\_\_\_ Town \_\_\_\_\_

State/Province \_\_\_\_\_ State/Province \_\_\_\_\_

Zip Code/Postal Code \_\_\_\_\_ Zip Code/Postal Code \_\_\_\_\_

Tractor Model No. \_\_\_\_\_ Tractor Serial No. \_\_\_\_\_

Frame Stamp No. \_\_\_\_\_ Engine Serial No. \_\_\_\_\_

I have thoroughly instructed the customer on the above equipment which review included the Operator's Manual content, equipment care, maintenance, adjustments and safe operation. The VERSATILE warranty and all cards have been filled out with the purchaser.

Date \_\_\_\_\_ Dealer's Signature \_\_\_\_\_

The above equipment and Operator's Manual have been received by me and I have been thoroughly instructed as to care, maintenance, adjustment, safe operation and VERSATILE warranty policy.

Date \_\_\_\_\_ Owner's Signature \_\_\_\_\_

VERSATILE COPY

CUT ALON

LINE FIRST

**DELIVERY SERVICE FOR VERSATILE FOUR WHEEL DRIVE TRACTORS**  
ATTENTION DEALERS! This form must be filled out and signed by both the dealer and customer at time of delivery and RETURN IMMEDIATELY to VERSATILE Manufacturing Ltd.

Delivered to \_\_\_\_\_ Dealer \_\_\_\_\_  
R.R. No. \_\_\_\_\_ Box No. \_\_\_\_\_  
Town \_\_\_\_\_  
State/Province \_\_\_\_\_  
Zip Code/Postal Code \_\_\_\_\_  
Tractor Model No. \_\_\_\_\_  
Tractor Serial No. \_\_\_\_\_  
Frame Stamp No. \_\_\_\_\_  
Engine Serial No. \_\_\_\_\_  
I have thoroughly instructed the customer on the above equipment which review included the Operator's Manual content, equipment care, maintenance, adjustments and safe operation. The VERSATILE warranty and all cards have been filled out with the purchaser. \_\_\_\_\_  
Date \_\_\_\_\_  
Dealer's Signature \_\_\_\_\_  
The above equipment and Operator's Manual have been received by me and I have been thoroughly instructed as to care, maintenance, adjustment, safe operation and VERSATILE warranty policy. \_\_\_\_\_  
Owner's Signature \_\_\_\_\_  
Date \_\_\_\_\_

FOLD BACK HERE AND ADD CARBON

**DELIVERY SERVICE FOR VERSATILE FOUR WHEEL DRIVE TRACTORS**  
ATTENTION DEALERS! This form must be filled out and signed by both the dealer and customer at time of delivery and RETURN IMMEDIATELY to VERSATILE Manufacturing Ltd.

Delivered to \_\_\_\_\_ Dealer \_\_\_\_\_  
R.R. No. \_\_\_\_\_ Box No. \_\_\_\_\_  
Town \_\_\_\_\_  
State/Province \_\_\_\_\_  
Zip Code/Postal Code \_\_\_\_\_  
Tractor Model No. \_\_\_\_\_  
Tractor Serial No. \_\_\_\_\_  
Frame Stamp No. \_\_\_\_\_  
Engine Serial No. \_\_\_\_\_  
I have thoroughly instructed the customer on the above equipment which review included the Operator's Manual content, equipment care, maintenance, adjustments and safe operation. The VERSATILE warranty and all cards have been filled out with the purchaser. \_\_\_\_\_  
Date \_\_\_\_\_  
Dealer's Signature \_\_\_\_\_  
The above equipment and Operator's Manual have been received by me and I have been thoroughly instructed as to care, maintenance, adjustment, safe operation and VERSATILE warranty policy. \_\_\_\_\_  
Owner's Signature \_\_\_\_\_  
Date \_\_\_\_\_

FOLD FORWARD HERE AND ADD CARBON

OWNER'S COPY

DEALER'S COPY

## **INTRODUCTION**

We at VERSATILE Manufacturing Ltd. are pleased that you have chosen a VERSATILE Four-Wheel Drive Tractor for your farming operation. The founders of VERSATILE pioneered the development of the four-wheel drive tractor. It has evolved through ideas and suggestions submitted to us by customers such as yourself.

We ask that you study this manual and adopt the preventative maintenance program outlined in it. Good preventative maintenance should provide trouble free service for years. The suggested schedule has been designed to meet most operating conditions. It may be necessary to adjust your maintenance program to suit your specific operating conditions and to perform the maintenance more often than outlined.

As the purchaser of a VERSATILE Four-Wheel Drive Tractor you have also received a Cummins' Operation and Maintenance Manual. We would ask that for maintenance on the engine, which is not covered by our tractor manual, you follow the instructions in the Cummins' manual. Before placing the tractor in service become familiar with all the procedures described in both the engine manual and the tractor manual.

Review with all operators on at least a yearly basis, the proper and safe way to operate and maintain the tractor. All operators should know the tractor completely before operating it.

Your dealer is factory-trained to provide you with genuine parts and professional repair service. Consult him regarding your service needs. He is working for you.

## SERIAL NUMBER LOCATION

### IMPORTANT:

When ordering parts, state the serial number of the tractor and/or engine. The tractor serial number is stamped on the rear of the front frame section and on a metal tag on lower left hand side of the doorpost. The engine (Cummins) serial number is on a metal tag located on the left side of engine near the injector pump.

Write your model and serial number information here:

#### ENGINE

**MAKE** CUMMINS


**MODEL** NT855

**SERIAL** \_\_\_\_\_

#### TRACTOR

**MODEL** 835/855/875


**SERIAL** \_\_\_\_\_

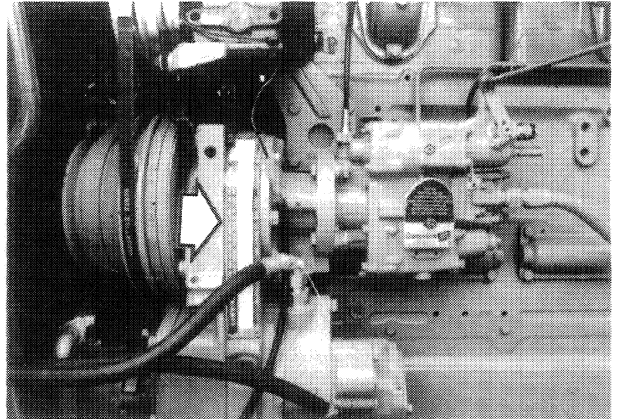


**Engine Plate**

#### FRAME

**SERIAL** \_\_\_\_\_

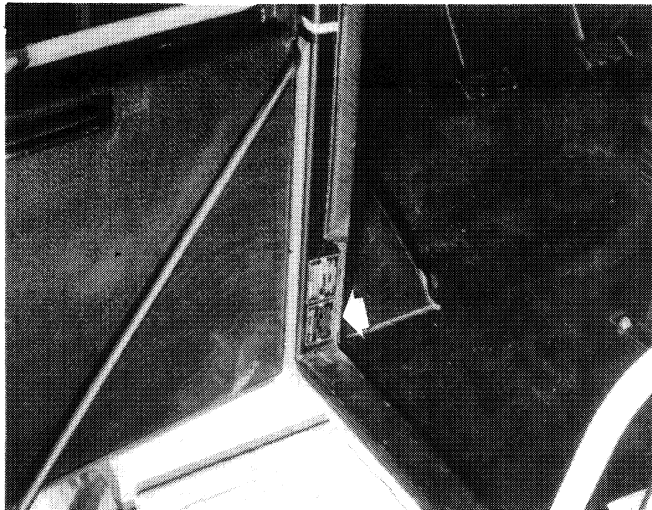

**Tractor Plate**

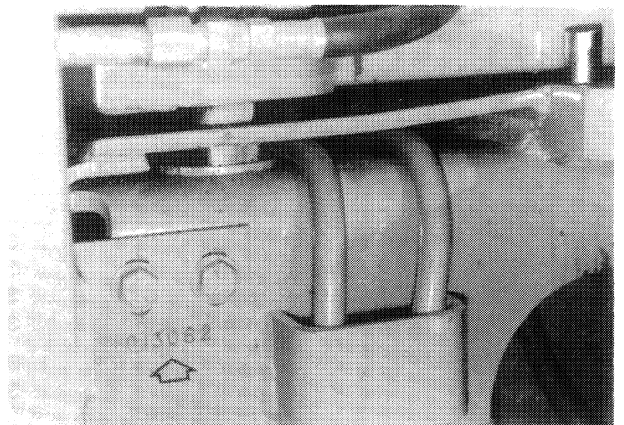

**Frame Stamp**

## TABLE OF CONTENTS

SECTION	PAGE	SECTION	PAGE
<b>Specifications</b> .....	<b>6</b>	<b>Fuels, Fluids and Lubricants</b> .....	<b>34</b>
<b>Tractor Safety</b> .....	<b>10</b>	Fuels .....	<b>34</b>
Safety Rules .....	<b>11</b>	Fluids .....	<b>34</b>
Emergency Exit .....	<b>12</b>	coolant .....	<b>34</b>
Safety Decal Location .....	<b>13</b>	adding coolant .....	<b>34</b>
<b>Controls and Instruments</b> .....	<b>14</b>	replacing coolant .....	<b>34</b>
<b>Operation</b> .....	<b>22</b>	specifications .....	<b>34</b>
Engine break-in .....	<b>22</b>	dry chemical additive (DCA) .....	<b>34</b>
Prestarting Inspection .....	<b>22</b>	liquid ballast .....	<b>35</b>
Engine Starting .....	<b>22</b>	hydraulic fluid .....	<b>35</b>
Cold Weather Starting .....	<b>23</b>	brake fluid .....	<b>35</b>
Decelerator Operation .....	<b>23</b>	Lubricant Chart .....	<b>36</b>
Power Take-Off (PTO) .....	<b>23</b>	<b>Routine Service and Lubrication</b> .....	<b>37</b>
Shifting Gears .....	<b>24</b>	Break-in Period .....	<b>37</b>
Stopping Tractor .....	<b>25</b>	Periodic Servicing .....	<b>37</b>
Drawbar .....	<b>25</b>	Recommended Service intervals .....	<b>38</b>
Fuel System .....	<b>25</b>	A: Air Cleaner .....	<b>40</b>
priming fuel system .....	<b>25</b>	outer element .....	<b>40</b>
fuel tanks .....	<b>25</b>	inner element .....	<b>40</b>
fuel storage .....	<b>26</b>	tube connections .....	<b>40</b>
Tire Inflation .....	<b>26</b>	B: Air Conditioner .....	<b>40</b>
Tire Ballast .....	<b>26</b>	C: Belts .....	<b>41</b>
checking wheel slippage .....	<b>26</b>	alignment .....	<b>41</b>
Hydraulic System - Implement and steering ..	<b>27</b>	tension .....	<b>41</b>
flow control valve .....	<b>28</b>	alternator and compressor .....	<b>42</b>
Air Conditioned Cab .....	<b>28</b>	fan drive belt .....	<b>42</b>
cab pressurizer (fan) .....	<b>28</b>	belt removal and installation .....	<b>42</b>
temperature control .....	<b>28</b>	- alternator and/or compressor .....	<b>42</b>
selecting the inside-outside air mix .....	<b>28</b>	- fan belt .....	<b>43</b>
dehumidifying the cab air .....	<b>29</b>	D: Brake .....	<b>44</b>
purging stale air .....	<b>29</b>	E: Cab Air Intake Filter Elements .....	<b>44</b>
hot and cold weather .....	<b>29</b>	F: Electrical System .....	<b>45</b>
Light System .....	<b>29</b>	electrolyte level .....	<b>45</b>
Three-Point Hitch (optional) .....	<b>30</b>	cleaning batteries .....	<b>45</b>
depth limit control valve .....	<b>31</b>	alternator .....	<b>46</b>
adjusting implement lowering rate .....	<b>31</b>	G: Engine Cooling System .....	<b>46</b>
three-point hitch adjustment .....	<b>31</b>	DCA filter .....	<b>46</b>
- valve linkage adjustment .....	<b>31</b>	H: Engine Oil And Filters .....	<b>47</b>
- depth control lever adjustment .....	<b>31</b>	full-flow filters .....	<b>47</b>
Towing .....	<b>32</b>	by-pass filter .....	<b>47</b>
Turning .....	<b>33</b>		

<b>SECTION</b>	<b>PAGE</b>	<b>SECTION</b>	<b>PAGE</b>
I: Ether Starting Aid .....	49	<b>Storage and Preparation</b> .....	63
cleaning the atomizer .....	49	Preparation .....	63
lubricating the control cable .....	49	Storing .....	63
J: Fuel System Maintenance .....	49	Storing batteries .....	63
K: Grill And Radiators .....	50	Removal from storage .....	64
Lubrication .....	51	Initial engine startup .....	64
lube points .....	51		
lube schedule .....	52	<b>Electrical System</b> .....	65
M: Steering And Implement Hydraulics .....	54	Fuses and circuit breaker .....	65
N: Transmission Circuit And PTO Circuit .....	54	Wiring diagram code .....	66
transmission circuit .....	54	Wiring schematics - starter, lights and	
PTO circuit .....	55	accessory circuit .....	67
O: Visual Inspection .....	55	- cab console circuit .....	68
P: Wheels, Tires And Axle-Mounting Bolts ....	56	- cab ceiling circuit .....	69
single wheels .....	56	- cab and rear work light circuit .....	70
dual wheels .....	56		
axle-mounting bolts .....	57	<b>System Schematics</b> .....	71
tire care .....	57	Transmission lubrication .....	71
Q: Decelerator Adjustment .....	57	Air Conditioning and heater .....	71
<b>Troubleshooting</b> .....	59	Steering and implement circuit .....	72
Steering and Implement Control .....	59	Three-point hitch .....	72
Cab Comfort System .....	61	PTO .....	73
Engine .....	62		



Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)